



EZ6 Designer Reception Counter

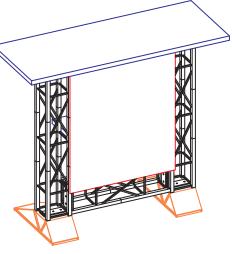

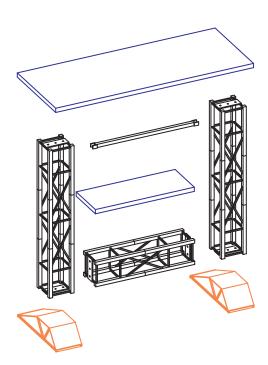

- 1. Bolt 2-A3 pieces to the EZ6 Designer Feet using two carriage bolts with wingnuts for each.
- 2. Stand them up and install the A2 between them, at the bottom, using a corner bracket on each end.
- 3. Attach the counter top using the supplied brackets and wingnuts.
- 4. Insert seambar between legs, at the front, 1/2" below the top of leg (just under the webbing.)

Install the shelf bracket on the middle horizontal webbing, and place the shelf on.

5. Apply 28.5"H x 24.5"W flexible graphic, using magnet strip on the reverse perimeter.

DRAWN BY: NG

Trussion