
EZ6 Oval Designer Counter Assembly Instructions

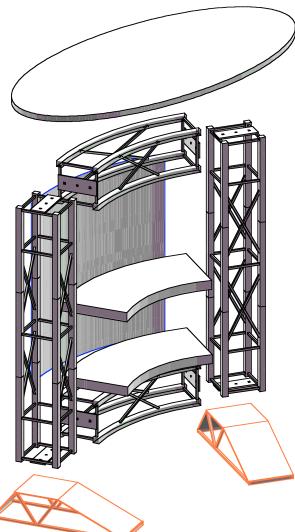

- 1. Bolt 2 A3s to the EZ6 Designer Feet using 2 carriage bolts with wingnuts for each.
- 2. Stand them up and install the R2s between them at top and bottom using a corner bracket on each end.
- 3. Attach the counter top using the supplied brackets and wingnuts.
- 4. Lay the lower shelf on the lower R2 truss.
- 5. Install the shelf brackets at the halfway point and put the second shelf on them.
- 6. Magnet the graphic to the front.