




SERVICE BULLETIN

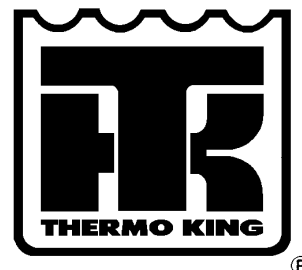

SUBJECT: CRR, CSR and MAGNUM TXV Replacement

BULLETIN NO: C 058


DATE: January 21, 2003

On the CRR and CSR units, the location of the expansion valve and bulb varies. On new units the expansion valve and bulb are mounted in the evaporator section of the unit verses in the condenser section. When ordering a replacement expansion valve, be sure to order the correct valve based on the bulb location.

This bulletin will outline the different expansion valves, and the locations of the bulb.


Unit	CRR	CRR	CRR	CSR	CSR	MAGNUM
TXV Part #	66-9900	61-1090	61-1626	66-8976	61-443	61-443
TXV location	cond	cond	evap	cond	cond	evap
Bulb location	cond	cond	evap	cond	evap	evap

CRR / CSR with expansion valve and bulb mounted in the condenser section.

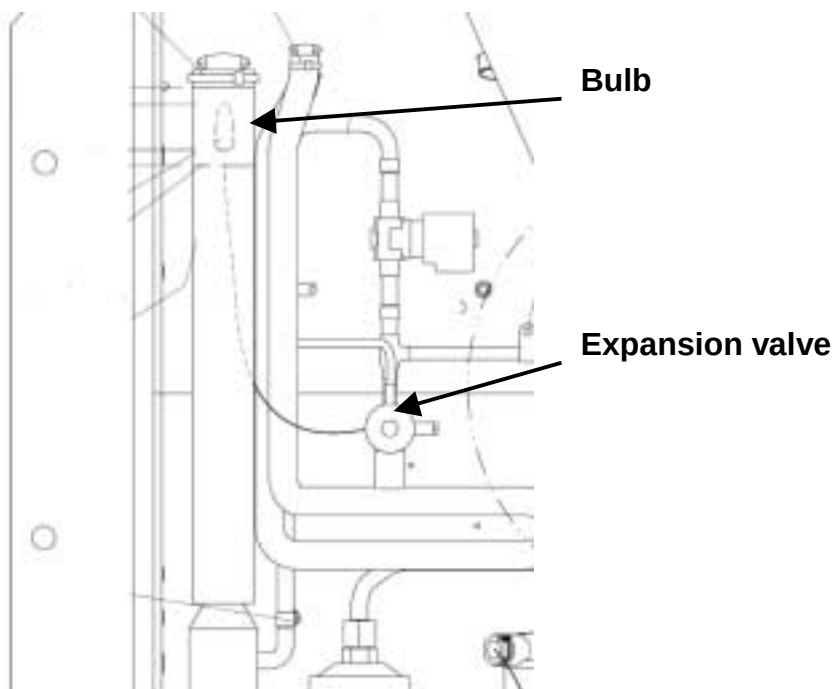

USE ONLY **THERMO KING** FACTORY APPROVED REPLACEMENT PARTS
314 West 90th Street, Minneapolis, Minnesota 55420

CRR, CSR and MAGNUM with expansion valve and bulb mounted in the evaporator section.

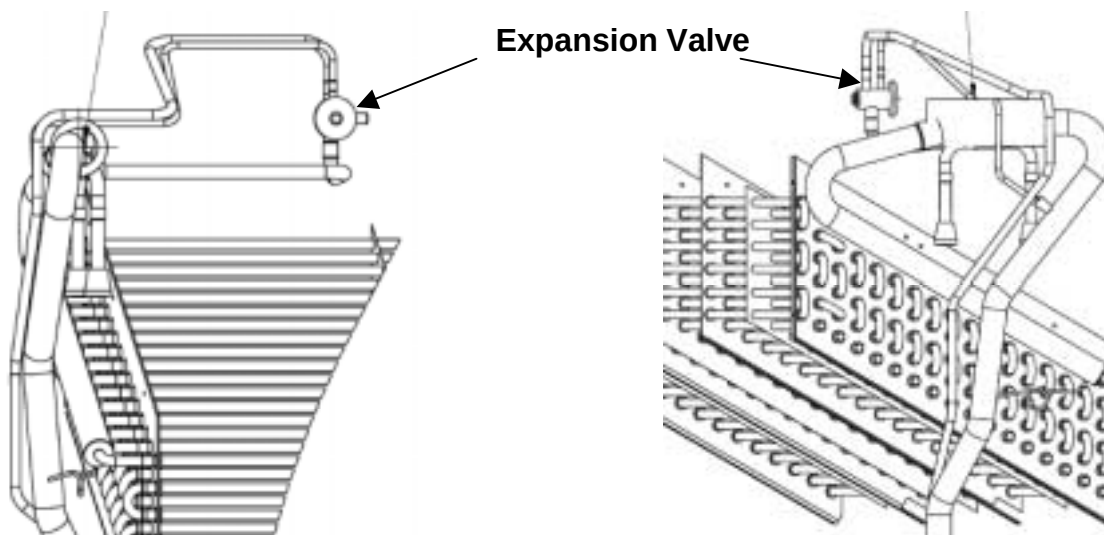

Note: The valve and bulb can be accessed through the front access door.

Some CSR units were built with the expansion valve mounted in the condenser section and the bulb mounted in the evaporator section. If the expansion valve needs to be changed and the container is loaded, the bulb can be placed on the suction tube in the condenser section for emergency. After the container is unloaded the bulb needs to be repositioned back in the evaporator section. CSR units with expansion valve and bulb mounted in the condenser section, TK recommends when ordering a replacement valve to order the 61-443 and mount the bulb in the evaporator section. Follow the rework instruction below.

Rework instruction to mount bulb in the evaporator section

1. Solder in the new valve 61-443.
2. Locate the black plastic plug in the top of the condenser section. Drill a 14 mm (9/16) hole through the plug from the condenser side to the evaporator side. Route the element up through this hole from the condenser side to the evaporator side.
3. From the inside of the container remove the middle access panel.
4. Locate the suction tube on the right side. Clean the tube from just above the caulking to just before the bent in the tube. Mount element bulb on the tube. Secure the bulb with the clamp provided.
5. Cover the element with cork tape.
6. Caulk hole where TXV element was routed through.
7. Reinstall the access panel, using 3/16 alum rivet .450 length (24 per unit)

