



THERMO KING

KIT

40-791

Subject: REPLACEMENT SENSOR
Used: Container Units with MPC and MP Controllers
Benefits: Reduces costly repairs and downtime
Replace only the sensor, not the sensor harness

CAUTION: Before installing this kit, turn the unit OFF and disconnect the power supply.


CAUTION: Always wear eye protection.

NOTE: This kit contains the sensor, nameplates, splices and heat shrink tubes.

Tools Needed: Wire Cutter and Heat Gun (204-753)

INSTALLATION OF REPLACEMENT SENSOR

1. Cut the sensor from the cable and discard.
2. Cut excess cable from the replacement sensor.
3. Remove 2.0 in. (50mm) of insulation from harness cable and replacement sensor exposing the wires.
4. Cut one wire 1.0 in (25mm) shorter then the other to stagger the splice, strip all wire ends .25 in. (7mm).
5. Slide the large heat shrink over the cable, slide the heat shrink with the correct name over the sensor wires.
6. Insert the wires (the sensor is not polarity sensitive) into the wire splice and crimp.
7. Heat the wire splices until the adhesive melts to ensure a water tight seal.
8. Position the large heat shrink over the splices and heat.
9. Position the heat shrink with the correct name and heat.
10. Install the sensor into the unit.
11. Return the unit to service.

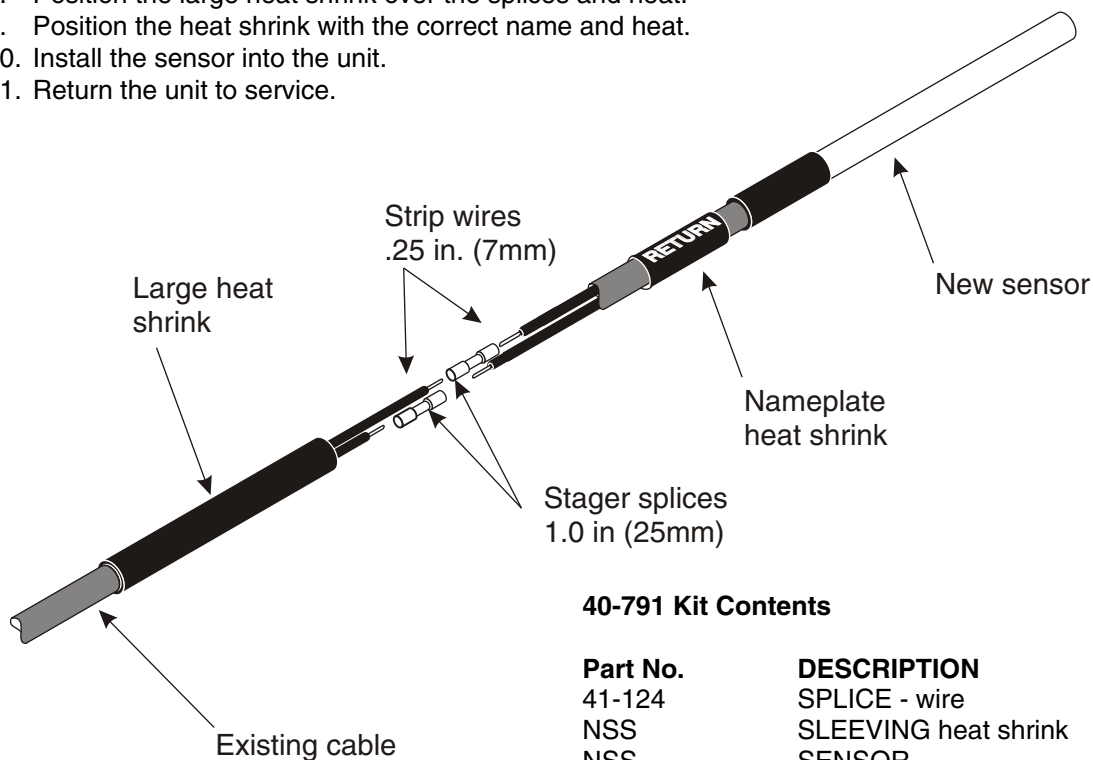

40-791 Kit Contents

Part No.	DESCRIPTION	Qty.
41-124	SPLICE - wire	2
NSS	SLEEVING heat shrink	1
NSS	SENSOR	1
NSS	HEAT SHRINK - return	1
NSS	HEAT SHRINK - defrost	1
NSS	HEAT SHRINK - ambient	1
NSS	HEAT SHRINK - cond	1
NSS	HEAT SHRINK - supply	1