How to use PUSH SDK Demo

Supported Devices and Firmware version.

K1T342，K1T343，K1T670，K1T673
v4.48.0_build260128 or above


K1T320，K1T321，K1T344
v4.61.0_build260807 or above


Main Differences between baseline PUSH SDK and customized PUSH SDK.

A. **The password is calculated using the PBKDF2 algorithm. The PBKDF2 algorithm itself contains a parameter, which requires passing in a type of digest algorithm.**
   Baseline: SHA256
   Customization: SHA1
B. **Register User Name.**
   Baseline: Self-Define
   Customization: “admin” only.
C. **Signaling control for starting and stopping voice intercom and preview.**
   Baseline: Support. Also need SessionID Verification, please see more details in official guidance doc.
   Customization: Not support, no SessionID.
D. **Close Websocket connection.**
   Baseline: Need device side to close. If server close it, device will be in connection still about 0-5 seconds.
   Customization: Both sides can close.
E. **Boundary format data.**
   Baseline: Binary format when send face/audio/picture/video file to device.
   Customization: Base64 format.


How to use demo.

1. Register device to server, if demo can’t find device, please try to disable PUSHSDK on webpage and enable again.

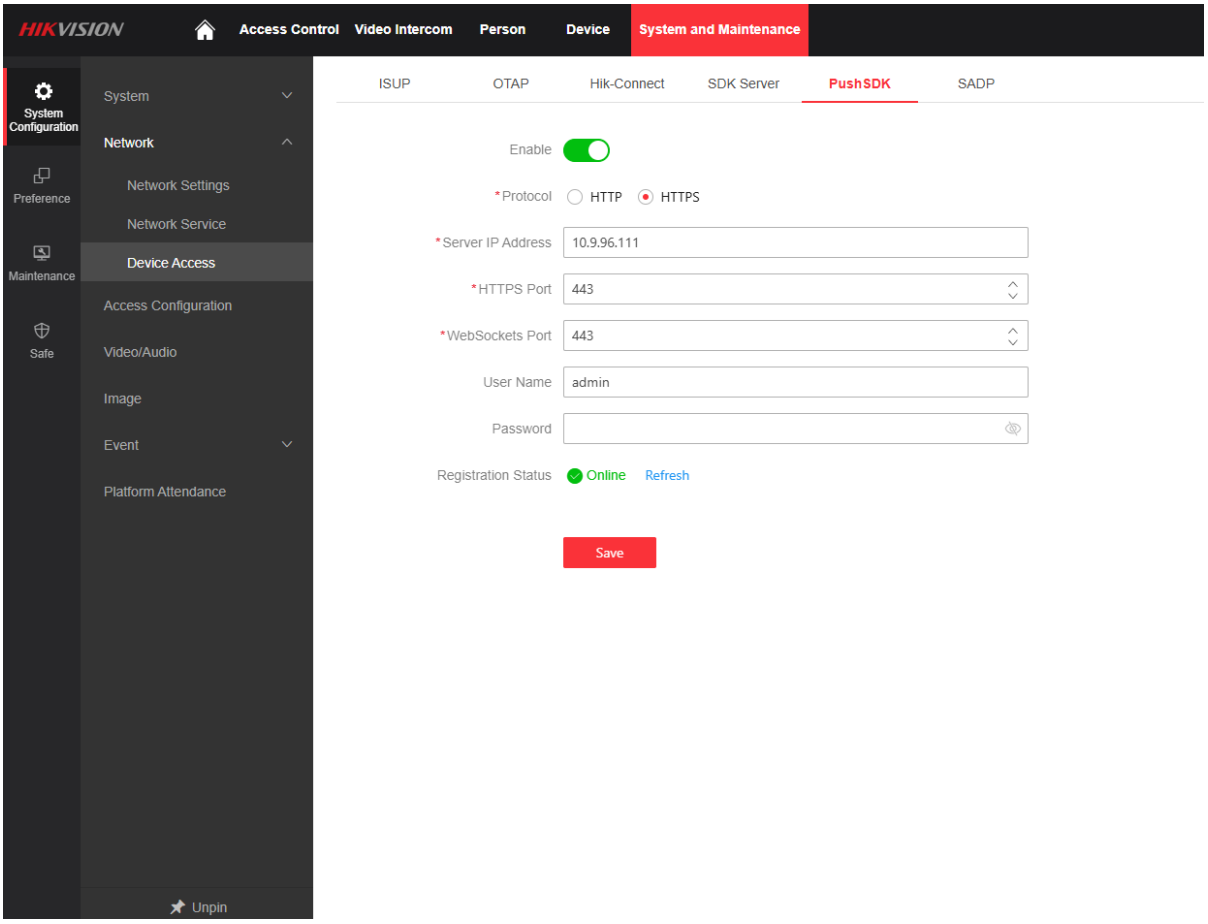

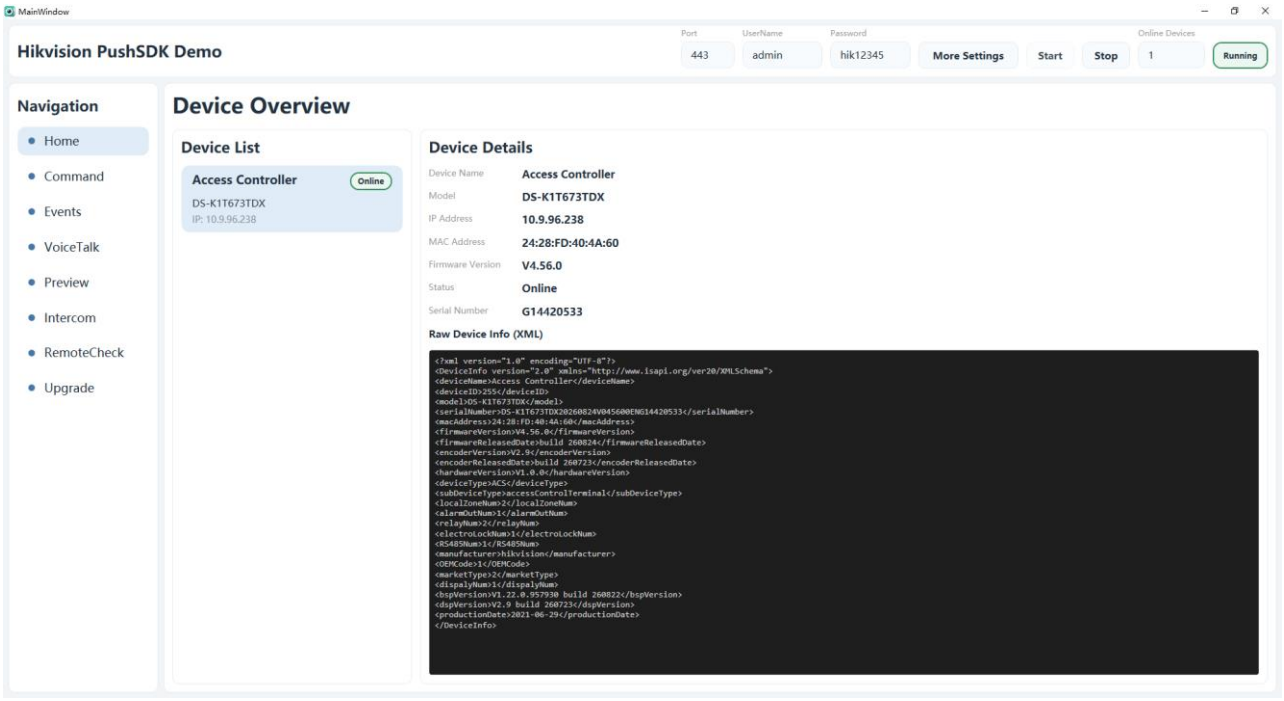


2. Live view, status will be “operating” first and then streaming will come.

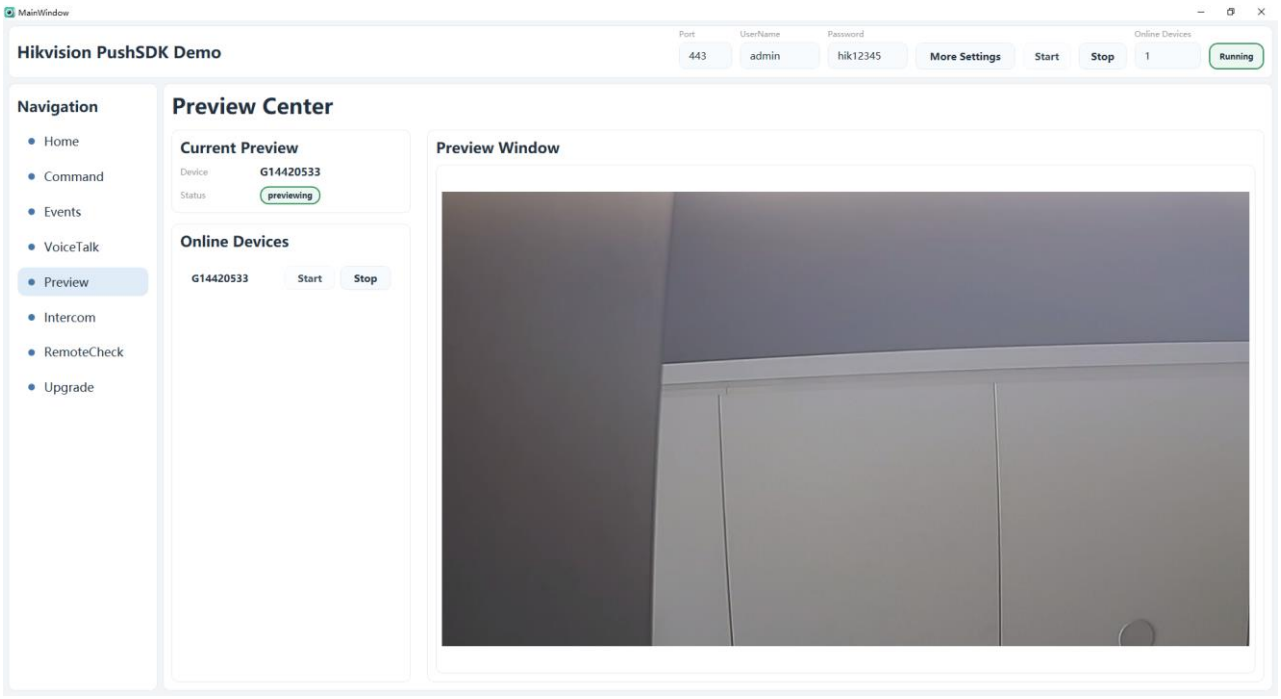


3. Person management


Basic function APIs can be found after clicking Presets button.

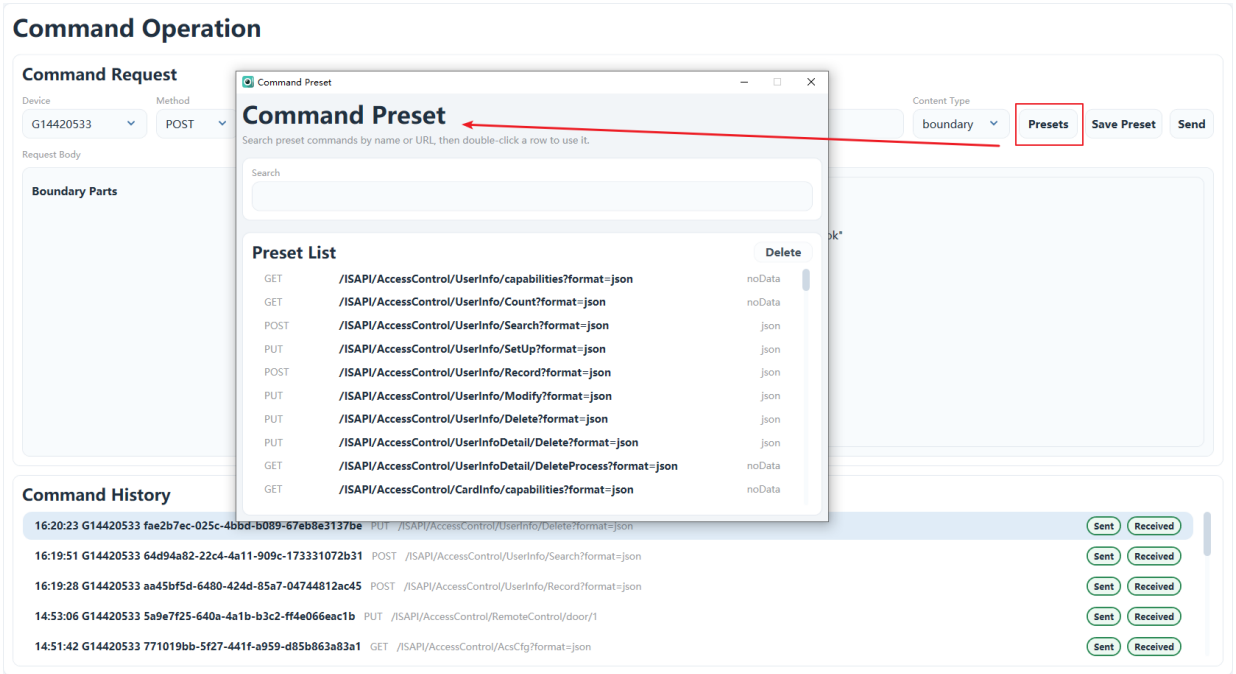


Add person.

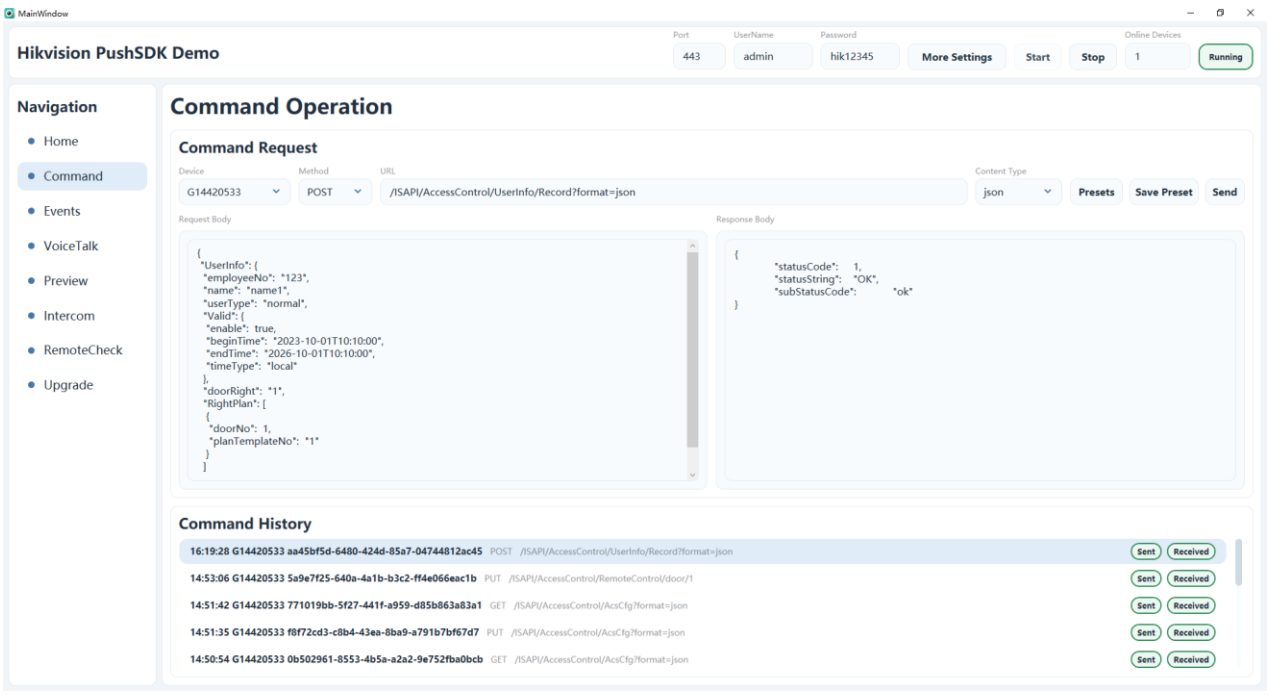

Search person.

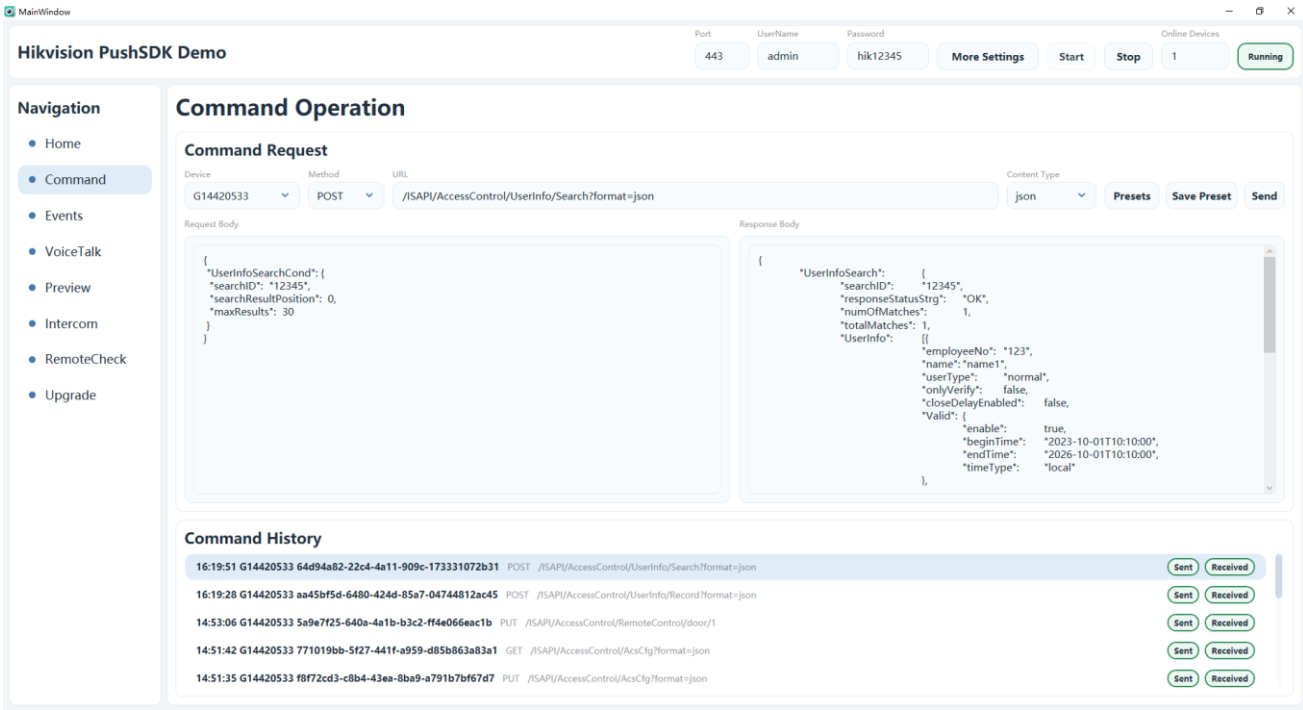


Delete person.

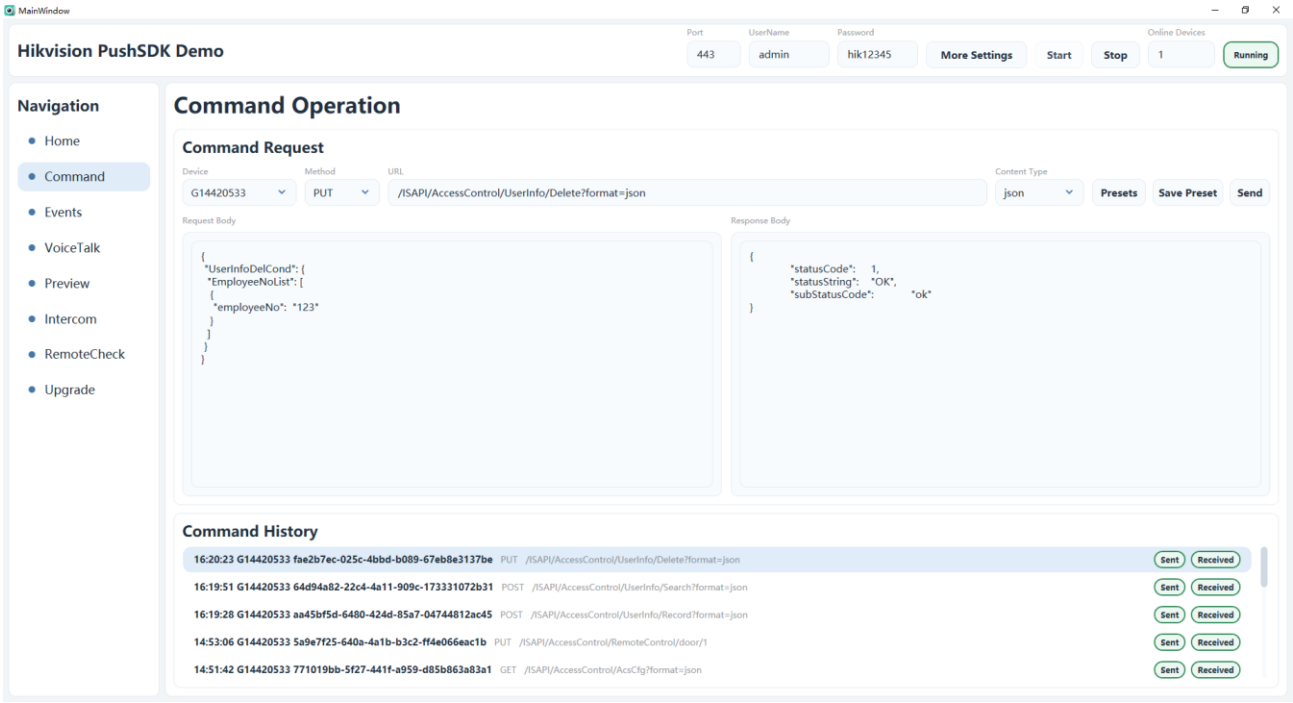


4. Face Management


URL format.

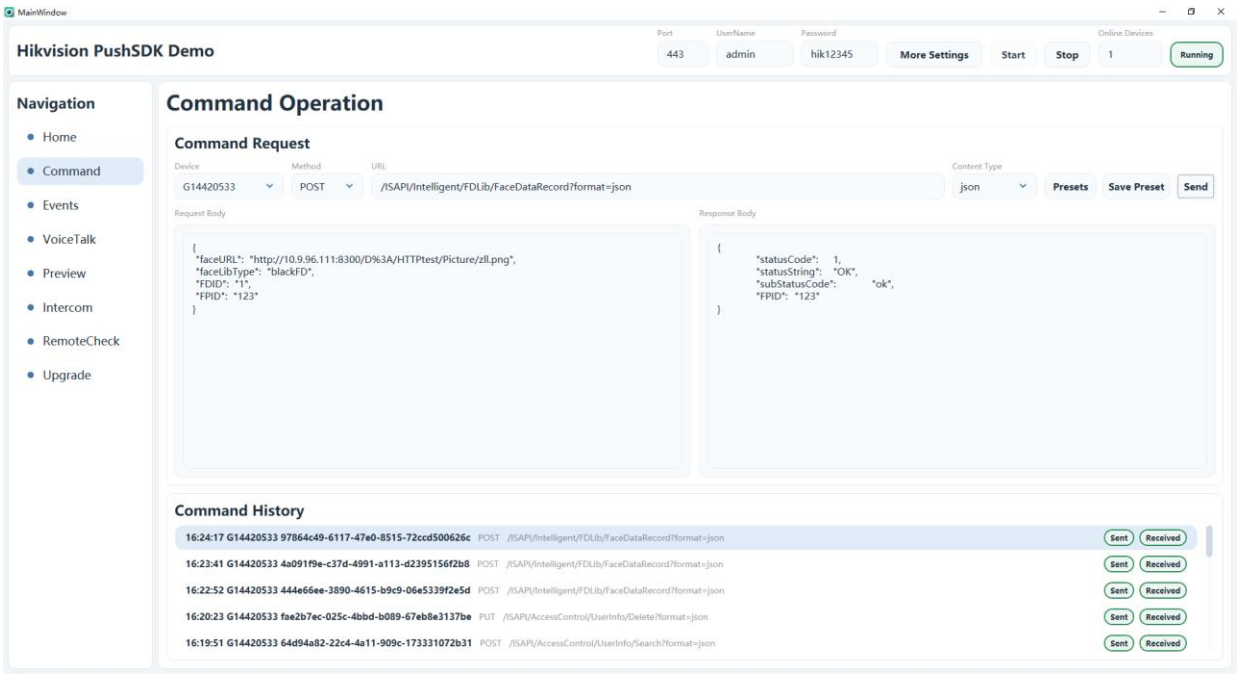

Binary Data.

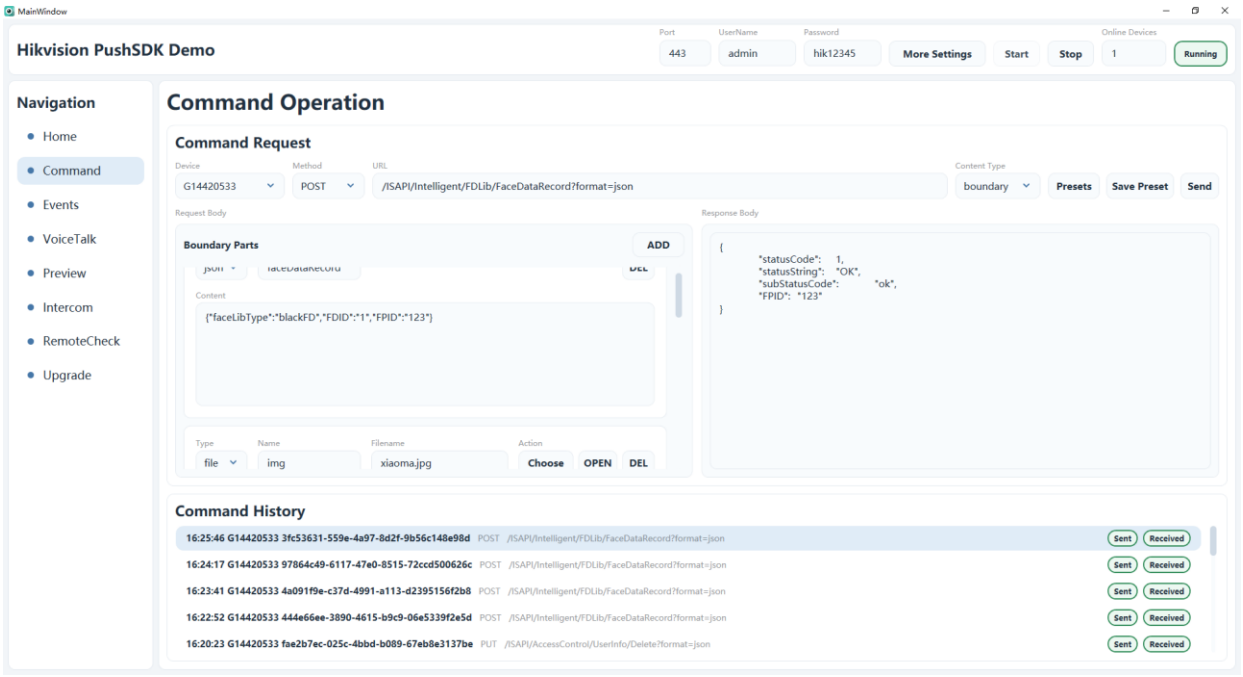


Search face data by EmployeeNo.

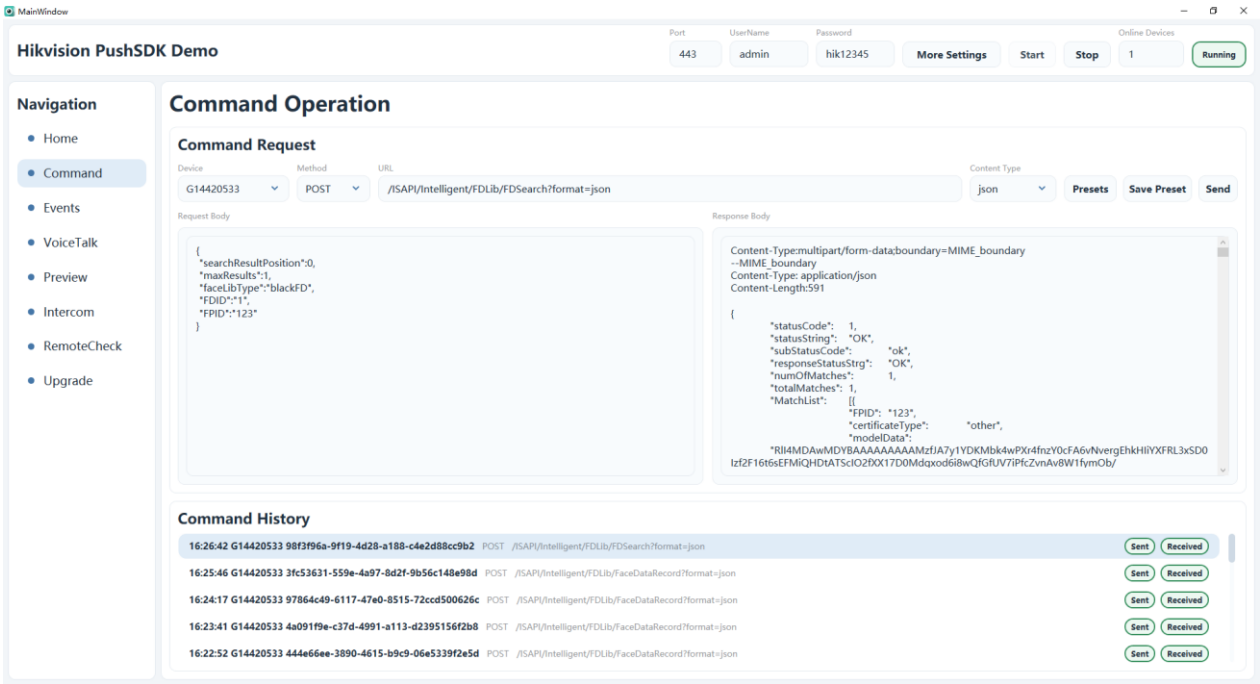


5. Fingerprint Management

Remember to delete parameter “deleteFingerPrint” when you add fingerprint.

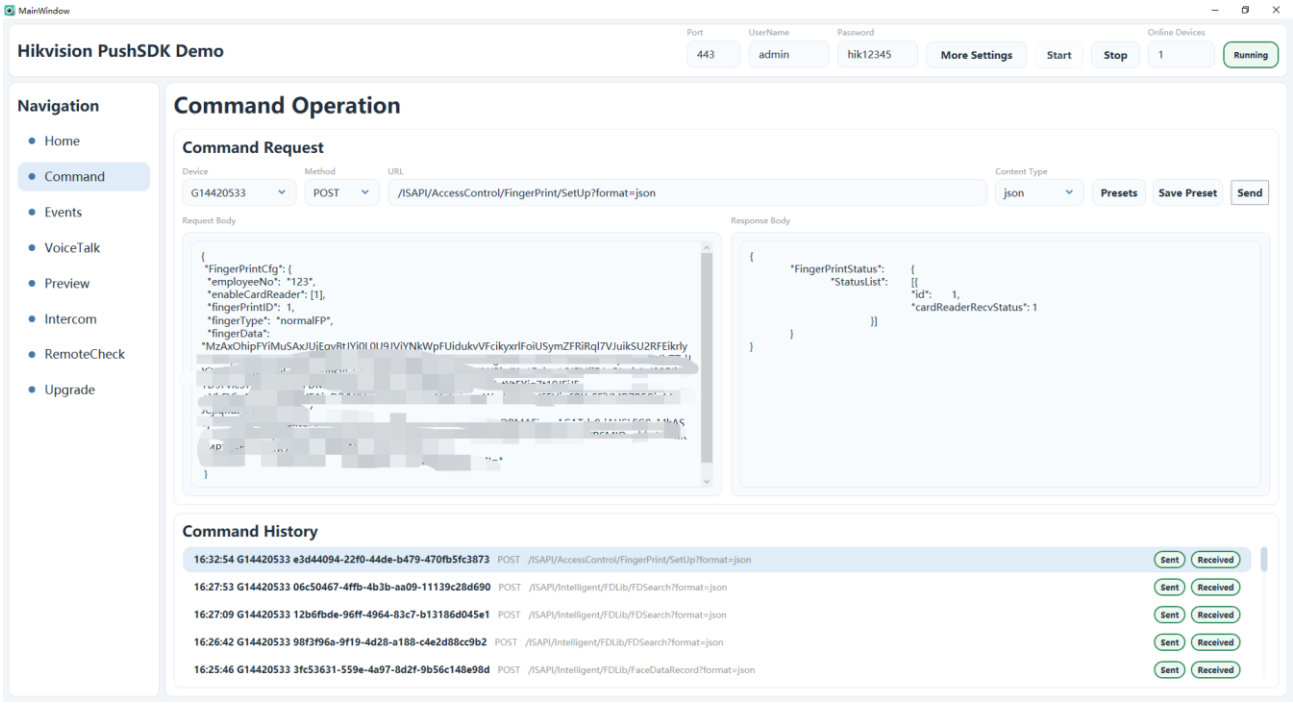


Search fingerprint by EmployeeNo.

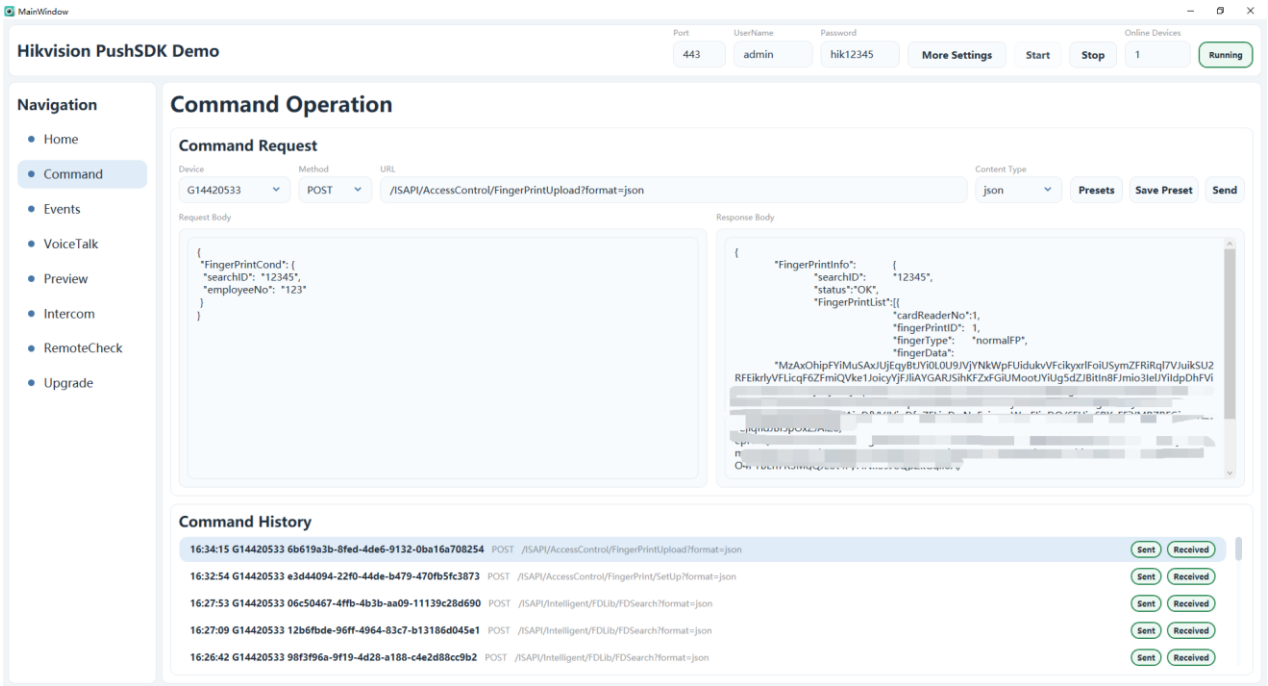


6. Event Receiving/Searching

Face Authentication Completed.

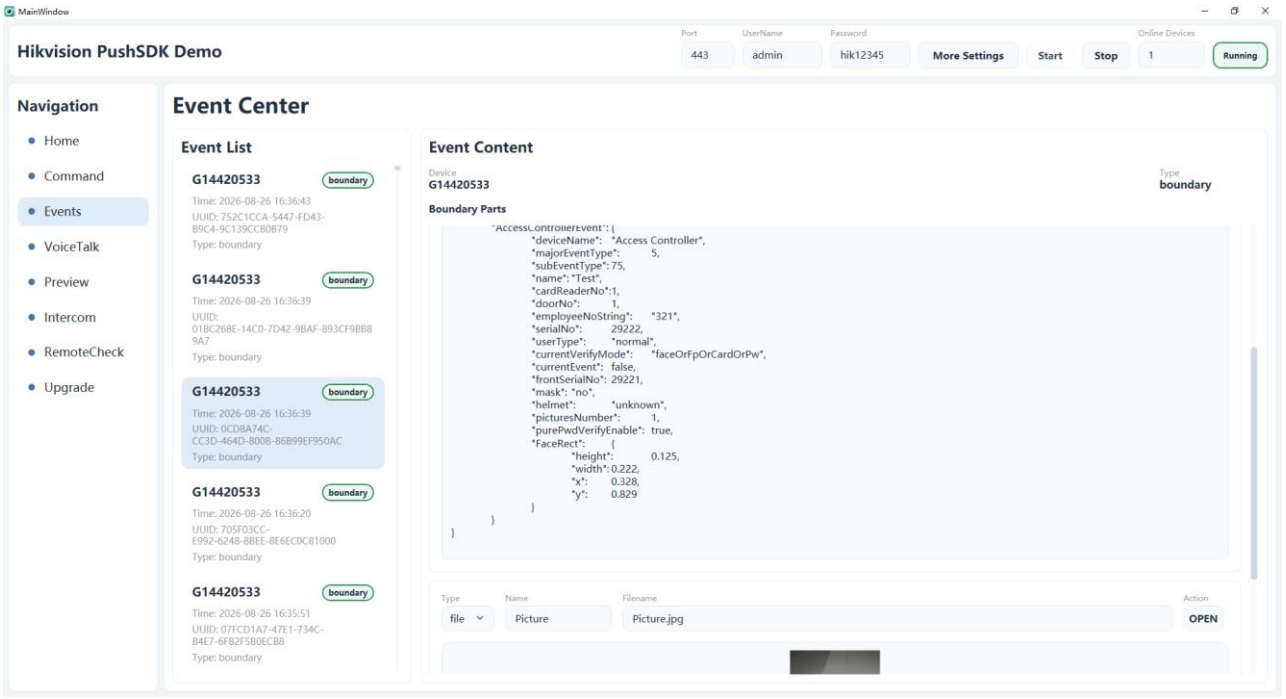


Fingerprint Matched.

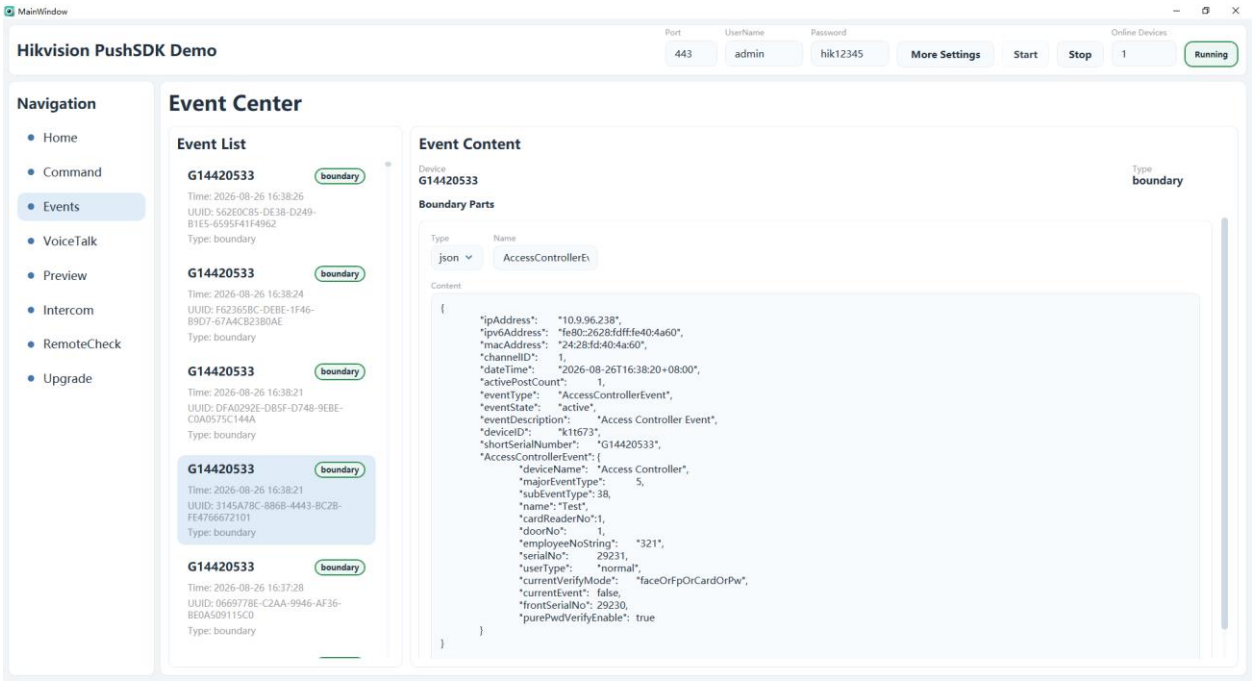


Search.


Major: 0 and Minor: 0 means all event types.

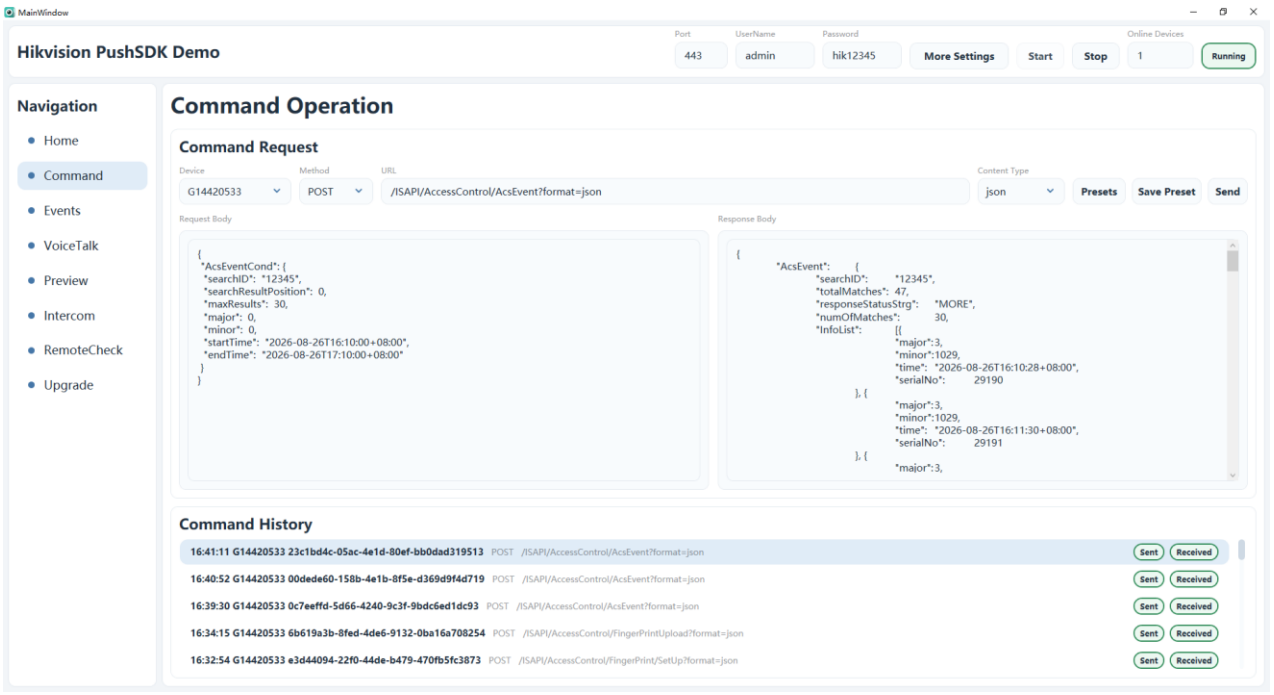


Major: 5 and Minor 75, means Face Authentication Completed.

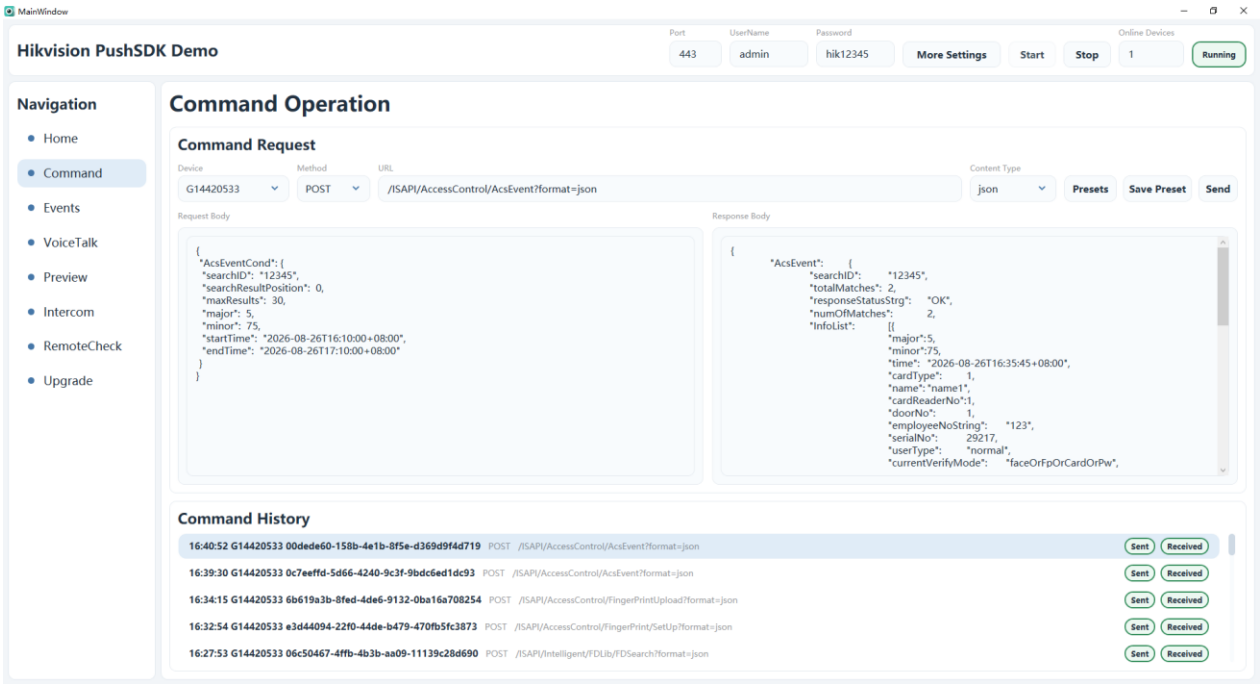


7. Door Control

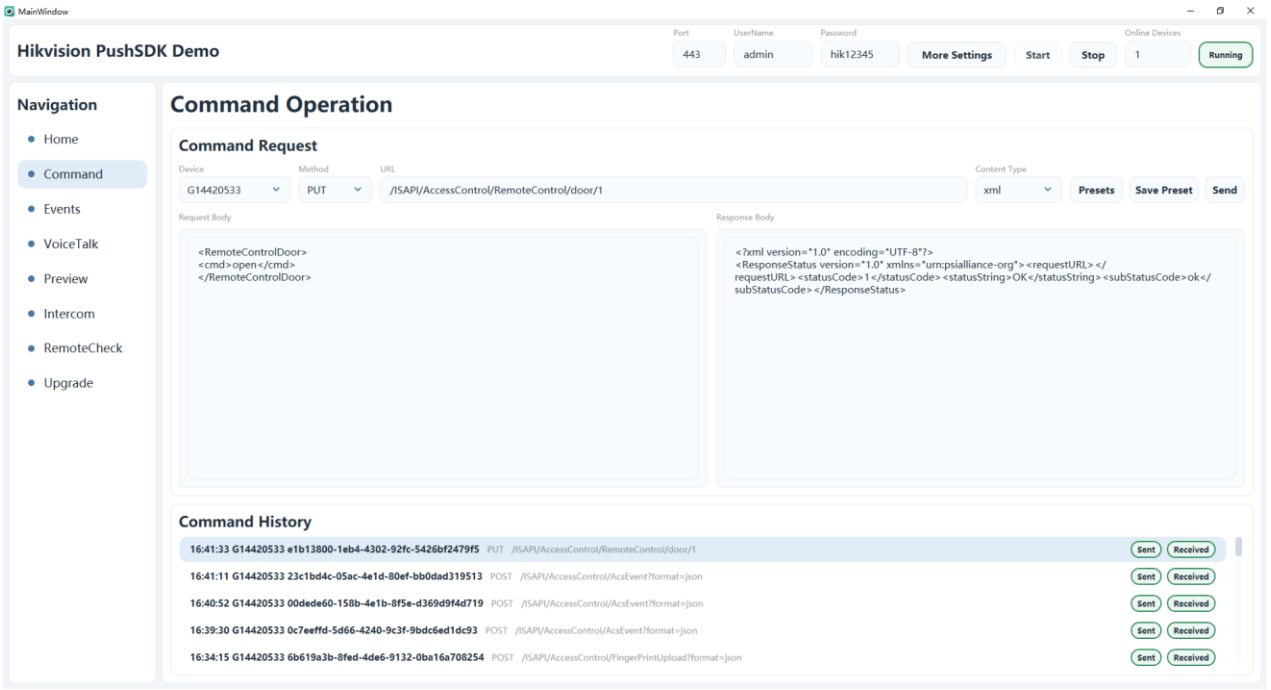

MainWindow
Hikvision PushSDK Demo
Port
443
UserName
admin
Password
hik12345
More Settings
Start
Stop
Online Devices
1
Running
Navigation
Home
Command
Events
VoiceTalk
Preview
Intercom
RemoteCheck
Upgrade
Command Operation
Command Request
Device
G14420533
Method
PUT
URL
/ISAPI/AccessControl/RemoteControl/door/1
Content Type
xml
Presets
Save Preset
Send
Request Body
<RemoteControlDoor>
<cmd>open</cmd>
</RemoteControlDoor>
Response Body
<?xml version="1.0" encoding="UTF-8"?>
<ResponseStatus version="1.0" xmlns="urn:psialliance-org"><requestURL></requestURL><statusCode>1</statusCode><statusString>OK</statusString><subStatusCode>ok</subStatusCode></ResponseStatus>
Command History
16:41:33 G14420533 e1b13800-1eb4-4302-92fc-5426bf2479f5 PUT /ISAPI/AccessControl/RemoteControl/door/1 Sent Received
16:41:11 G14420533 23c1bd4c-05ac-4e1d-80ef-bb0dad319513 POST /ISAPI/AccessControl/AcsEvent?format=json Sent Received
16:40:52 G14420533 00dede60-158b-4e1b-8f5e-d369d9f4d719 POST /ISAPI/AccessControl/AcsEvent?format=json Sent Received
16:39:30 G14420533 0c7eeffd-5d66-4240-9c3f-9bdc6ed1dc93 POST /ISAPI/AccessControl/AcsEvent?format=json Sent Received
16:34:15 G14420533 6b619a3b-8fed-4de6-9132-0ba16a708254 POST /ISAPI/AccessControl/FingerPrintUpload?format=json Sent Received


8. Upgrade

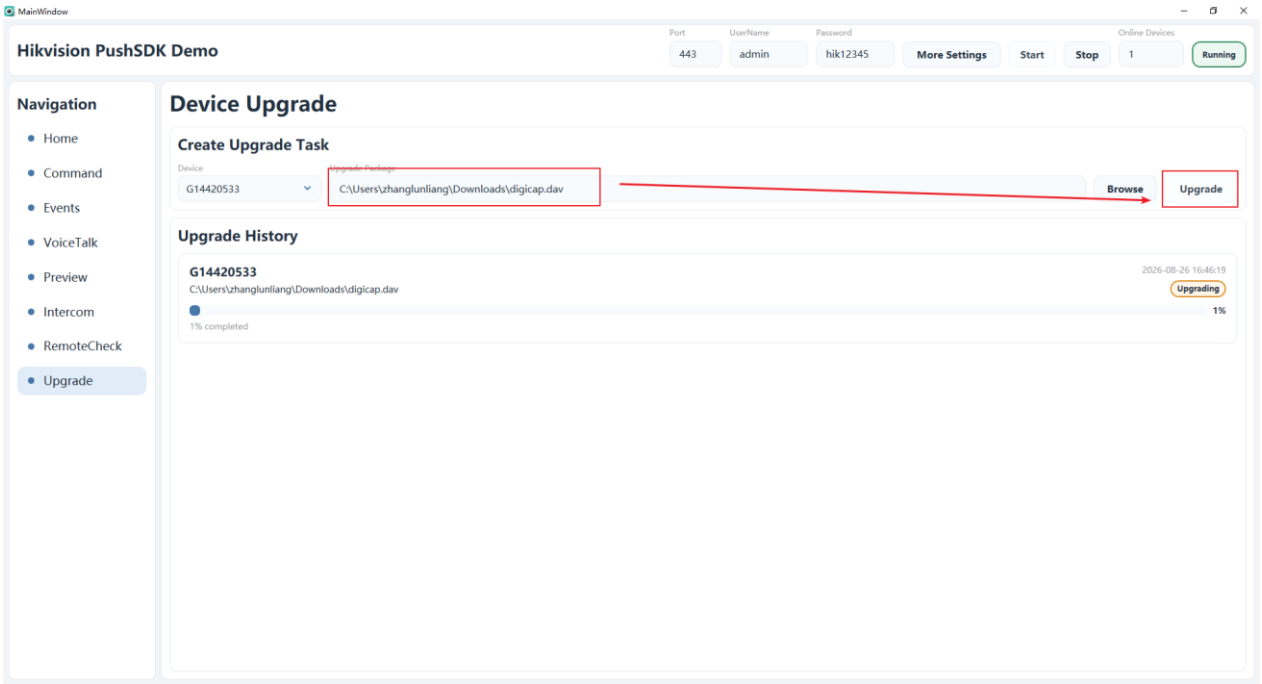
MainWindow
Hikvision PushSDK Demo
Port
443
UserName
admin
Password
hik12345
More Settings
Start
Stop
Online Devices
1
Running
Navigation
Home
Command
Events
VoiceTalk
Preview
Intercom
RemoteCheck
Upgrade
Device Upgrade
Create Upgrade Task
Device
G14420533
Upgrade Package
C:\Users\zhanglunliang\Downloads\digicap.dav
Browse
Upgrade
Upgrade History
G14420533
C:\Users\zhanglunliang\Downloads\digicap.dav
2026-08-26 16:46:19
Upgrading
1%
1% completed

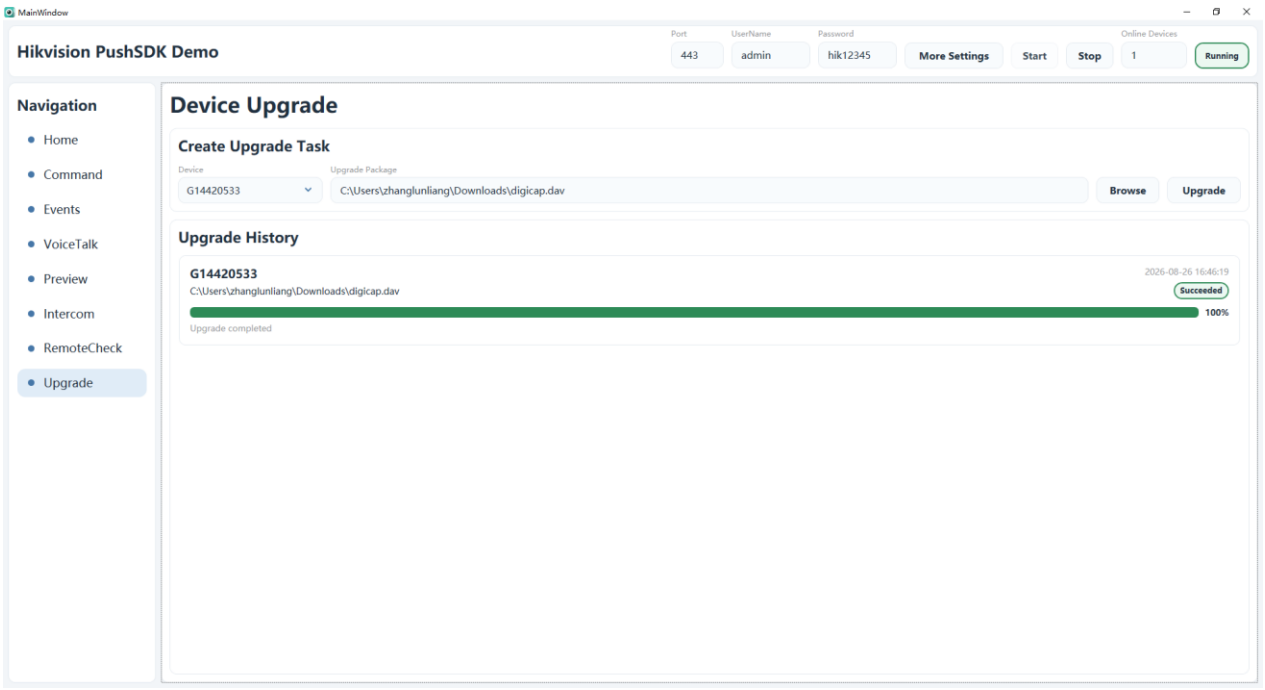


Waiting device to be online again.

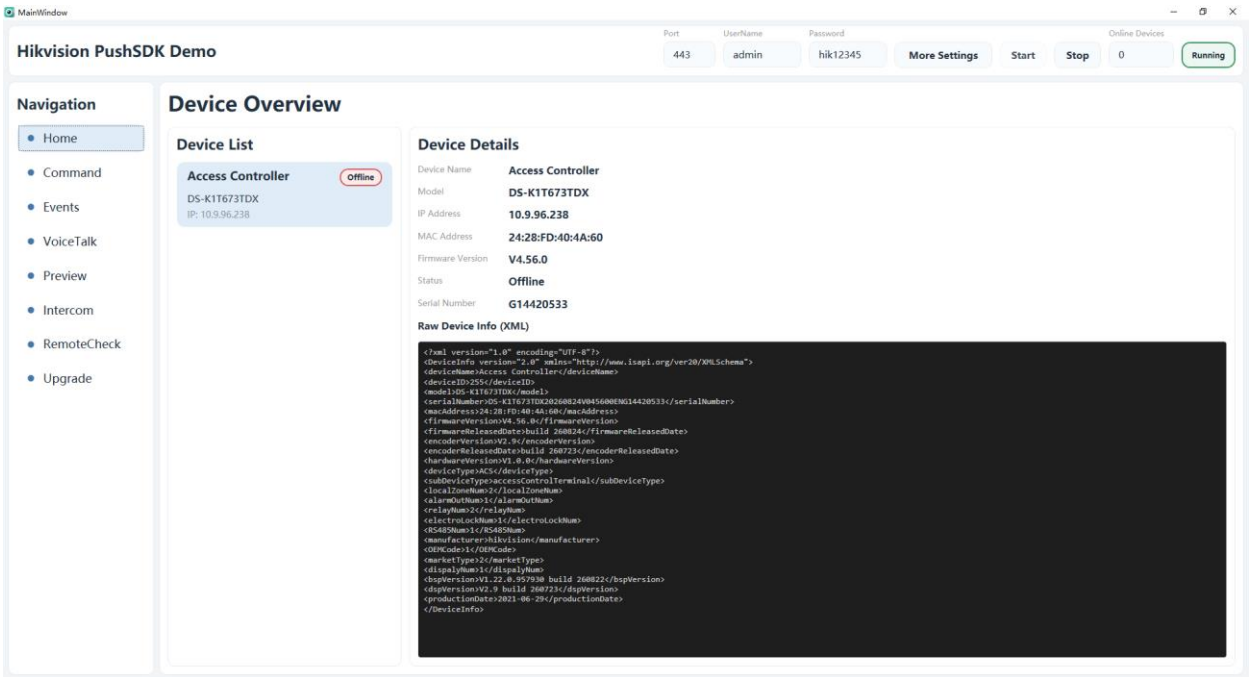

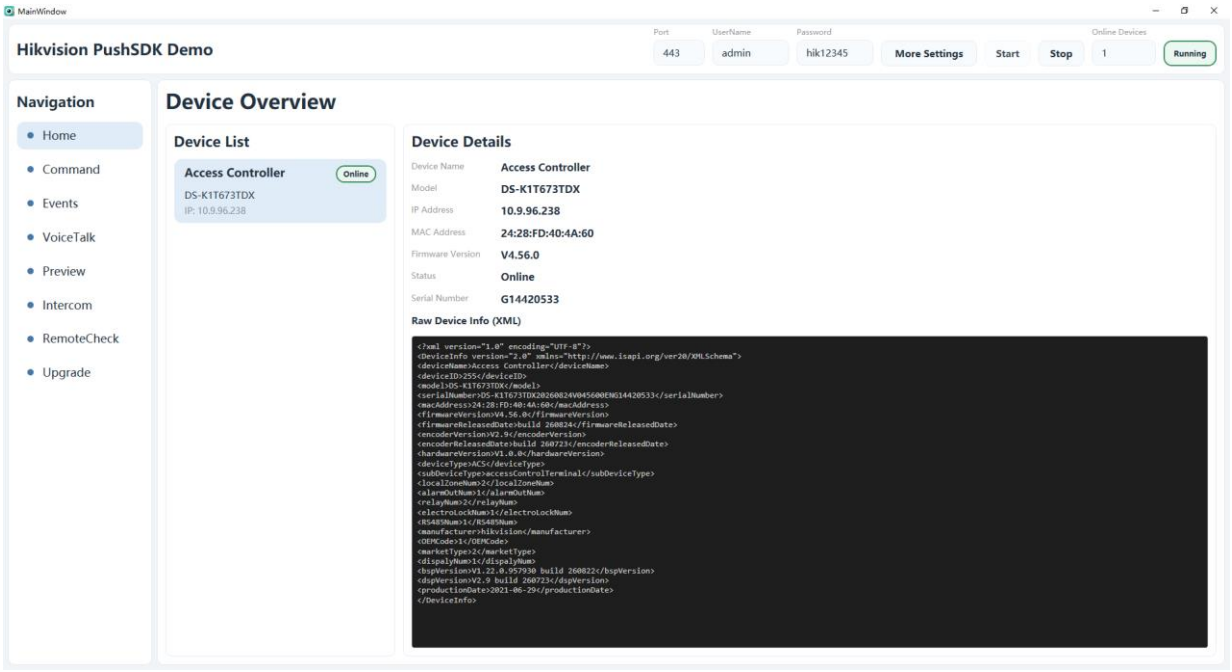


9. Voice Talk

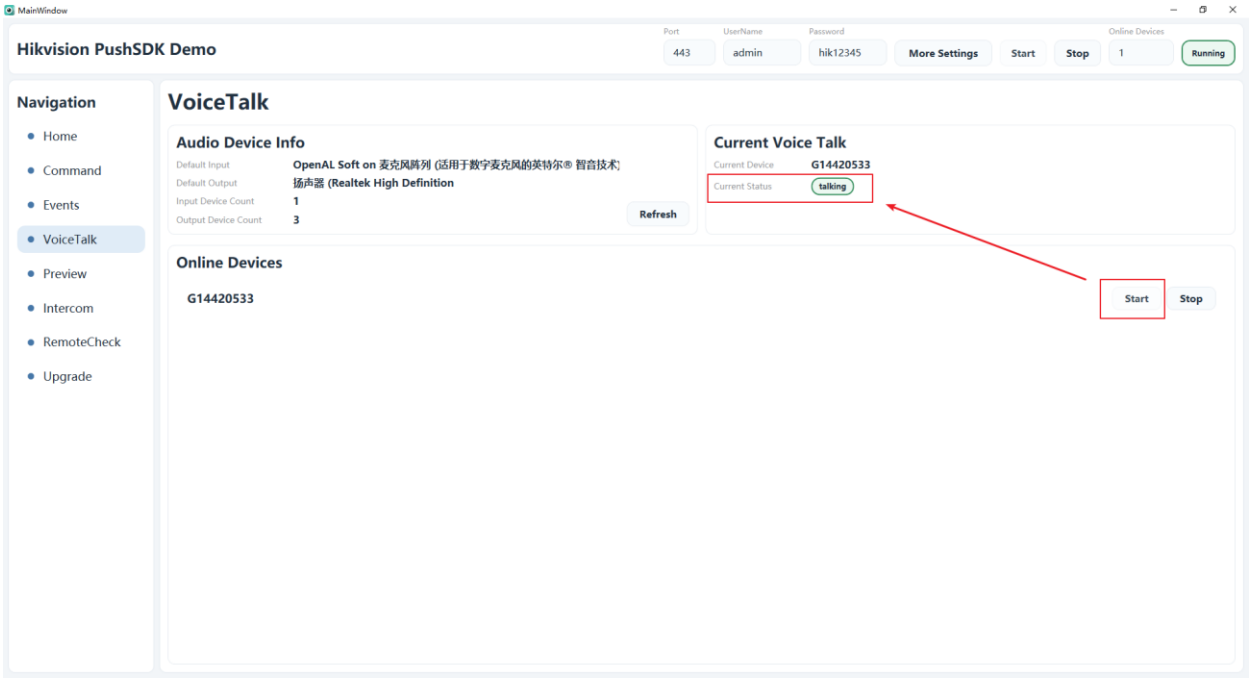


10. Intercom

Configuration “Call Center” on webpage.

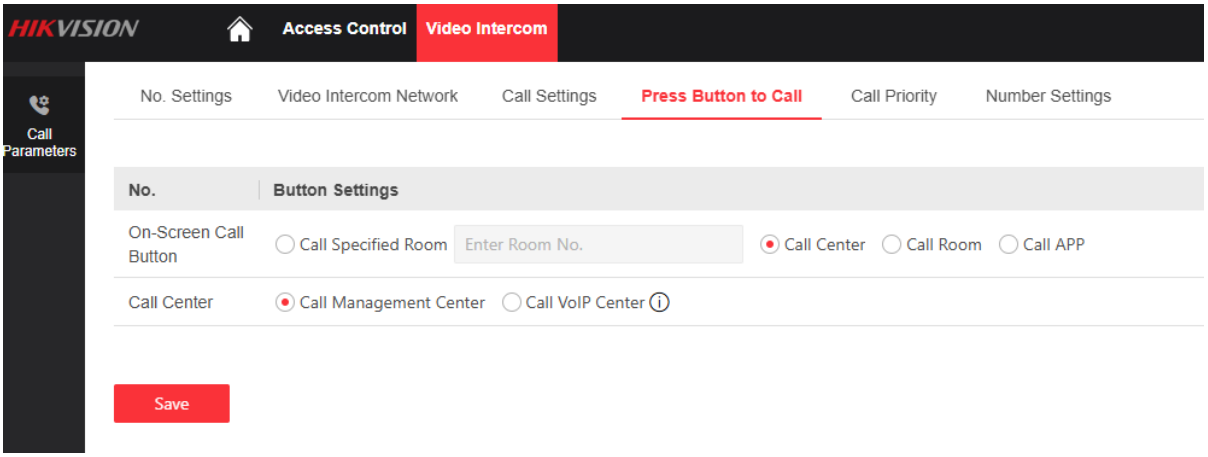


Press Call button on device's screen.

Receive Call in demo.

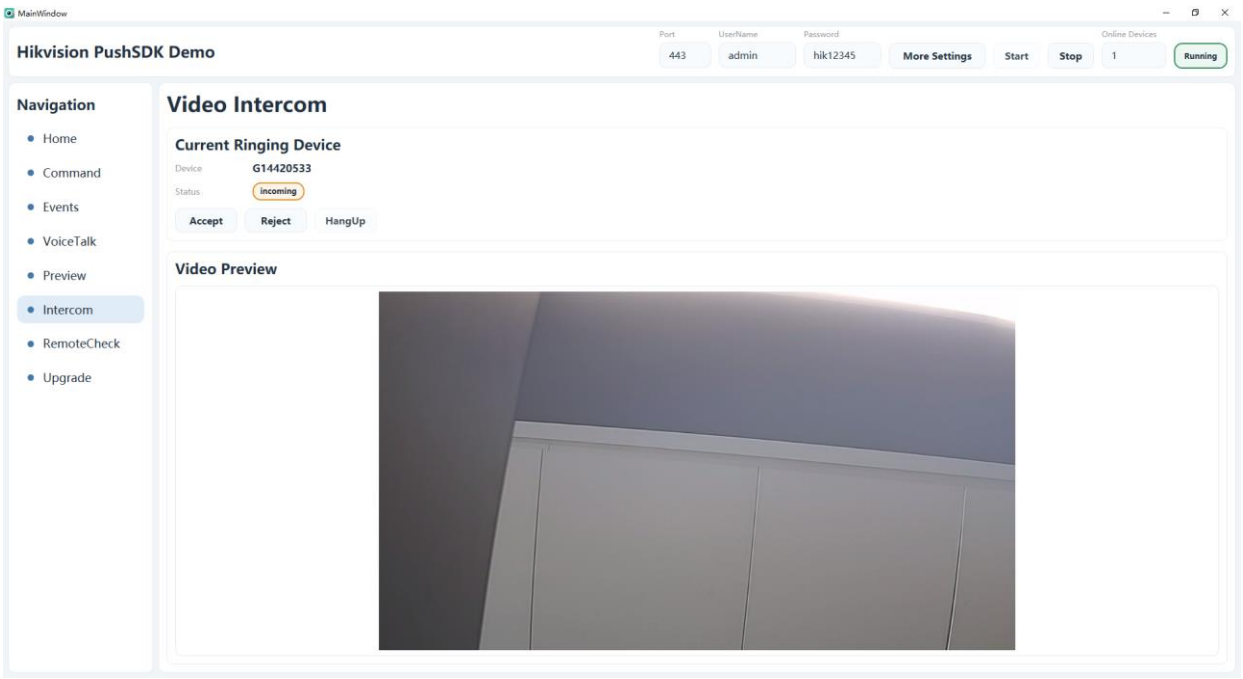


Click "Accept" button to start.

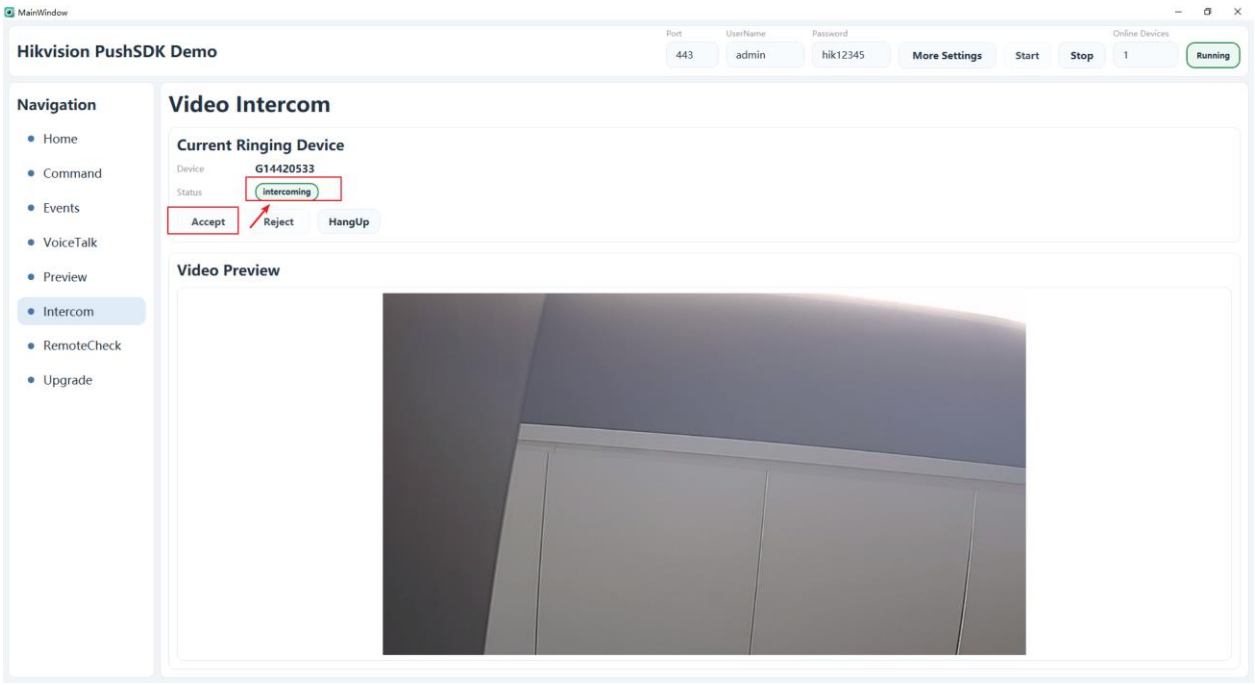



11. Remote Verification(Supported from 2026 Aug baseline version)

Call API “PUT /ISAPI/AccessControl/AcsCfg?format=json” to enable remote verification function and change channel to PUSH.

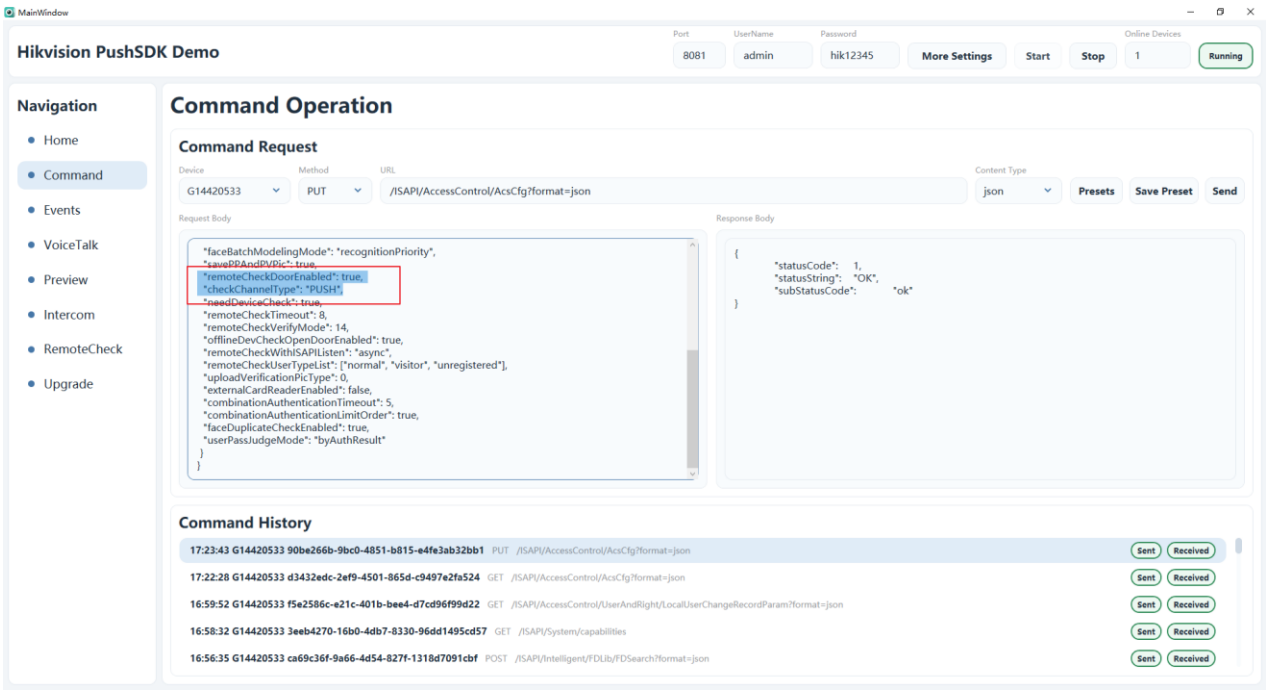


Receive event in RemoteCheck panel and then send command “success” or “failed”.

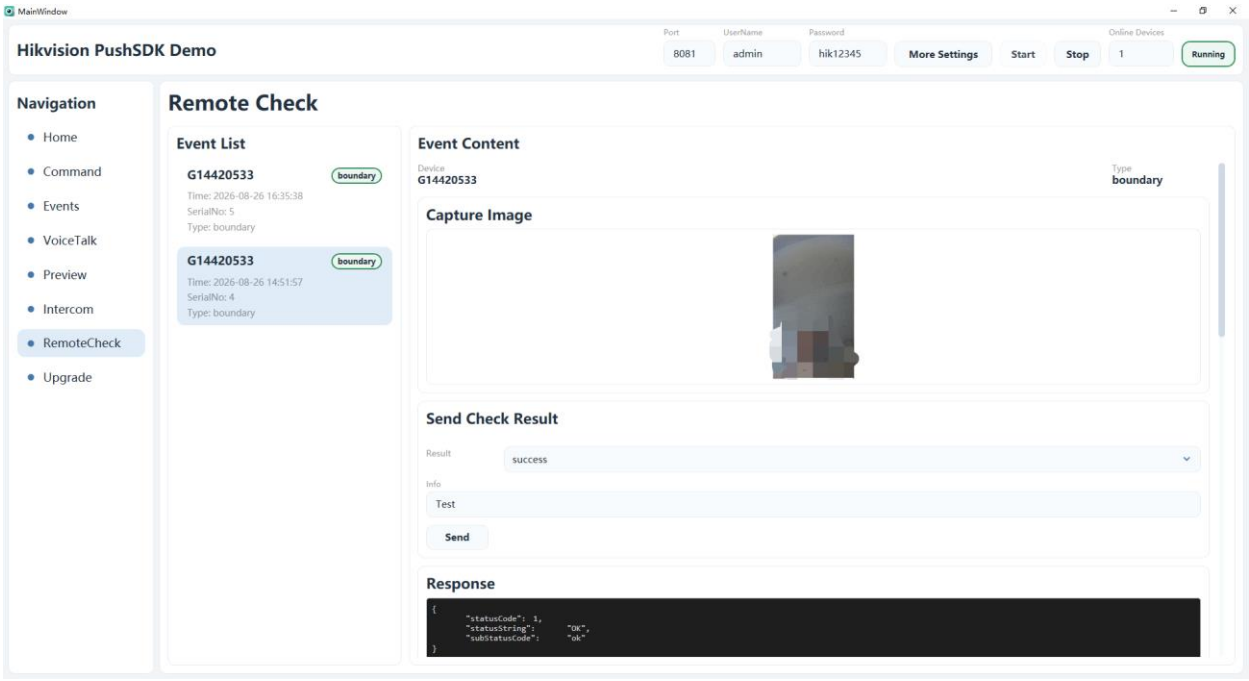

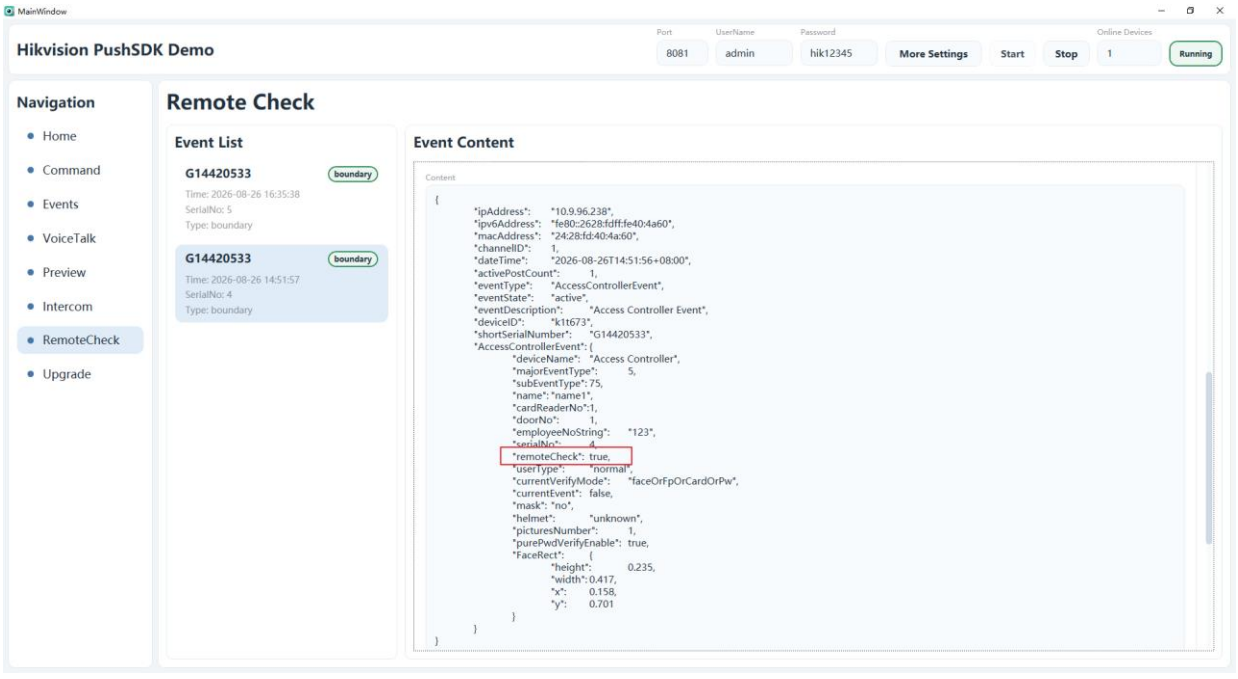


After sending command, Events panel will receive final result and event will include remoteCheckResult parameter.

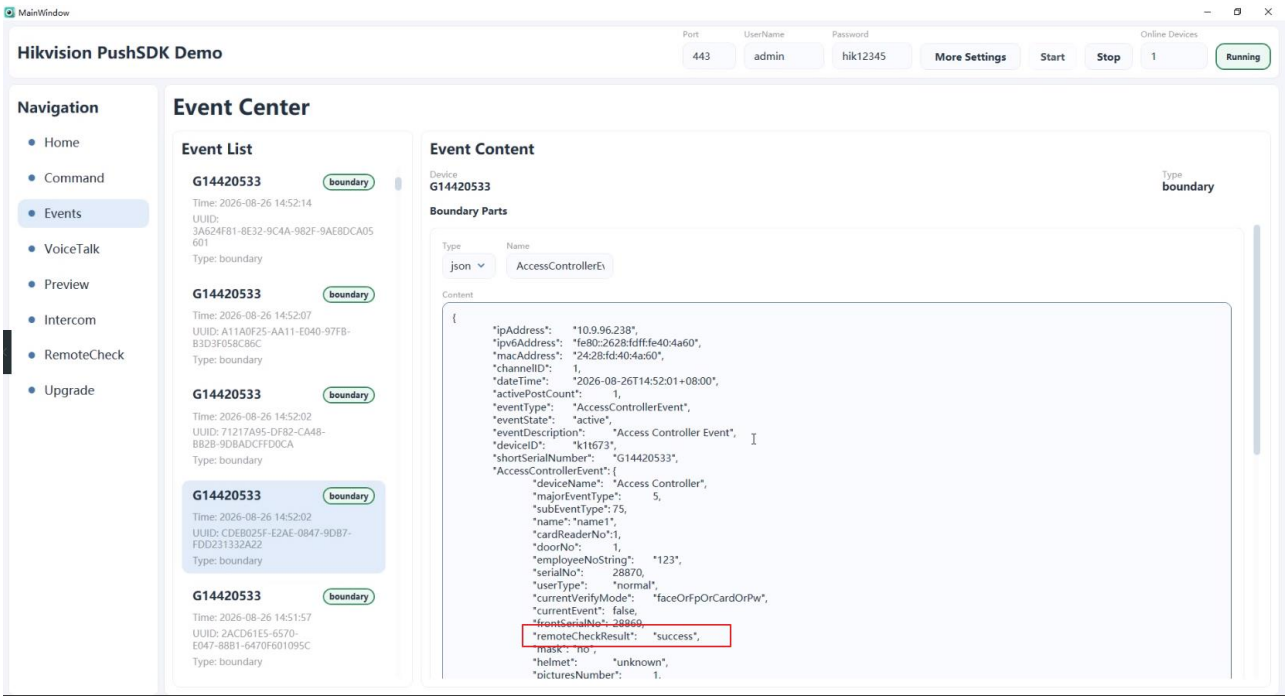


12. LocalUserChange event(Supported from 2026 Aug baseline version)

Configure LocalUserChange event uploading function.
API: /ISAPI/AccessControl/UserAndRight/LocalUserChangeRecordParam?format=json

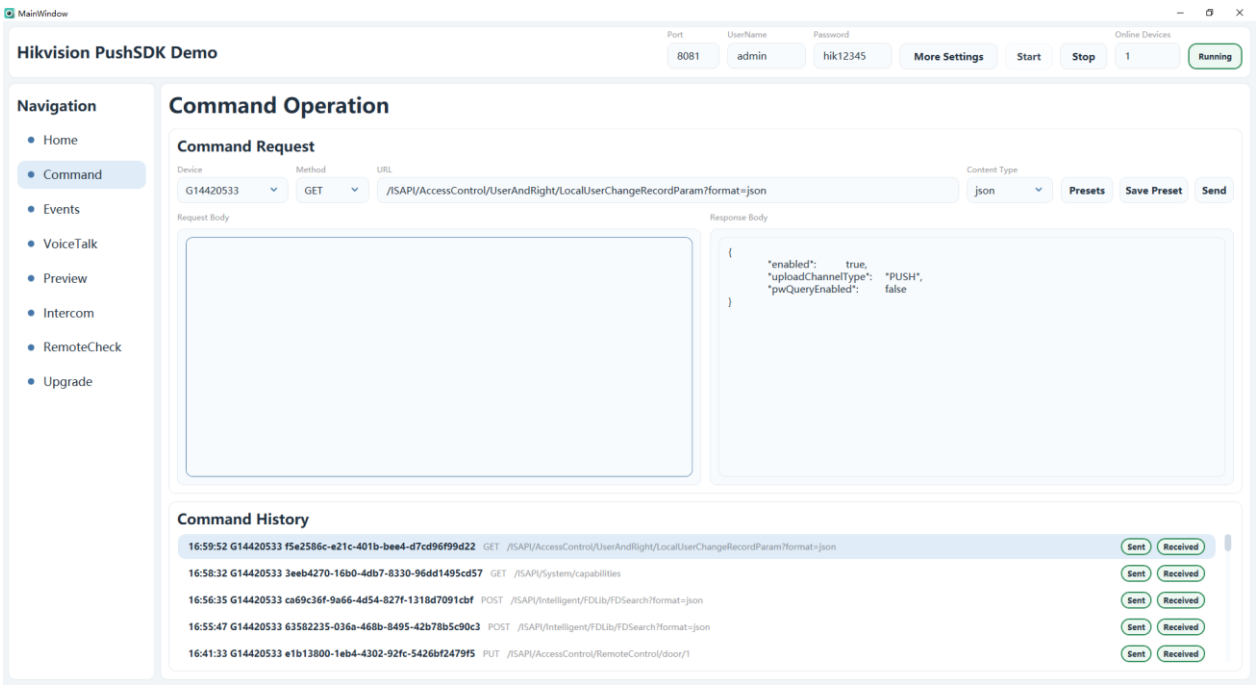

Receive event.

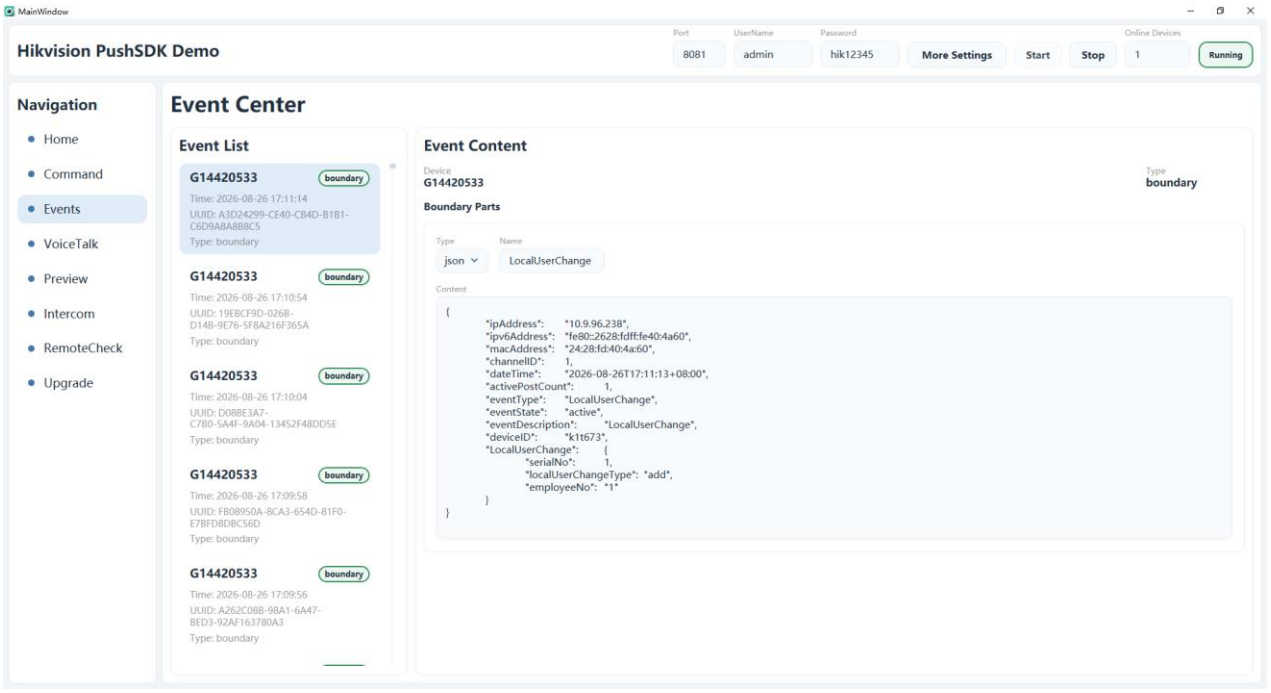
MainWindow
Hikvision PushSDK Demo
Port
8081
UserName
admin
Password
hik12345
More Settings
Start
Stop
Online Devices
1
Running
Navigation
Home
Command
Events
VoiceTalk
Preview
Intercom
RemoteCheck
Upgrade
Event Center
Event List
G14420533
boundary
Time: 2026-08-26 17:11:14
UUID: A3D24299-CE40-CB4D-B1B1-C6D9A8A8B8C5
Type: boundary
G14420533
boundary
Time: 2026-08-26 17:10:54
UUID: 19EBCF9D-026B-D14B-9E76-5F8A216F365A
Type: boundary
G14420533
boundary
Time: 2026-08-26 17:10:04
UUID: D08BE3A7-C7B0-5A4F-9A04-13452F48DD5E
Type: boundary
G14420533
boundary
Time: 2026-08-26 17:09:58
UUID: FB08950A-8CA3-654D-81F0-E7BFD8DBC56D
Type: boundary
G14420533
boundary
Time: 2026-08-26 17:09:56
UUID: A262C08B-98A1-6A47-8ED3-92AF163780A3
Type: boundary
Event Content
Device
G14420533
Type
boundary
Boundary Parts
Type
json
Name
LocalUserChange
Content
{
"ipAddress": "10.9.96.238",
"ipv6Address": "fe80::2628:fdff:fe40:4a60",
"macAddress": "24:28:fd:40:4a:60",
"channelID": 1,
"dateTime": "2026-08-26T17:11:13+08:00",
"activePostCount": 1,
"eventType": "LocalUserChange",
"eventState": "active",
"eventDescription": "LocalUserChange",
"deviceID": "k1t673",
"LocalUserChange": {
"serialNo": 1,
"localUserChangeType": "add",
"employeeNo": "1"
}
}