#### Session Plan

- Mass-Storage Systems
  - Overview
  - Disk Structure
  - Disk Scheduling
  - RAID Structure

# Magnetic Disks

- Magnetic disks provide bulk of secondary storage of moderno
- mon-wlatiu computers
- A magnetic disk has a sector-addressable address space
  - You can think of a disk as an array of sec
  - Each sector (logical block) is the smallest unit of transfer
- Sectors are typically 512 or 4096 bytes
- Main operations
  - Read from sectors (blocks)
  - Write to sectors (blocks)

#### Disk Structure










- Disk drives are addressed as large 1-dimensional arrays of logical blocks, where the logical block is the smallest unit of transfer
  - Low-level formatting creates logical blocks on physical media
- The 1-dimensional array of logical blocks is mapped into the sectors of the disk sequentially
  - Sector 0 is the first sector of the first track on the outermost cylinder
  - Mapping proceeds in order through that track, then the rest of the tracks in that cylinder, and then through the rest of the cylinders from outermost to innermost
  - Logical to physical address should be easy
    - Except for bad sectors
    - Non-constant # of sectors per track via constant angular velocity

# Non-uniform #sectors / track

 Reduce bit density per track for outer layers (Constant Linear Velocity, typically HDDs)

 Have more sectors per track on the outer layers, and increase rotational speed when reading from outer tracks (Constant Angular Velocity, typically CDs, DVDs)

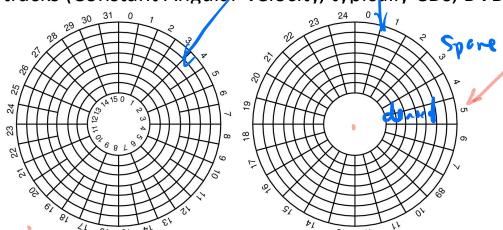


increase the heaten speed as head moves throads


"keep the same rate of data under the head"

# Internals of Hard Disk Drive (HDD)


A single track + an arm + a head

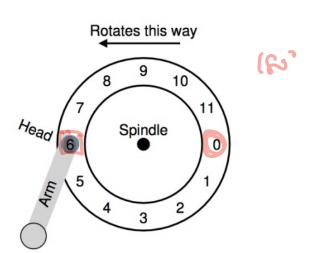


# Moving-head Disk Mechanism

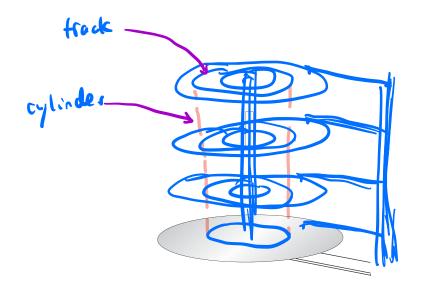

### Read Sector 0

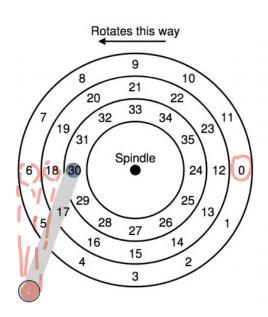

#### Read Sector 0

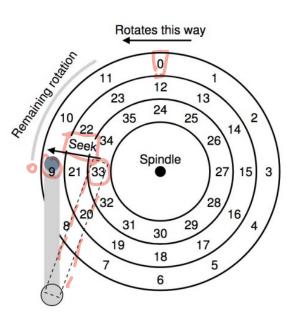

- Seek for right track
   Rotate (sector 9 → 0)
- 3. Transfer data (sector 0)

### Inside of a Hard Disk Drive

https://www.youtube.com/watch?v=9eMWG3fwiEU

#### Disk Overhead

- To read from disk, we must specify:
  - cylinder #, surface #, sector #, transfer size, memory address
- Transfer time includes:
  - Seek time: to get to the track
  - Latency time: to get to the sector and
     Transfer time: get bits off the disk
    Sector

    Rotation
    Delay

#### Disk Performance

- I/O latency of disks
  - $L_{I/O} = L_{seek} + L_{rotate} + L_{transfer}$
- Disk access latency at millisecond level




Hole

rototov

# Seek, Rotate, Transfer

- Seek may take milliseconds (ms)
  - Entire seek often takes 3 9 ms
- Rotation per second (RPM)
  - 7200 RPM is common nowadays
  - 15000 RPM is high end
  - Old computers may have 5400 RPM disks
  - 1 / 7200 RPM = 1 min / 7200 rotations = 1 sec / 120 rotations = 8.3 ms / rotation => it may take 4.2 ms on average to rotate to target (0.5 \* 8.3 ms)
- Transfer is relatively fast
  - 100+MB/s for SATA I, up to 600MB/s for SATA III
  - 1s / 100 MB = 10 ms / MB = 4.9 us/sector (assuming 512-byte sector)

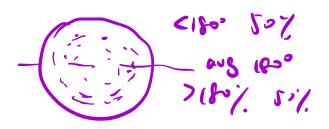

#### Disk Performance Calculation

- RPM 7200
- Avg seek 4.16ms
- Max transfer 500MB/s
- How long does an average 4KB read take?
  - Transfer = 1sec/500MB \* 4KB \* 1,000,000us/1sec = 8 us
  - Latency = 4.16 ms (avg seek) + 4.2 ms (avg rotate) + 8 us = 8.368 ms



#### Hard Disks

- Platters range from .85" to 14" (historically)
  - Commonly 3.5", 2.5", and 1.8"
- Range from 30GB to 3TB per drive
- Performance
  - Transfer Rate theoretical 6 Gb/sec
  - Effective Transfer Rate real 1Gb/sec
  - Seek time from 3ms to 12ms 9ms common for desktop drives
  - Average seek time measured or calculated based on 1/3 of tracks
  - Latency based on spindle speed
    - 1 / (RPM / 60) = 60 / RPM
  - Average latency = ½ latency

Spindle [rpm]	Average latency [ms]
4200	7.14
5400	5.56
7200	4.17
10000	3
15000	2

#### The First Commercial Disk Drive



1956 IBM RAMDAC computer included the IBM Model 350 disk storage system

5M (7 bit) characters 50 x 24" platters Access time = < 1 second

# Modern Disks

	Barracuda 180	Cheetah X15 36LP
Capacity	181GB	36.7GB
Disk/Heads	12/24	4/8
Cylinders	24,247	18,479
Sectors/track	~609	~485
Speed	7200RPM	15000RPM
Latency (ms)	4.17	2.0
Avg seek (ms)	7.4/8.2	3.6/4.2
Track-2- track(ms)	0.8/1.1	0.3/0.4

#### Solid-State Disks

Flash

- Nonvolatile memory used like a hard drive
  - Many technology variations
- Can be more reliable than HDDs
- More expensive per MB
- Maybe have shorter life span
- Less capacity
- But much faster
  - Very fast reads
  - Writes are slower need a slow erase cycle (cannot overwrite directly)
- No moving parts, so no seek time or rotational latency

## Magnetic Tape

- Was early secondary-storage medium
  - Evolved from open spools to cartridges
- Relatively permanent and holds large quantities of data
- Access time slow
- Random access ~1000 times slower than disk
- Mainly used for backup, storage of infrequently-used data, transfer medium between systems
- Kept in spool and wound or rewound past read-write head
- Once data under head, transfer rates comparable to disk
  - 140MB/sec and greater
- 200GB to 1.5TB typical storage
- Common technologies are LTO-{3,4,5} and T10000

# Disks vs. Memory

- Smallest write: sector
- Atomic write = sector
- Random access: 5ms
  - not on a good curve
- Sequential access: 200MB/s
- Cost \$.002MB
- Crash: doesn't matter ("nonvolatile")

- (usually) bytes
- byte, word
- 50 ns
  - faster all the time
- 200-1000MB/s
- \$.10MB
- contents gone ("volatile")

# Disk Scheduling

- The operating system is responsible for using hardware efficiently
  - for the disk drives, this means having a fast access time and disk bandwidth
- Access time has two major components
  - Seek time is time to move the heads to the cylinder containing the desired sector
  - Rotational latency is additional time waiting to rotate the desired sector to the disk head
- Minimize seek time
- Seek time ≈ seek distance
- Disk bandwidth is the total number of bytes transferred, divided by the total time between the first request for service and the completion of the last transfer

# Disk Scheduling (cont.)

- There are many sources of disk I/O request
  - OS
  - System processes
  - Users processes
- I/O request includes input or output mode, disk address, memory address, number of sectors to transfer
- OS maintains queue of requests, per disk or device
- Idle disk can immediately work on I/O request, busy disk means work must queue
  - Optimization algorithms only make sense when a queue exists

# Disk Scheduling (cont.)


- Note that drive controllers have small buffers and can manage a queue of I/O requests (of varying "depth")
- Several algorithms exist to schedule the servicing of disk I/O requests
- The analysis is true for one or many platters
- We illustrate scheduling algorithms with a request queue (0-199)

98, 183, 37, 122, 14, 124, 65, 67

Head pointer 53

#### **FCFS**


Illustration shows total head movement of 640 cylinders

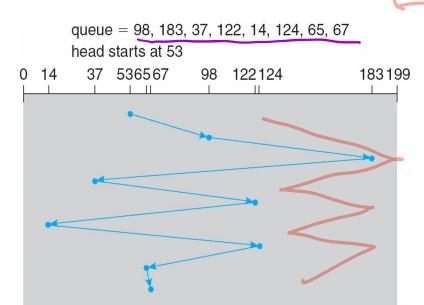

#### SSTF

- Shortest Seek Time First selects the request with the minimum seek time from the current head position
- SSTF scheduling is a form of SJF scheduling; may cause starvation of some requests


Illustration shows total head movement of 236 cylinders

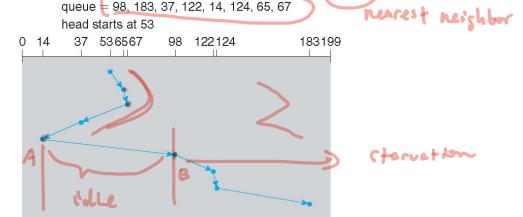

#### SCAN

- The disk arm starts at one end of the disk, and moves toward the other end, servicing requests until it gets to the other end of the disk, where the head movement is reversed and servicing continues.
- SCAN algorithm sometimes called the elevator algorithm
- Illustration shows total head movement of 208 cylinders
- But note that if requests are uniformly dense, largest density at other end of disk and those wait the longest


# SCAN (cont.)

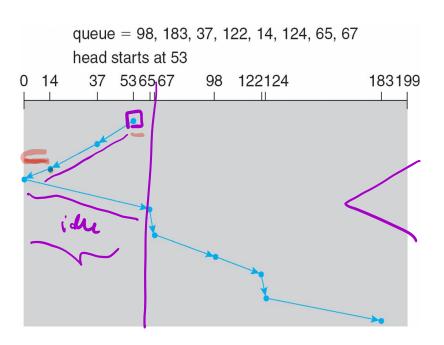

# C-SCAN


- Provides a more uniform wait time than SCAN
- The head moves from one end of the disk to the other, servicing requests as it goes
  - When it reaches the other end, however, it immediately returns to the beginning of the disk, without servicing any requests on the return trip
- Treats the cylinders as a circular list that wraps around from the last cylinder to the first one
- Total number of cylinders?

# C-SCAN (cont.)

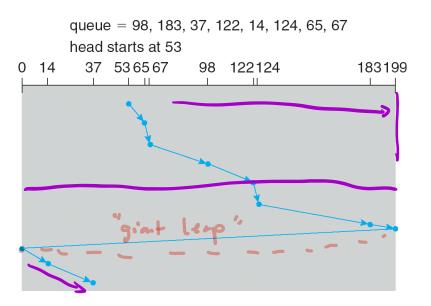

#### C-LOOK

- LOOK a version of SCAN, C-LOOK a version of C-SCAN
- Arm only goes as far as the last request in each direction, then reverses direction immediately, without first going all the way to the end of the disk
- Total number of cylinders?

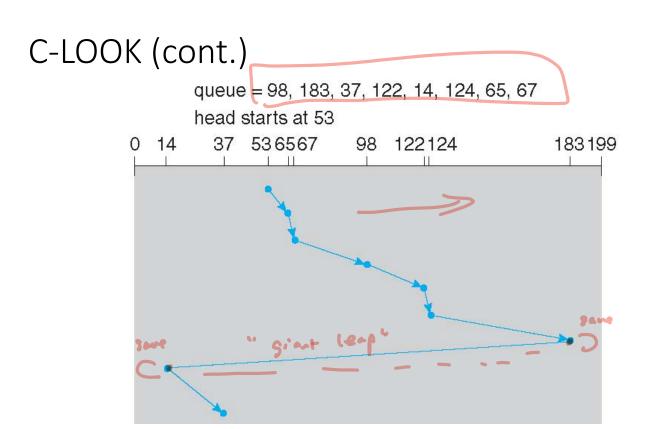

# Selecting a Disk-Scheduling Algorithm

#### Starration

- SSTF is common and has a natural appeal
- SCAN and C-SCAN perform better for systems that place a heavy load on the disk
  - Less starvation
- Performance depends on the number and types of requests
- The disk-scheduling algorithm should be written as a separate module of the operating system, allowing it to be replaced with a different algorithm if necessary
- Either SSTF or LOOK is a reasonable choice for the default algorithm
- What about rotational latency?
  - Difficult for OS to calculate

# Summary

- Disks are slow devices relative to CPUs.
- For most OS features, we are very concerned about efficiency.
- For I/O systems, and disk, in particular, it is worthwhile to complicate and slow down the OS if we can gain improvement in I/O times.

# Exit Slips

- Take 1-2 minutes to reflect on this lecture
- On a sheet of paper write:
  - One thing you learned in this lecture
  - One thing you didn't understand