

## University of Technology, Sydney Faculty of Engineering and Information Technology

Assessment Number: Assessment Title: Tutorial Group:	1		
	Iah 1 Tarran 6		
Tutorial Group:	Lab 1 – 10wer 5	Serial Communications	
ı			
tudents Name(s) and Nu	umber(s)		<u> </u>
· · ·	amily Name	First Name	
<b>Declaration of Origina</b>	ality:		
Signature(s)			
Signature(s)			
Signature(s)			
Signature(s)  Assessment Submi	ssion Receipt		
		Serial Communications	Mark
Assessment Submi		Serial Communications	Mark

#### **Assessment Criteria**

Your lab will be assessed according to the following criteria:

Item	Detail	Evaluation	Mark
Opening comments	File headers are correct.	G A P	/0.5
Function descriptions	Function descriptions are appropriate and correct.	G A P	/0.5
Naming conventions	Names conform to the Software Style Guide.	G A P	/0.5
Code structure	Code structure conforms to the Software Style Guide.	G A P	/0.5
UART functions	All control register bits are set individually. Baud rate set correctly. Correct use of FIFOs. Polling is correct.	GAP	/1
Packet functions	Packet functionality is correct. Errors are handled correctly.	G A P	/1
FIFO implementation	Functionally correct, easy to modify (read) and efficient.	G A P	/2
Protocol implementation	Protocol response is correct, including ACK/NAK.	G A P	/2
	/8		

#### **Evaluation**

When we evaluate an assessment item, we will use the following criteria:

- **G** = All relevant material is presented in a logical manner showing clear understanding, and sound reasoning. For software evidence of correct coding style, efficient implementation and / or novel (and correct) code.
- **A** = Most relevant material is presented with acceptable organisation and understanding. For software some code may be prone to errors under certain operating conditions (e.g. input parameters) or usage, style may have inconsistent sections, occasional inefficient or incorrect code.
- **P** = Little relevant material is presented and/or code displays poor organisation or understanding of the underlying concepts.

#### **Oral Defence**

During the demonstration session you will be asked a number of questions based on material which you have learnt in the subject and then used to implement the assignment. You are expected to know exactly how your implementation works and be able to justify the design choices which you have made. If you fail to answer the questions with appropriate substance then you will be awarded **zero** for that component.

## Lab 1 - Tower Serial Communications

Port access. UART initialization. Polling. Circular buffer. Packet decoding.

## Introduction

The Universal Asynchronous Receiver / Transmitter (UART) is a simple yet extremely important peripheral of the K70 microcontroller. On the Tower board it is connected to a serial-to-USB chip that enables the board to communicate to a PC running Windows 7. The Tower board is to implement the serial communication protocol as outlined in the separate document entitled *Tower Serial Communication Protocol*.

## **Objectives**

- 1. To set up a UART on a microcontroller.
- 2. To implement a circular buffer in the C language.
- 3. To decode and respond to packets according to a defined protocol.

## **Equipment**

- 1 TWR-K70F120M-KIT
- 1 USB cable
- NXP Kinetis Design Studio

## **Safety**

This is a Category A laboratory experiment. Please adhere to the Category A cat. A lab safety guidelines (issued separately).

# L1.2

#### **Software Overview**

The serial communication between the Tower board and the PC uses 5-byte packets. The task of the Tower software is to receive and send packets of information asynchronously.

This is a classic producer-consumer problem. One solution to the asynchronous nature of the communication is to implement a first-in first-out (FIFO) buffer between the producer and consumer. This is shown diagrammatically below:

Data flow graph showing two FIFOs that buffer data between producers and consumers

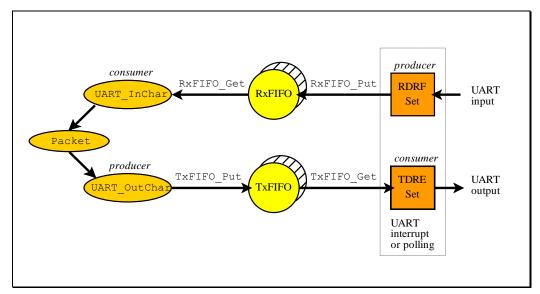


Figure L1.1


A simple (but inefficient) way of handling the asynchronous nature of the UART communication is to check the status of the UART hardware repeatedly by calling a function in the main loop of the program that *polls* the status of the UART, and calls RXFIFO Put or TXFIFO Get as required.

#### **Receiving Data**

When the packet module wishes to receive input, it calls UART InChar, which will attempt to get data from the RXFIFO (it will fail if the FIFO buffer is empty). How does data get in the RXFIFO?

The incoming serial data will set the Receive Data Register Full (RDRF) flag in the UART Status Register 1 (UART S1) register, indicating that the receiver hardware has just received a byte of data. In the main loop, a poll of the RDRF flag is performed. If it is set, then the program tries to accept the data and put it replaced by a polling in the RxFIFO. The RxFIFO buffers data between the input hardware and the main program that processes the data. If the RxFIFO becomes full, then data will be lost. This is illustrated below:

In this lab, the receive interrupt service routine is operation

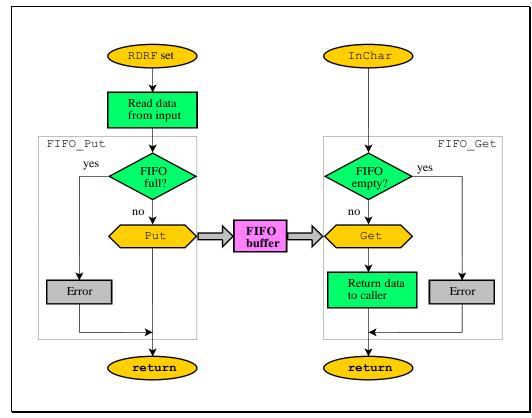

A FIFO queue can be used to pass data between an input device and a main thread

Figure L1.2

FIFO full errors will always occur if the average input rate (number of bytes arriving per second from the input hardware) exceeds the average processing rate (number of bytes processed per second by the main program). In this situation, either the output rate must be increased (by using a faster computer

# L1.4

or by writing a better software processing algorithm), or the input rate must be decreased (by slowing down the arrival rate of data). The second way the RXFIFO could become full is if there is a temporary increase in the arrival rate or a temporary decrease in the processing rate. For this situation, the full errors could be eliminated by increasing the size of the RXFIFO.

It is inefficient, but not catastrophic, for the main program to wait on an empty RxFIFO in some cases. Efficiency can be improved for the buffered input problem by performing other tasks while waiting for data.

### **Sending Data**

When the packet module wishes to output, it calls <code>UART\_OutChar</code>, which will put the data in the <code>TxFIFO</code> and arm the output device.

The setting of the Transmit Data Register Empty (TDRE) flag by the UART hardware signals that the output shift register is idle and ready to output more data. In the main loop, a poll of the TDRE flag is performed. If it is set, then the program tries to retrieve the data in the TxFIFO., and send it out the serial port. If the TxFIFO becomes empty, then no data will be sent out the serial port. This is illustrated below:

In this lab, the transmit interrupt service routine is replaced by a polling operation

A FIFO queue can be used to pass data between a main thread and an output device

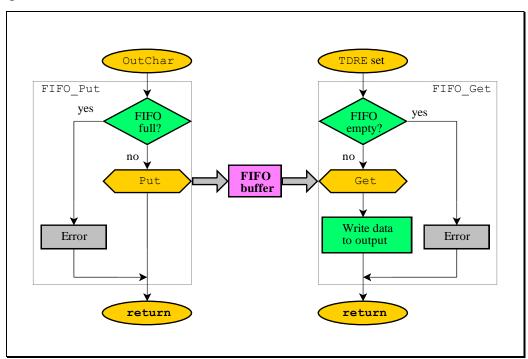


Figure L1.3

It is inefficient, but not catastrophic, for the main program to wait on a full TxFIFO. Efficiency can be improved for the buffered output problem by increasing the TxFIFO size.

#### **Software Modules**

Various modules should be written to support the serial communication protocol.

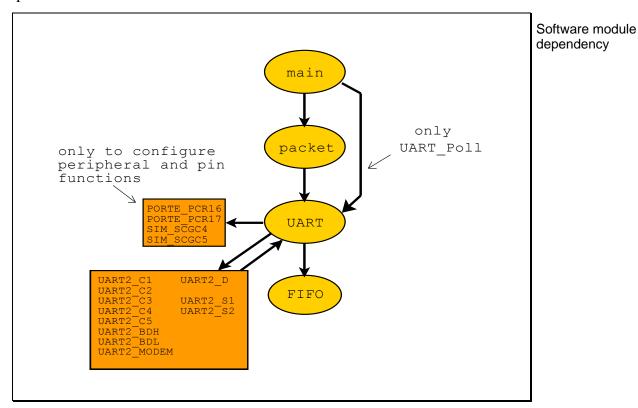


Figure L1.4

## **Software Requirements**

- The serial-to-USB bridge uses UART2. The baud rate is to be 38400 baud, with an 8N1 frame. You are required to set/clear individual bits in the UART's control registers, based on this software requirements specification (SRS).
- 2. The CPU bus clock frequency can be found in "CPU.h". The CPU bus clock is supplied to UART2 as its "module clock" (see Table 5-2 in K70P256M150SF3RM.pdf). The UART2 module clock is needed for baud rate divisor calculations.
- 3. The software must be able to handle at least 40 packets in the receive buffer and at least 40 packets in the transmit buffer (each packet is 5 bytes).
- 4. A frequent polling operation in the main loop should be used to check the status of the serial port.
- 5. The commands of the Tower serial protocol to be implemented (with packet acknowledgement) are:

Tower to PC	PC to Tower	
0x04 Tower startup	0x04 Special – Get startup values	
0x09 Special – Tower version	0x09 Special – Get version	
0x0B Tower number	0x0B Tower number (get & set)	

- 6. In response to reception of a "0x04 Special Get startup values" packet from the PC, the Tower should transmit three packets:
  - a "0x04 Tower startup" packet
  - a "0x09 Special Tower version" packet
  - a "0x0B Tower number" packet
- 7. Upon power up, the Tower should send the same 3 packets as above.
- 8. Use the last 4 digits of your student number to initialise the Tower number. Note that it may be changed via the "0x0B Tower number" packet at a later time.

- 9. The "0x09 Special Tower Version" should be V1.0.
- 10. TortoiseSVN must be used for version control.

# L1.8

#### **Hints**

- 1. You need to enable the UART module in SIM SCGC4.
- 2. To enable pin routing for Port E, you need to enable Port E in SIM SCGC5.
- 3. For PIN multiplexing, see p. 280 of K70P256M150SF3RM.pdf. UART2 shares pins with PortE bits 16 and 17.
- 4. For the UART control registers, you only need to write code to change individual bits from their reset state, if required by the SRS (in other words, your software may assume that a valid reset has taken place before it is executed). For every bit that is set or cleared, there should be one line of code, with appropriate comments.
- 5. The Baud Rate Divisor Register and Fine Adjust are discussed on p. 1974 of K70P256M150SF3RM.pdf.
- 6. The project has automatically included MK70F12.h which defines all the registers, such as UART2\_S1, as well as the bit masks, such as UART S1 RDRF MASK.
- 7. Valid commands also require valid parameters when handling a packet.

### **Marking**

The software should be ready for marking on the date specified in the Timetable in the Learning Guide.

Software marking will be carried out in the laboratory, in the format of an oral exam.

Marking criteria are on the front page. Also refer to the document "Software Style Guide".