
PyBrill
Tutorial

Michael Scheer

October 28, 2026

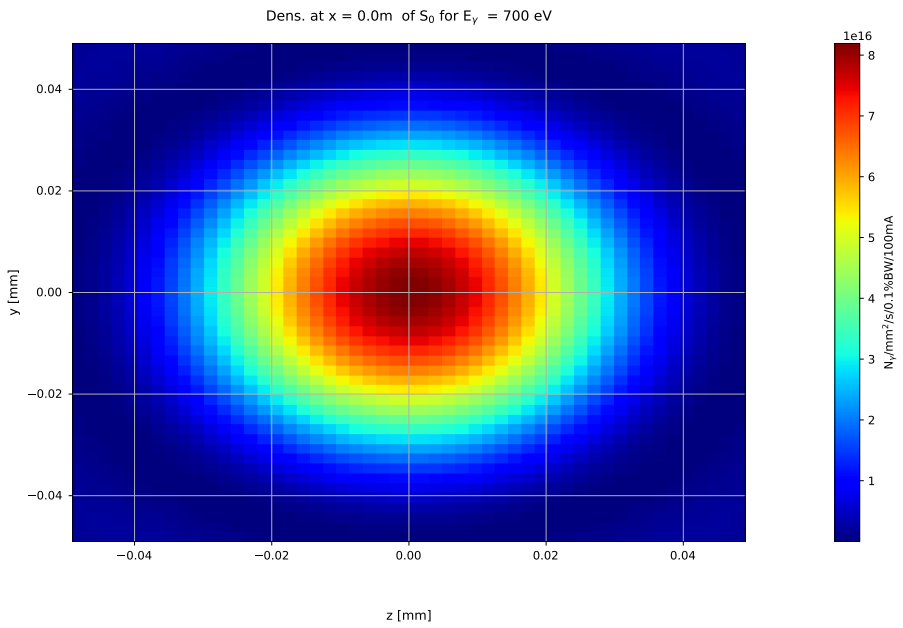

PyBrill has been developed at BESSY for the fast and easy calculation of spontaneous synchrotron radiation of an analytical undulator model. This includes brilliance, radiation field, Stokes parameters, Wigner-Distributions. Monte-Carlo techniques allow to take emittance and energy-spread of the electron beam into account and to generate photons for ray-tracing.

PyBrill and the related software is published under the GNU General Public License. To get pyBrill, please contact the author or get it from github:

git clone https://github.com/MicScheer/brill.git brill

Contents

I Requirements **2**

I.1 Python 2

I.2 FORTRAN 3

II Getting Started **5**

II.1 Brilliance Calculations 6

II.2 Spectrum Calculations 7

III Examples **9**

III.1 Basic Beam Electron Monte-Carlo 9

III.2 Combining Beam Electron and Observation Point Monte-Carlo 12

III.3 Back Propagation of the Radiation to the Source Plane 14

III.4 Generating Photons from Undulator Source for Ray-tracing 16

III.5 Wigner Distribution 17

I Requirements

I.1 Python

To run ***pyBrill*** python3 must be installed on your machine. Within this tutorial a ***Linux*** machine is assumed, but ***pyBrill*** should also run under ***Windows***.

Several python modules are required:

- matplotlib
- pandas
- scipy

To check your installation, please open a command shell (we assume ***bash***) and enter:

python3 –version

Python should show it's version number, i.e. Python is installed. Try:

python3
import numpy, pandas, matplotlib, scipy

Leave Python (Ctrl+d under ***Linux*** , or exit() under ***Windows***).

If modules are missing, it is recommended to build your own virtual python environment:

cd
mkdir python_env
python3 -m venv python_env

To switch to this environment, enter under ***Linux*** :

source /python_env/bin/activate

Under ***Windows*** enter:

python_env\Scripts\activate.bat

or

python_env\Scripts\activate.psl

To leave the python environment, enter:

deactivate

To install missing modules, activate your virtual python environment, as described above. Then enter:

pip3 install matplotlib
pip3 install pandas
pip3 install scipy

If you prefer ipython or idle to work with, you can install them the same way:

pip3 install ipython
pip3 install idle

I.2 FORTRAN

The brilliance calculations of ***pyBrill*** are executed in ***Python***, the working horse of the other calculations is

urad_phase

written in ***FORTRAN***.

If the open source ***GNU*** compiler ***gfortran*** is installed, the program can be compiled by the script

compile_urad_phase.sh

under ***Linux*** or

compile_urad_phase.bat

under ***Windows***, respectively.

To transpose this tutorial for ***Windows*** users, replace

- the slashes in the path names by backslashes

- system variables like $Path by %PATH%
- command ***rm*** by ***del***

II Getting Started

First, we open a terminal and clone the whole package from Github to the directory ***brill*** :

git clone https://github.com/MicScheer/brill.git brill

We call the directory ***brill*** of ***pyBrill*** it's home directory and the sub-directory ***stage*** the working directory.

Since ***urad_phase*** is a standalone program, we can run it by hand, i.e. not deploying ***pyBrill***. We change to the ***working directory*** and run ***urad_phase***:

cd stage
../bin/urad_phase.exe

The program should run and write some lines to the terminal.

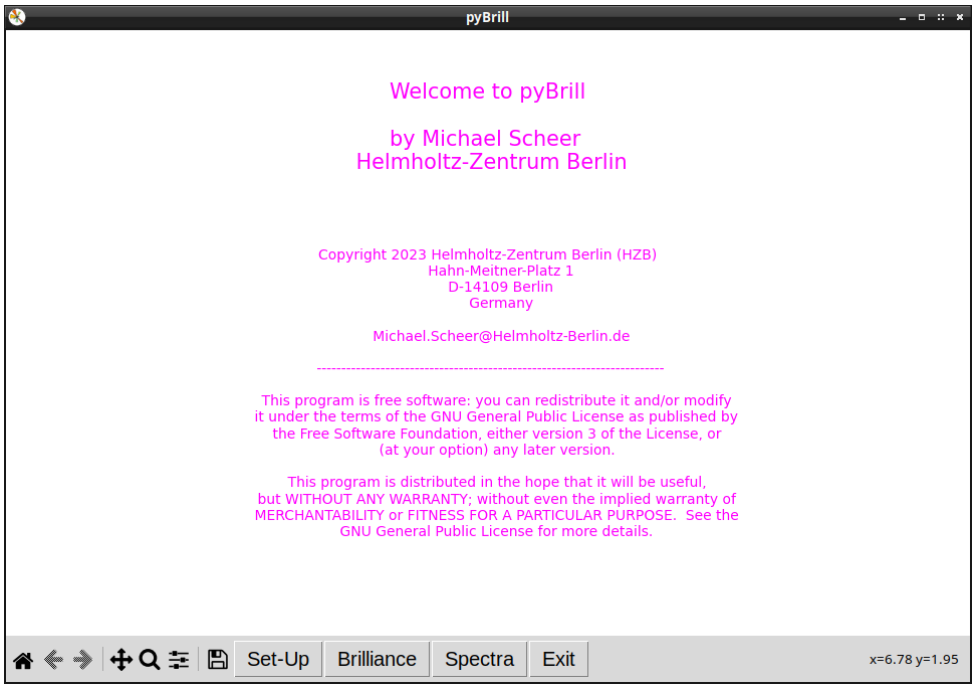


Fig. 1: Start Menu of pyBrill

Urad_phase reads the input data from a namelist file ***urad_phase.nam***. This file can be edit by the user, but it also can be created by ***pyBrill***, which has menus to set the variables, run ***urad_phase***, and plots the results.

We start ***pyBrill*** and try it:

python3 -i ../python/pyBrill.py

The size and position of the window can be controlled by editing the first line of

ntupplot.cfg

The other parameters are not relevant for ***pyBrill***. An example of this file can be found in the sub-directory ***input*** of the home directory of ***pyBrill***.

If present, the start-up file

ntupplot_startup.py

is evaluated and all command lines before the EOF line are executed at program start. The line

Load_Previous_Run()

loads the output of the previous run.

II.1 Brilliance Calculations

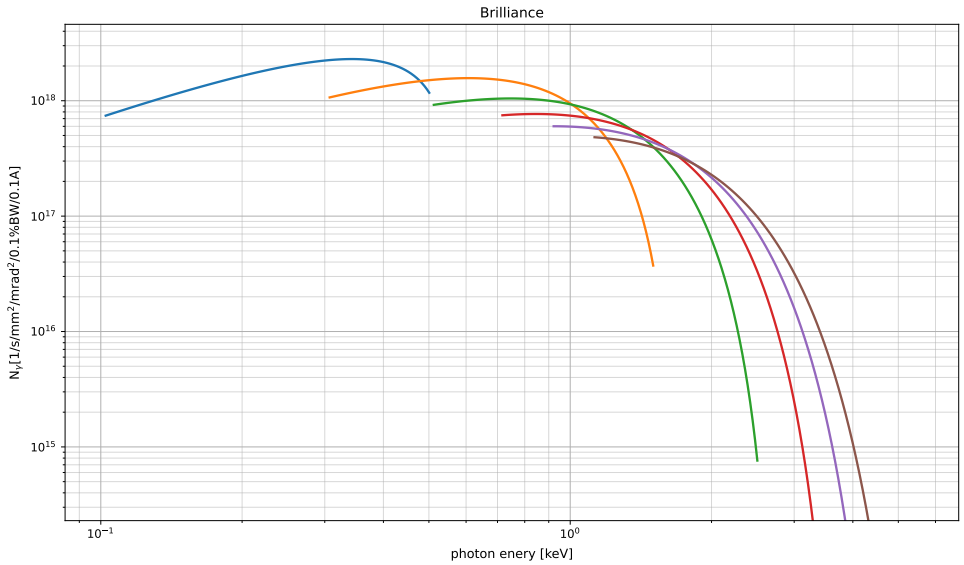


Fig. 2: Brilliance Plot

Press the button labeled ***Brilliance*** and plot the brilliance of the undulator. As you can see in the terminal, the plotted data are written to files. The plot itself is save as PDF-file.

To control the brilliance calculation, press the ***Set-Up*** button and check the menu items. The ***spectra*** item is not used the brilliance calculations. It is reserved for the spectra calculations with ***urad_phase***.

The default values are set by ***pyBrill*** or read from a file named

.pybrill_last.dat

which is written when the ***Exit*** button of ***pyBrill*** is pressed. Note, if you leave ***pyBrill*** by entering "q" while the focus is on the output screen, the data are not stored.

II.2 Spectrum Calculations

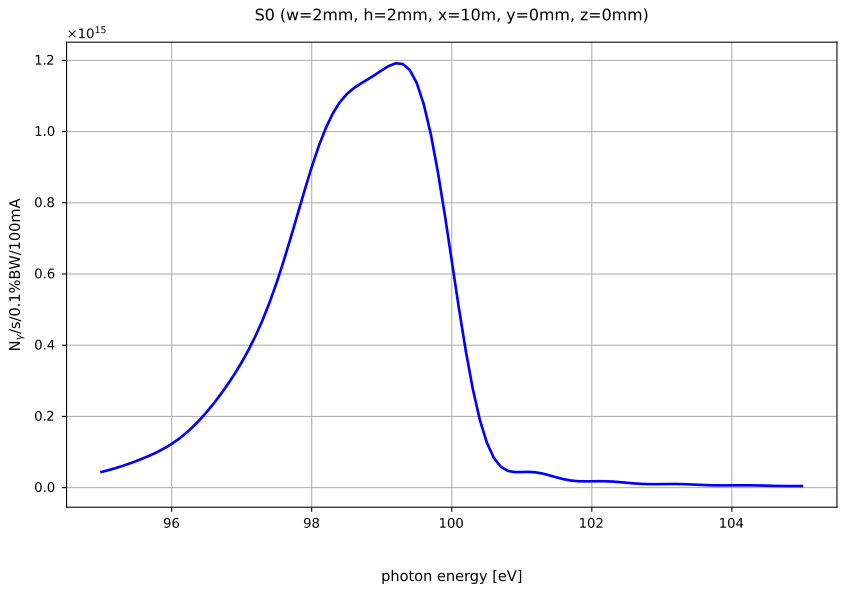


Fig. 3: Flux of Undulator

Press the ***Spectra*** button, select ***Plot/Flux/Stokes/S0***. The flux of the Stokes parameter ***S0*** through the rectangular pinhole as calculated by ***urad_phase*** is plotted (Fig. 3).

Now, we select ***Spectra/Plot/Distributions in Pinhole/Stokes/S0*** and see the flux-density distribution of ***S0*** . By default the photon energy is selected to show the distribution for the photon energy with the maximum flux trough the pinhole.

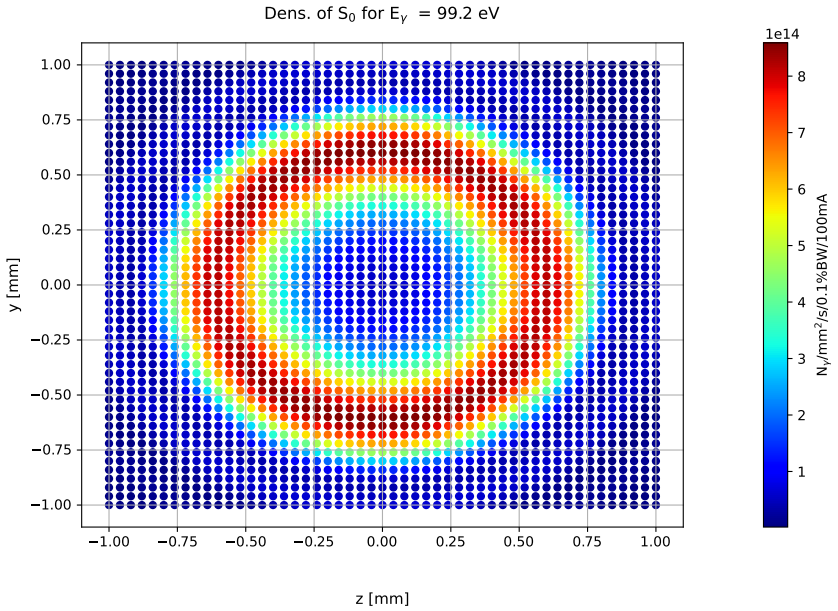


Fig. 4: Flux-density Distribution

To step through the photon energies, the arrows of the keyboard can be used. The photon energy can also be selected from the menu

Spectra/Plot/Distributions in Pinhole/Select E_photon

III Examples

There exsists in the ***input*** directory a file for every given example.

You may copy this file to

.pybrill_last.dat

in the working directory, start ***pyBrill*** and trigger the calculations by pressing ***Brilliance/Calculate*** or ***Spectra/Calculate***. [1] However, it is recommended to start with the first example and use ***Set-Up*** to preceed to the next example.

III.1 Basic Beam Electron Monte-Carlo

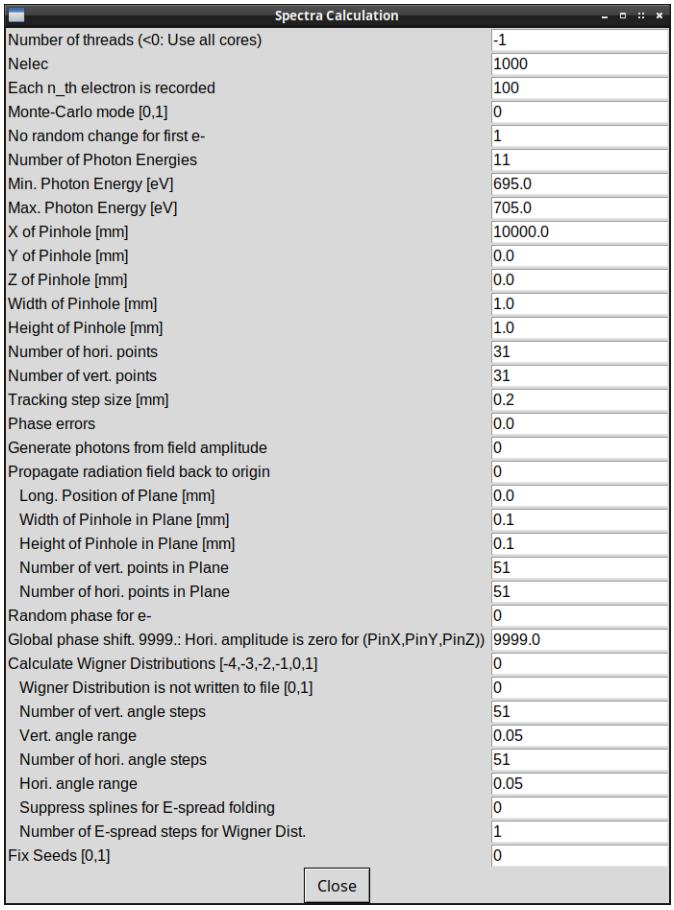


Fig. 5: ***Set-Up/Spectra*** for example 1

[1] Note: The brilliance and spectra calculations are independent and must be trigged both if needed after changing the beam or undulator parameters.

Before we start, we clean up the working directory to have a well defined, reproducable setting:

rm .pybrill_last.dat
rm urad_phase.bun
rm urad_phase.fld
rm urad_phase.flx
rm urad_phase.geo
rm urad_phase.nor
rm urad_phase.pin
rm ampgenpho.pho
rm ampgenpho.elc
rm urad_phase.run

We start ***pyBrill***, press ***Set-Up*** , and set:

Nelec = 1000
Each n_th electron is recorded = 100
Number of Photon Energies = 11
Min. Photon Energy = 695.0
Max. Photon Energy = 705.0
Width of Pinhole = 1.0
Height of Pinhole = 1.0
Number of hori. points = 31
Number of vert. points = 31

We close the menu and click

Spectra/Calculate

We see, that the calculations take about one minutes, depending on your computer. To set the parameter for the recording of electrons to 100, reduces the size of the file

urad_phase.bun

and hence the time to run ***urad_phase***.

Spectra/Plot/Flux

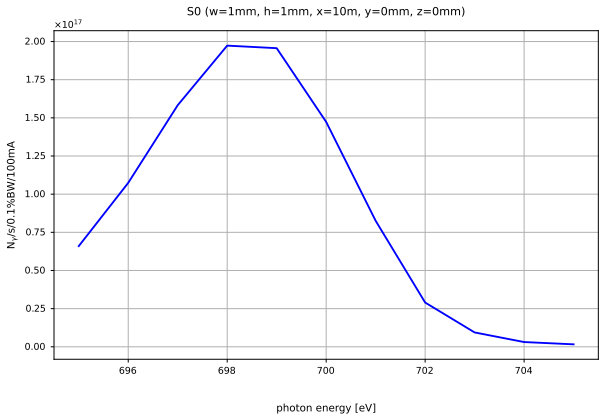


Fig. 6: ***Flux spectrum***

The flux spectrum we see, stems from 1000 electrons randomly chosen in there phase-space. Thus, the result will probably differ from the plots in this tutorial and change, when we rerun the calculations. However, in the set-up you find an option to fix the starting seed of the random number generator. This allows to reproduce results of a program run.

We have a look on the flux-density distribution in the pinhole (Fig. 6):

Spectra/Plot/Distribution in Pinhole/Stokes/S0

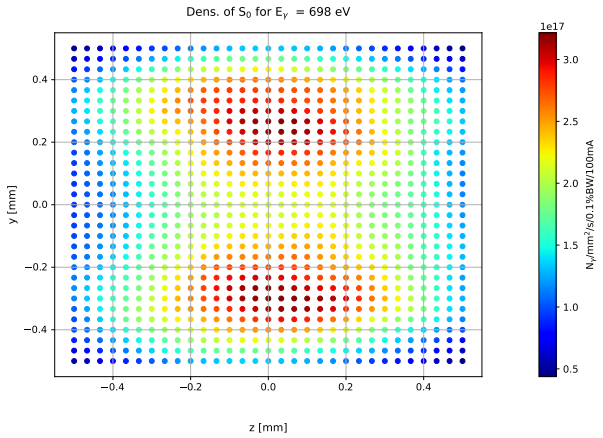


Fig. 7: ***Flux spectrum, plotted with option 'scat2d'***

You may step through the photon energies of the plot by pressing the arrow keys or the page keys.

We change the plotting options by selecting:

Spectra/Plotting Options

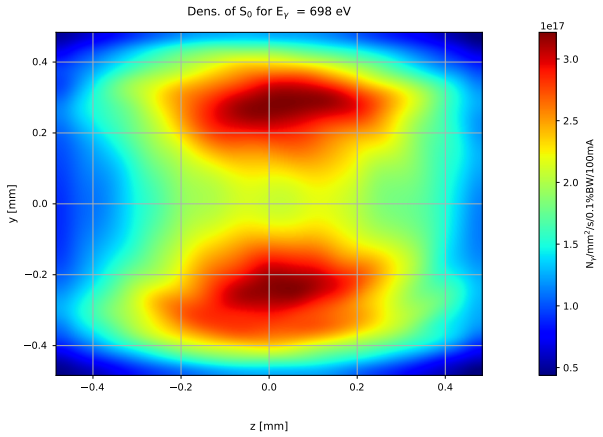


Fig. 8: ***Flux spectrum, plotted with option 'inter'***

and choosing 'inter' and plot the distribution again (Fig. 7).

III.2 Combining Beam Electron and Observation Point Monte-Carlo

For a large number of electrons and many grid points, the calculation time can increase dramatically. To speed up the calculations of the flux through the pinhole, we select in ***Set-Up/Spectra***

Nelec = 100000
Monte-Carlo mode = 1

We close the menu and start the calculations.

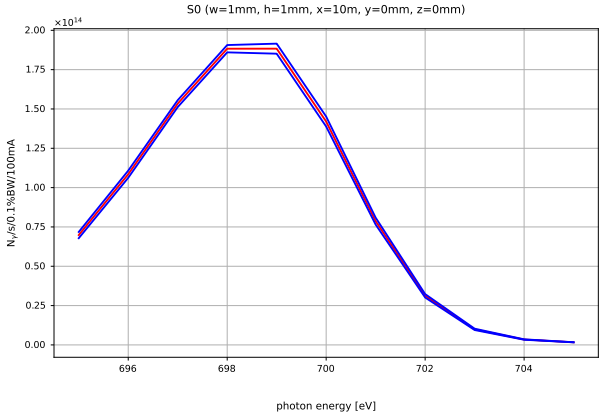


Fig. 9: ***Flux through pinhole with one sigma confidence level***

Now, we only have to wait some seconds due to

Monte-Carlo mode = 1

In this mode, for each electron a single observation point is randomly choosen in the pinhole. We see that flux spectrum shows only small statistical uncertainty (Fig. 9).

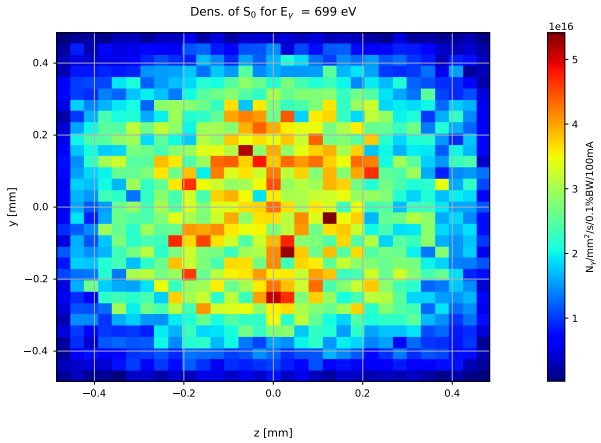


Fig. 10: ***Flux-density in pinhole, plotted with option 'boxes'***

However, when we look at the distribution of the flux-density in the pinhole, we see clearly fluctions due to this special Monte-Carlo mode (Fig. 10).

But in many cases, only the spetra of the flux, the flux-density, or the profiles of the distributions (Fig. 11) are of interest.

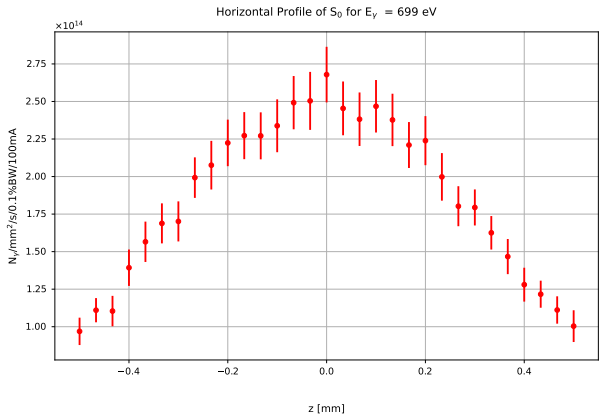


Fig. 11: ***Profile of flux-density in pinhole***

Also the reduced number of sampled electrons speeds up the calculations, since the I/O is reduced.

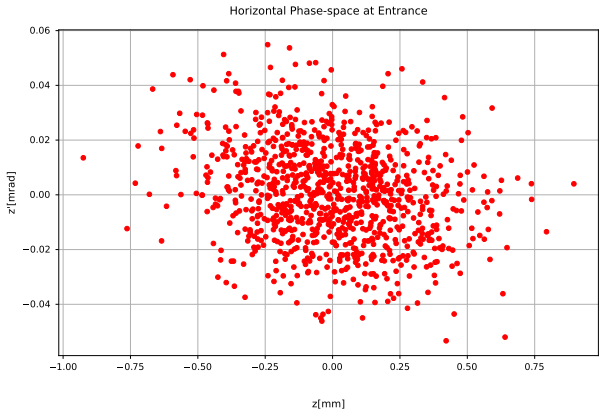


Fig. 12: ***Horizontal phase-space of beam electrons sample***

To check the phase-space a sample of 1000 electrons is certainly sufficient (Fig. 12).

III.3 Back Propagation of the Radiation to the Source Plane

To calculate the source size, we propagate the radiation back to the source plane by selecting in ***Set-Up/Spectra***

Nelec = 1
Monte-Carlo mode = 0
Number of Photons Energies = 1
Width of Pinhole = 2.0
Height of Pinhole = 2.0
Number of hori. points = 101
Number of vert. points = 101
Propagate radiation field back to origin = 1
Width of Pinhole in Plane = 0.1
Height of Pinhole in Plane = 0.1
Number of hori. points in Plane = 101
Number of vert. points in Plane = 101

and starting the calculations. Then we divide the canvas in the plotting options menu

Spectra/Plotting Options/

NxZones = 2

and plot the horizontal cut of the Stokes parameter S_0 in the observation and in the source plane:

Spectra/Plot/Distribution in Pinhole/Cuts of Stokes/Hori. Cut of S0
Spectra/Plot/Distributions of Propagated Fields/Cuts of Stokes/Hori. Cut of S0

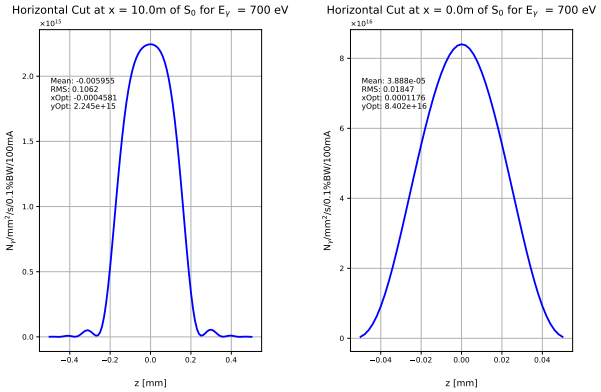


Fig. 13: ***Horizontal cut of S_0 in the observation and in the source plane***

For the product of the RMS values of the two plots

$$\sigma_r \times \sigma_{r'} \;=\; \frac{\lambda}{4\pi}$$

we find

$$0.01847\ mm \times 0.1062\ mm/10m \;=\; 0.196\ nm$$

We have $\lambda = 1.77\ nm$ for $700\ eV$, thus

$$\frac{1.77\ nm}{4\pi} \;=\; 0.141\ nm$$

which underestimates the numerical value by a factor of about $\sqrt{2}$.

III.4 Generating Photons from Undulator Source for Ray-tracing

PyBrill uses the cross product of the calculated electric and magnetic fields to generate photons as input for ray-tracing codes.

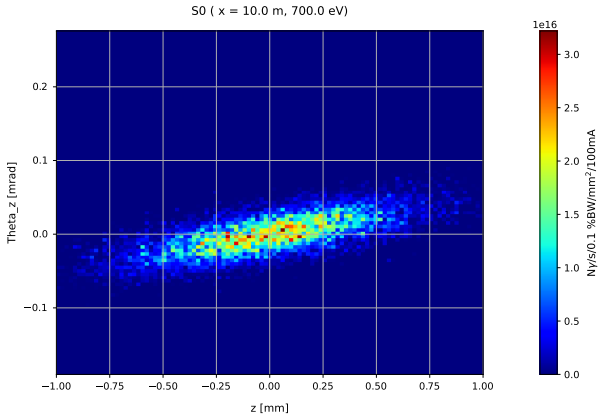


Fig. 14: Horizontal phase-space of 100000 photons generated from 100000 electrons with Modepin = 1

We set:

Nelec = 100000
Monte-Carlo mode = 1
Width of Pinhole = 2.0
Height of Pinhole = 1.0
Number of hori. points = 101
Number of vert. points = 101

and start the calulations.

The distributions of the generated photons can be plotted in the menu

Spectra/Plot/Photons/S0(z,Theta_z)

Note: The photons are generated from the electron distribution. For a zero emittance and zero energy spread-beam, the plot would only show a nearly 100 percent correlation of the of z-coordinate and the horizontal slope of the photons. The reason is, that the calculations refer to a plane far down-stream of the source.

III.5 Wigner Distribution

To calculate the Wigner distribution from the fields in the source plane we select in ***Set-Up/Spectra***

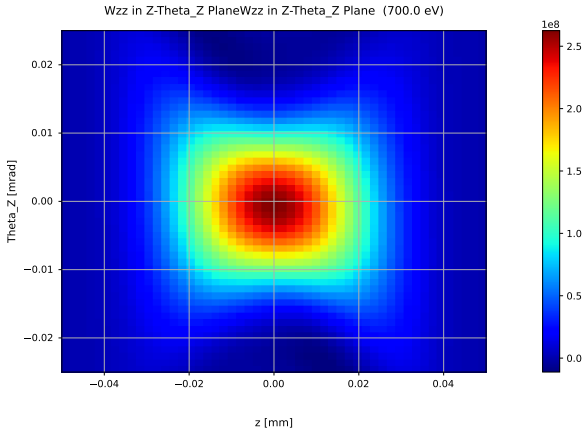


Fig. 15: ***Wigner distribution in source plane, plotted with option 'inter'***

Nelec = 1
Number of Photons Energies = 1
Min. Photon Energy = 695.0
Max. Photon Energy = 705.0
Width of Pinhole = 0.75
Height of Pinhole = 0.75
Number of hori. points = 101
Number of vert. points = 101
Propagate radiation field back to origin = 1
Width of Pinhole in Plane = 0.1
Height of Pinhole in Plane = 0.1
Number of hori. points in Plane = 51
Number of vert. points in Plane = 51
Calculate Wigner Distributions = -1
Number of vertical angle steps = 5

The line

Calculate Wigner Distributions = -1

triggers the Wigner calculation only for the Stokes parameter S_0. The small number of vertical angle steps is used to speed up the calculations, since we are only in interested in the distribution of the horizontal phase-space in this example (Fig. 15).

The calculations of the Wigner distributions are still experimental...