




%RD-Plot for Si

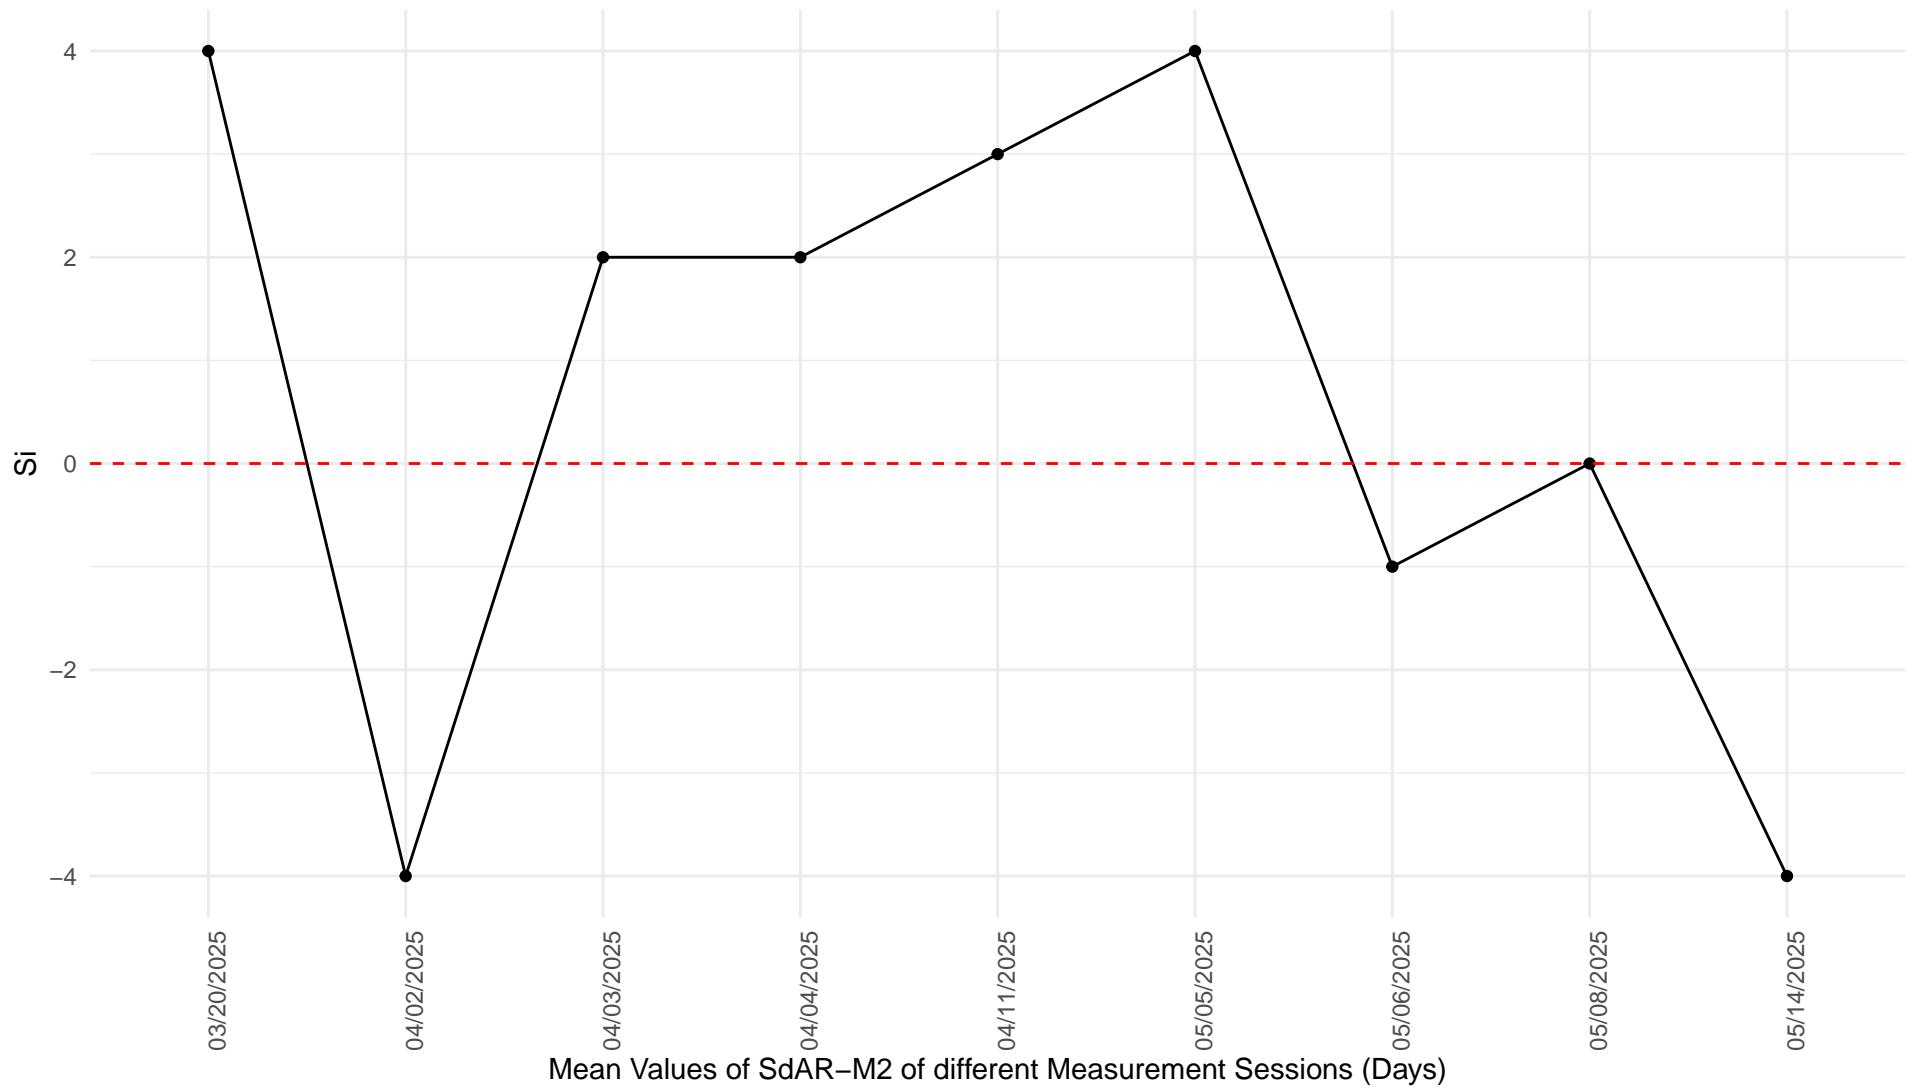


%RD-Plot for Ti

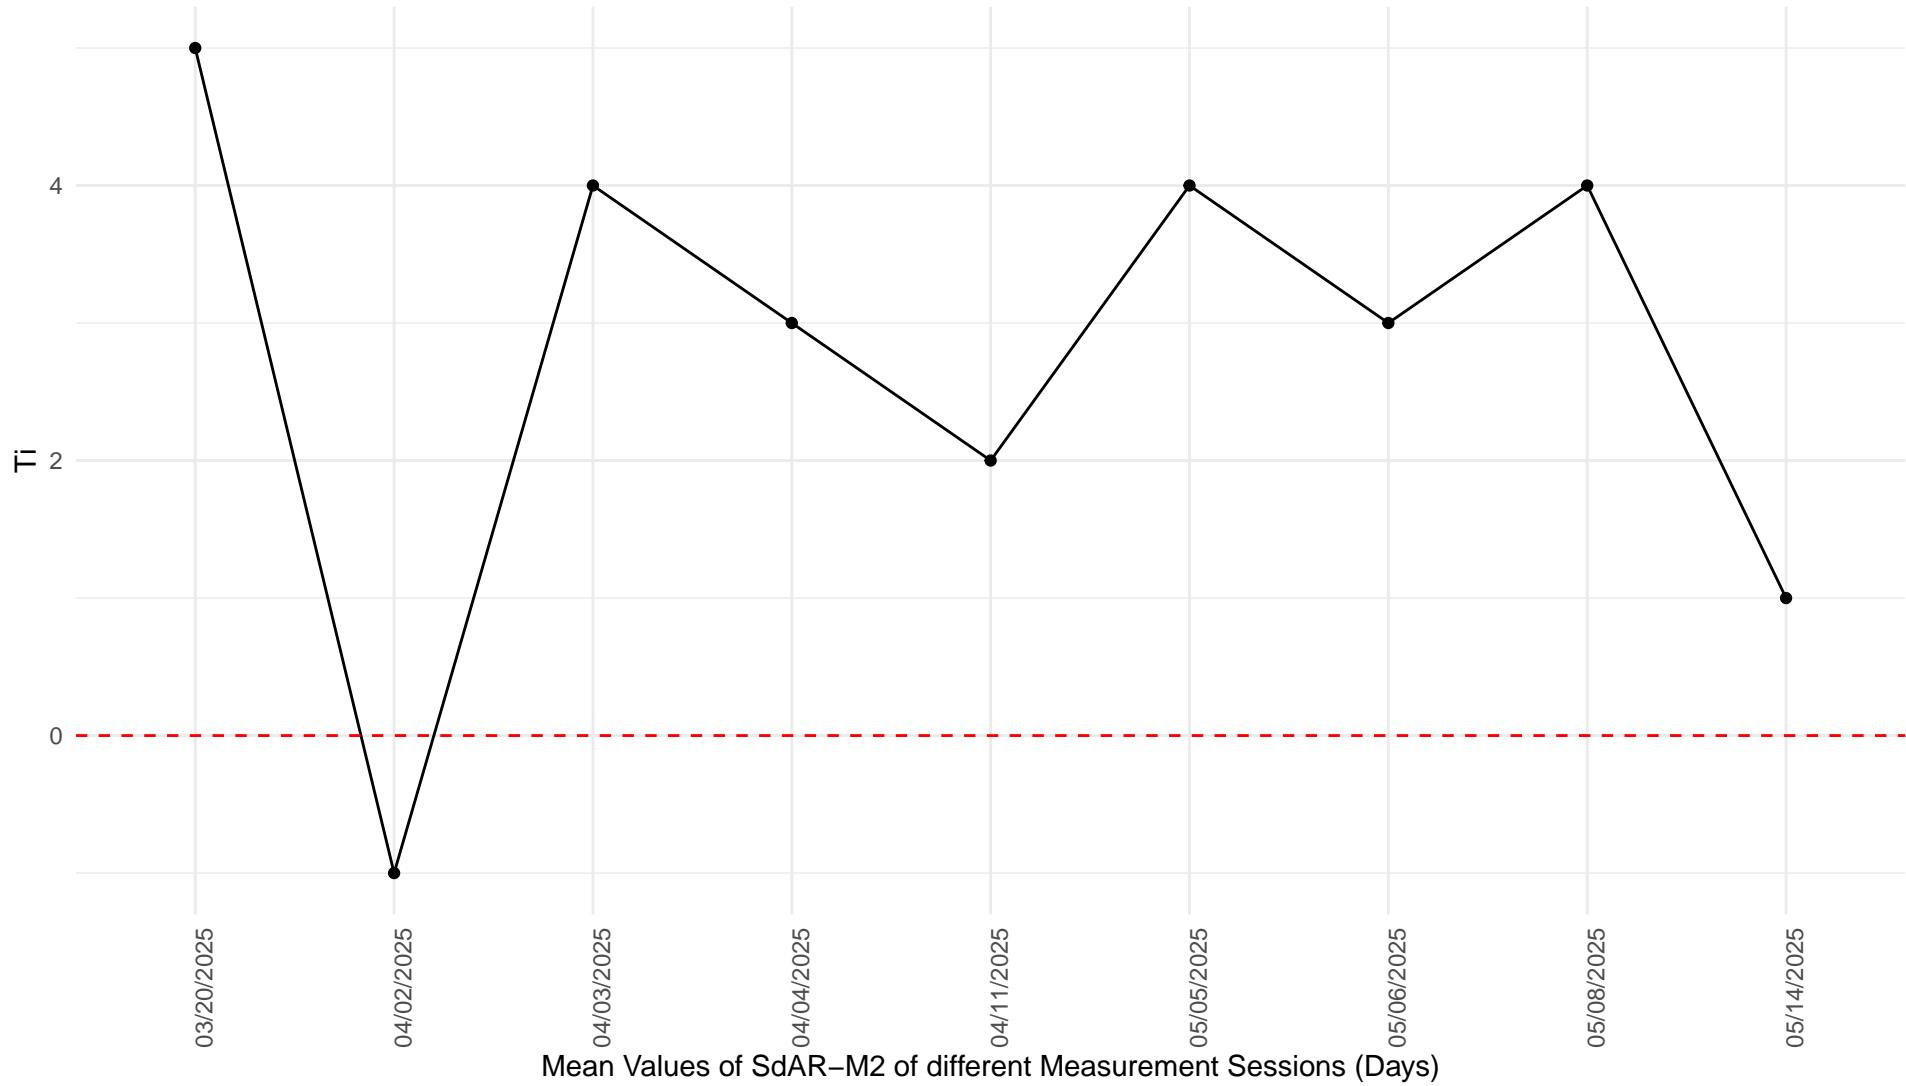


%RD-Plot for AI

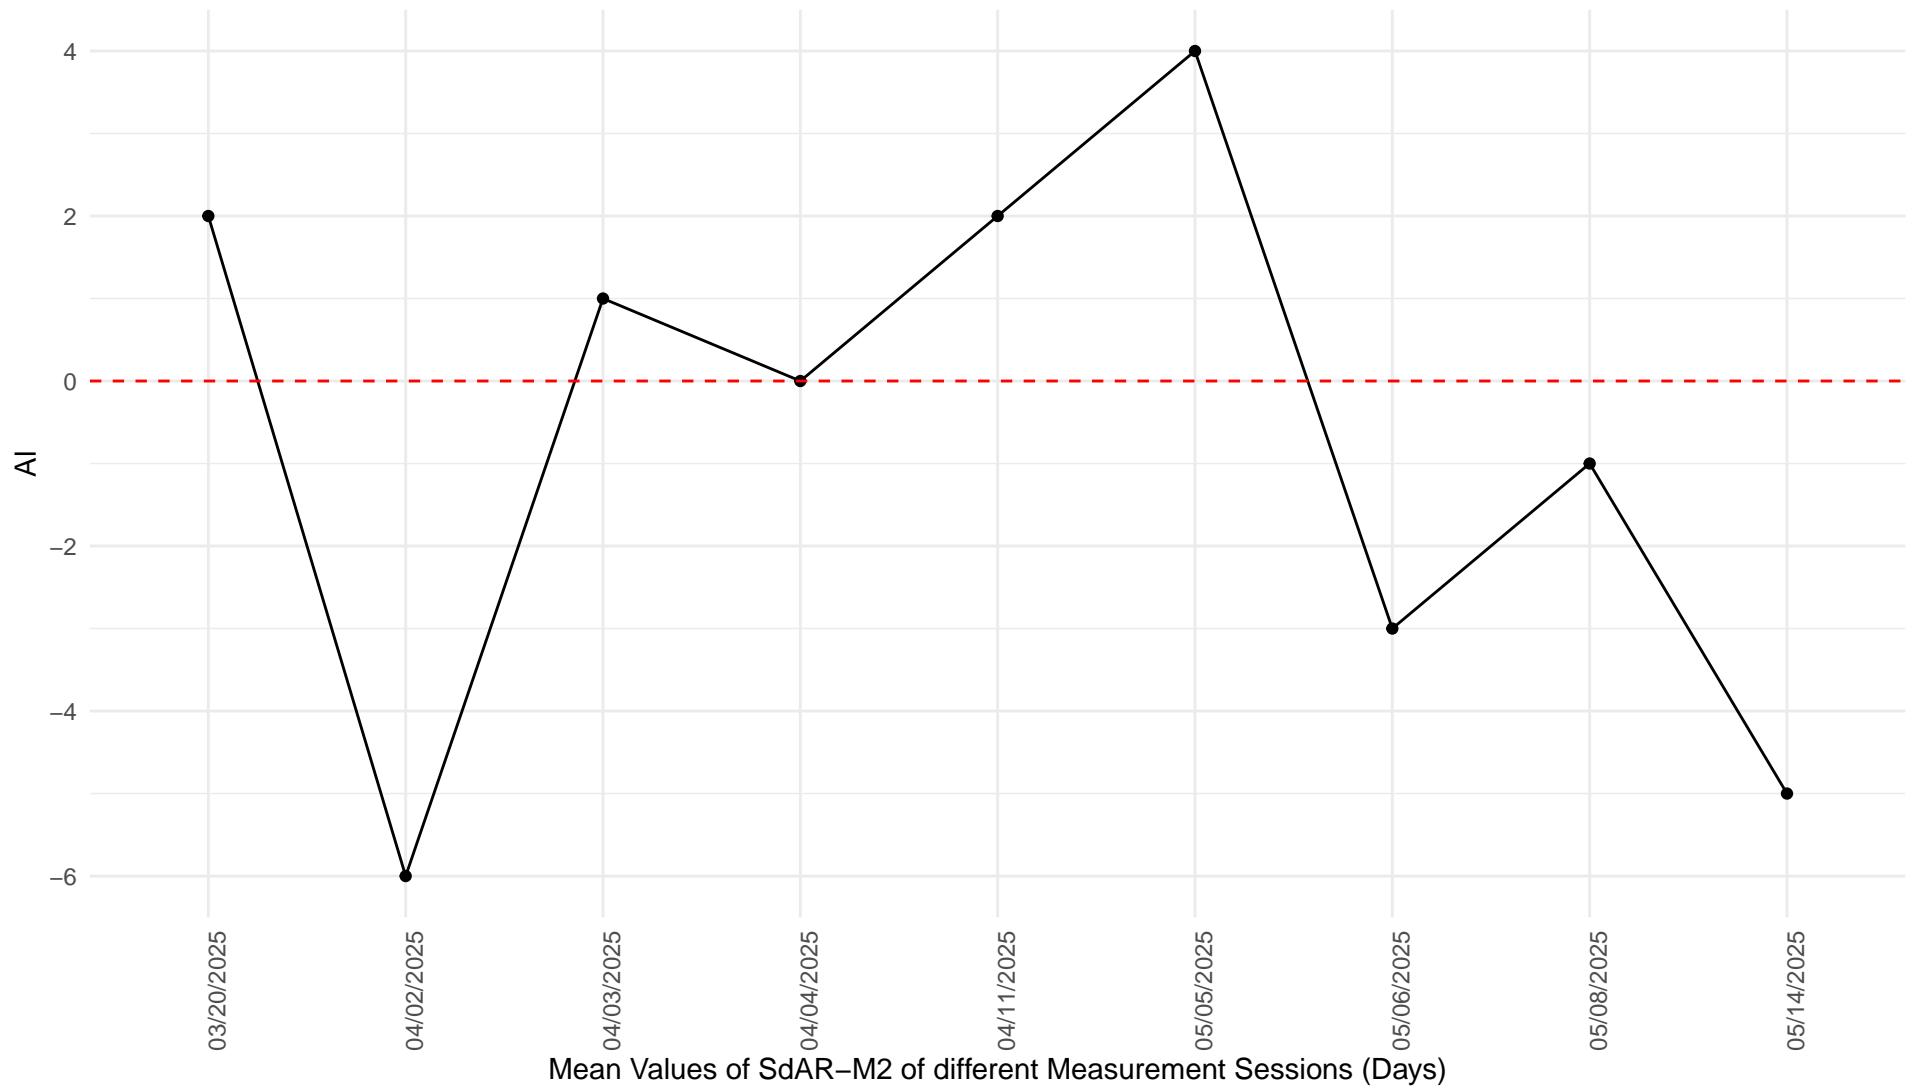


%RD-Plot for Fe

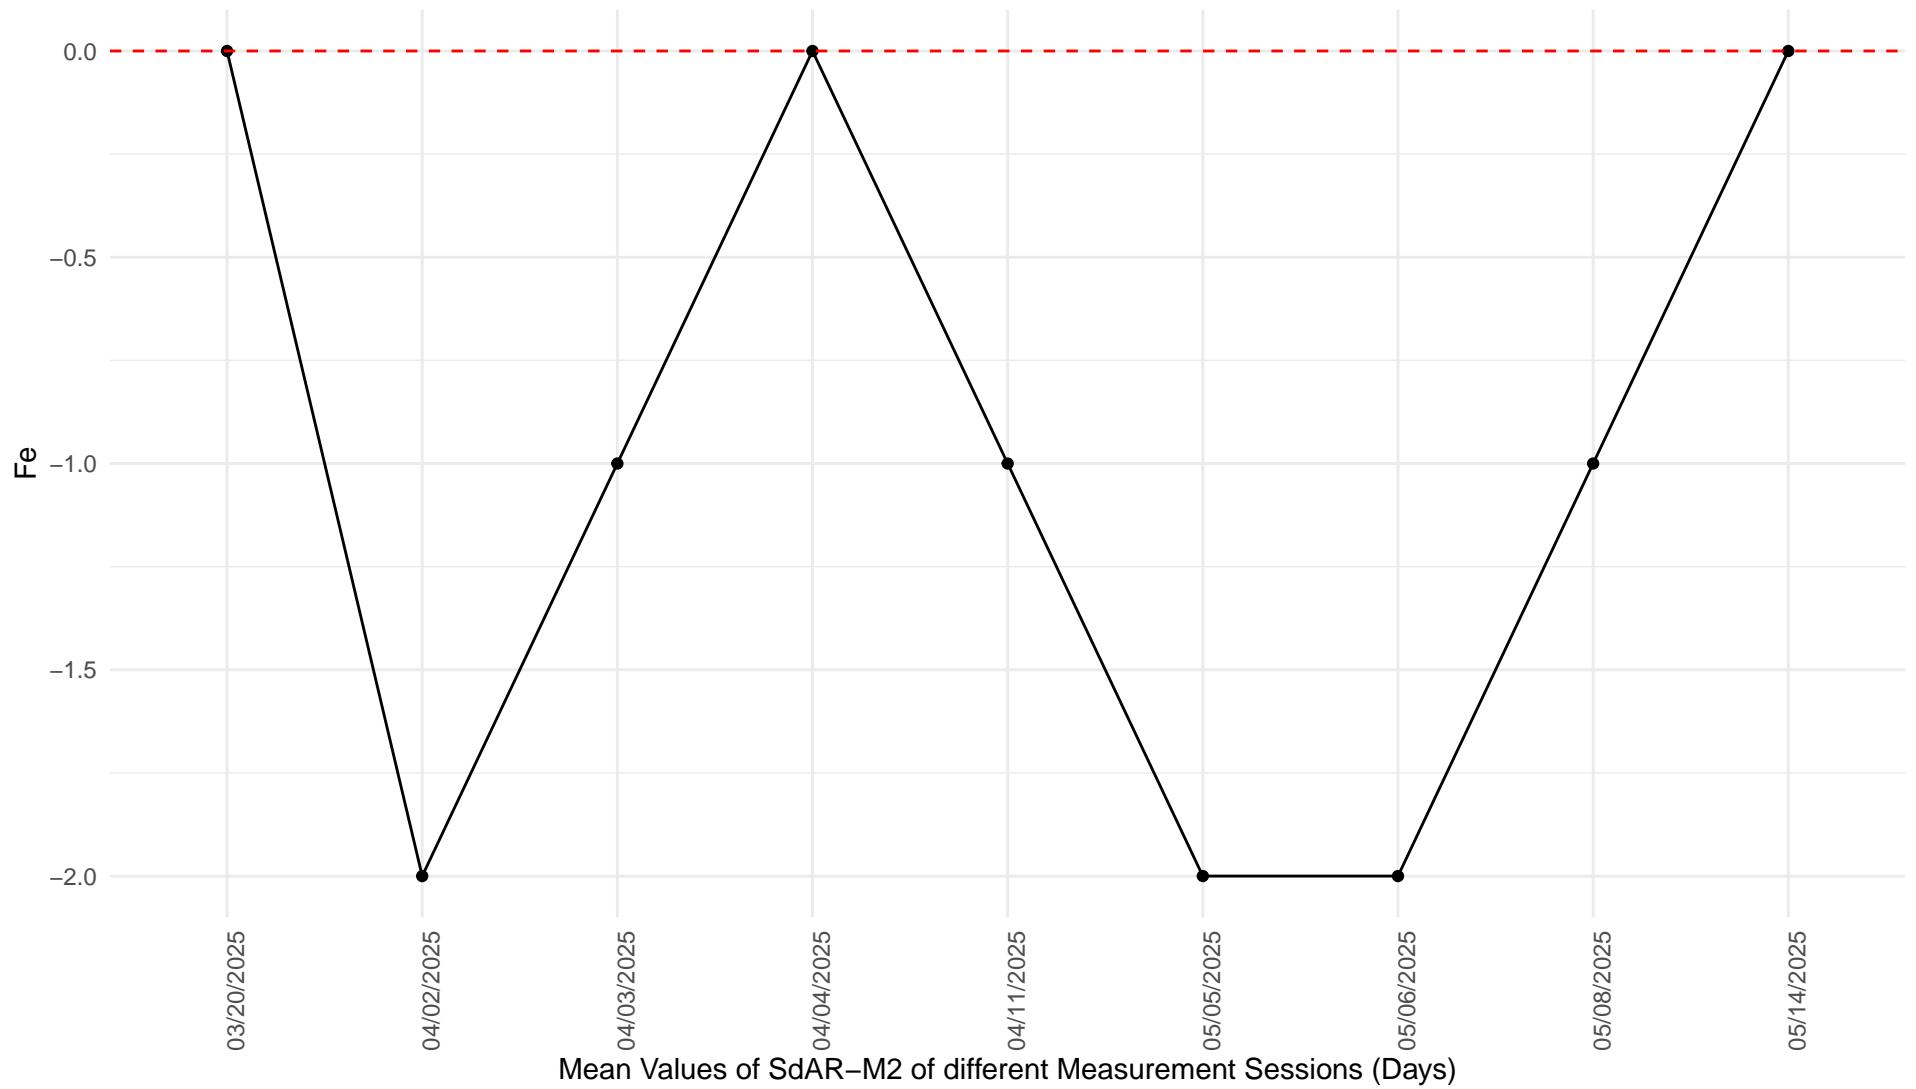


%RD-Plot for Mn

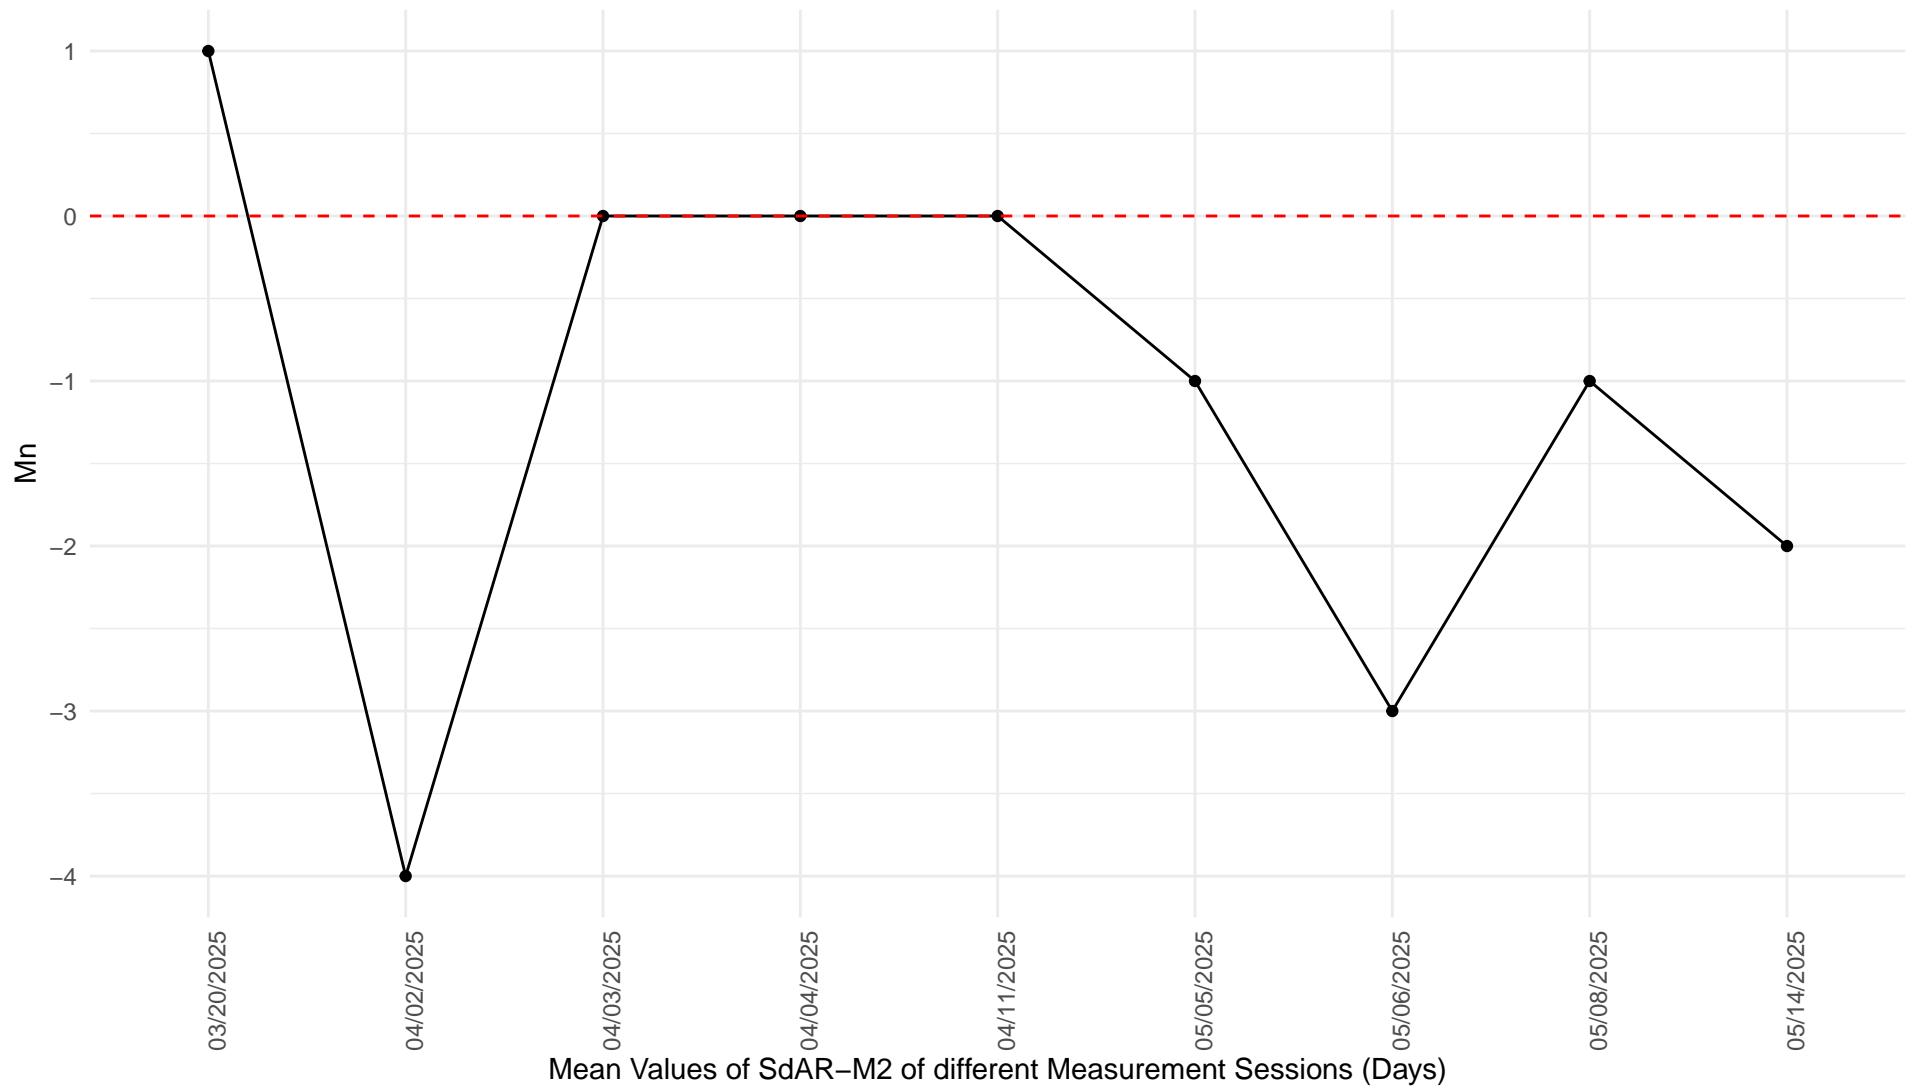


%RD-Plot for Mg

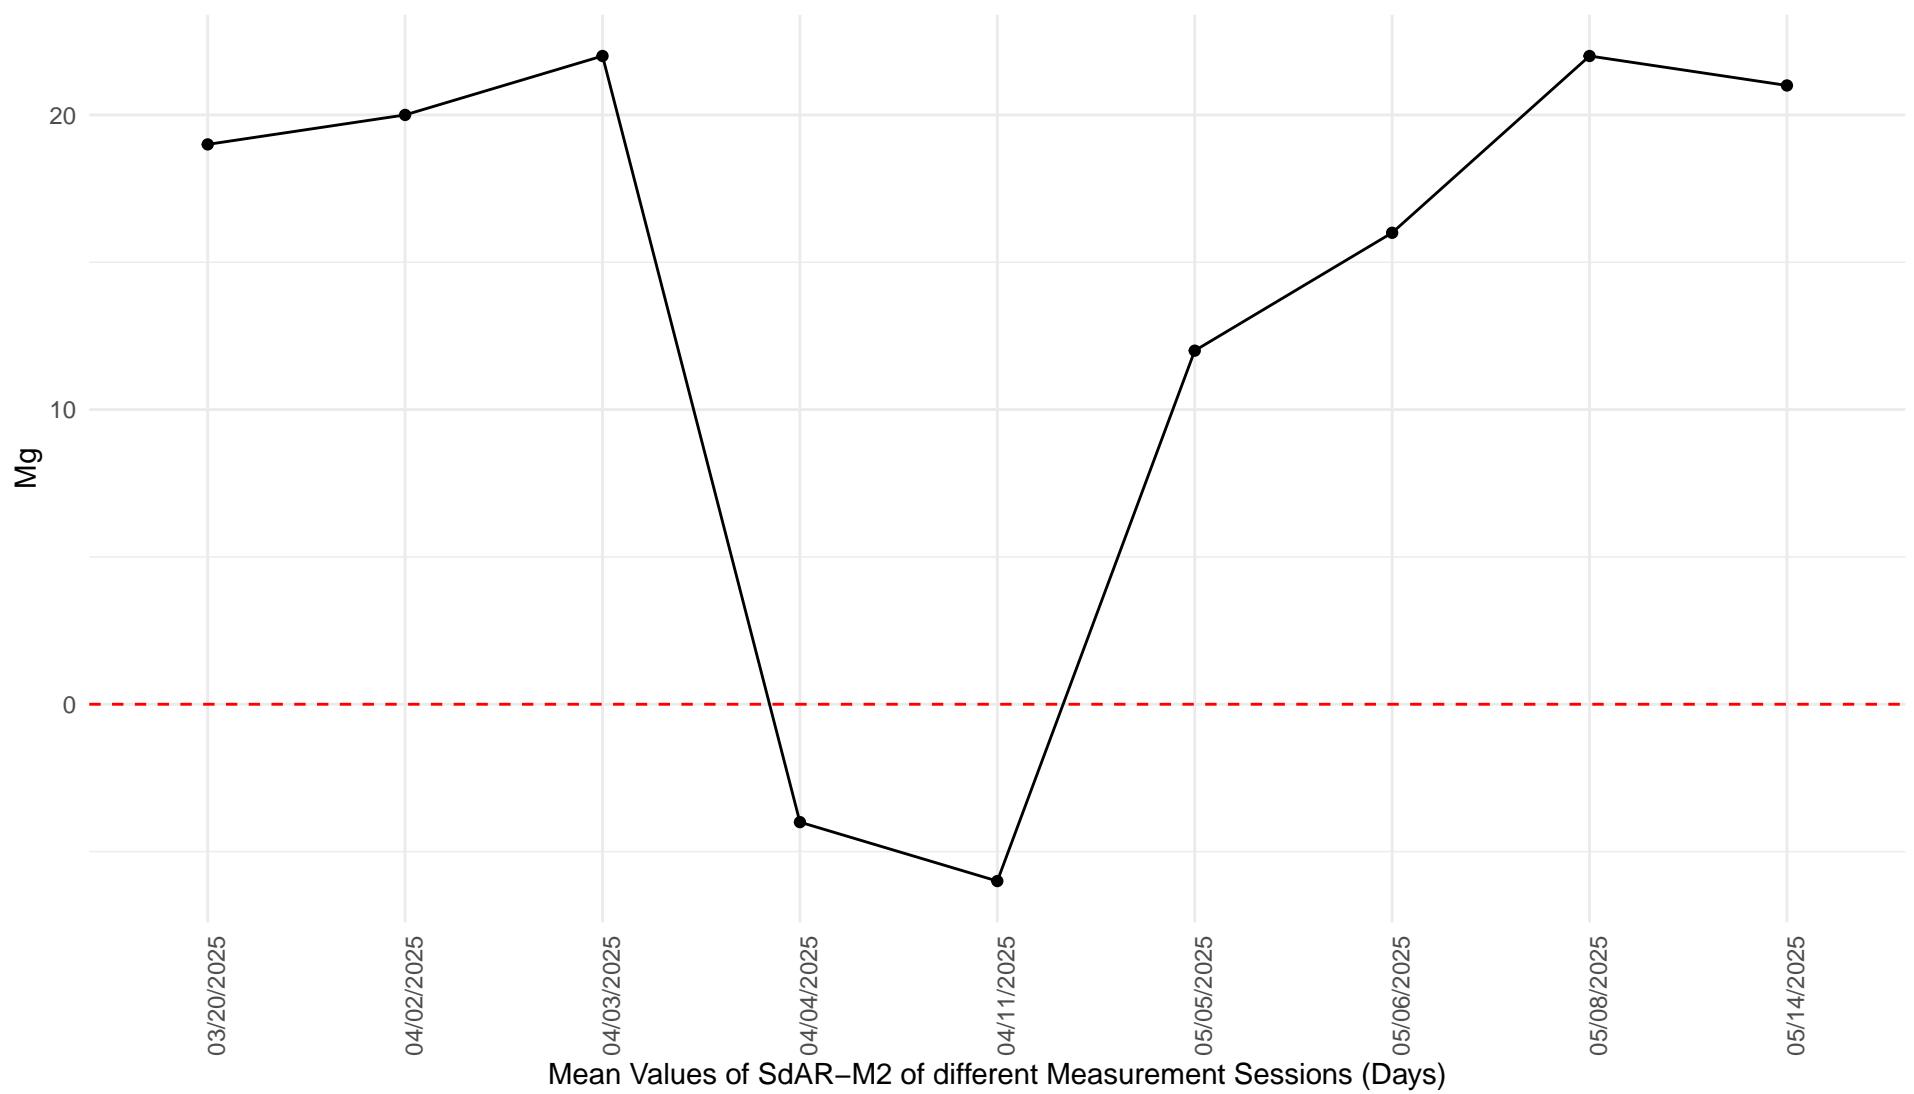


%RD-Plot for Ca

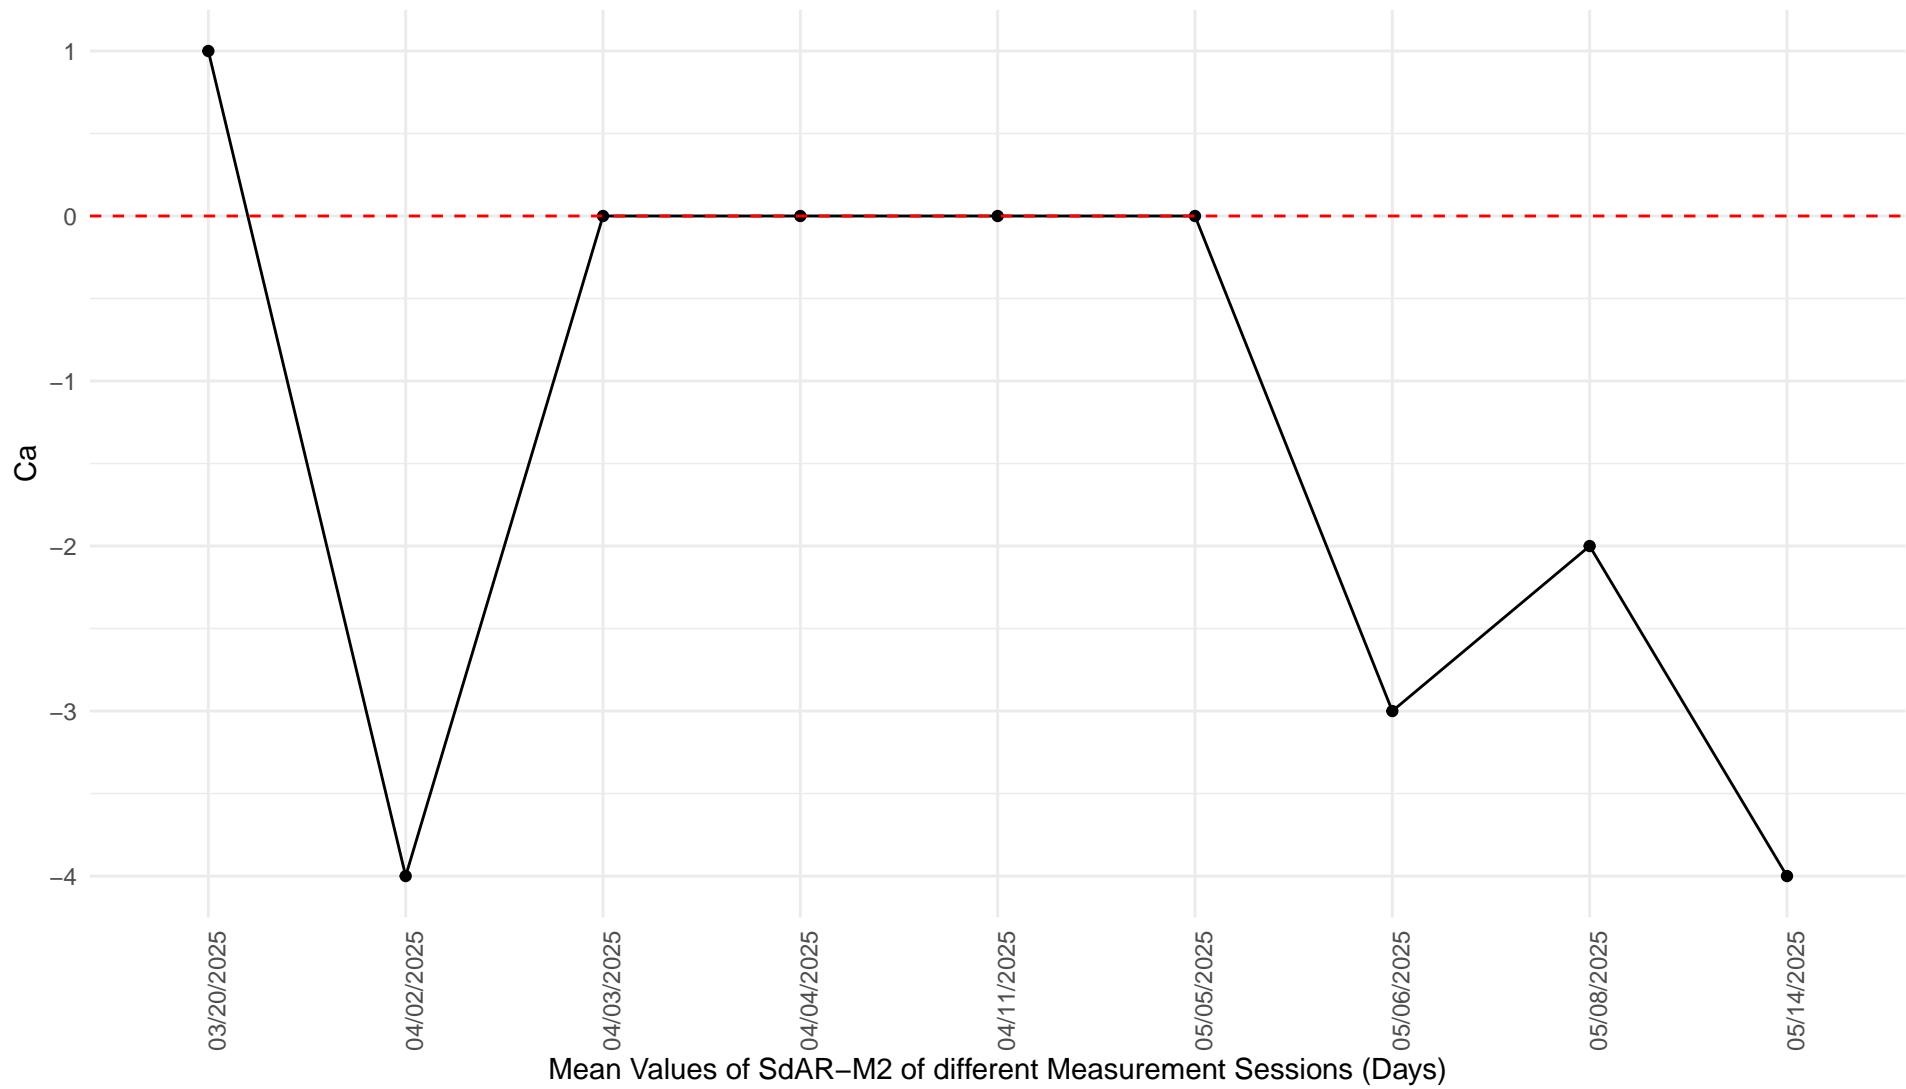


%RD-Plot for K

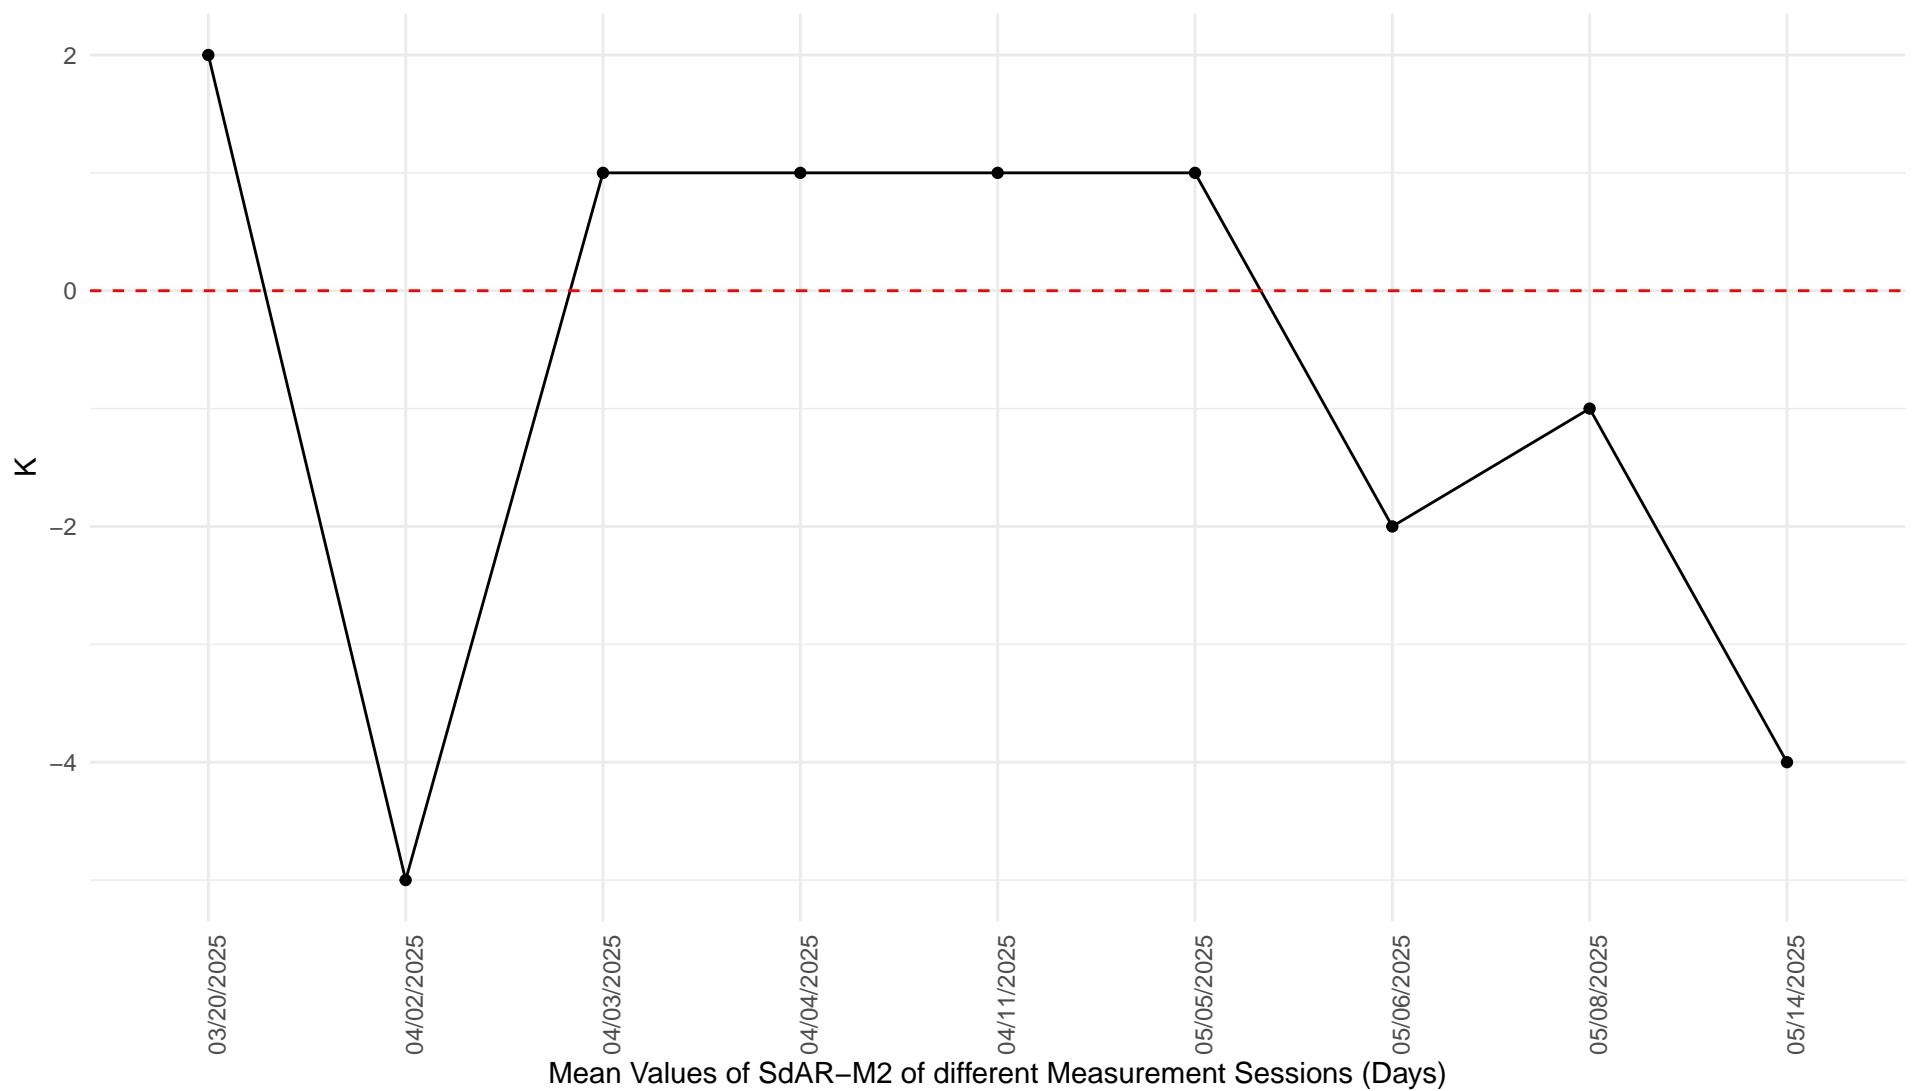


%RD-Plot for P

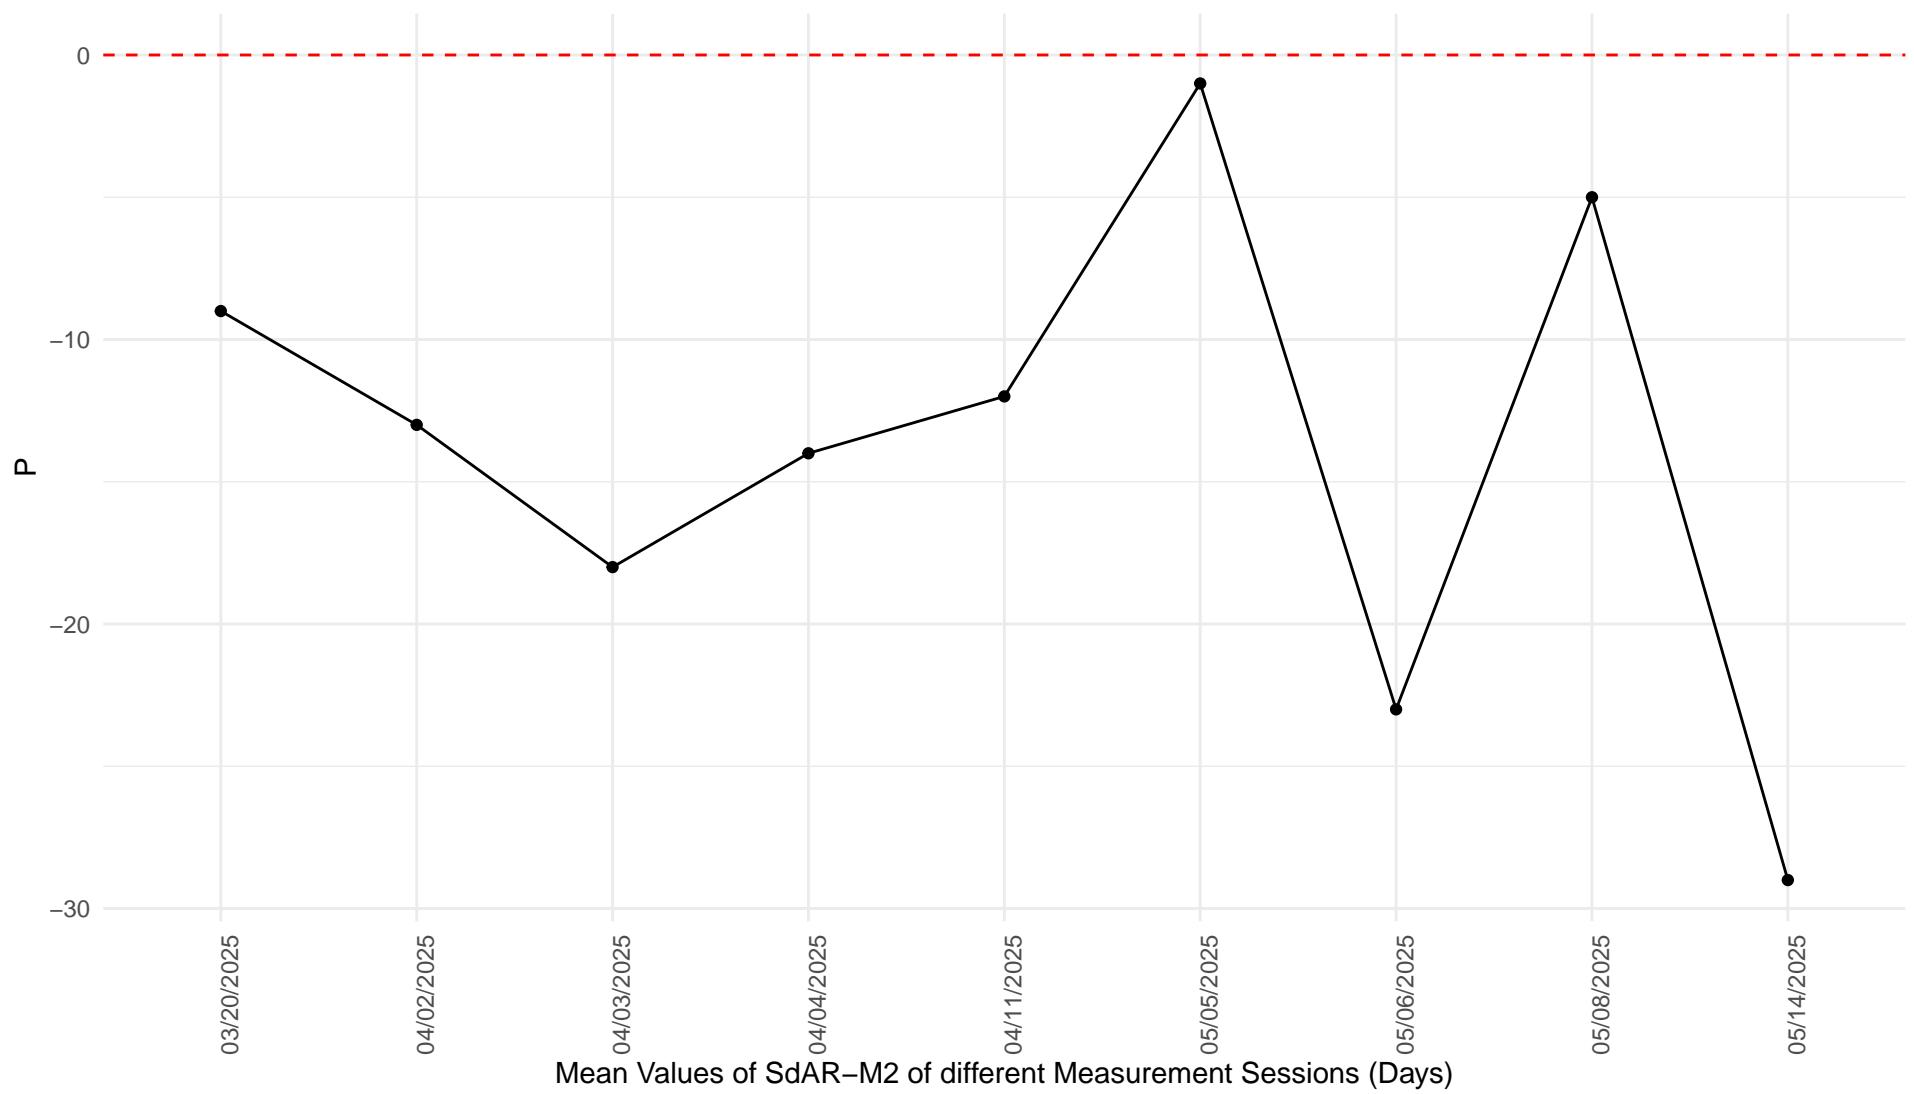


%RD-Plot for S

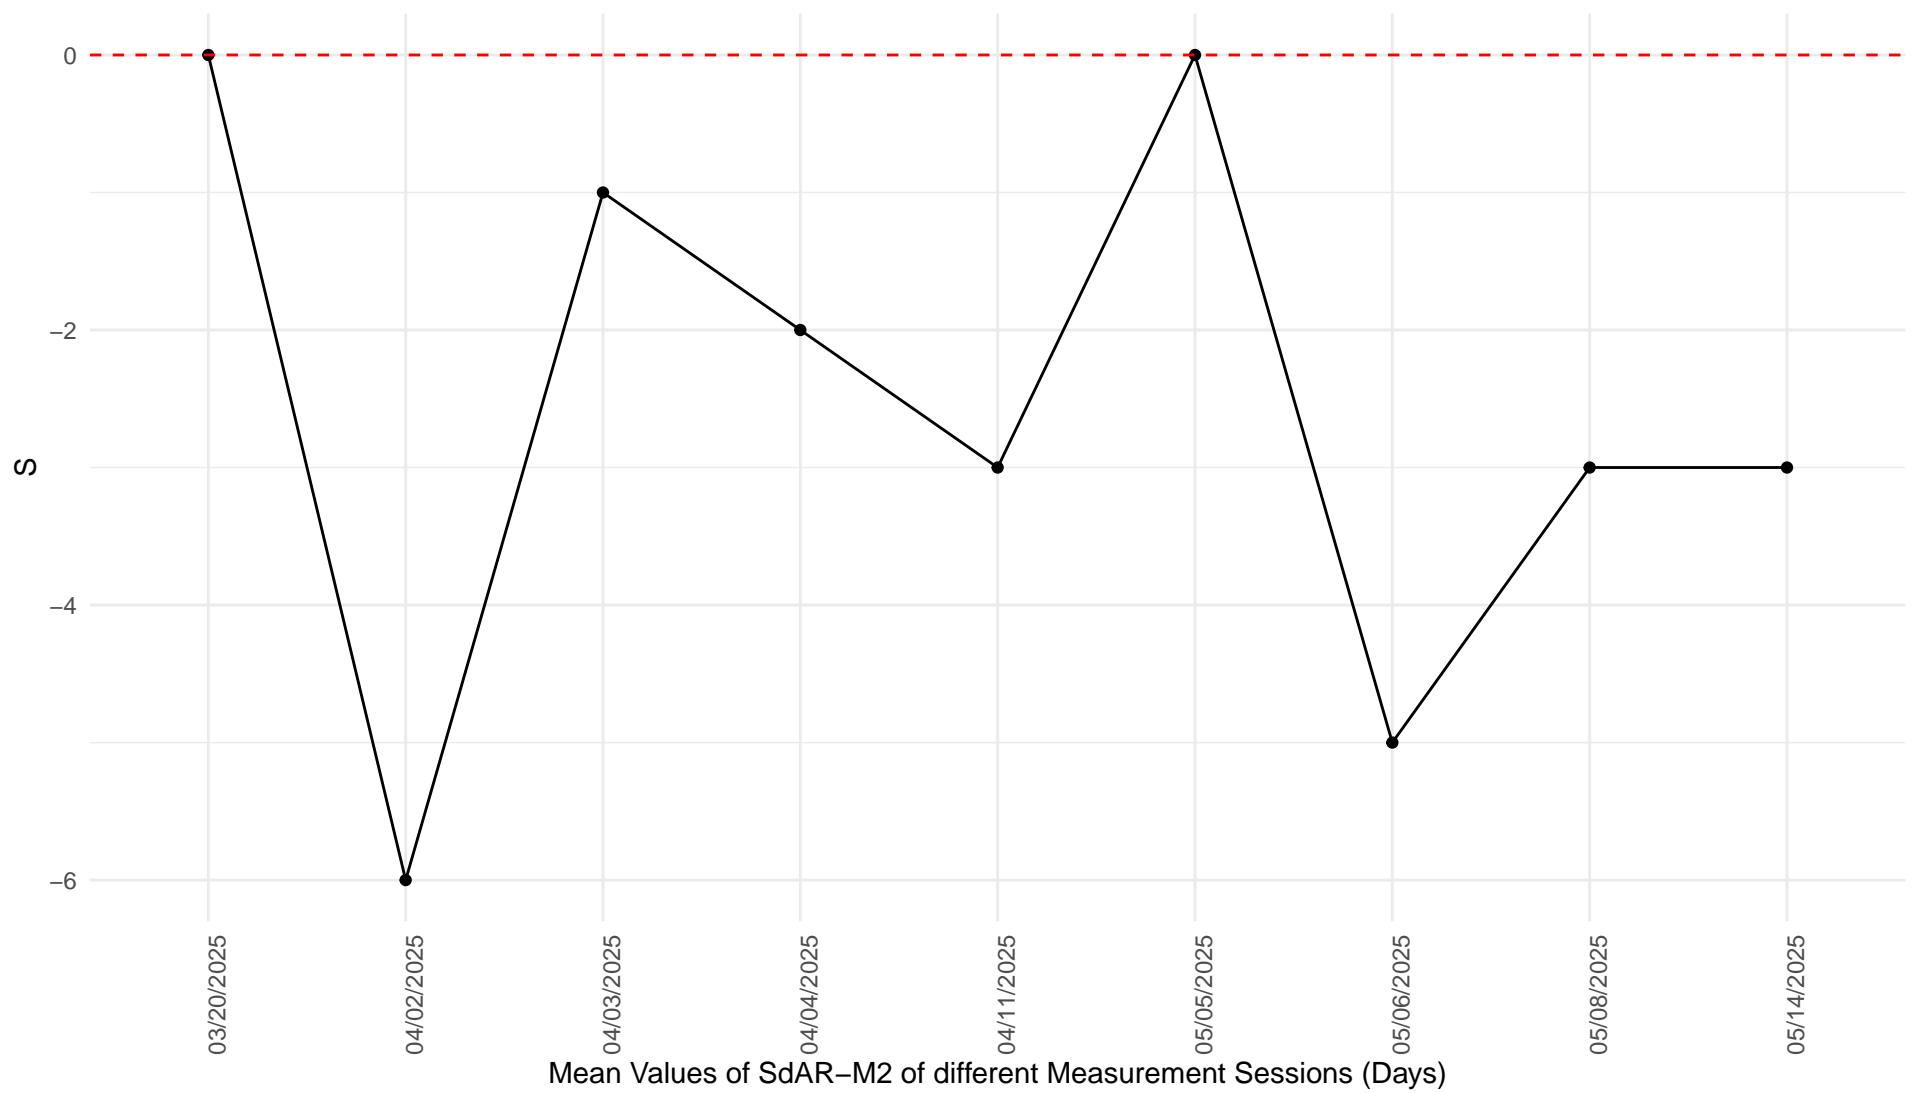


%RD-Plot for V

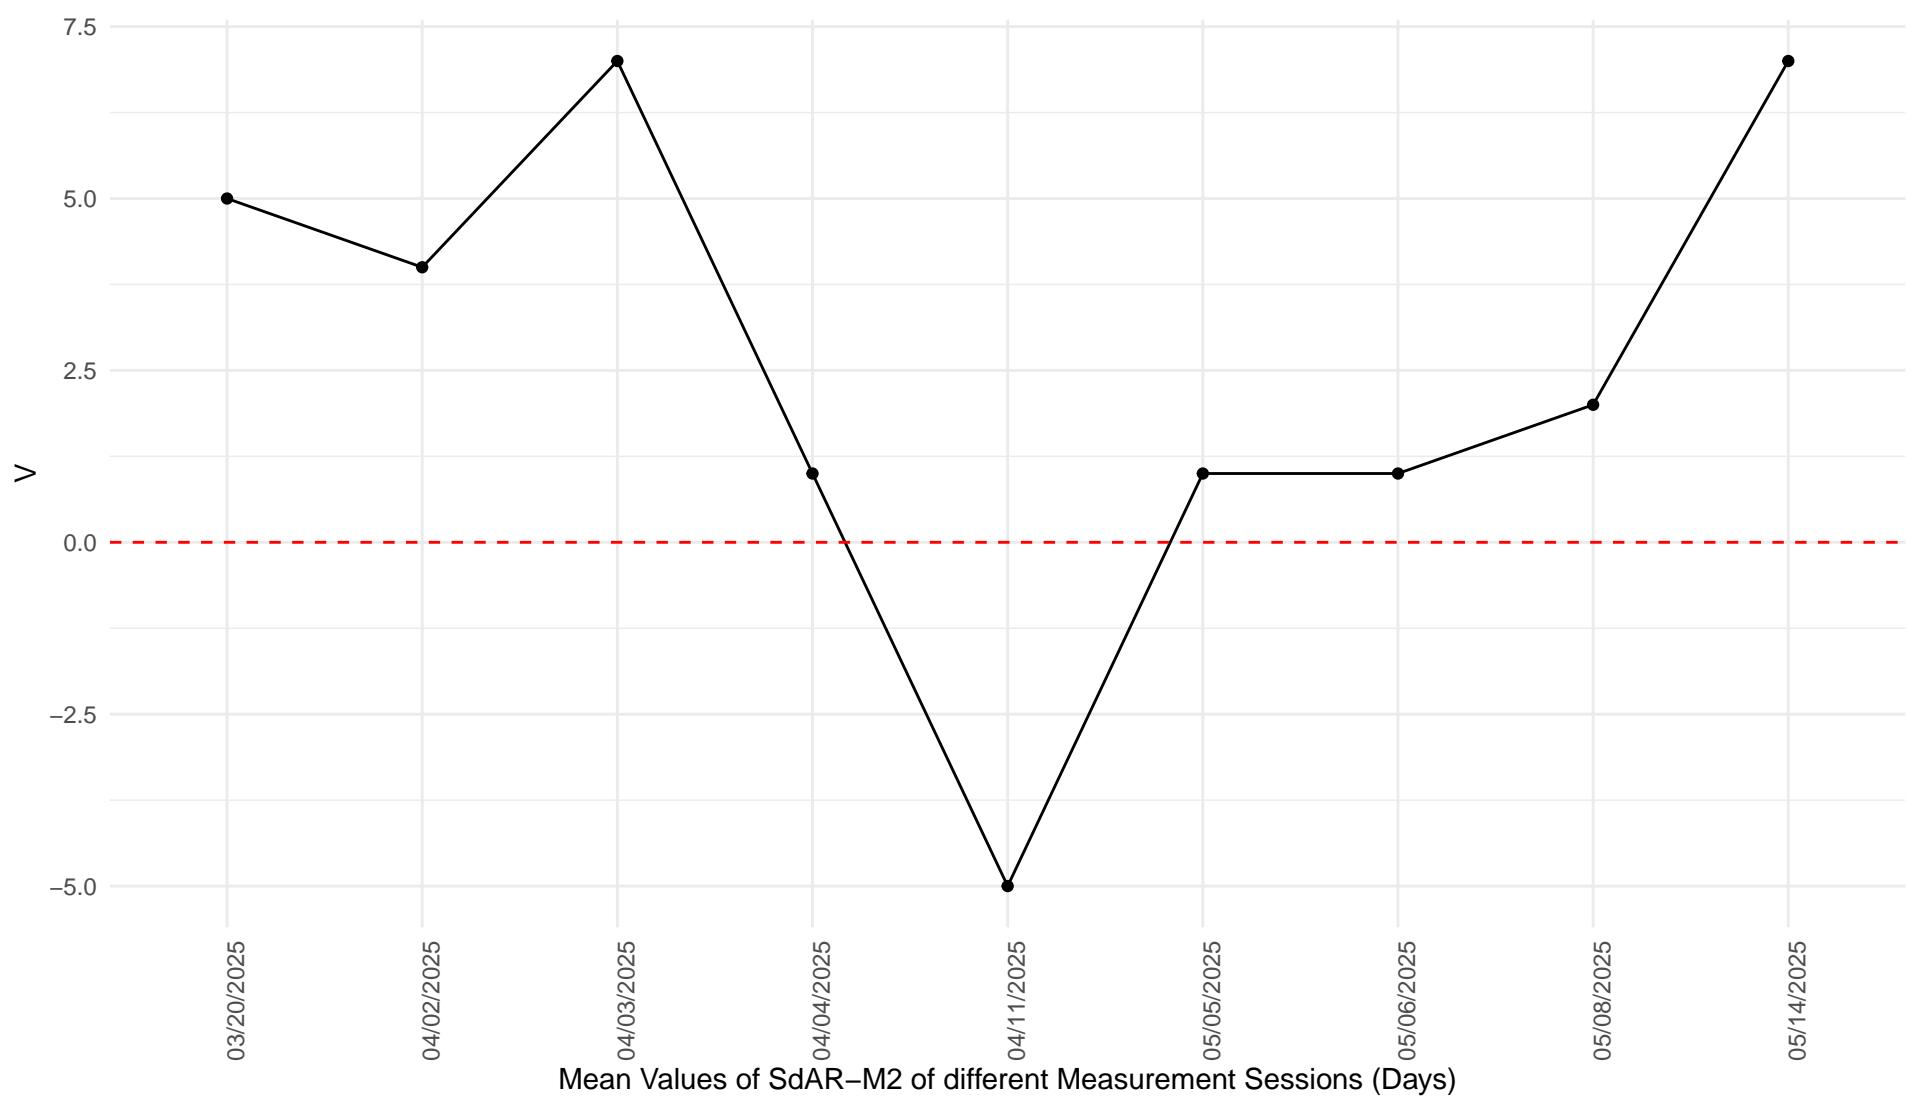


%RD-Plot for Cr

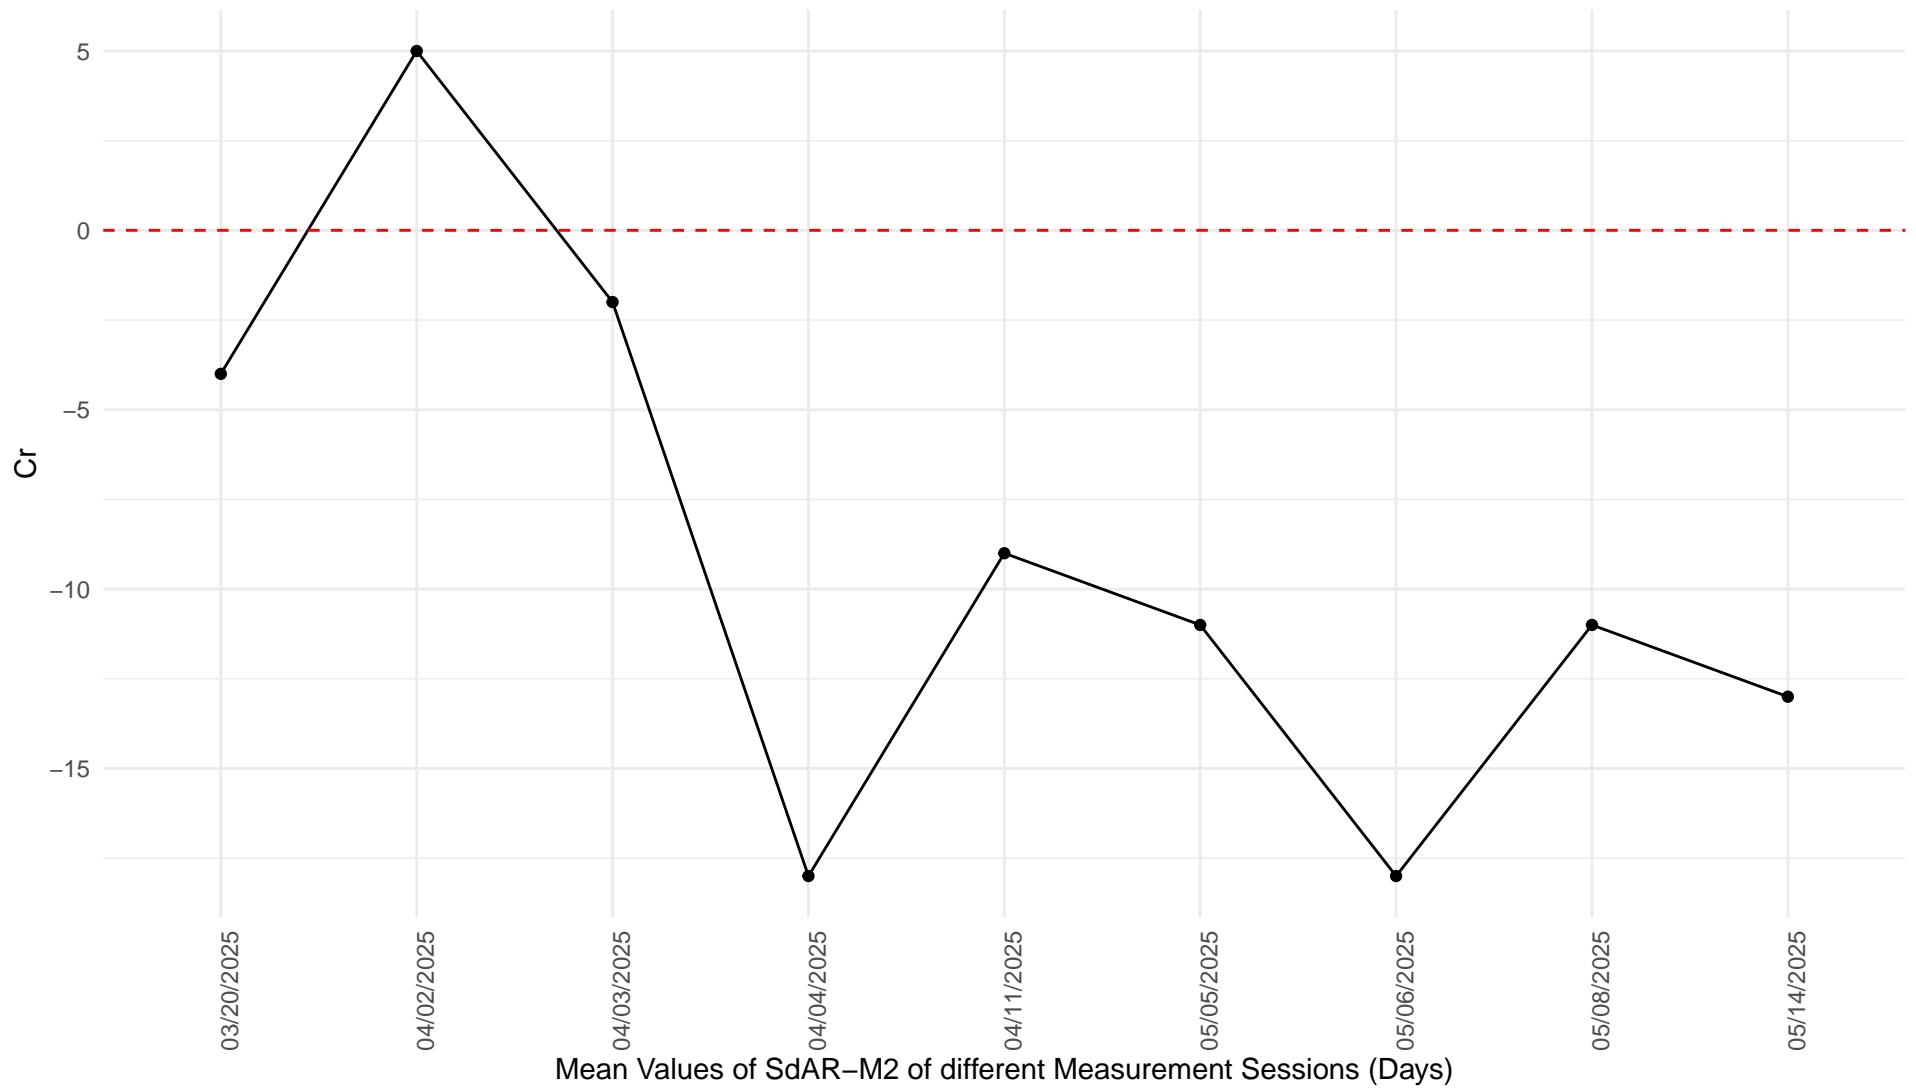


%RD-Plot for Ni

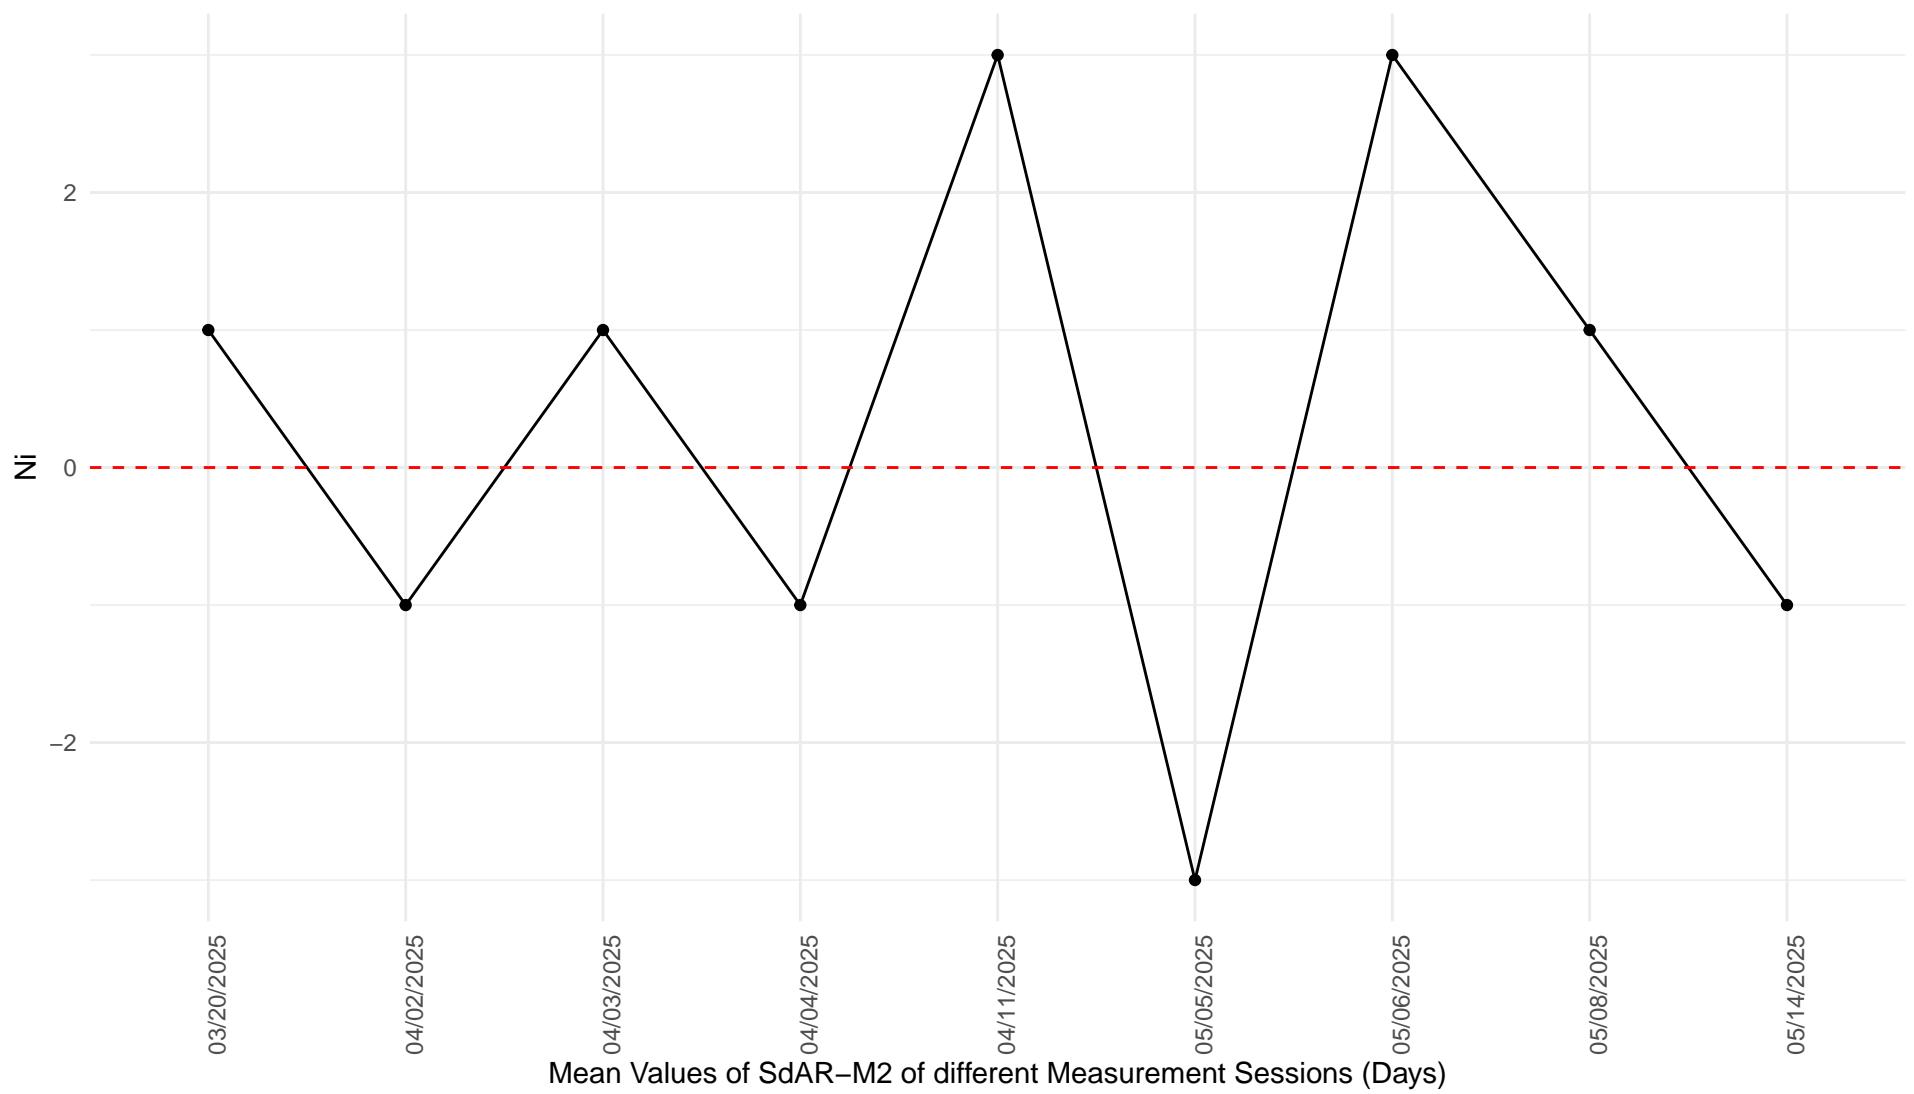


%RD-Plot for Cu

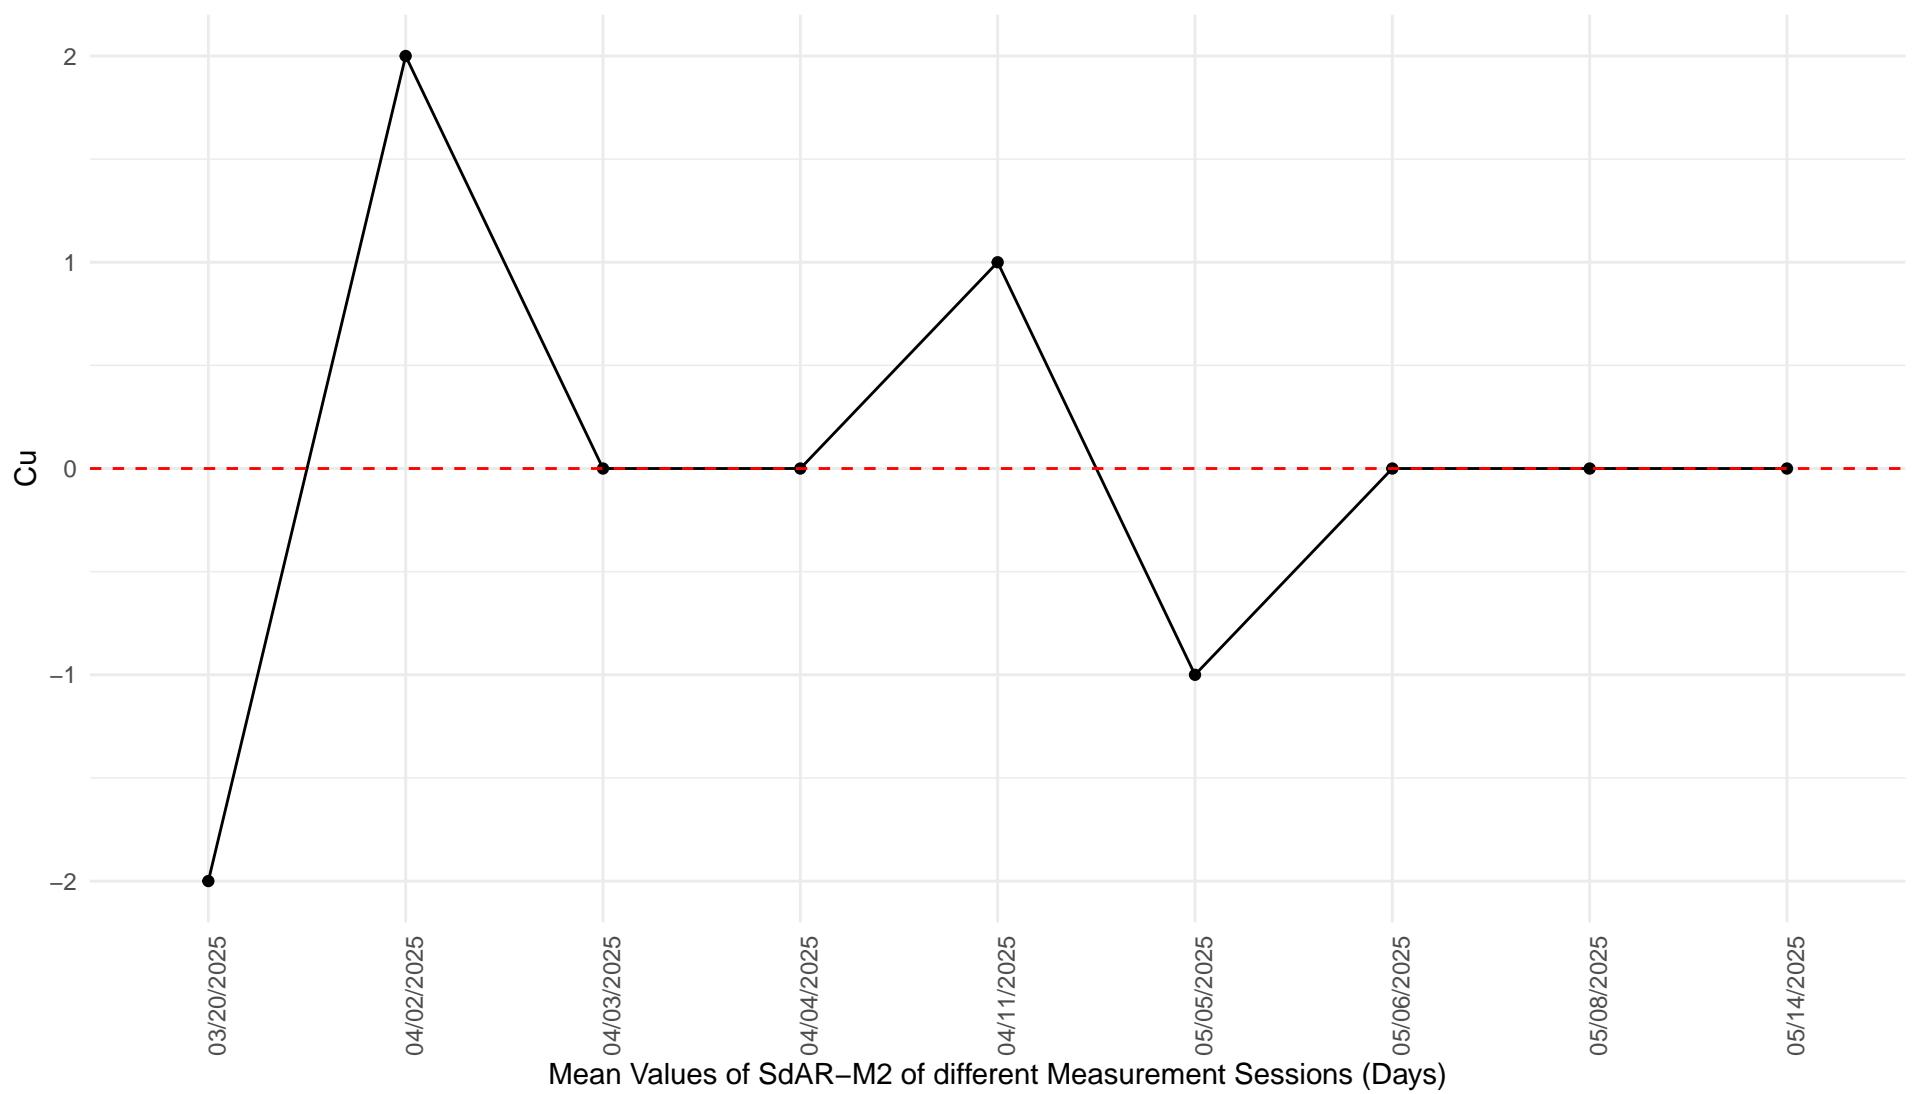


%RD-Plot for Zn

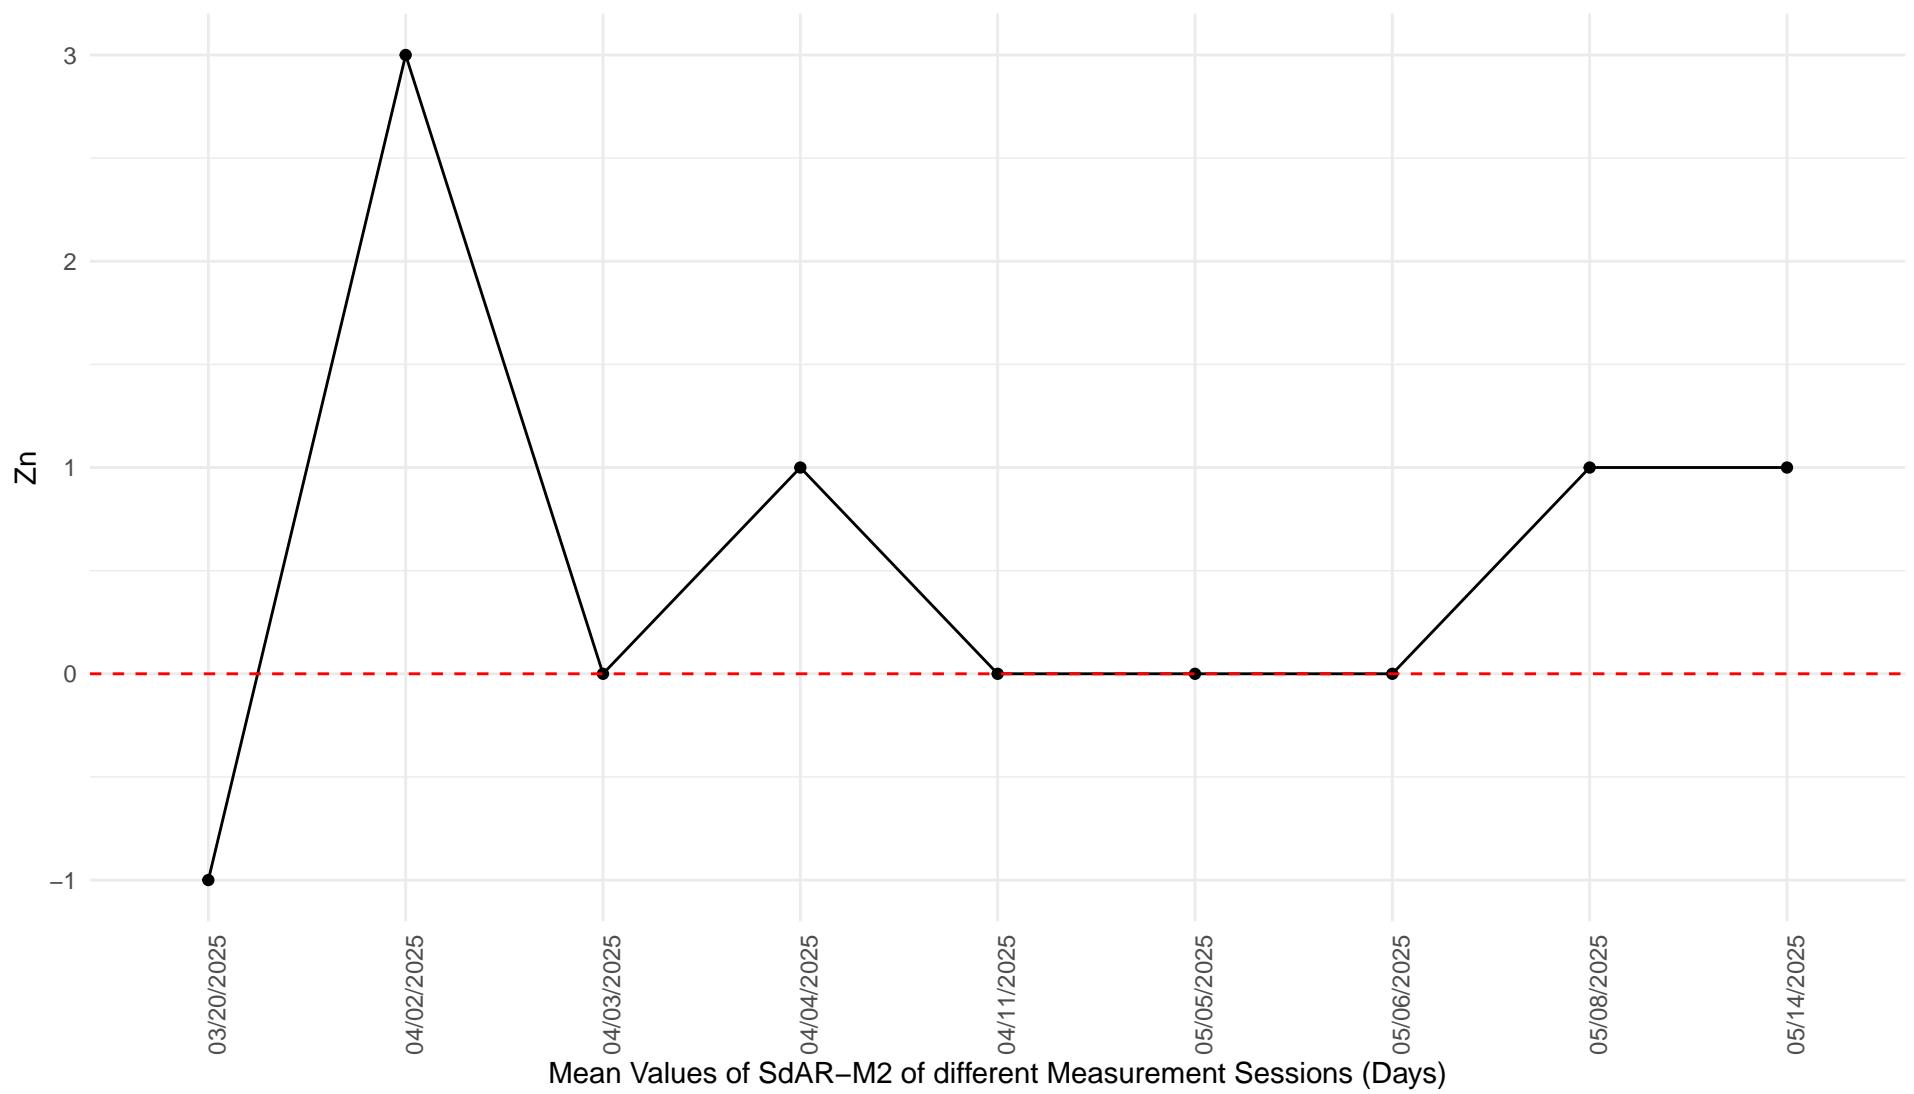


%RD-Plot for As

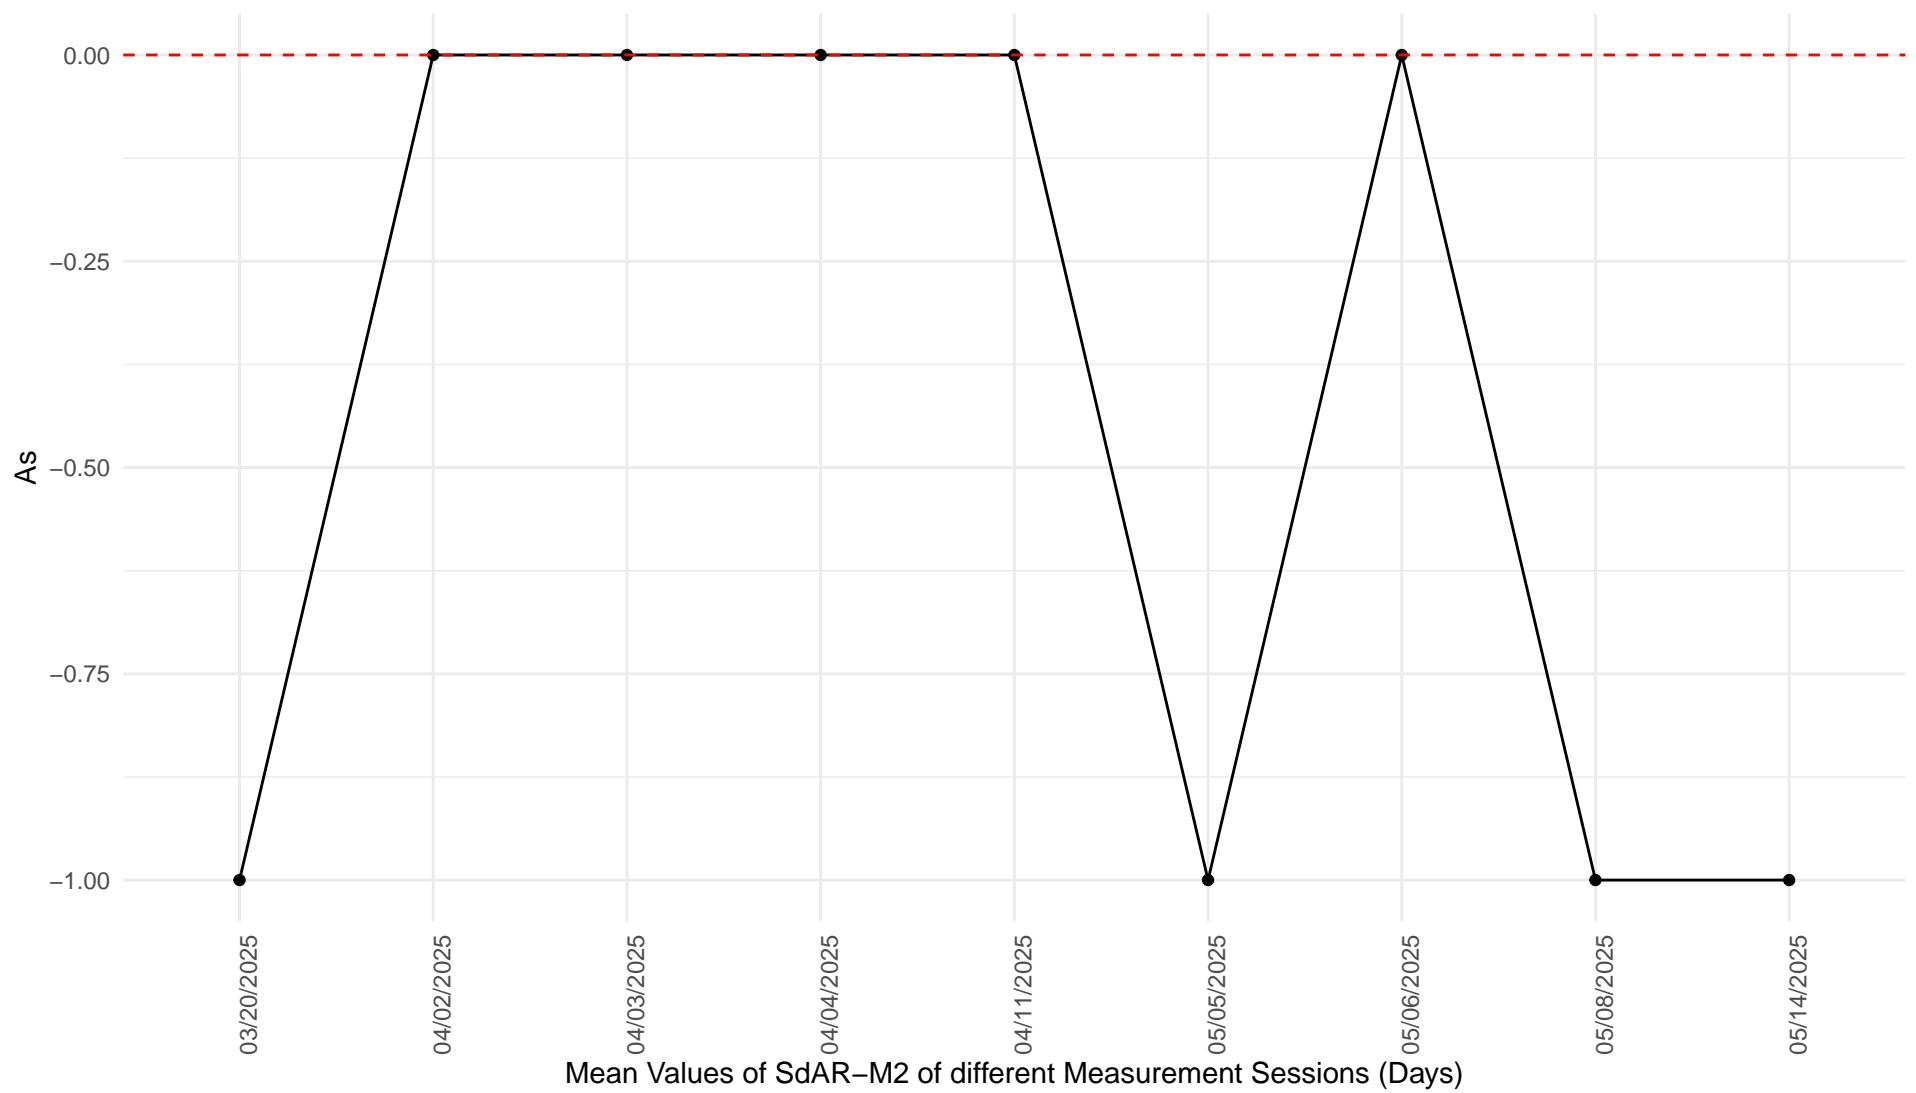


%RD-Plot for Rb

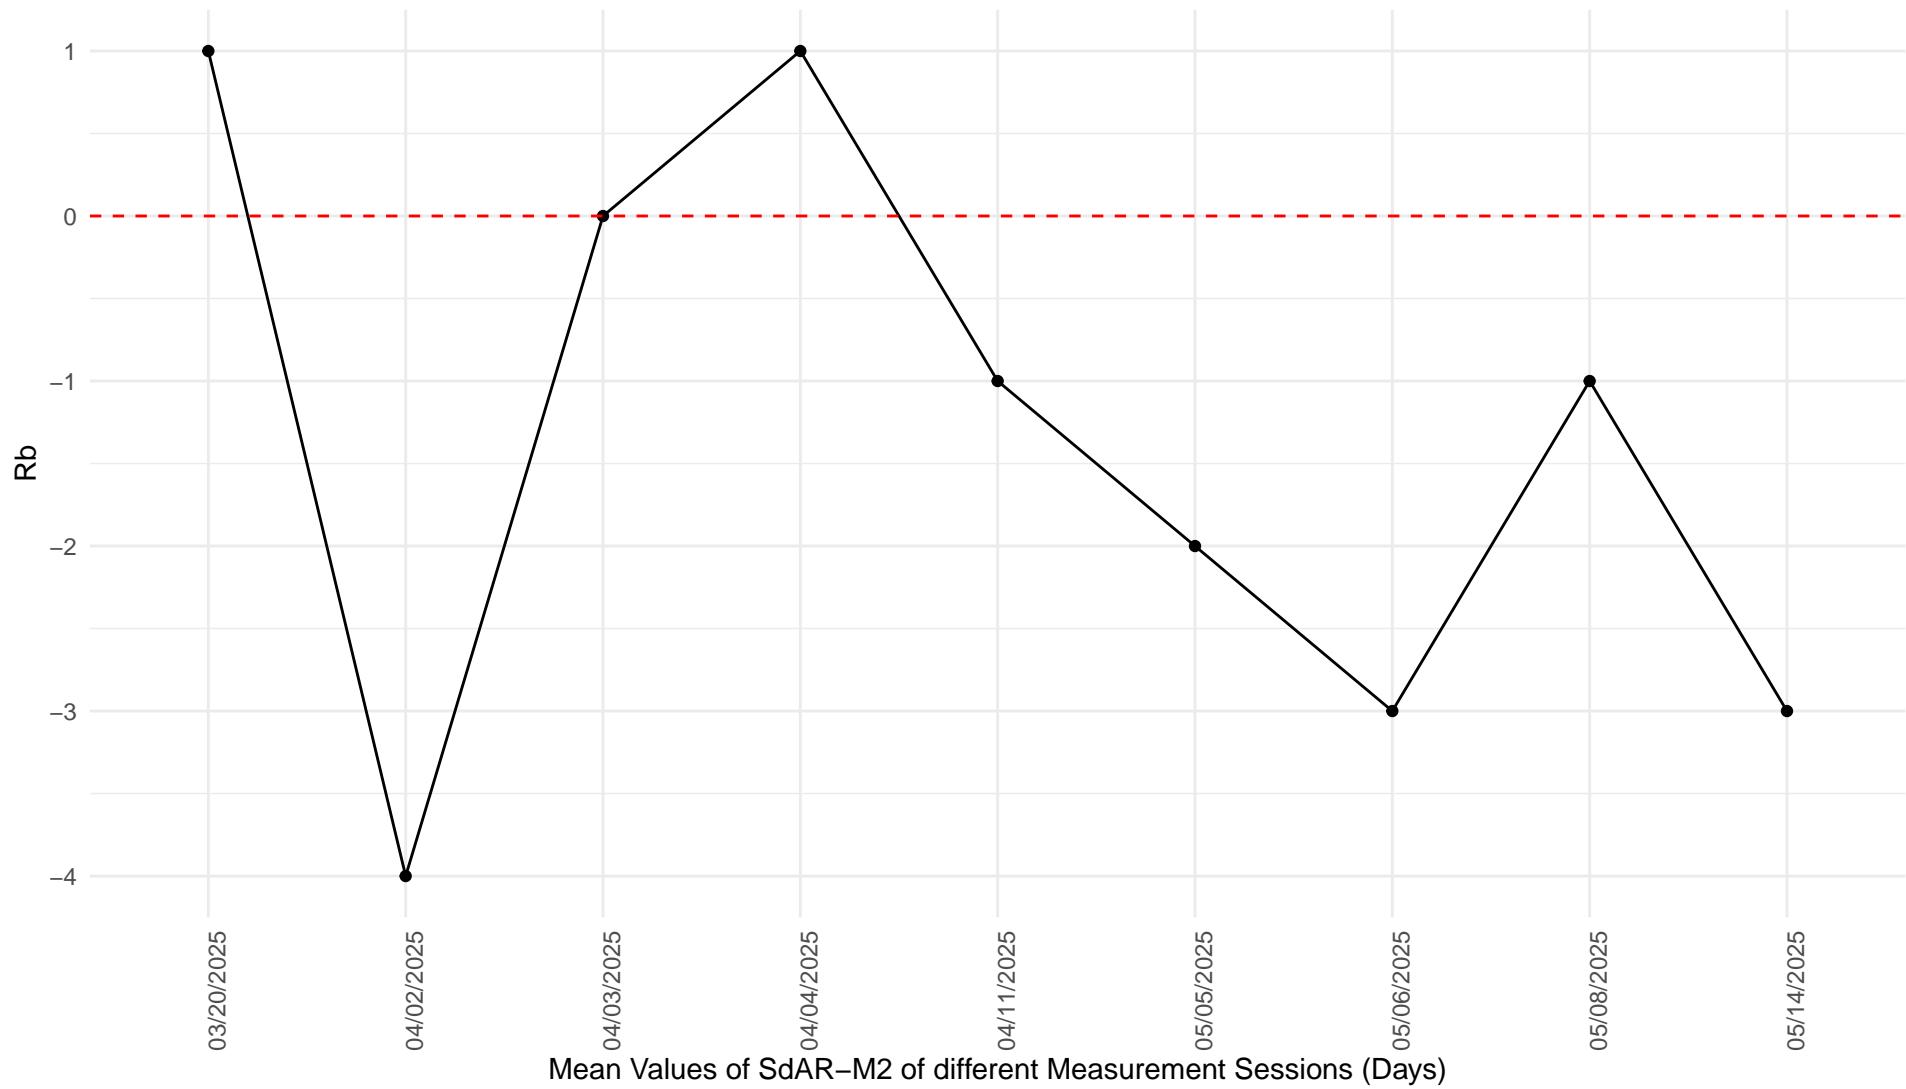


%RD-Plot for Sr

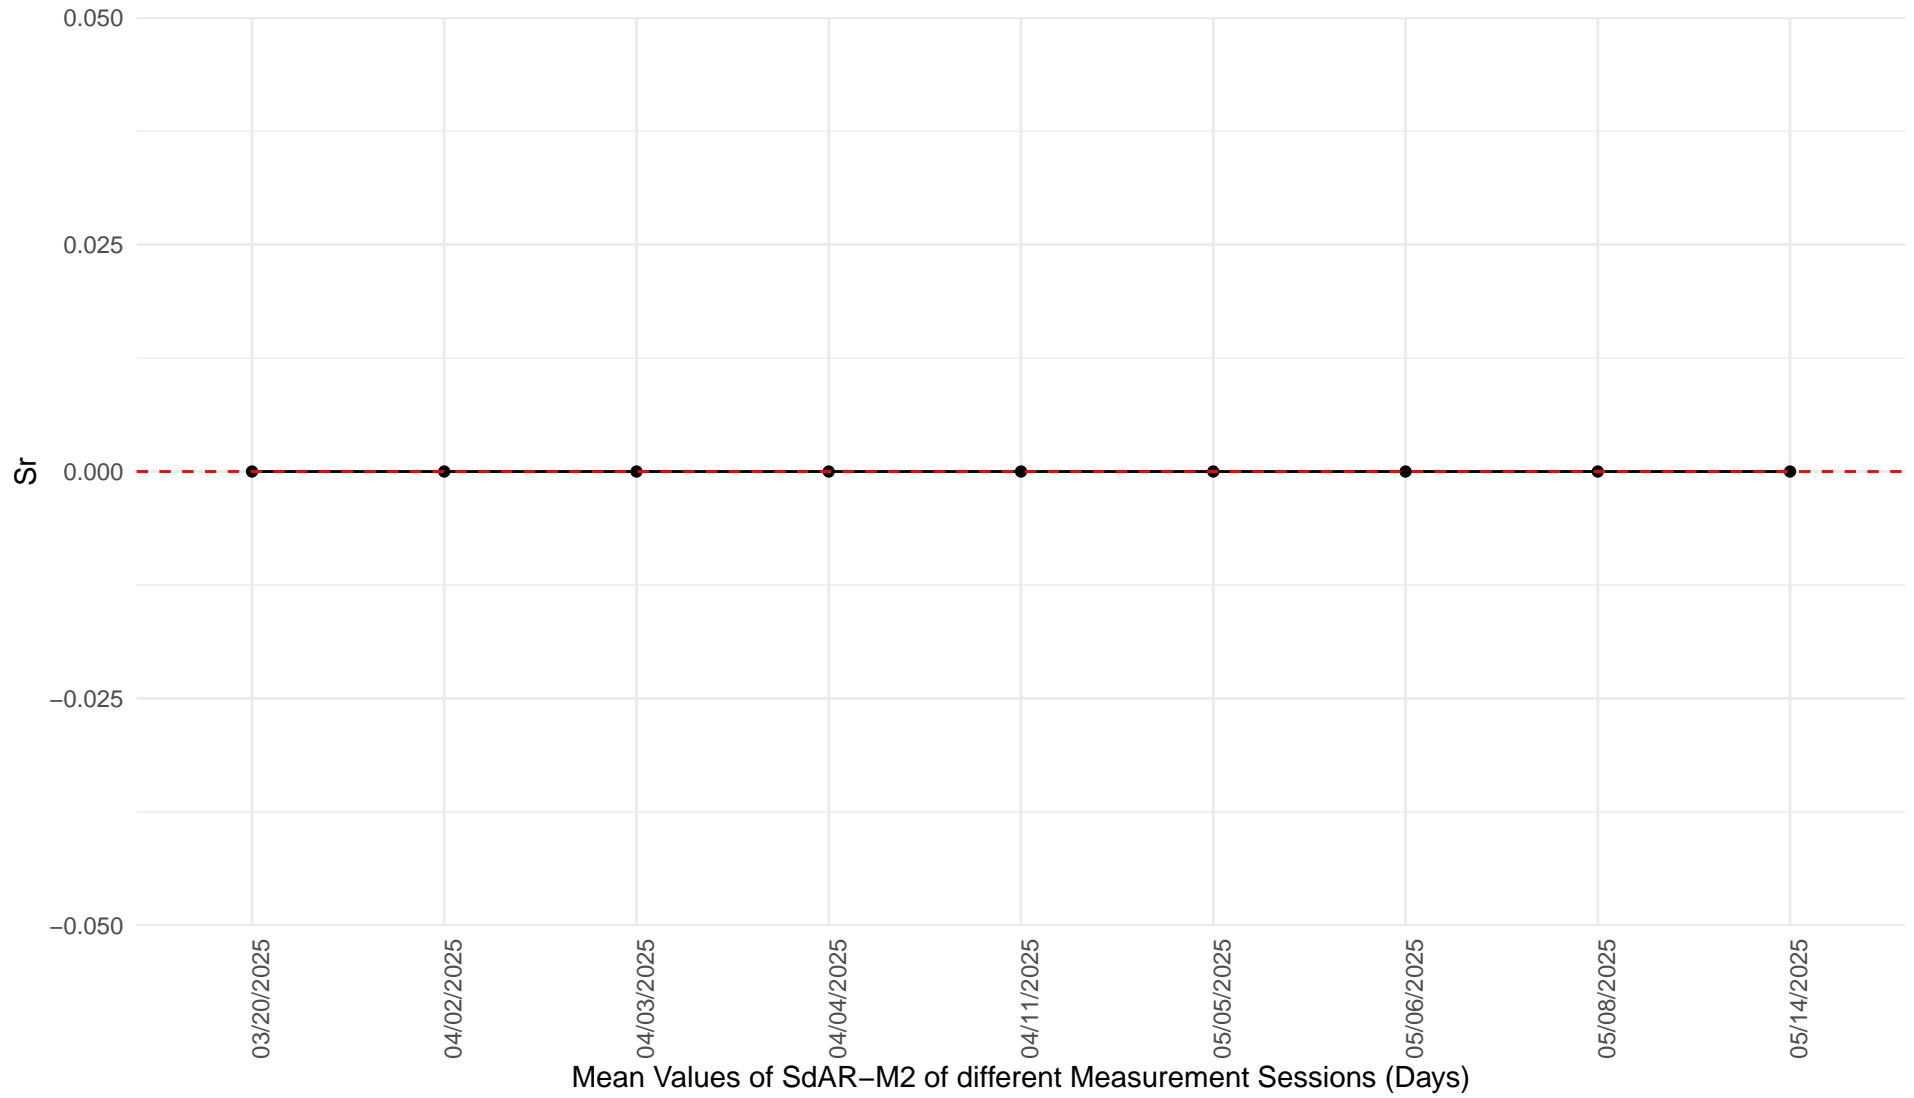


%RD-Plot for Y

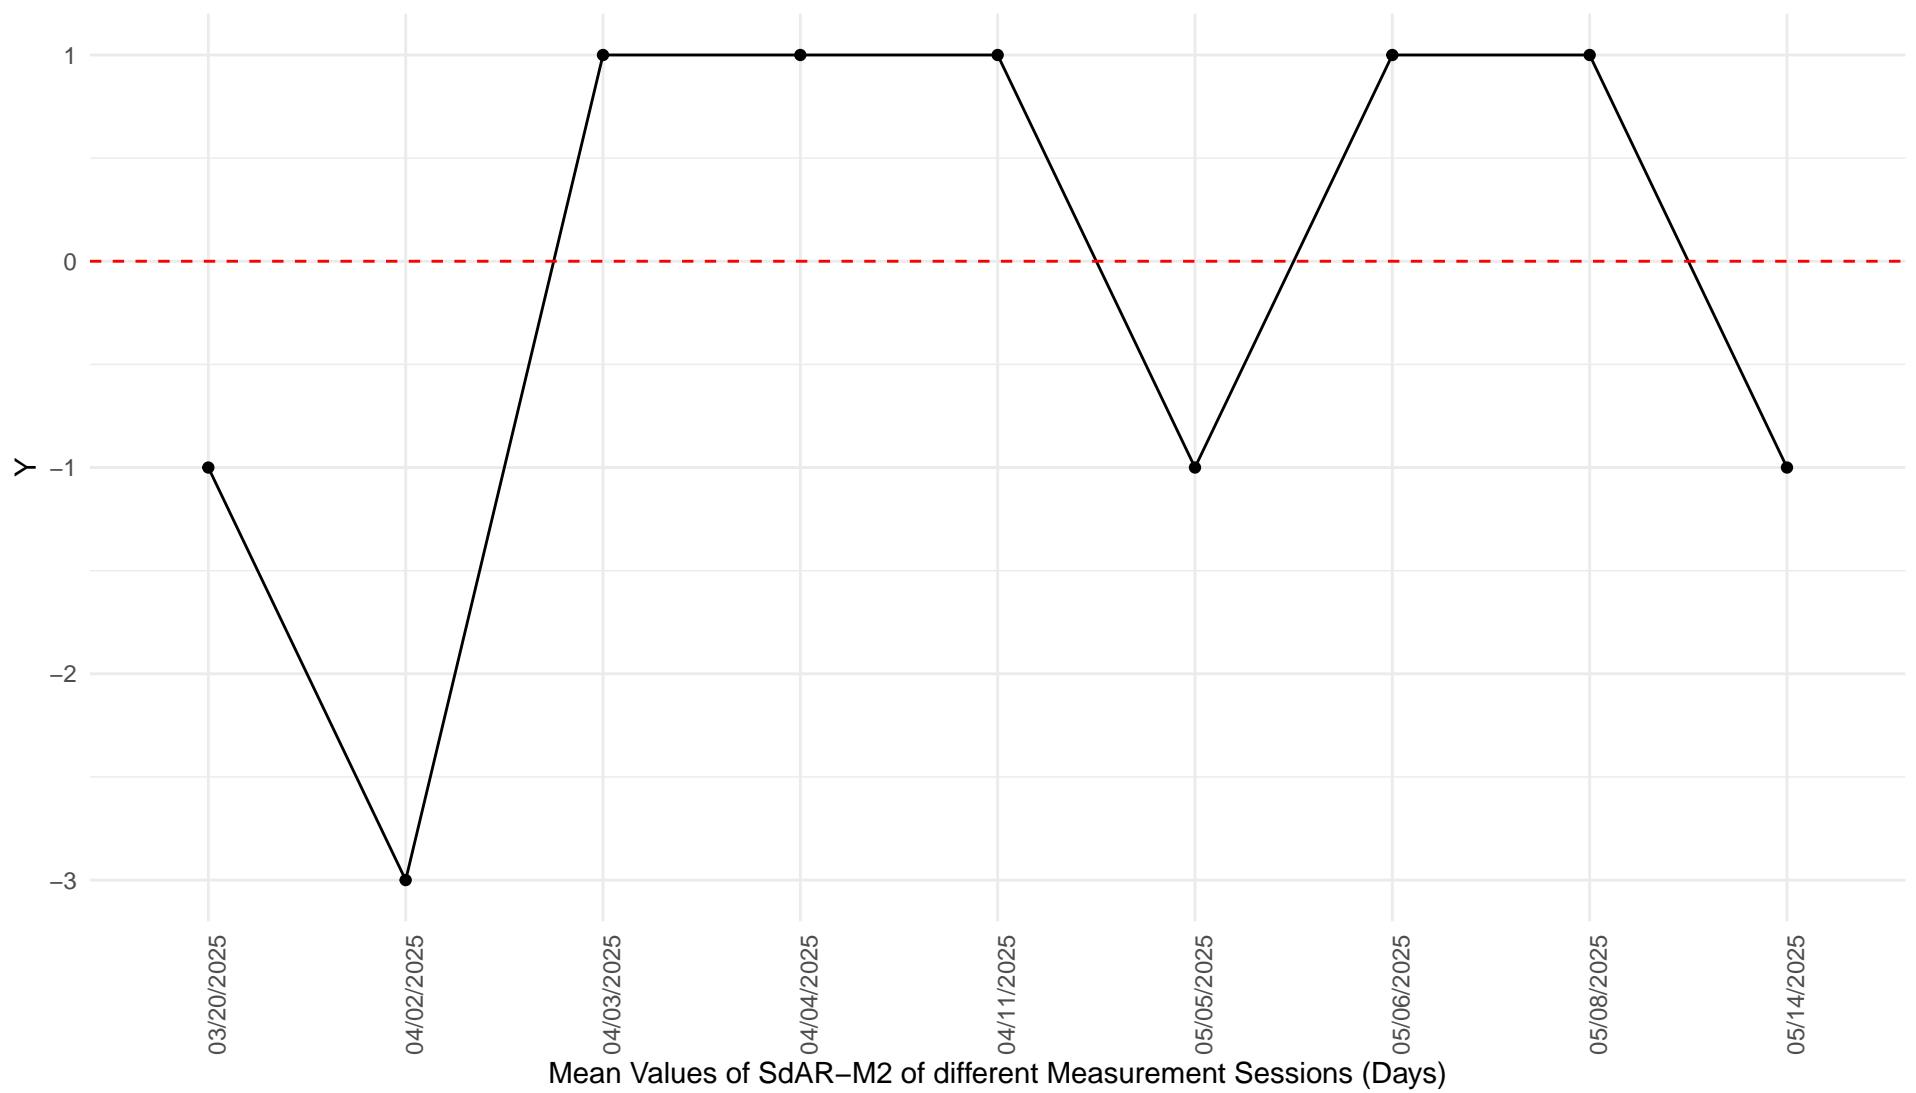


%RD-Plot for Zr

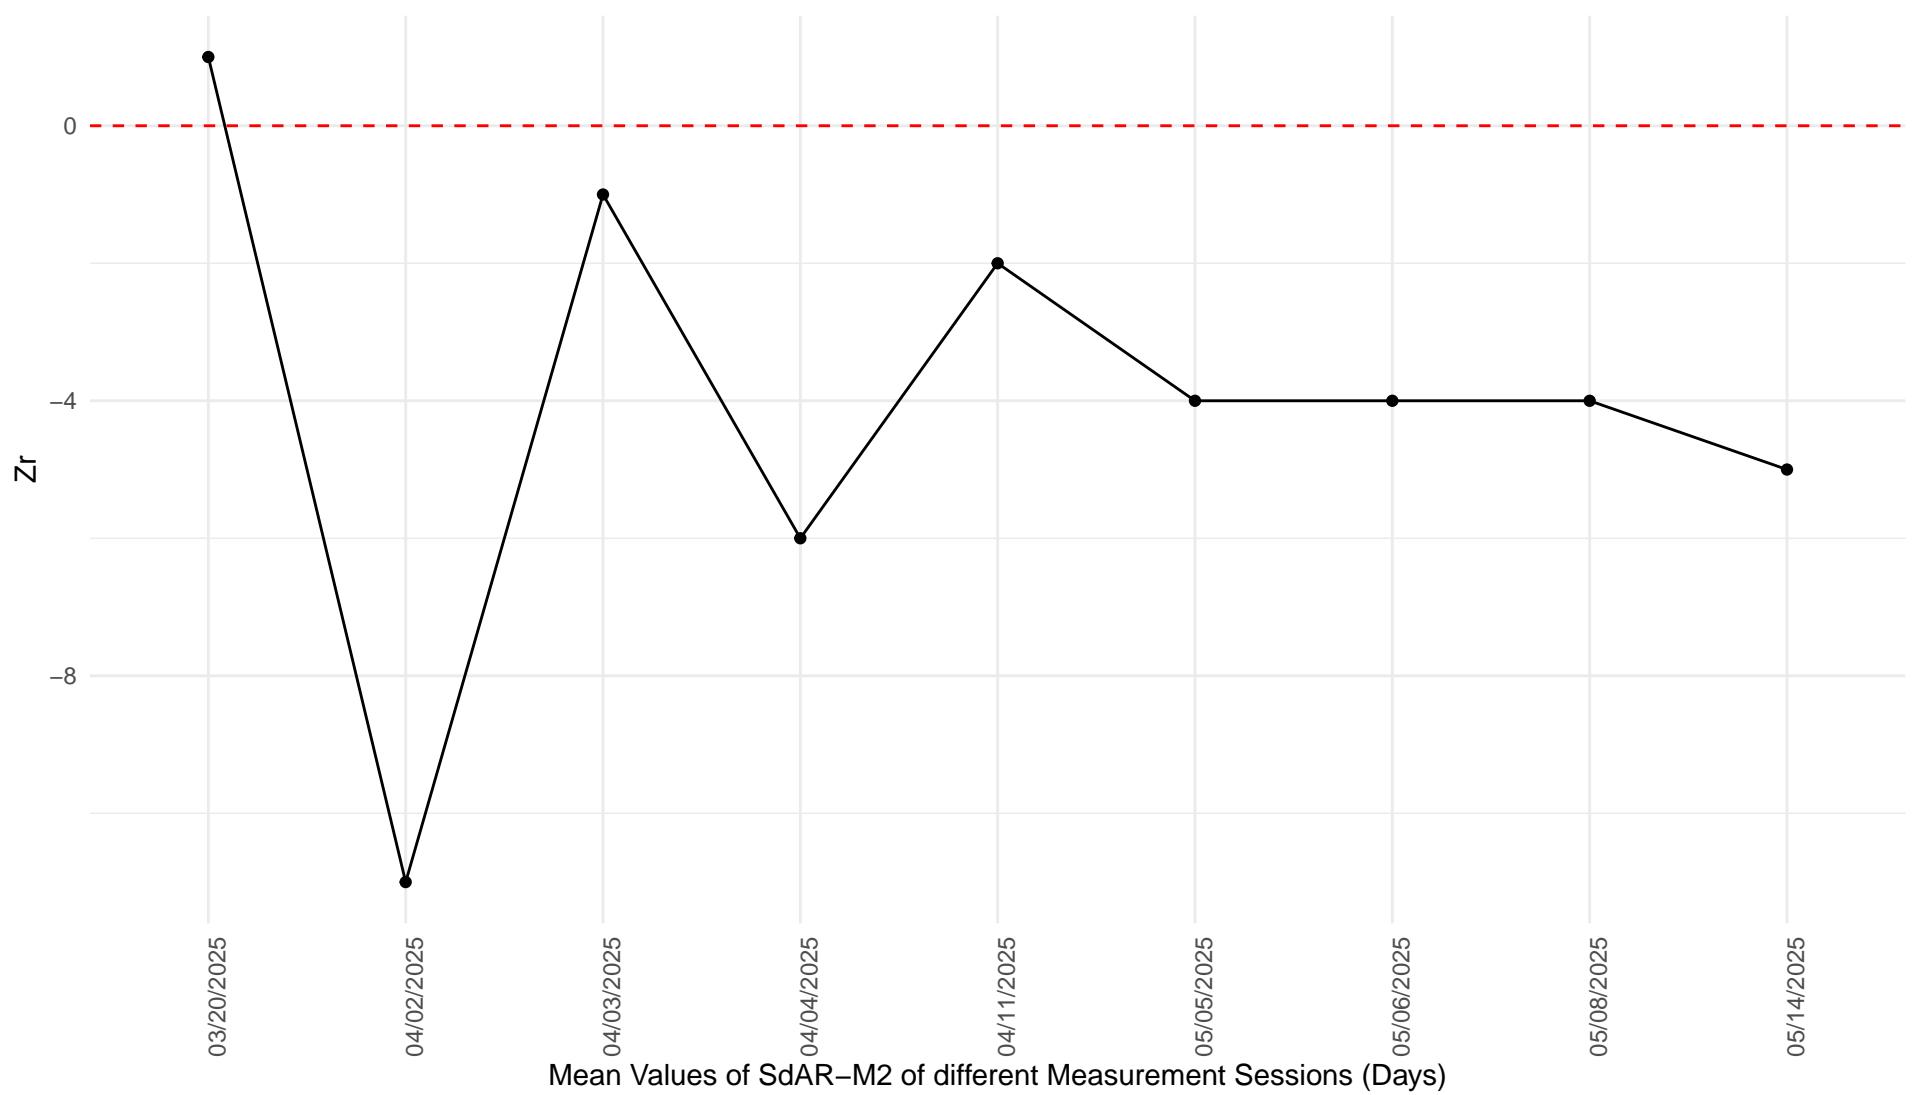


%RD-Plot for Nb

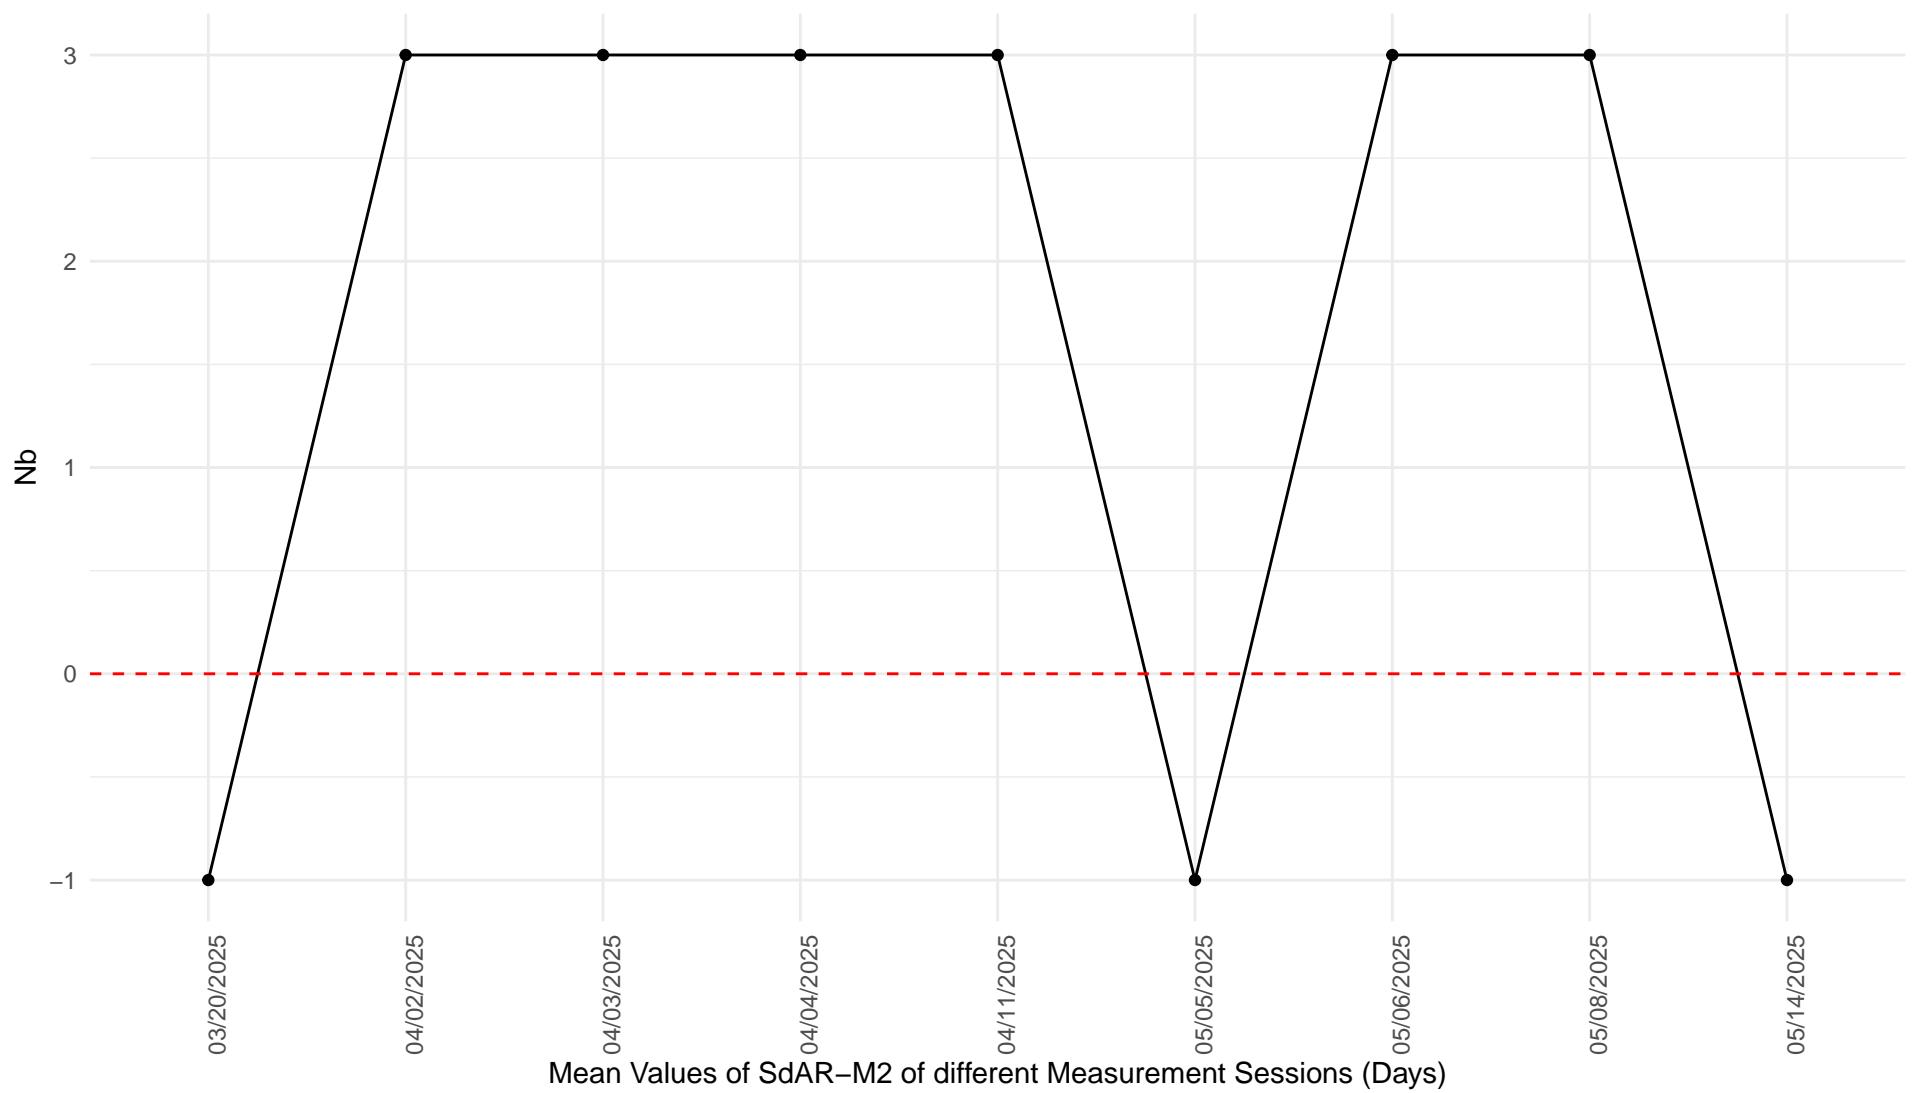


%RD-Plot for Mo

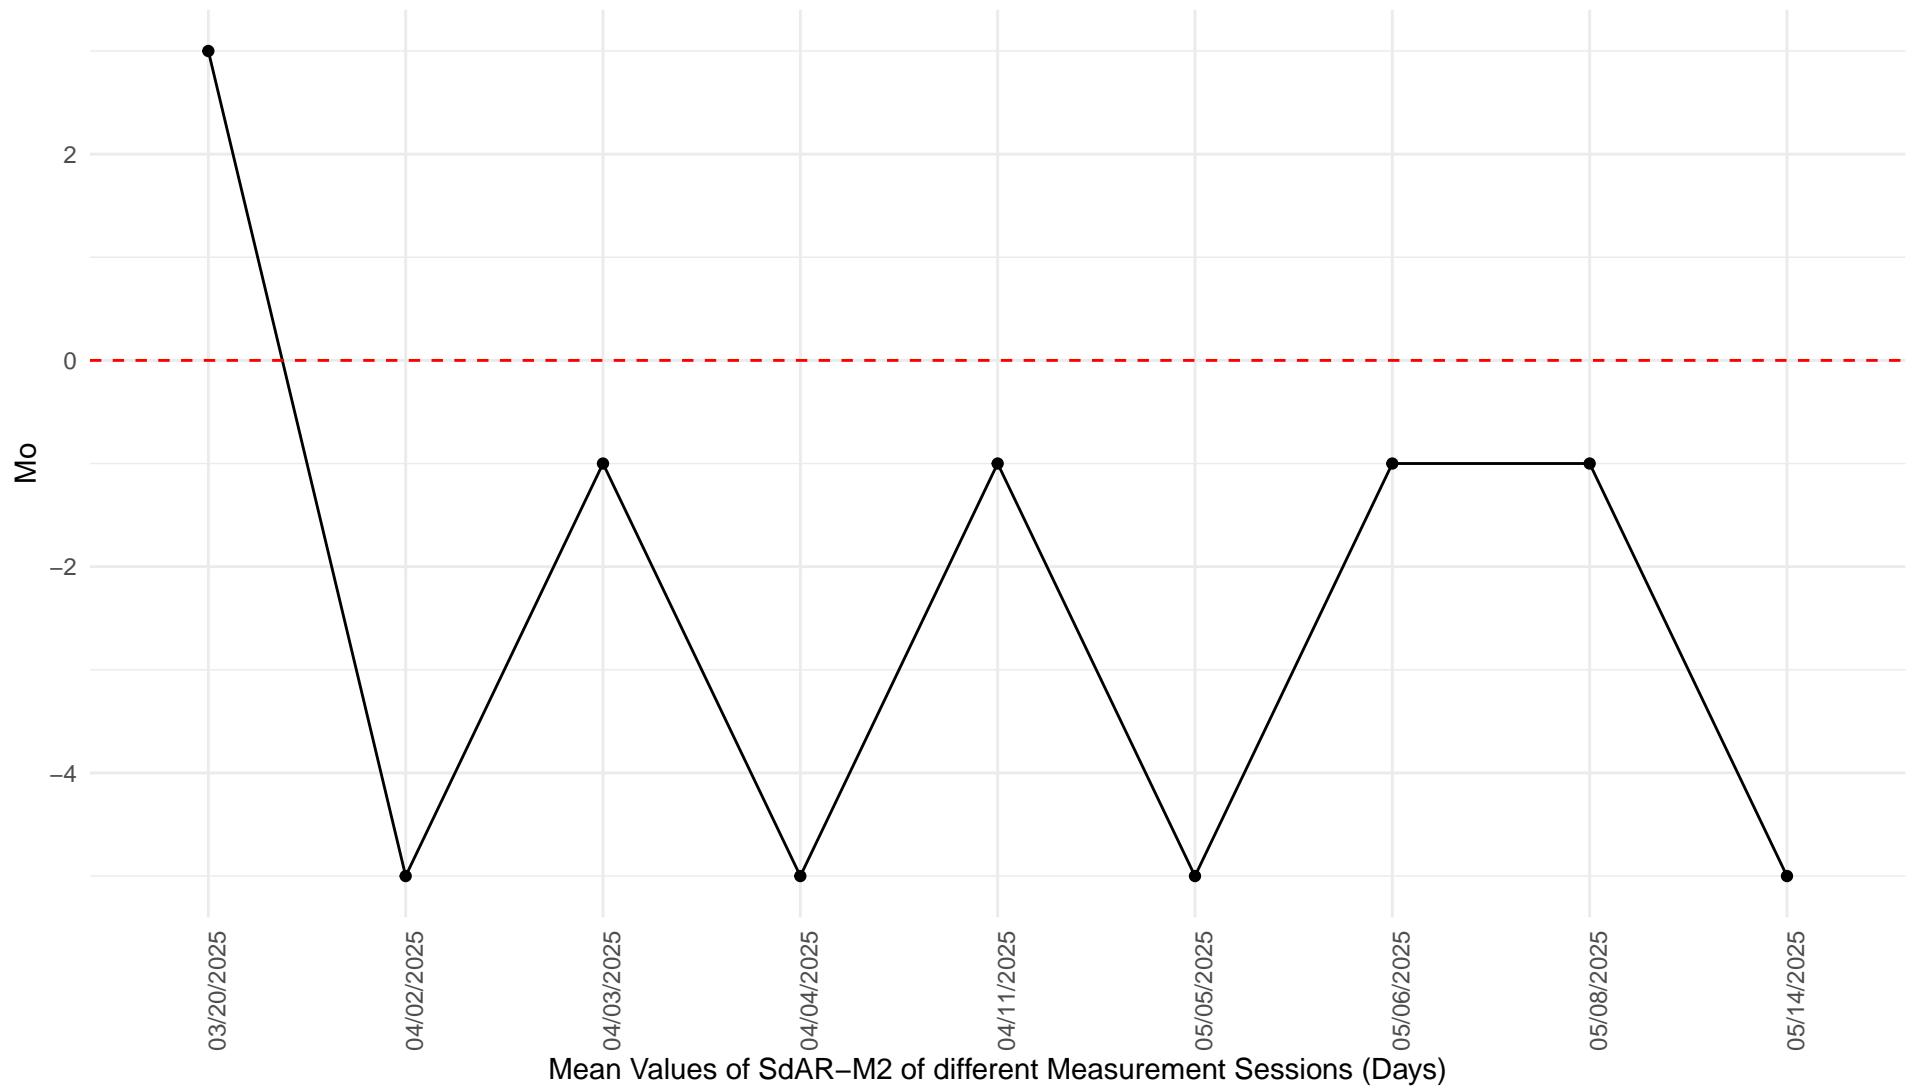


%RD-Plot for Ba

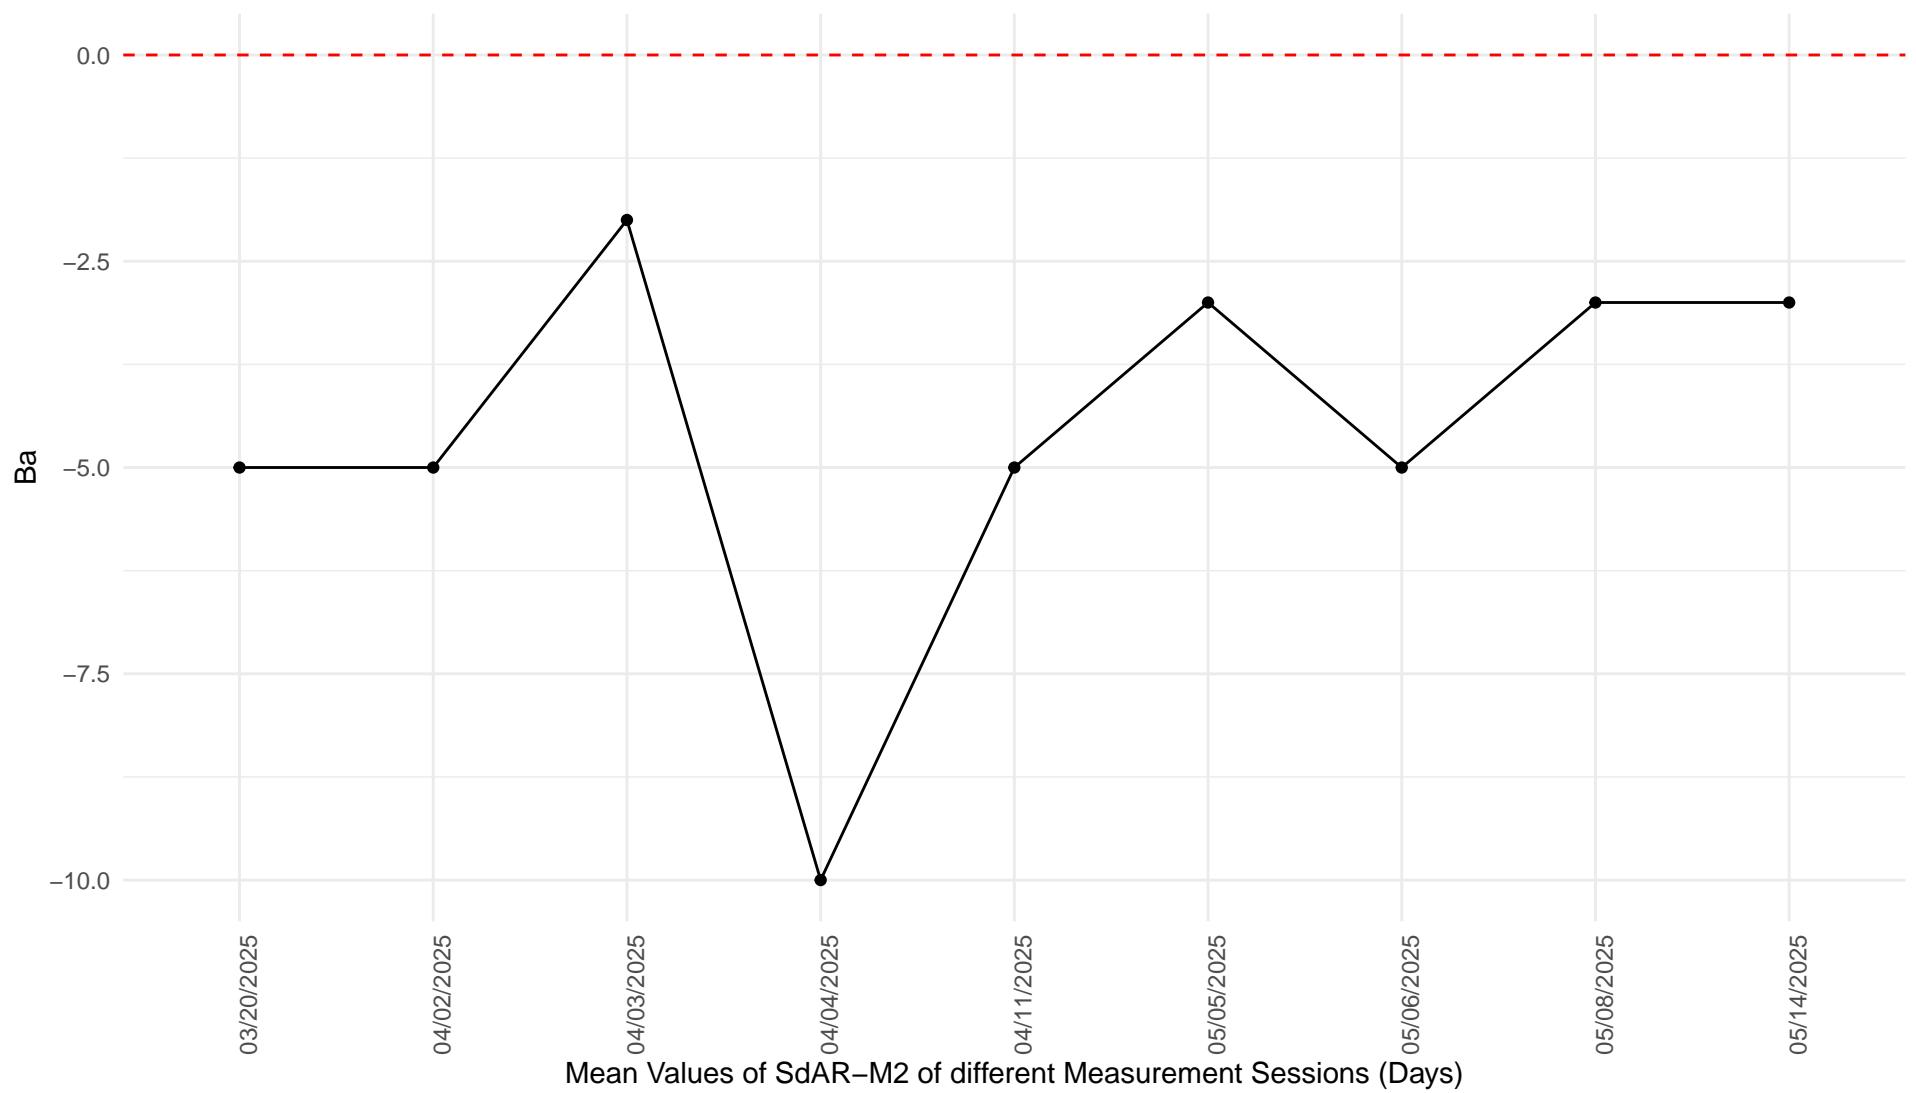

%RD-Plot for Pb

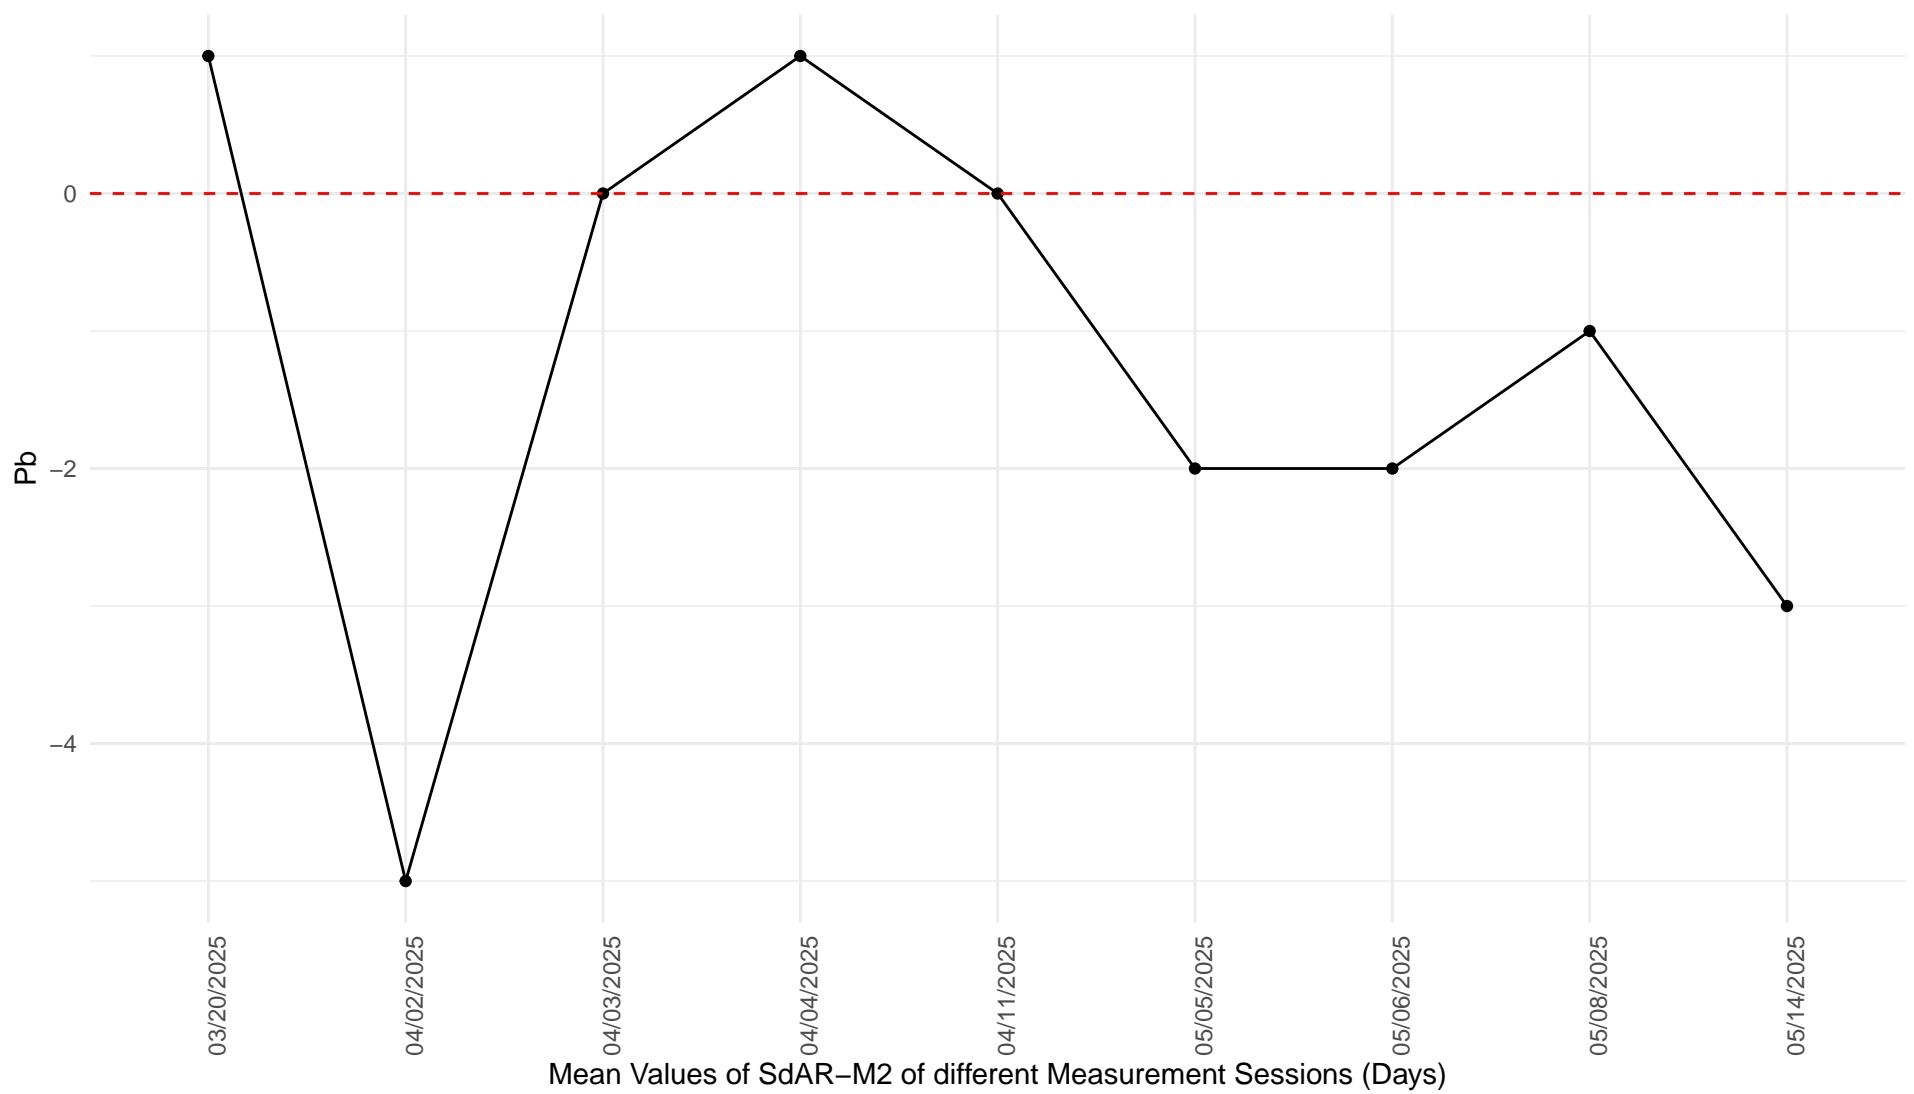

%RD-Plot for Th

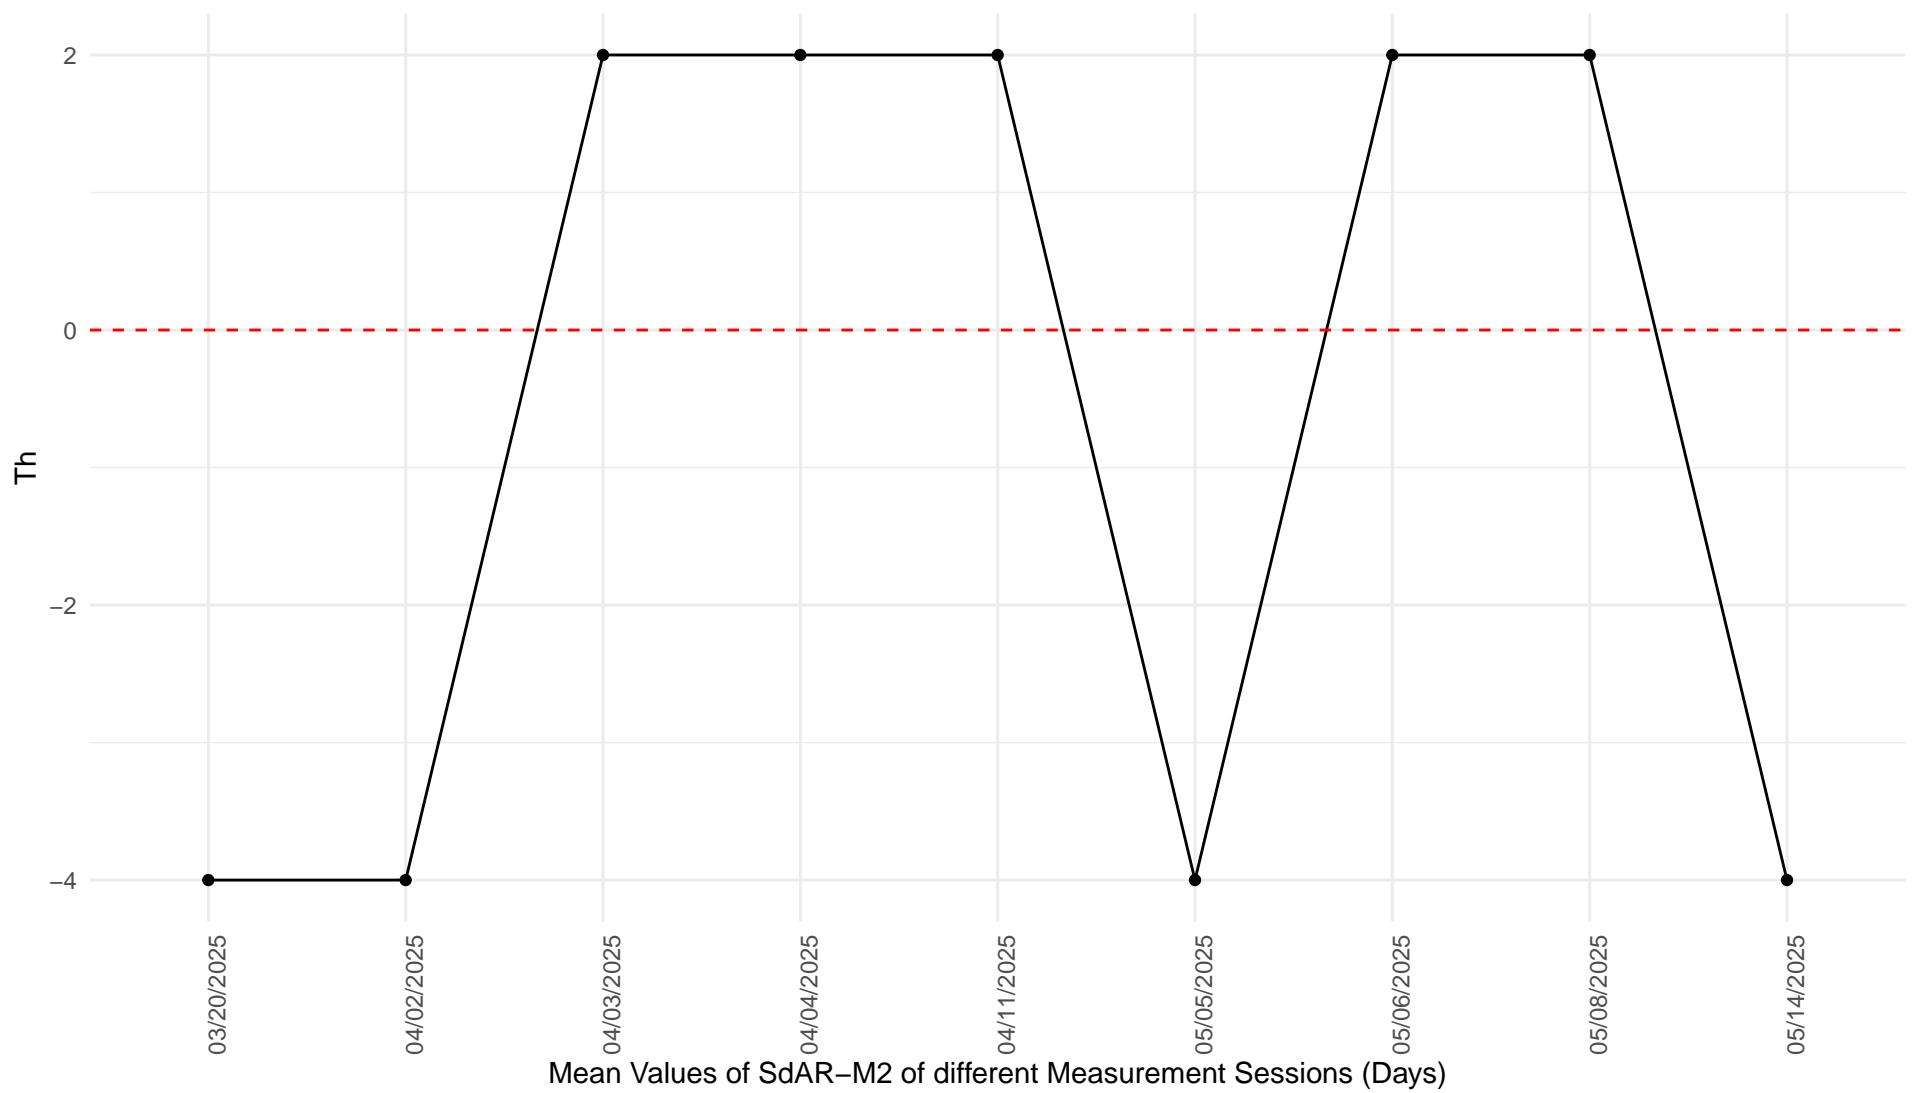

%RD-Plot for U

