


MIDIShip Bridge

User Manual

0.5.0

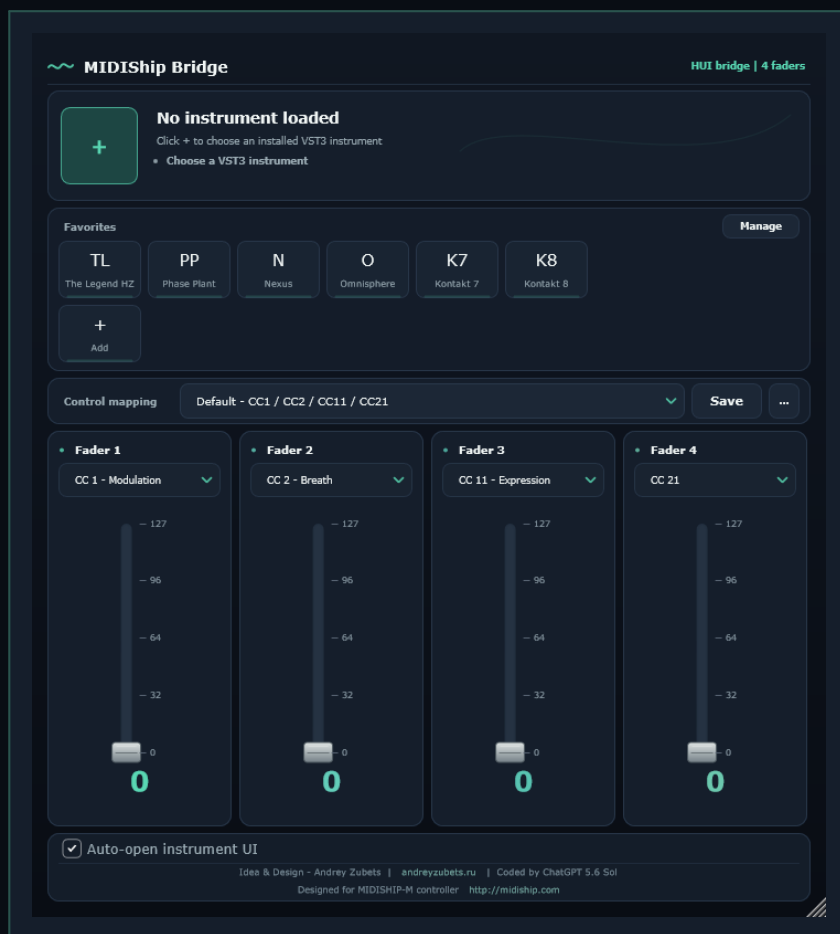

Cubase + MIDIShip M + VST3 instruments

Contents

User Manual	3
1. Before Installation	3
2. Installing MIDIShip Bridge	3
3. Setting Up MIDIShip M and loopMIDI	3
4. Setting Up Cubase	4
5. Loading an Instrument	4
6. The Active Track	4
7. CC Assignments and Presets	5
8. Playing CC Data on the Motors	5
9. Recording Fader Movement	5
10. Saving a Project	6
11. Quick Troubleshooting	6
12. Uninstalling	7
Credits and Links	7

User Manual

Version 0.5.0 Windows x64, Cubase, MIDIShip M

MIDIShip Bridge is a VST3 instrument plug-in for Cubase. It hosts another VST3 instrument and links four MIDI CCs to the four motorized, touch-sensitive faders of the MIDIShip M.

During playback, CC values move the physical faders. When you touch and move a fader, its HUI signal is converted back into standard MIDI CC data that can be recorded on an Instrument Track and edited in a Controller Lane.

1. Before Installation

You will need:

- Windows x64 and a version of Cubase that supports MIDI Remote;
- a MIDIShip M with four motorized, touch-sensitive faders;
- MIDIShip M firmware v1.3c (older firmware is not supported);
- a VST3 instrument such as Kontakt or Omnisphere;
- the free loopMIDI application.

First, download and install loopMIDI from its official website:

<https://www.tobias-erichsen.de/software/loopmidi.html>

2. Installing MIDIShip Bridge

- 1 Close Cubase completely.
- 2 Run `MIDIShip-Bridge-0.5.0-windows-x64-setup.exe`.
- 3 Leave the Cubase MIDI Remote profile selected for installation.
- 4 Check the suggested `Driver Scripts\Local` folder. It must belong to the Windows user account under which Cubase is run.
- 5 Complete the installation and start Cubase again.

The installer places the VST3 plug-in here:

```
C:\Program Files\Common Files\VST3\MIDIShip Bridge.vst3
```

The MIDI Remote profile is installed here:

```
%USERPROFILE%\Documents\Steinberg\Cubase\MIDI Remote\Driver Scripts\Local\andrey_zubets\midiship_bridge
```

3. Setting Up MIDIShip M and loopMIDI

HUI Mode

- 1 Turn on the MIDIShip M.
- 2 Press the top encoder three times to select HUI mode.
- 3 To make HUI mode load automatically the next time the controller is turned on, hold the top encoder for 2 seconds.

Leave `HUI Ping: On` and `14-bit CC: Off`.

Recommended motor settings are **Speed min: 180**, **Speed max: 255**, **Dist max: 3000**, and **Dist Stop: 150**. If a motor begins to vibrate or hunt for its position, return **Dist Stop** to 200.

Use the second USB-C port to power the motors with 5 V at no less than 2 A.

In Windows, the controller appears as **tinyUSB Device**. It is normal for the same name to appear in both the MIDI input and output lists.

Virtual MIDI Port

- 1 Start loopMIDI.
- 2 Create a port named **MIDIShip Bridge CC**.
- 3 Keep loopMIDI running while using Cubase.

4. Setting Up Cubase

Keep HUI Control Data Out of All MIDI Inputs

Open **Studio Setup > MIDI Port Setup**, locate the **tinyUSB Device** input, and clear its **In 'All MIDI Inputs'** checkbox.

Your musical keyboard and **MIDIShip Bridge CC** can remain included in **All MIDI Inputs**.

Assign the MIDI Remote Ports

In MIDI Remote Manager, select:

- Vendor: **Andrey Zubets**;
- Device: **MIDIShip Bridge**.

Assign the ports as follows:

MIDI Remote port	Select
HUI Input	tinyUSB Device from the input list
HUI Output	tinyUSB Device from the output list
CC Loopback Output	MIDIShip Bridge CC

Do not use the same physical ports simultaneously with Mackie Control, Generic Remote, or another HUI device in Cubase.

5. Loading an Instrument

- 1 Create an Instrument Track using **MIDIShip Bridge**.
- 2 The Bridge window opens automatically. Click the green + tile.
- 3 Use the search field to find and select a VST3 instrument.
- 4 Wait for it to load. If **Auto-open instrument UI** is enabled, the hosted instrument editor opens automatically.

The **Settings** button in the instrument's bottom bar returns you to the main MIDIShip Bridge screen. The same bar also provides quick access to your CC presets.

6. The Active Track

The faders control one MIDIShip Bridge instance at a time: the selected Instrument Track with **Record Enable** turned on.

When you select another record-enabled Bridge track, the motors receive its current CC values. A track without MIDIShip Bridge, or without **Record Enable**, does not control the surface.

Keep only one Bridge track record-enabled. If several tracks listen to the shared loopMIDI port and have **Record Enable** turned on, the same CC data may be recorded on all of them.

7. CC Assignments and Presets

The default assignments are:

Fader	CC	Typical assignment
1	CC1	Modulation
2	CC2	Breath
3	CC11	Expression
4	CC21	Custom assignment

Each fader card can be assigned any CC from 0 to 127. The large number shows the most recently received value, while a soft highlight around the card indicates an active touch.

To save your own mapping:

- 1 Assign the four CCs.
- 2 Click **Save**.
- 3 Enter a name.
- 4 Select the preset from **Control mapping** or from the instrument's compact bottom bar.

To add the currently loaded instrument to Favorites, click the star button. You can save up to 12 instruments. Drag the tiles to change their order; neighboring tiles automatically move out of the way. To remove a Favorite, right-click its tile or use **Manage**.

The **Manage** menu also contains **Export...** and **Import...** These commands save or restore Favorites and custom CC presets in a single file. Importing adds entries that are not already present without removing your current ones.

The **...** button in the **Control mapping** row lets you rename or delete the selected custom CC preset. MIDIShip Bridge asks for confirmation before deleting it.

8. Playing CC Data on the Motors

- 1 Assign the required CC to a fader.
- 2 Draw or record that CC in a MIDI Part on the Instrument Track.
- 3 Select the track and turn on **Record Enable**.
- 4 Start playback.

The corresponding motorized fader follows the CC curve.

9. Recording Fader Movement

- 1 Set **MIDIShip Bridge CC** as the Instrument Track's MIDI input, or use a correctly configured **All MIDI Inputs**.
- 2 Select the track, turn on **Record Enable**, and start recording in Cubase.
- 3 Touch the fader's sensing surface and move the fader.

While your finger remains on the fader, manual movement takes priority over the motor. After you release it, feedback protection ends and the motor returns to the current value on the track.

The result is recorded as standard MIDI CC data from 0 to 127 and is available in [Key Editor > Controller Lane](#).

10. Saving a Project

The Cubase project stores the hosted VST3 instrument, its patch and state, the four CC assignments, and their current values.

If a saved VST3 instrument is temporarily unavailable or fails to load, MIDIShip Bridge continues to preserve its patch and state during subsequent project saves. The [Retry](#) button attempts to load the instrument again after it becomes available. [Forget](#) removes the preserved state only after confirmation.

Favorites, custom CC presets, and [Auto-open instrument UI](#) are global MIDIShip Bridge settings on this computer. Use [Export...](#) to back them up or transfer them, then select [Import...](#) on the other system.

11. Quick Troubleshooting

The MIDI Remote Profile Does Not Appear

- Check the [Driver Scripts\Local](#) path and make sure that the [andrey_zubets\midiship_bridge](#) folder contains all three [.js](#) files.
- Restart Cubase completely.
- Check the MIDI Remote Script Console.

The Motors Do Not Move

- Make sure the MIDIShip M is in HUI mode.
- Check that [HUI Output](#) = [tinyUSB Device](#).
- Select an Instrument Track containing MIDIShip Bridge and turn on [Record Enable](#).
- Make sure that one of the four assigned CCs is being played.

A Fader Does Not Land on the Correct CC Value

- Check the power supplied through the second USB-C port: 5 V at no less than 2 A.
- Start with [Dist Stop](#): [150](#). If the motor begins to vibrate, use [200](#).
- An error of up to 2 CC steps is normal with the current 7-bit communication. MIDIShip Bridge automatically detects a larger persistent miss and makes no more than one correction attempt.

Manual Fader Movement Is Not Recorded

- Check that [HUI Input](#) = [tinyUSB Device](#).
- Check that [CC Loopback Output](#) = [MIDIShip Bridge CC](#).
- Make sure loopMIDI is running and that the track receives data from its port.
- Turn on [Record Enable](#) and touch the sensing surface before moving the fader.

Feedback or Choppy Data Appears

- Exclude [tinyUSB Device](#) from [All MIDI Inputs](#).
- Do not assign loopMIDI to [HUI Input](#) or [HUI Output](#).

- Do not assign the physical MIDIShip M port to **CC Loopback Output**.
- Do not use another HUI or Mackie profile on the same ports.
- Keep only one Bridge track record-enabled.

The Hosted Instrument Does Not Load

- Select a VST3 instrument, not a VST3 effect.
- Allow a large instrument to finish loading completely before creating another instance.
- If the problem repeats, note the instrument name, version, and exact sequence of actions.

12. Uninstalling

Open **Windows Settings > Apps > Installed apps** and uninstall **MIDIShip Bridge 0.5.0**.

Custom Favorites and CC presets are retained so they can be used after an update. Before deleting these settings permanently, you can back them up with **Export...**

Credits and Links

Idea & Design: Andrey Zubets <http://andreyzubets.ru>

Coded by ChatGPT 5.6 Sol

Designed for the MIDIShip M controller <http://midiship.com>