
Midiverse Modular

MVM001U – Multiple Build Guide

Thanks for choosing this kit and supporting Midiverse Modular!

The MVM001U Multiple is a simple DIY build suitable for beginners and more experienced builders. This guide provides instructions on how to complete this build.

Module size: 12HP
Passive module, does not draw current

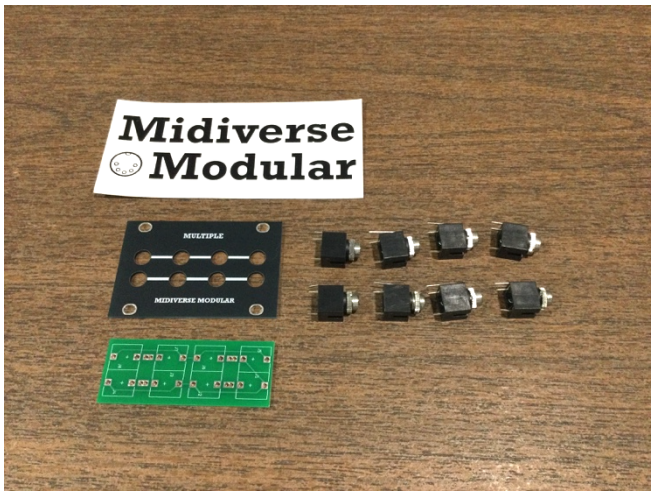

This kit comes with the following parts:

BOM	Qty
1U Multiple PCB	1
1U Multiple Panel	1
3.5 mm Jacks	8

Populate the board with the 8 jacks. Before soldering the jacks, be sure to attach the front panel by loosely tightening the nuts. This step is very important as it is difficult to align the jacks with the holes if the front panel is not attached.

Once the panel is attached, flip the module over and solder the jacks in place. Next, tighten down the nuts on the front panel. Finally, reflow all the solder joints. You're finished!



