
Midiverse Modular

MVM012U – OR Logic Build Guide

Thanks for choosing this kit and supporting Midiverse Modular!

This guide provides basic instructions to build your MVM012U OR Logic module.

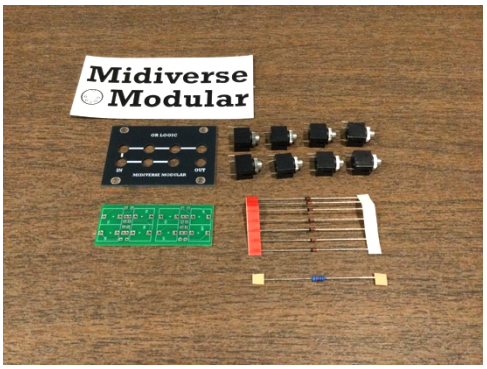

Module size: 12HP
Passive module, does not draw current


MVM012U OR Logic is a simple DIY build suitable for beginners and more experienced builders. This guide provides step-by-step instructions.


This kit comes with the following parts:

Reference	Qty	Value	Notes
1U OR Logic PCB	1		
1U OR Logic Panel	1		
D1, D2, D3, D4, D5, D6, D7	7	1N4148	
R1	1	10K	Brown, black, black, red, brown
U1, U2, U3, U4, U5, U6, U7, U8	8	3.5mm Jacks	

Build Instructions:

Start by populating and soldering the 10K resistor and the 1N4148 diodes in a vertical position. To do this, bend one leg to form a loop as in the photo below. For the diodes, be sure to pay attention to the orientation. The black line on the diode should align with the white line on the PCB.

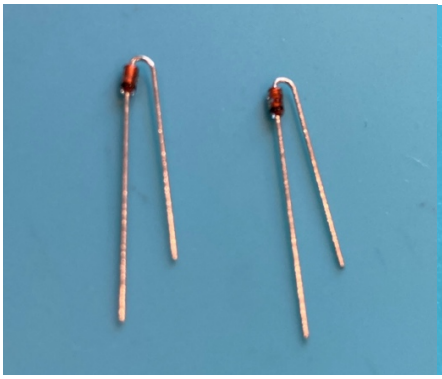

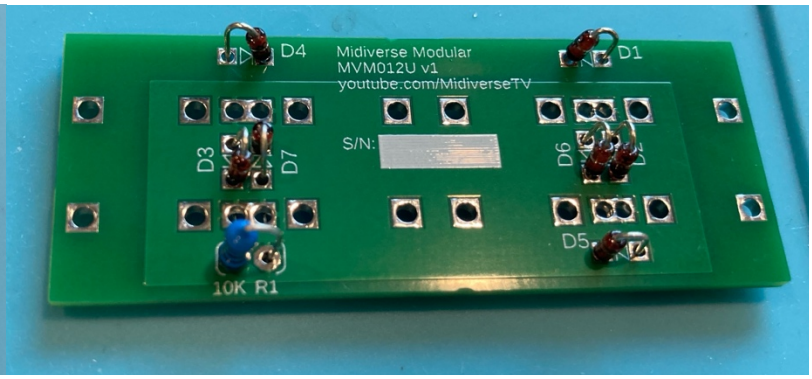

Populate the eight jacks, but **DO NOT** solder yet. **Before soldering the components**, be sure to attach the front panel by hand tightening the nuts. This step is very important as it is difficult to align these components with the holes if the front panel is not attached. Once the panel is attached, flip the module over and solder the jacks in place. Tighten down the nuts on the jacks to secure the front panel. Reflow all the solder joints. You're finished!

