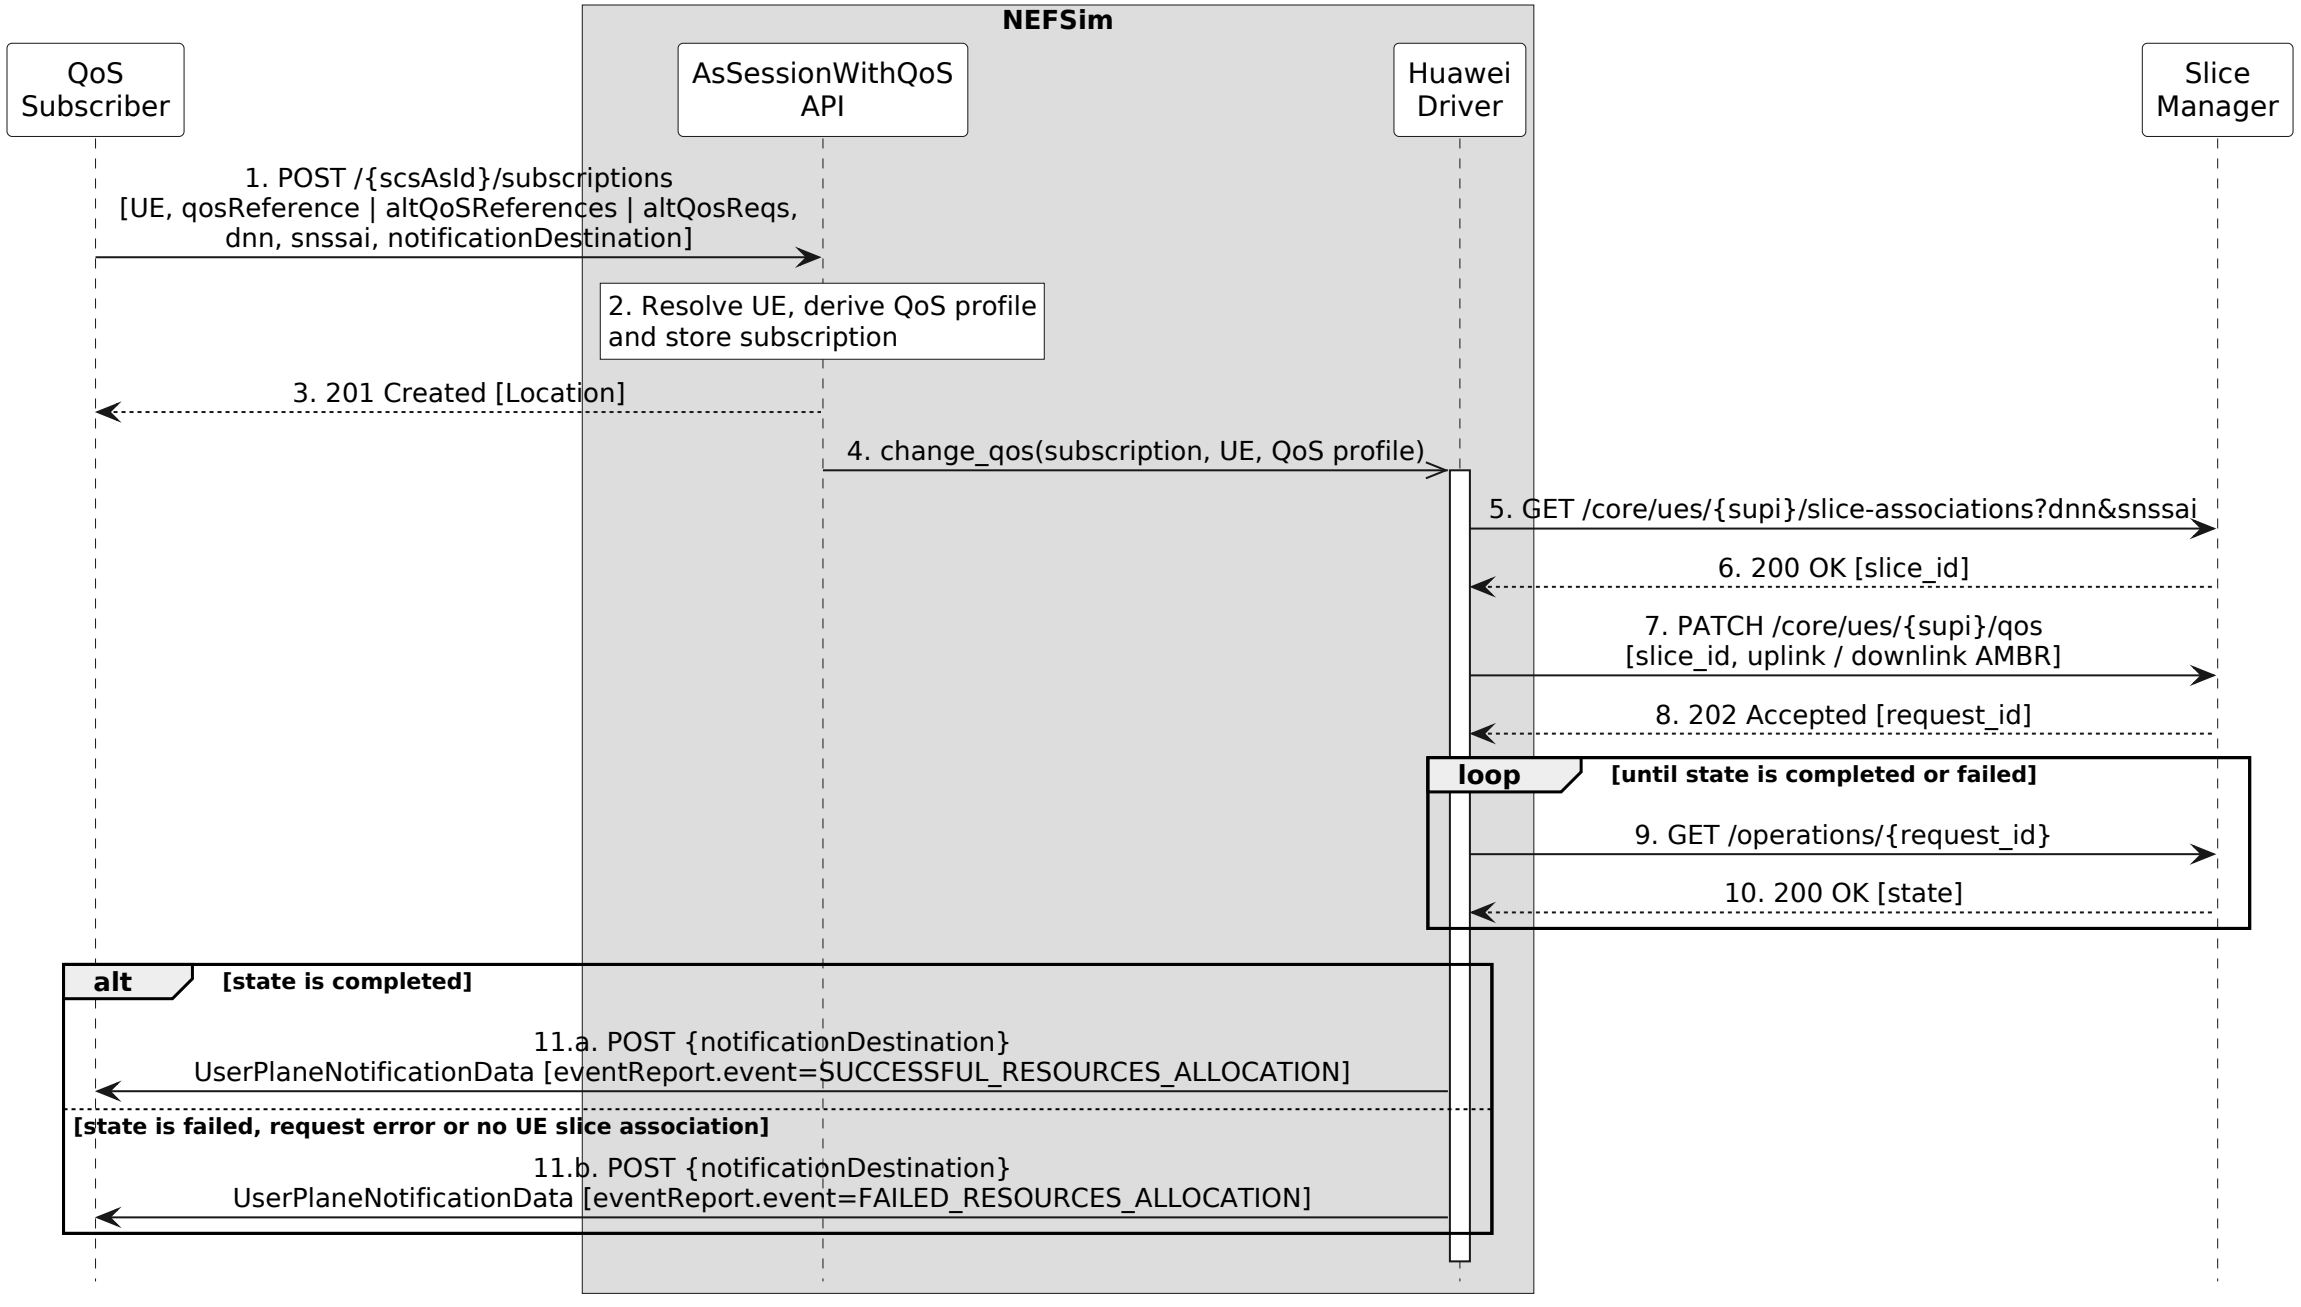
NEFSim
QoS Subscriber
AsSessionWithQoS API
Huawei Driver
Slice Manager
1. POST /{scsAsId}/subscriptions
[UE, qosReference | altQoSReferences | altQosReqs,
dnn, snssai, notificationDestination]
2. Resolve UE, derive QoS profile
and store subscription
3. 201 Created [Location]
4. change_qos(subscription, UE, QoS profile)
5. GET /core/ues/{supi}/slice-associations?dnn&snssai
6. 200 OK [slice_id]
7. PATCH /core/ues/{supi}/qos
[slice_id, uplink / downlink AMBR]
8. 202 Accepted [request_id]
loop
[until state is completed or failed]
9. GET /operations/{request_id}
10. 200 OK [state]
alt
[state is completed]
11.a. POST {notificationDestination}
UserPlaneNotificationData [eventReport.event=SUCCESSFUL_RESOURCES_ALLOCATION]
[state is failed, request error or no UE slice association]
11.b. POST {notificationDestination}
UserPlaneNotificationData [eventReport.event=FAILED_RESOURCES_ALLOCATION]