
- 1. Firstly, download and unzip the "CommonBurnerAP" tool
- 2. Plug in the USB camera module and double-click on "CommonBurnerAP. exe":

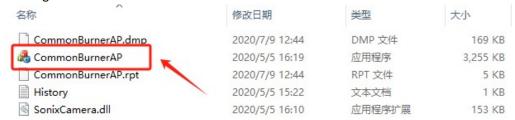

3. Browse and select the firmware file provided by the manufacturer (that is, the file with src as the suffix), and click the burn button:



4. Complete burning:

