Appendix C DIAGCLR01:ExtendedSession Entry/ the confirmation for the current DTC check flow(P.1/1)

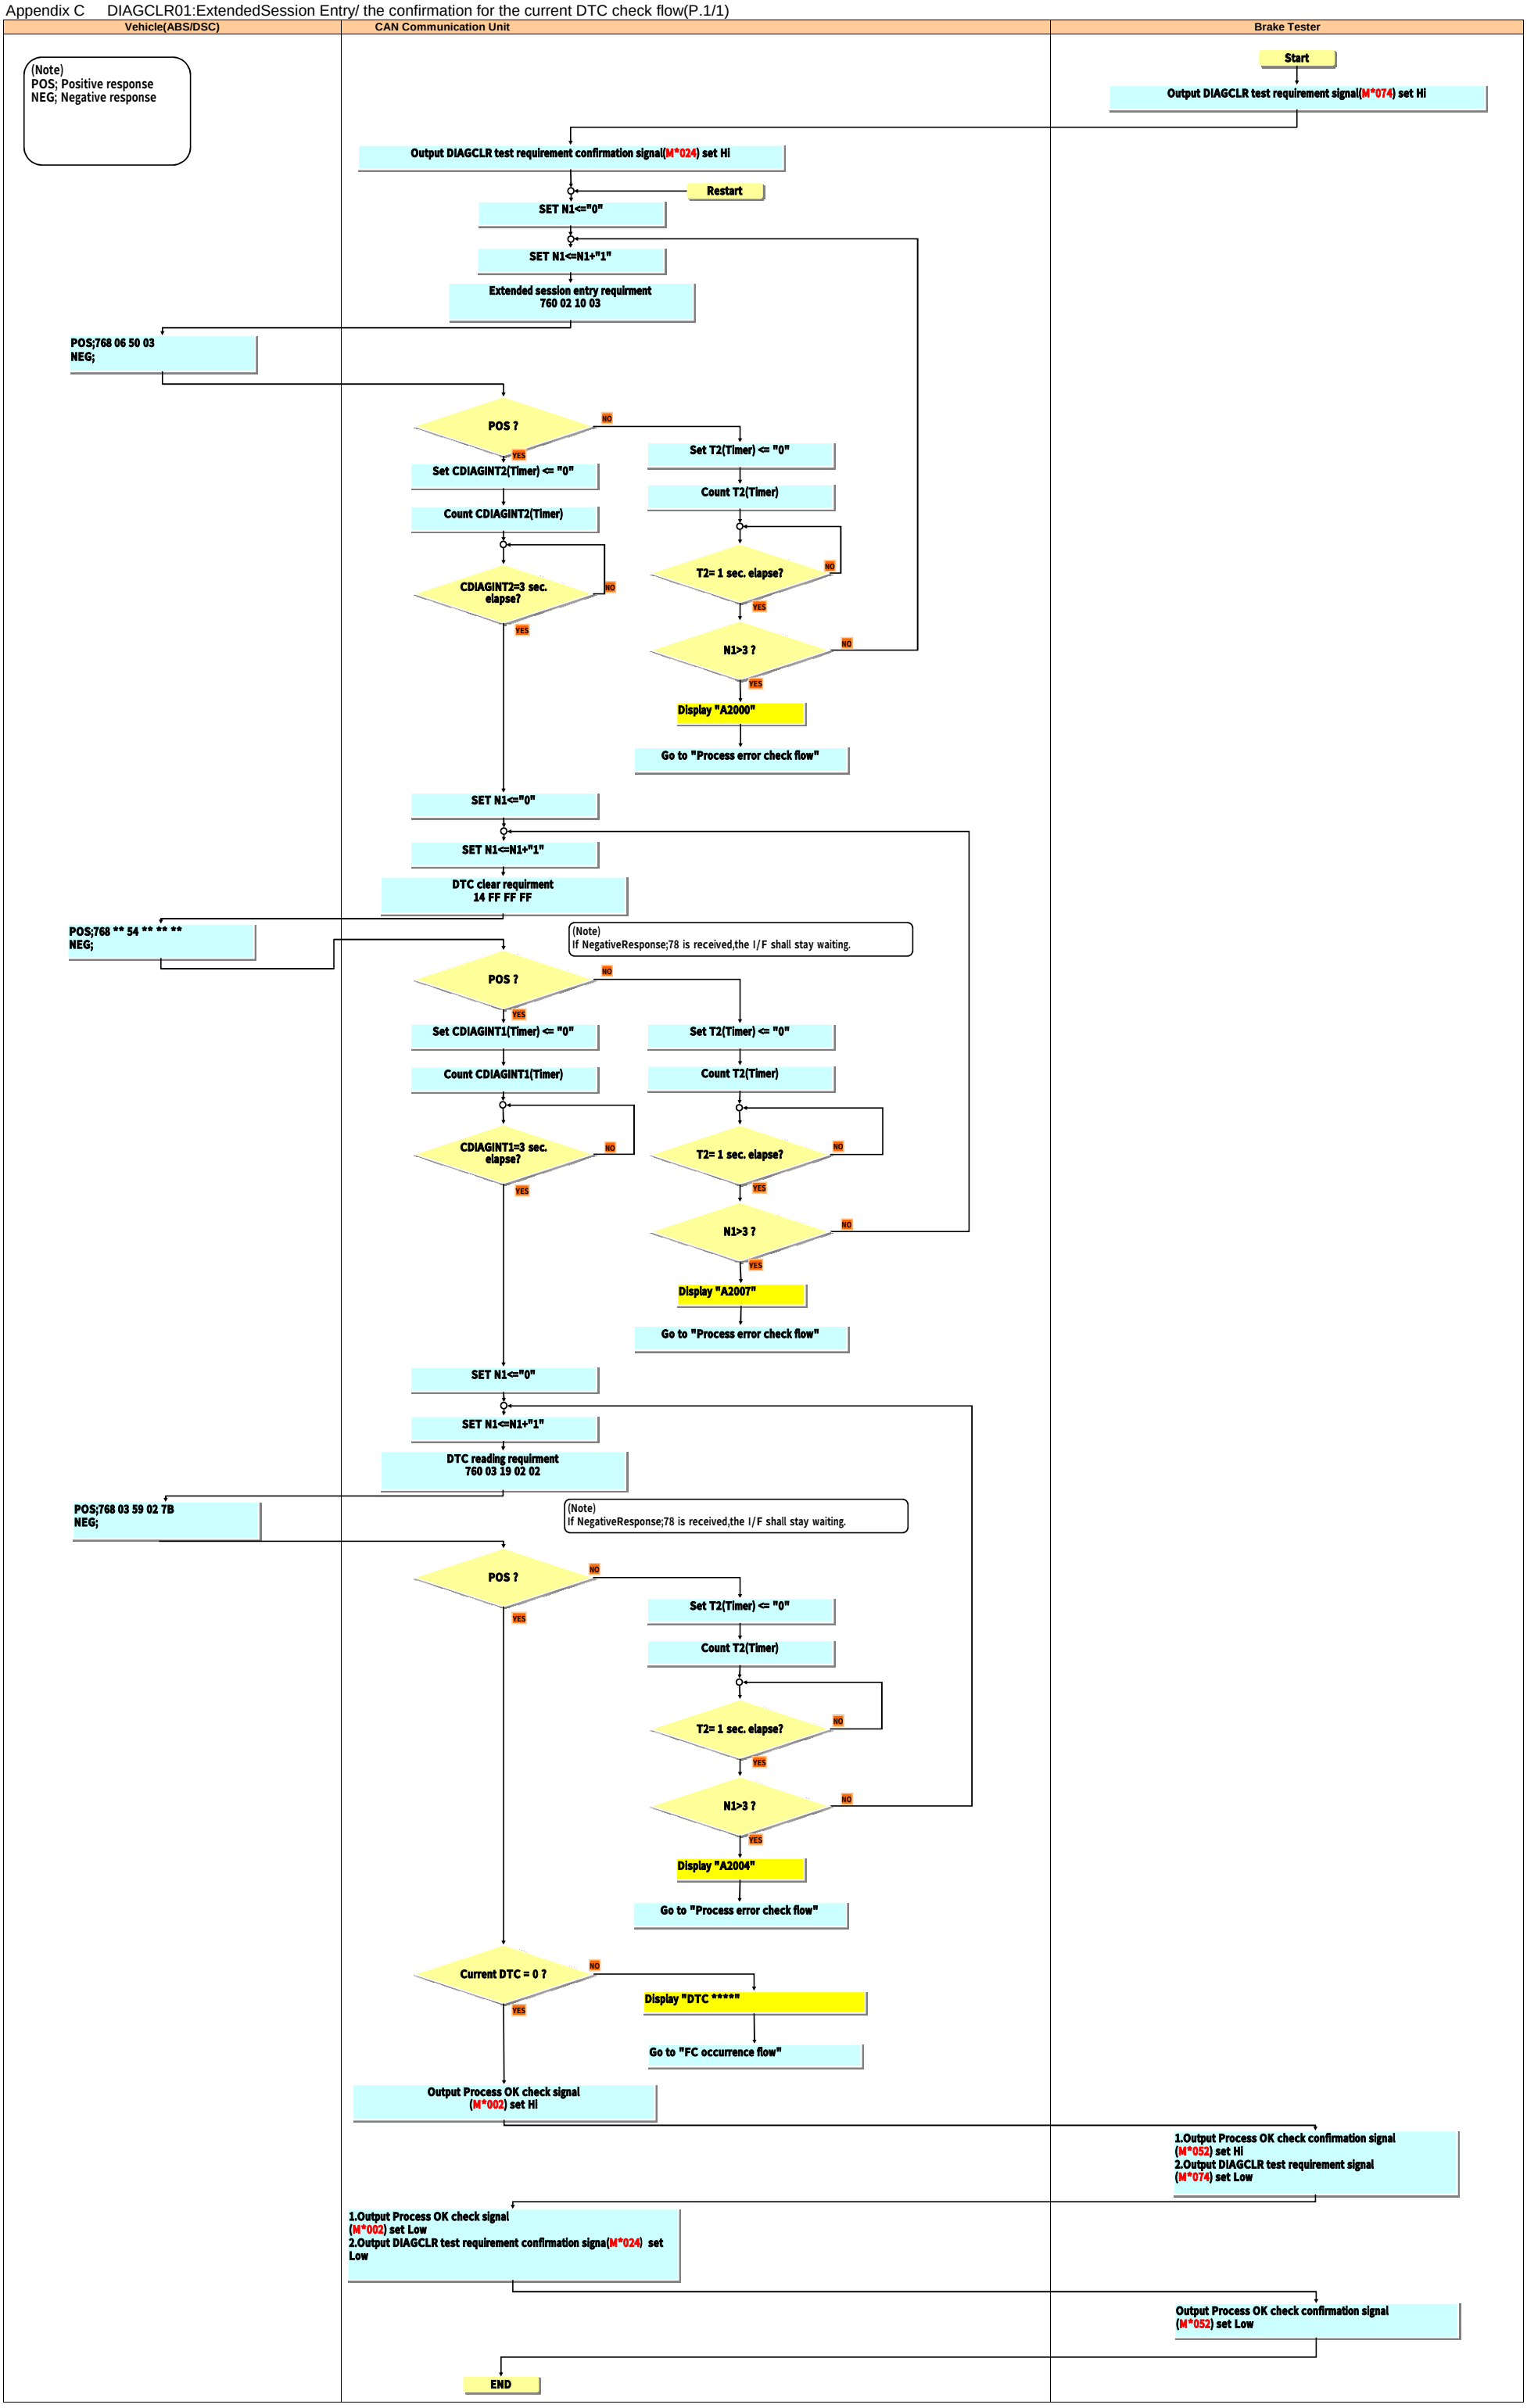

Appendix D BRKCHK01:Brake force test(P.1/3)

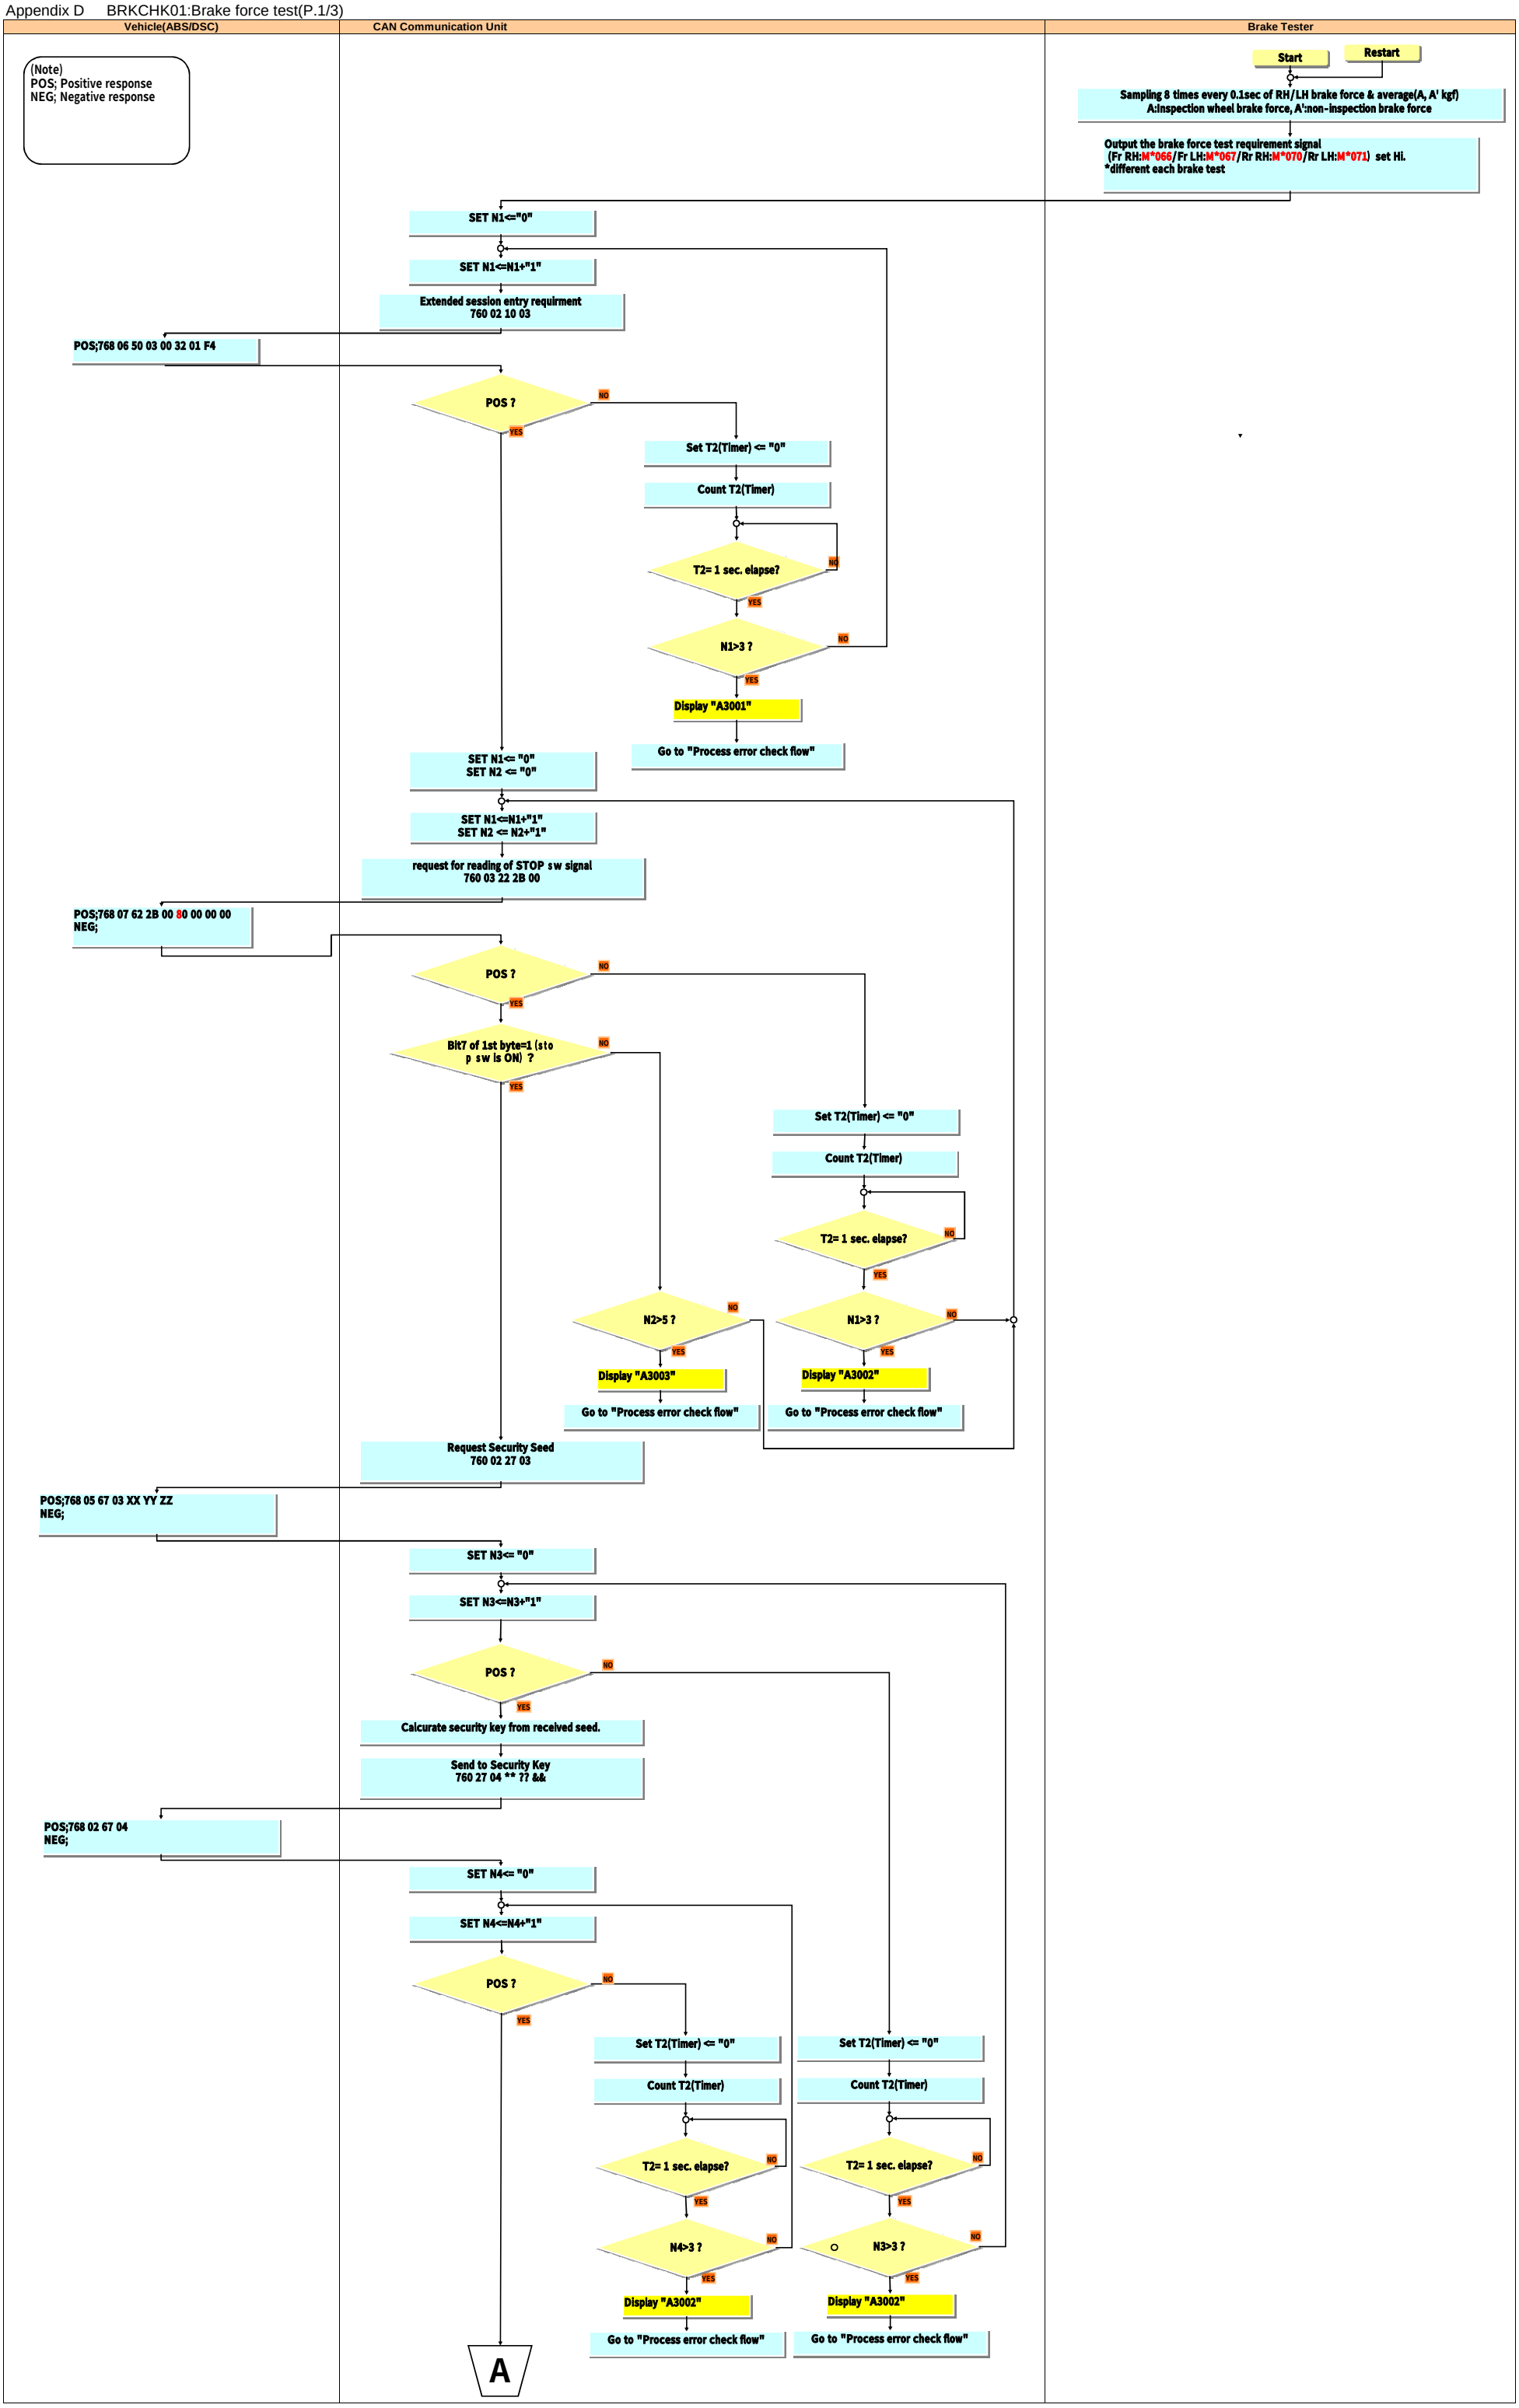

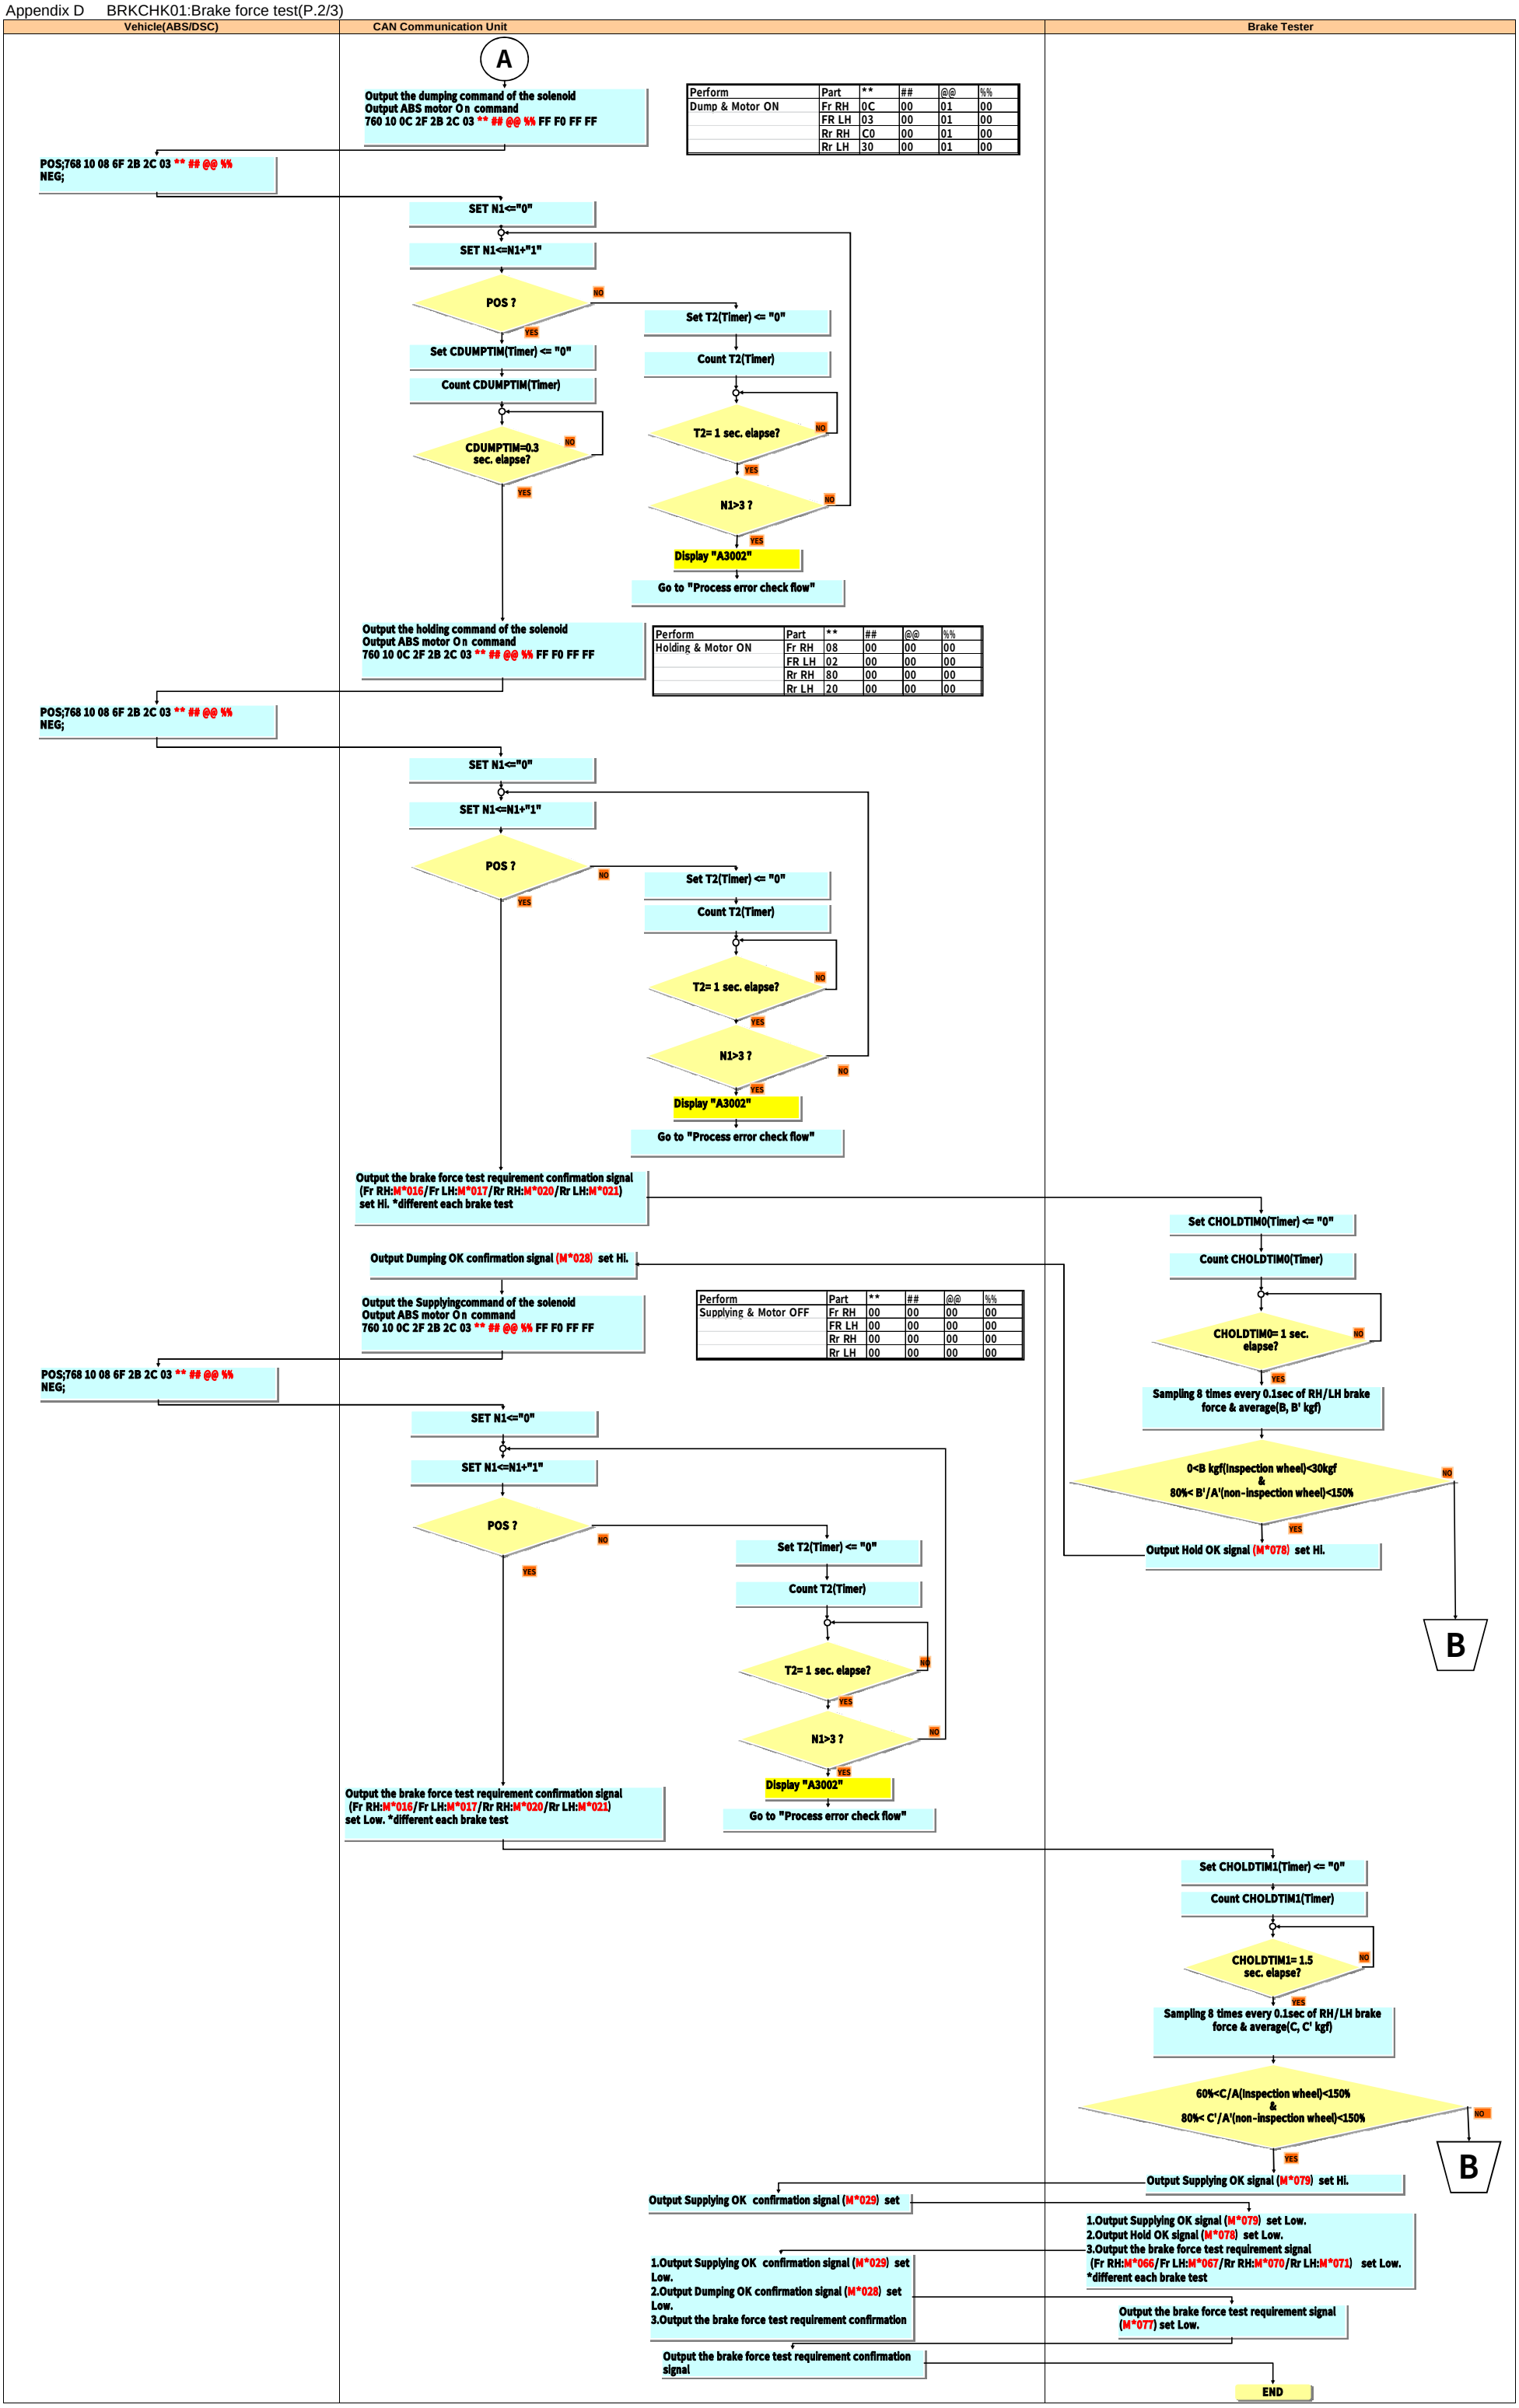
Vehicle(ABS/DSC)
CAN Communication Unit
Brake Tester
A
Output the dumping command of the solenoid
Output ABS motor On command
760 10 0C 2F 2B 2C 03 ** ## @@ %% FF F0 FF FF
Perform | Part | ** | ## | @@ | %%
Dump & Motor ON | Fr RH | 0C | 00 | 01 | 00
FR LH | 03 | 00 | 01 | 00
Rr RH | C0 | 00 | 01 | 00
Rr LH | 30 | 00 | 01 | 00
POS;768 10 08 6F 2B 2C 03 ** ## @@ %%
NEG;
SET N1<="0"
SET N1<=N1+"1"
POS ?
NO
YES
Set T2(Timer) <= "0"
Count T2(Timer)
T2= 1 sec. elapse?
N1>3 ?
Display "A3002"
Go to "Process error check flow"
Set CDUMPTIM(Timer) <= "0"
Count CDUMPTIM(Timer)
CDUMPTIM=0.3 sec. elapse?
Output the holding command of the solenoid
Output ABS motor On command
760 10 0C 2F 2B 2C 03 ** ## @@ %% FF F0 FF FF
Perform | Part | ** | ## | @@ | %%
Holding & Motor ON | Fr RH | 08 | 00 | 00 | 00
FR LH | 02 | 00 | 00 | 00
Rr RH | 80 | 00 | 00 | 00
Rr LH | 20 | 00 | 00 | 00
Output the brake force test requirement confirmation signal
(Fr RH:M*016/Fr LH:M*017/Rr RH:M*020/Rr LH:M*021)
set Hi. *different each brake test
Output Dumping OK confirmation signal (M*028) set Hi.
Output the Supplyingcommand of the solenoid
Output ABS motor On command
760 10 0C 2F 2B 2C 03 ** ## @@ %% FF F0 FF FF
Perform | Part | ** | ## | @@ | %%
Supplying & Motor OFF | Fr RH | 00 | 00 | 00 | 00
FR LH | 00 | 00 | 00 | 00
Rr RH | 00 | 00 | 00 | 00
Rr LH | 00 | 00 | 00 | 00
Output the brake force test requirement confirmation signal
(Fr RH:M*016/Fr LH:M*017/Rr RH:M*020/Rr LH:M*021)
set Low. *different each brake test
Set CHOLDTIM0(Timer) <= "0"
Count CHOLDTIM0(Timer)
CHOLDTIM0= 1 sec. elapse?
Sampling 8 times every 0.1sec of RH/LH brake force & average(B, B' kgf)
0<B kgf(Inspection wheel)<30kgf
&
80%< B'/A'(non-inspection wheel)<150%
Output Hold OK signal (M*078) set Hi.
B
Set CHOLDTIM1(Timer) <= "0"
Count CHOLDTIM1(Timer)
CHOLDTIM1= 1.5 sec. elapse?
Sampling 8 times every 0.1sec of RH/LH brake force & average(C, C' kgf)
60%<C/A(Inspection wheel)<150%
&
80%< C'/A'(non-inspection wheel)<150%
Output Supplying OK signal (M*079) set Hi.
B
Output Supplying OK confirmation signal (M*029) set
1.Output Supplying OK signal (M*079) set Low.
2.Output Hold OK signal (M*078) set Low.
3.Output the brake force test requirement signal
(Fr RH:M*066/Fr LH:M*067/Rr RH:M*070/Rr LH:M*071) set Low.
*different each brake test
1.Output Supplying OK confirmation signal (M*029) set Low.
2.Output Dumping OK confirmation signal (M*028) set Low.
3.Output the brake force test requirement confirmation
Output the brake force test requirement signal (M*077) set Low.
Output the brake force test requirement confirmation signal
END

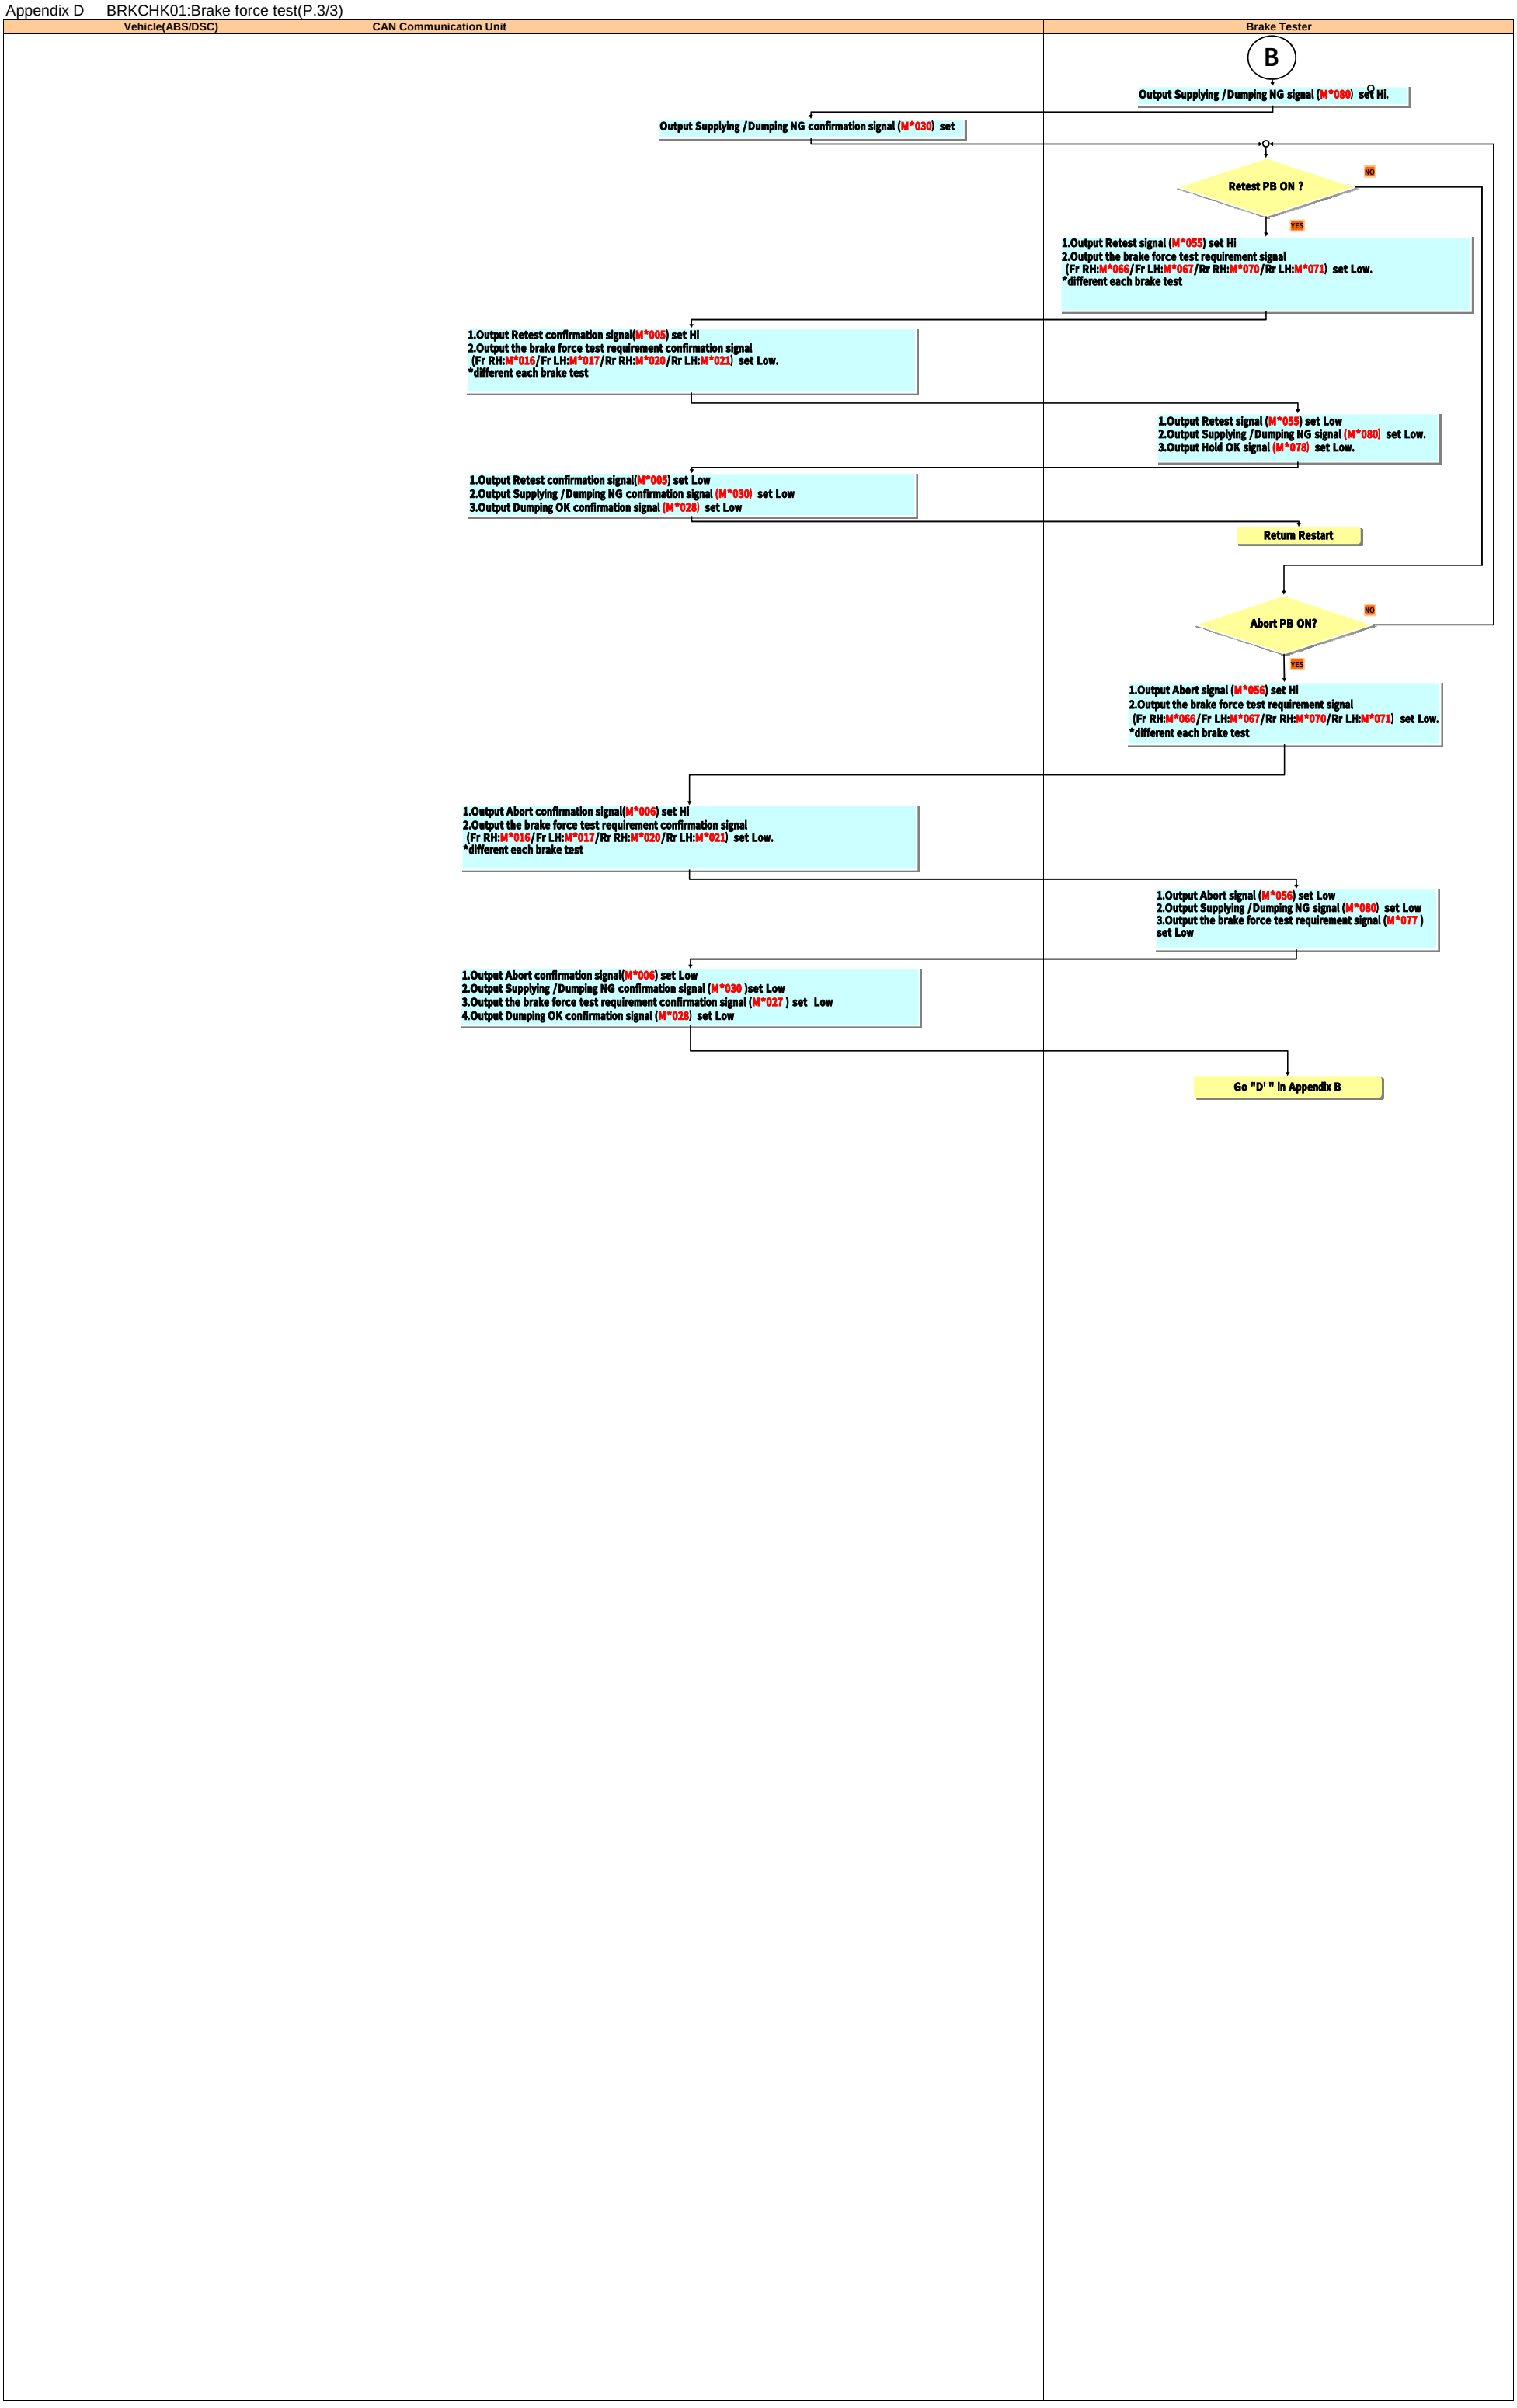
Vehicle(ABS/DSC)
CAN Communication Unit
Brake Tester
B
Output Supplying /Dumping NG signal (M*080) set Hi.
Output Supplying /Dumping NG confirmation signal (M*030) set
Retest PB ON ?
NO
YES
1.Output Retest signal (M*055) set Hi
2.Output the brake force test requirement signal
(Fr RH:M*066/Fr LH:M*067/Rr RH:M*070/Rr LH:M*071) set Low.
*different each brake test
1.Output Retest confirmation signal(M*005) set Hi
2.Output the brake force test requirement confirmation signal
(Fr RH:M*016/Fr LH:M*017/Rr RH:M*020/Rr LH:M*021) set Low.
*different each brake test
1.Output Retest signal (M*055) set Low
2.Output Supplying /Dumping NG signal (M*080) set Low.
3.Output Hold OK signal (M*078) set Low.
1.Output Retest confirmation signal(M*005) set Low
2.Output Supplying /Dumping NG confirmation signal (M*030) set Low
3.Output Dumping OK confirmation signal (M*028) set Low
Return Restart
Abort PB ON?
NO
YES
1.Output Abort signal (M*056) set Hi
2.Output the brake force test requirement signal
(Fr RH:M*066/Fr LH:M*067/Rr RH:M*070/Rr LH:M*071) set Low.
*different each brake test
1.Output Abort confirmation signal(M*006) set Hi
2.Output the brake force test requirement confirmation signal
(Fr RH:M*016/Fr LH:M*017/Rr RH:M*020/Rr LH:M*021) set Low.
*different each brake test
1.Output Abort signal (M*056) set Low
2.Output Supplying /Dumping NG signal (M*080) set Low
3.Output the brake force test requirement signal (M*077)
set Low
1.Output Abort confirmation signal(M*006) set Low
2.Output Supplying /Dumping NG confirmation signal (M*030)set Low
3.Output the brake force test requirement confirmation signal (M*027) set Low
4.Output Dumping OK confirmation signal (M*028) set Low
Go "D' " in Appendix B

Appendix E SPCHK01:Wheel speed sensor test

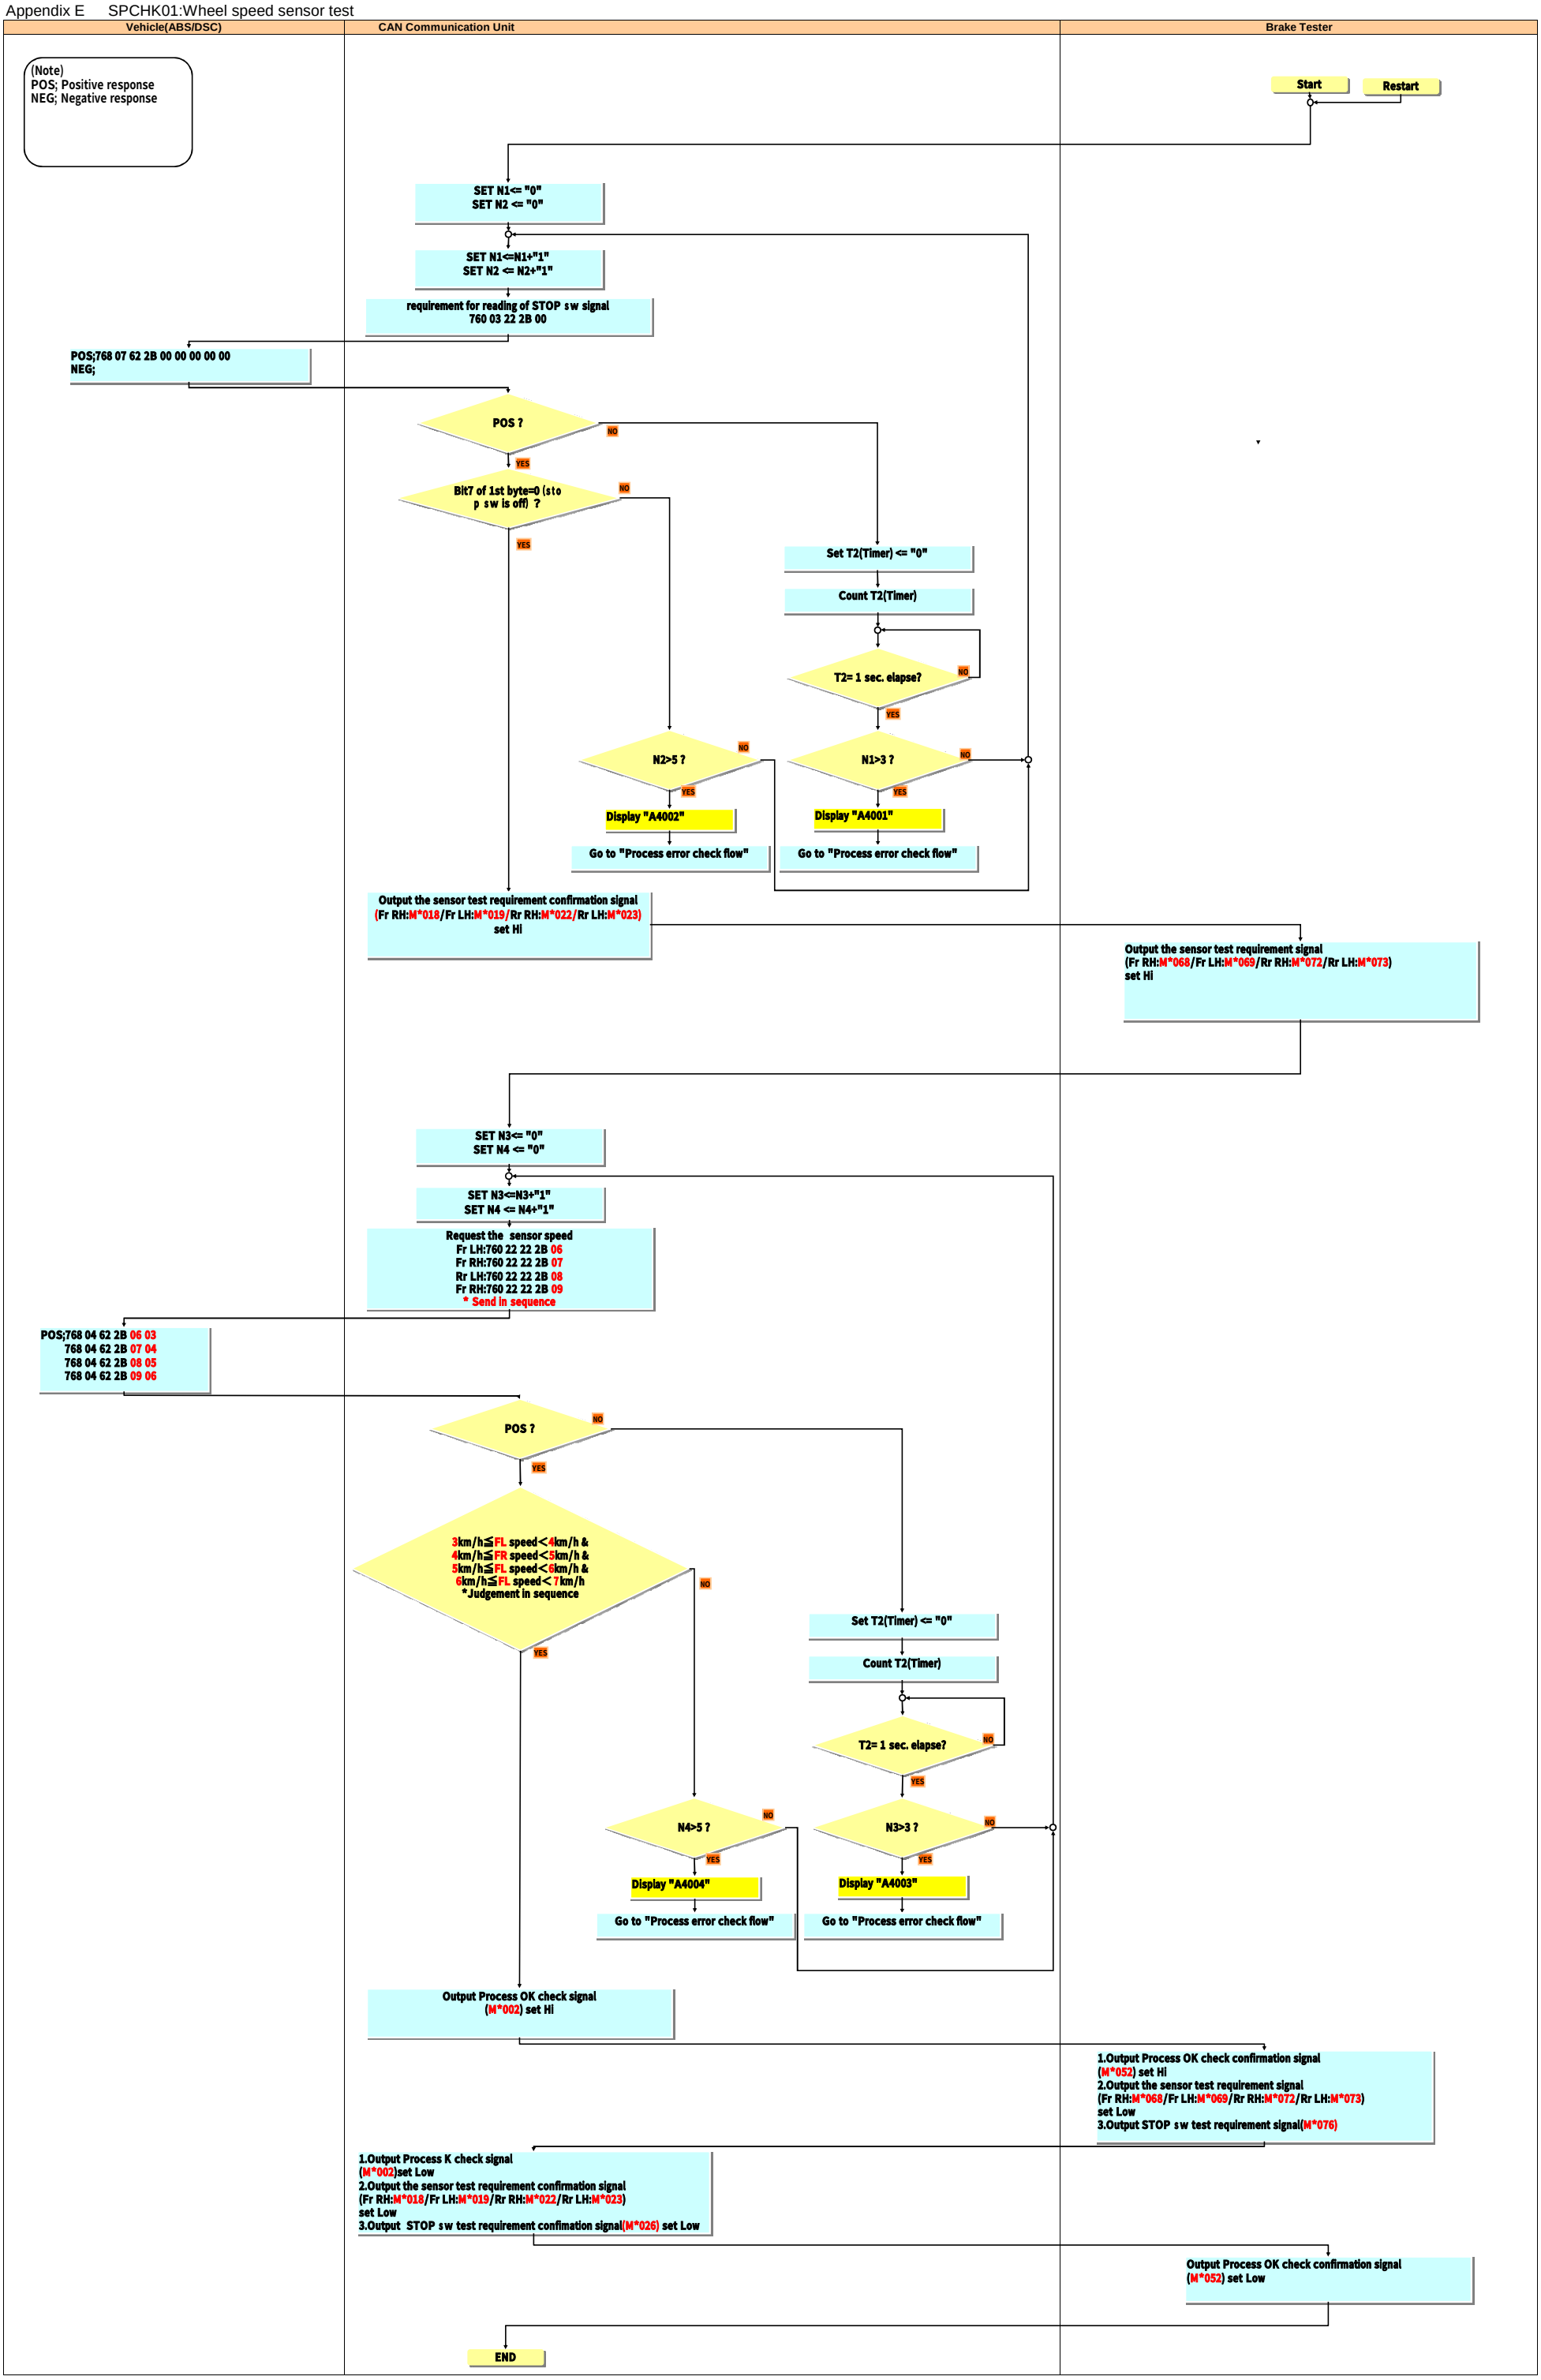

Appendix F FCCHK01:FC memory test(P.1/2)

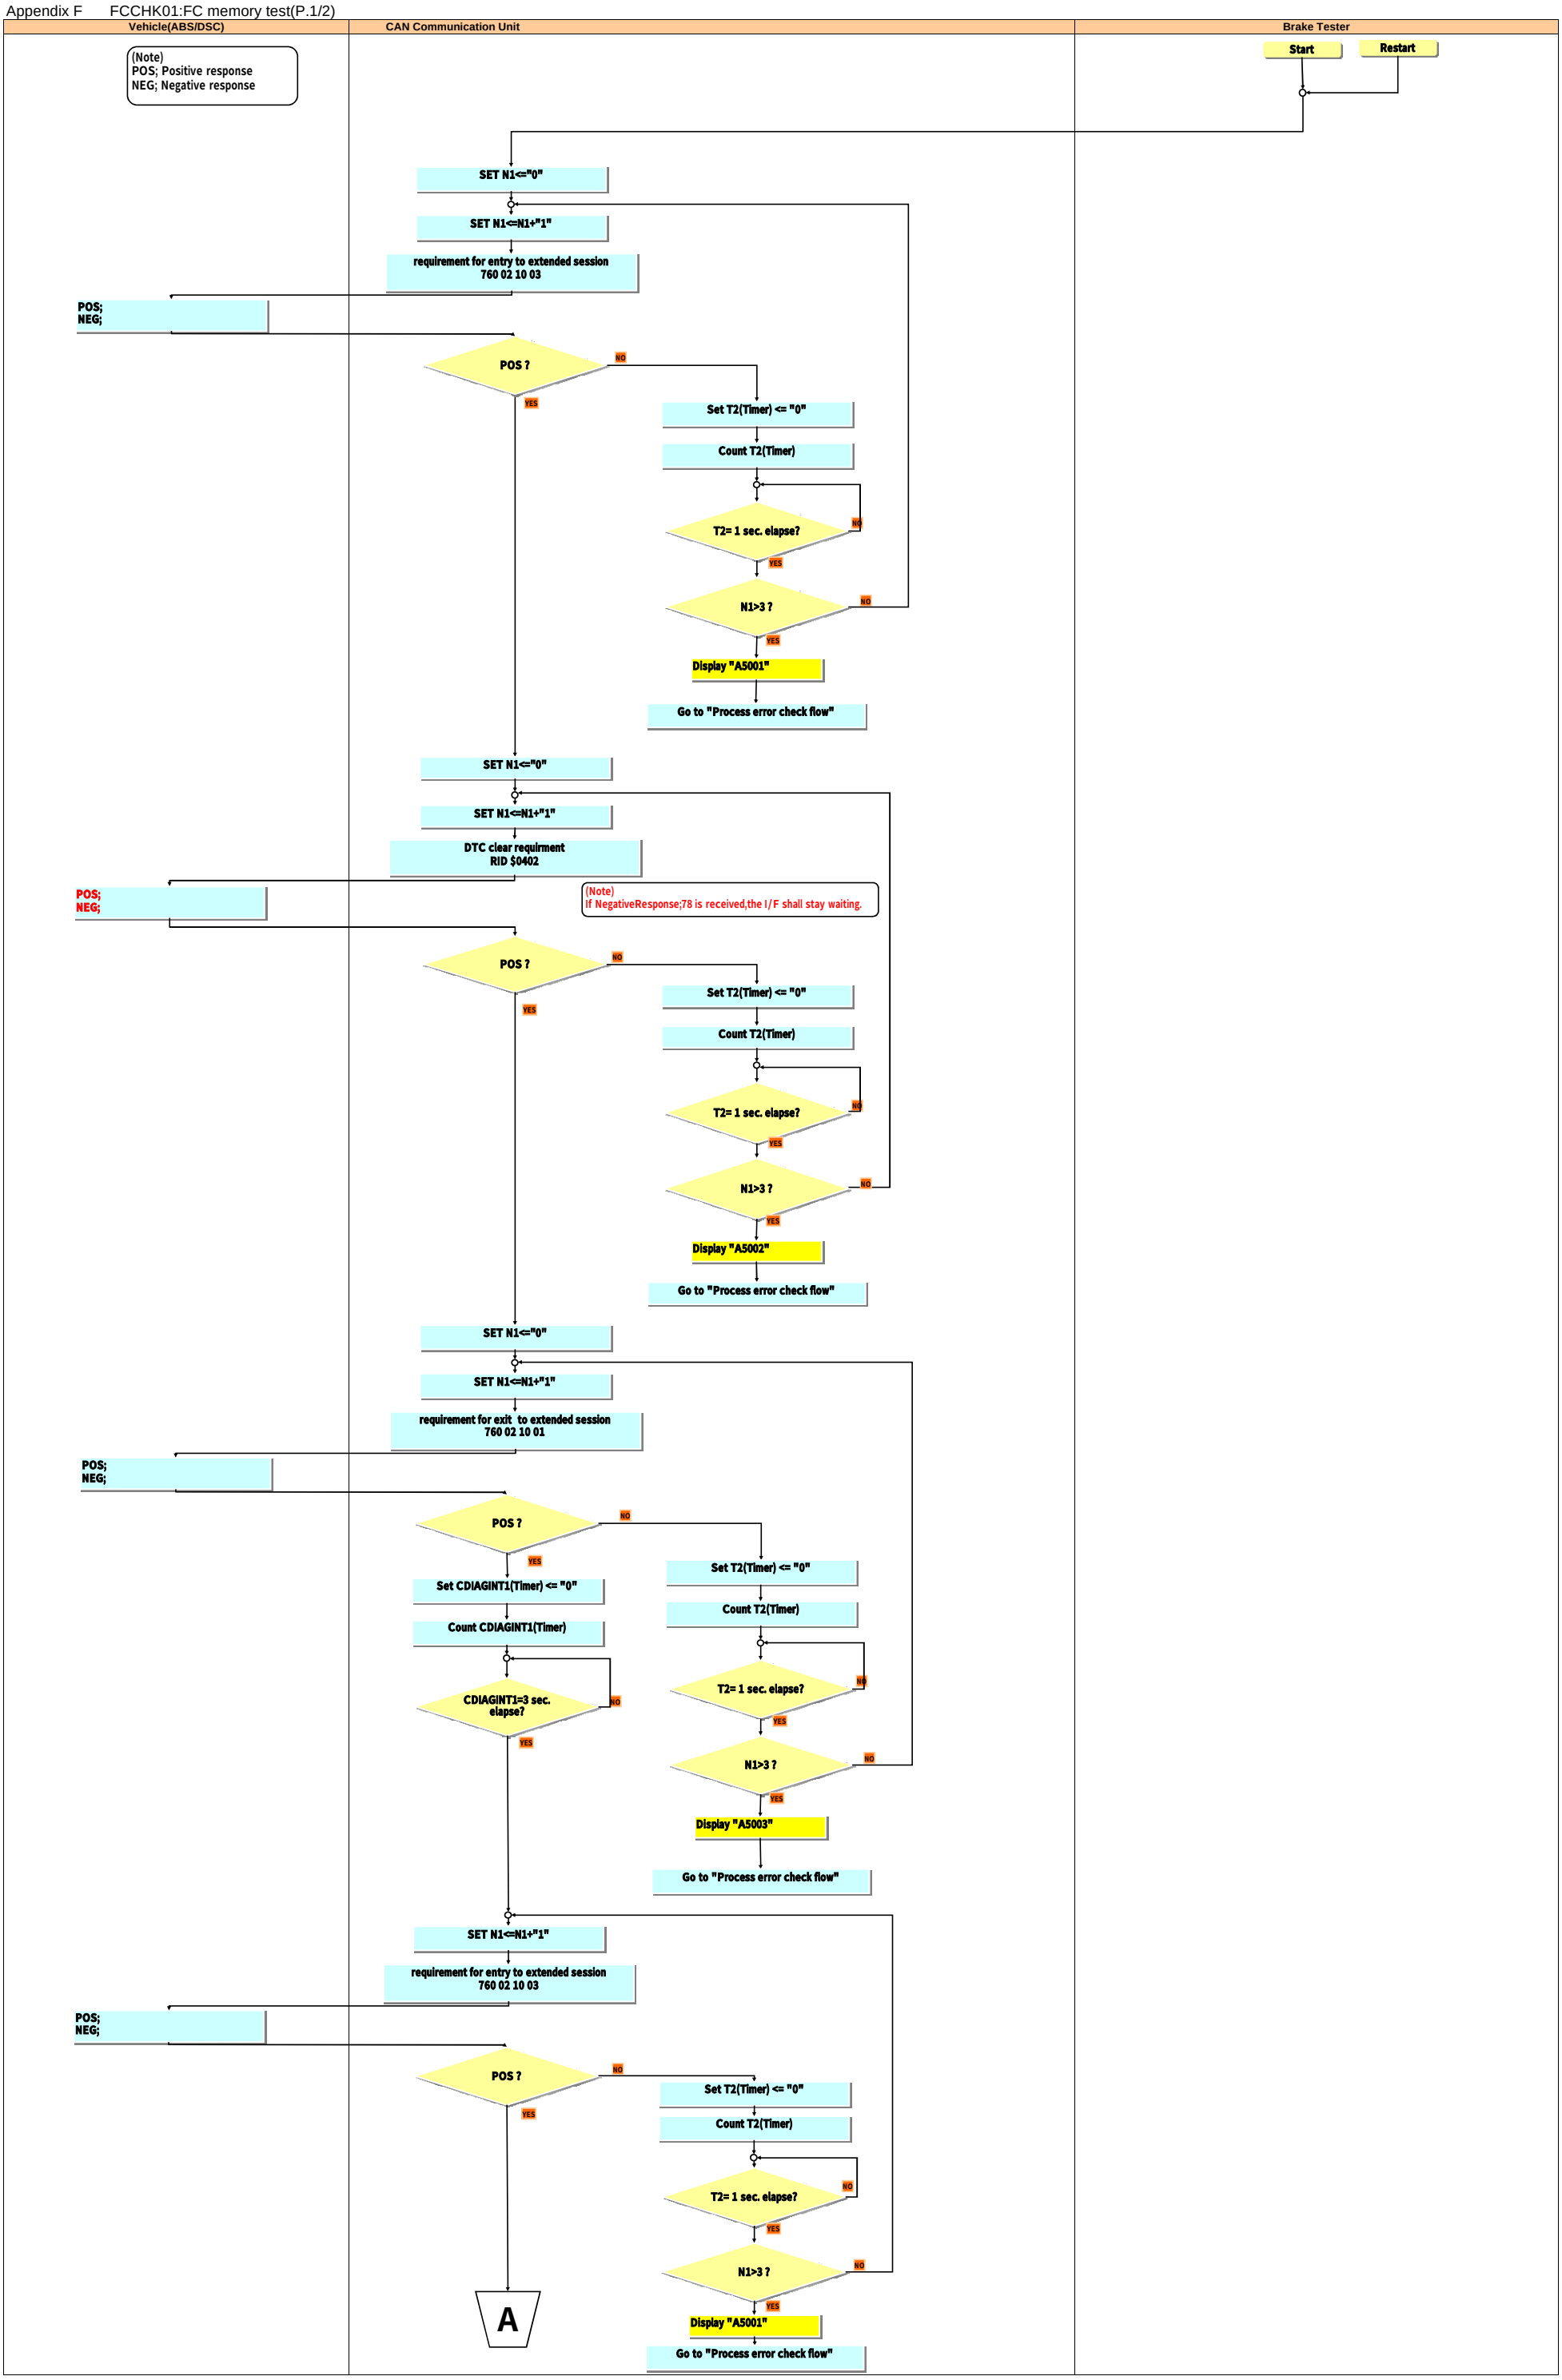

Appendix F FCCHK01:FC memory test(P.2/2)

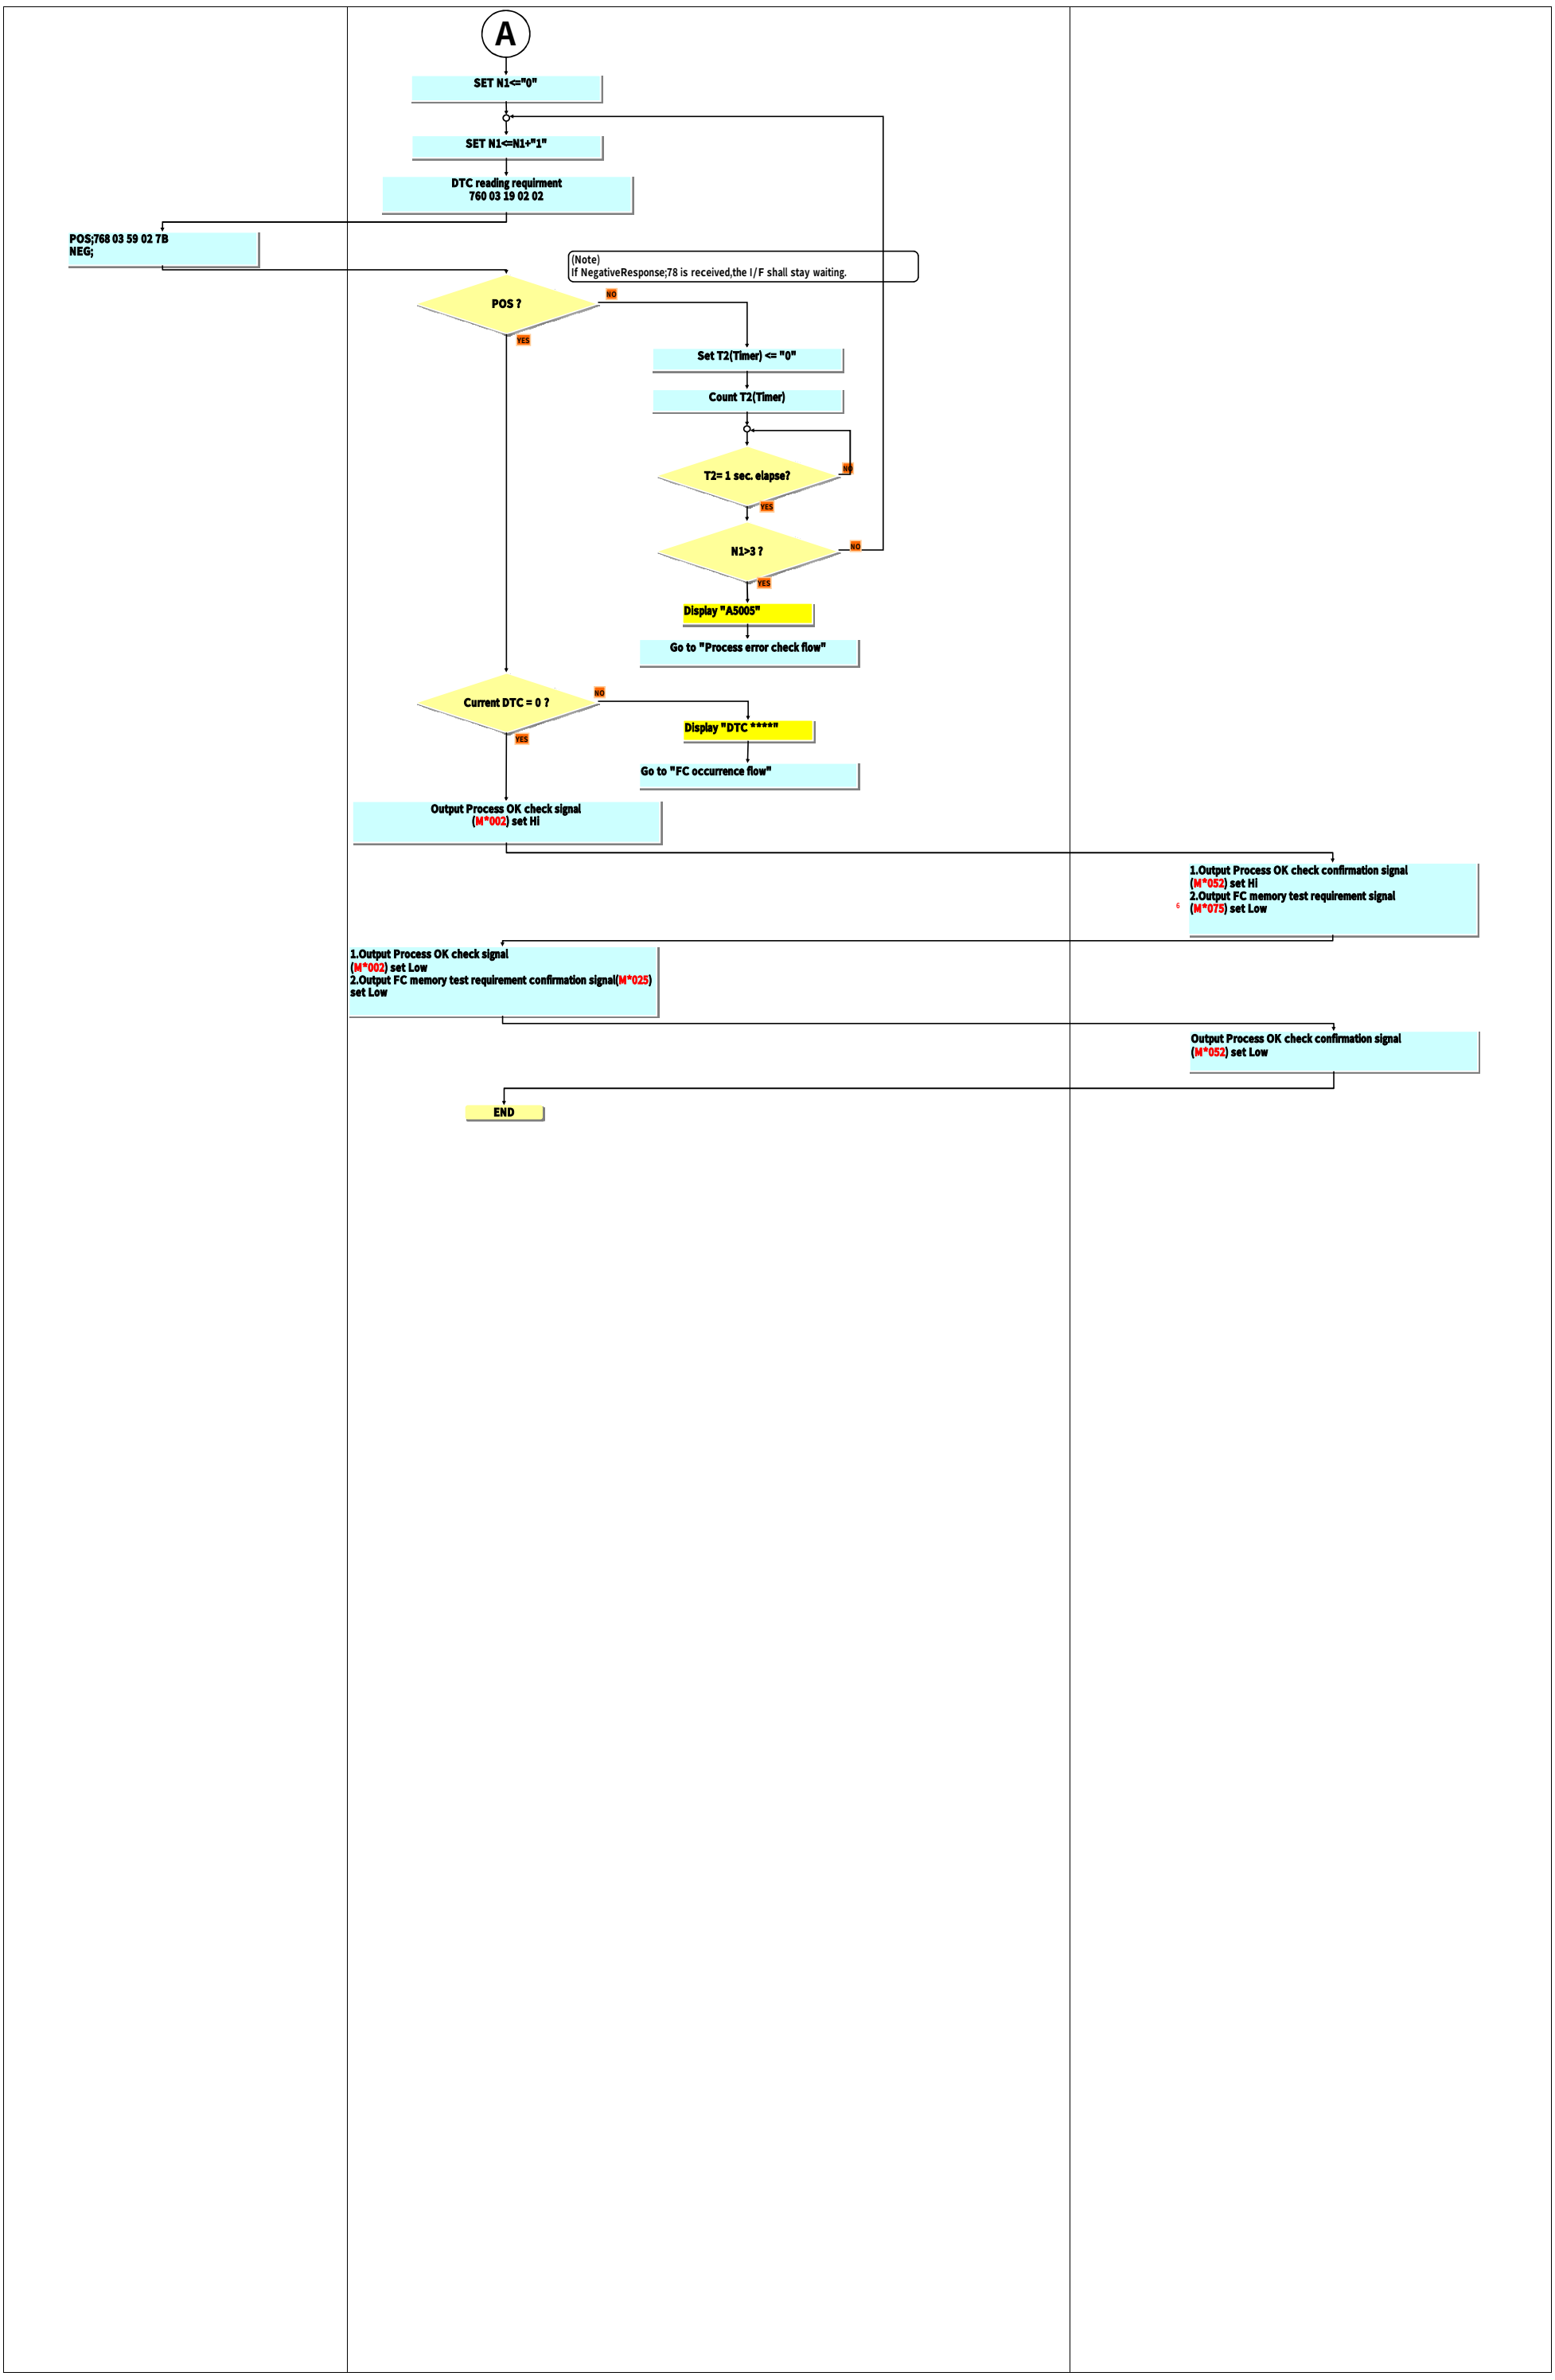

Appendix G Process error check flow(P.1/1)

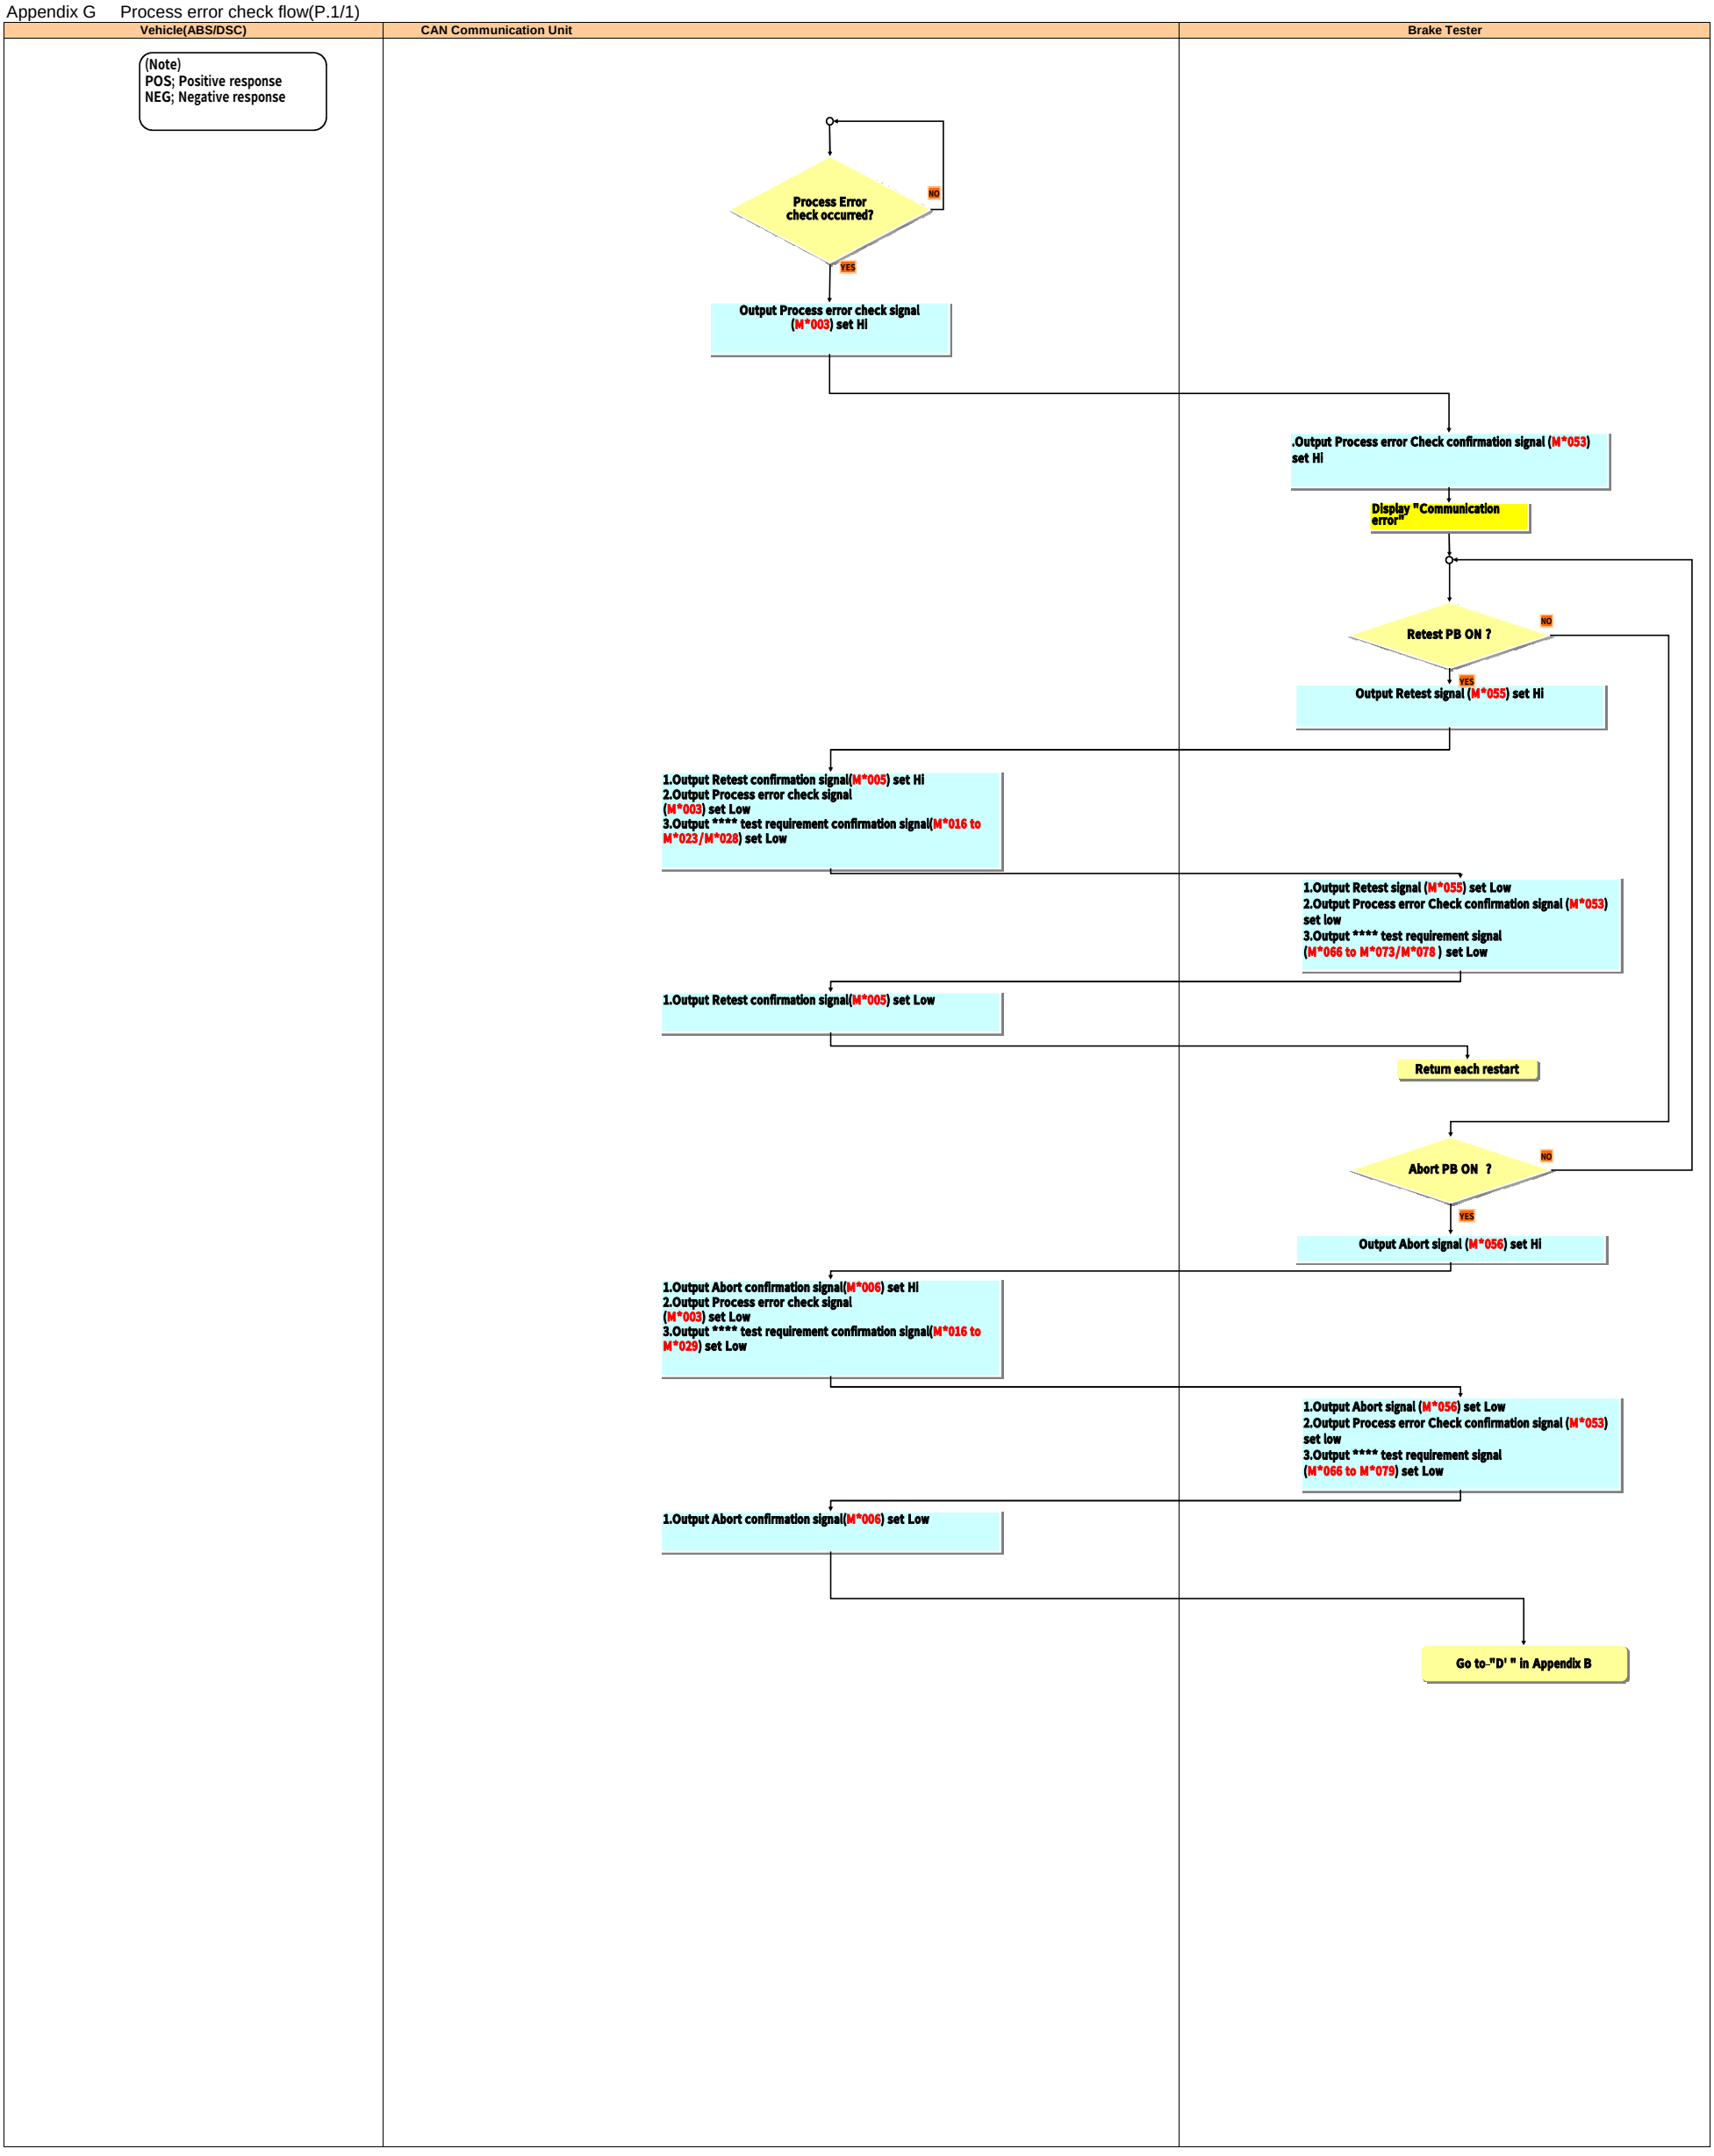

Appendix H FC occurrence flow(P.1/1)

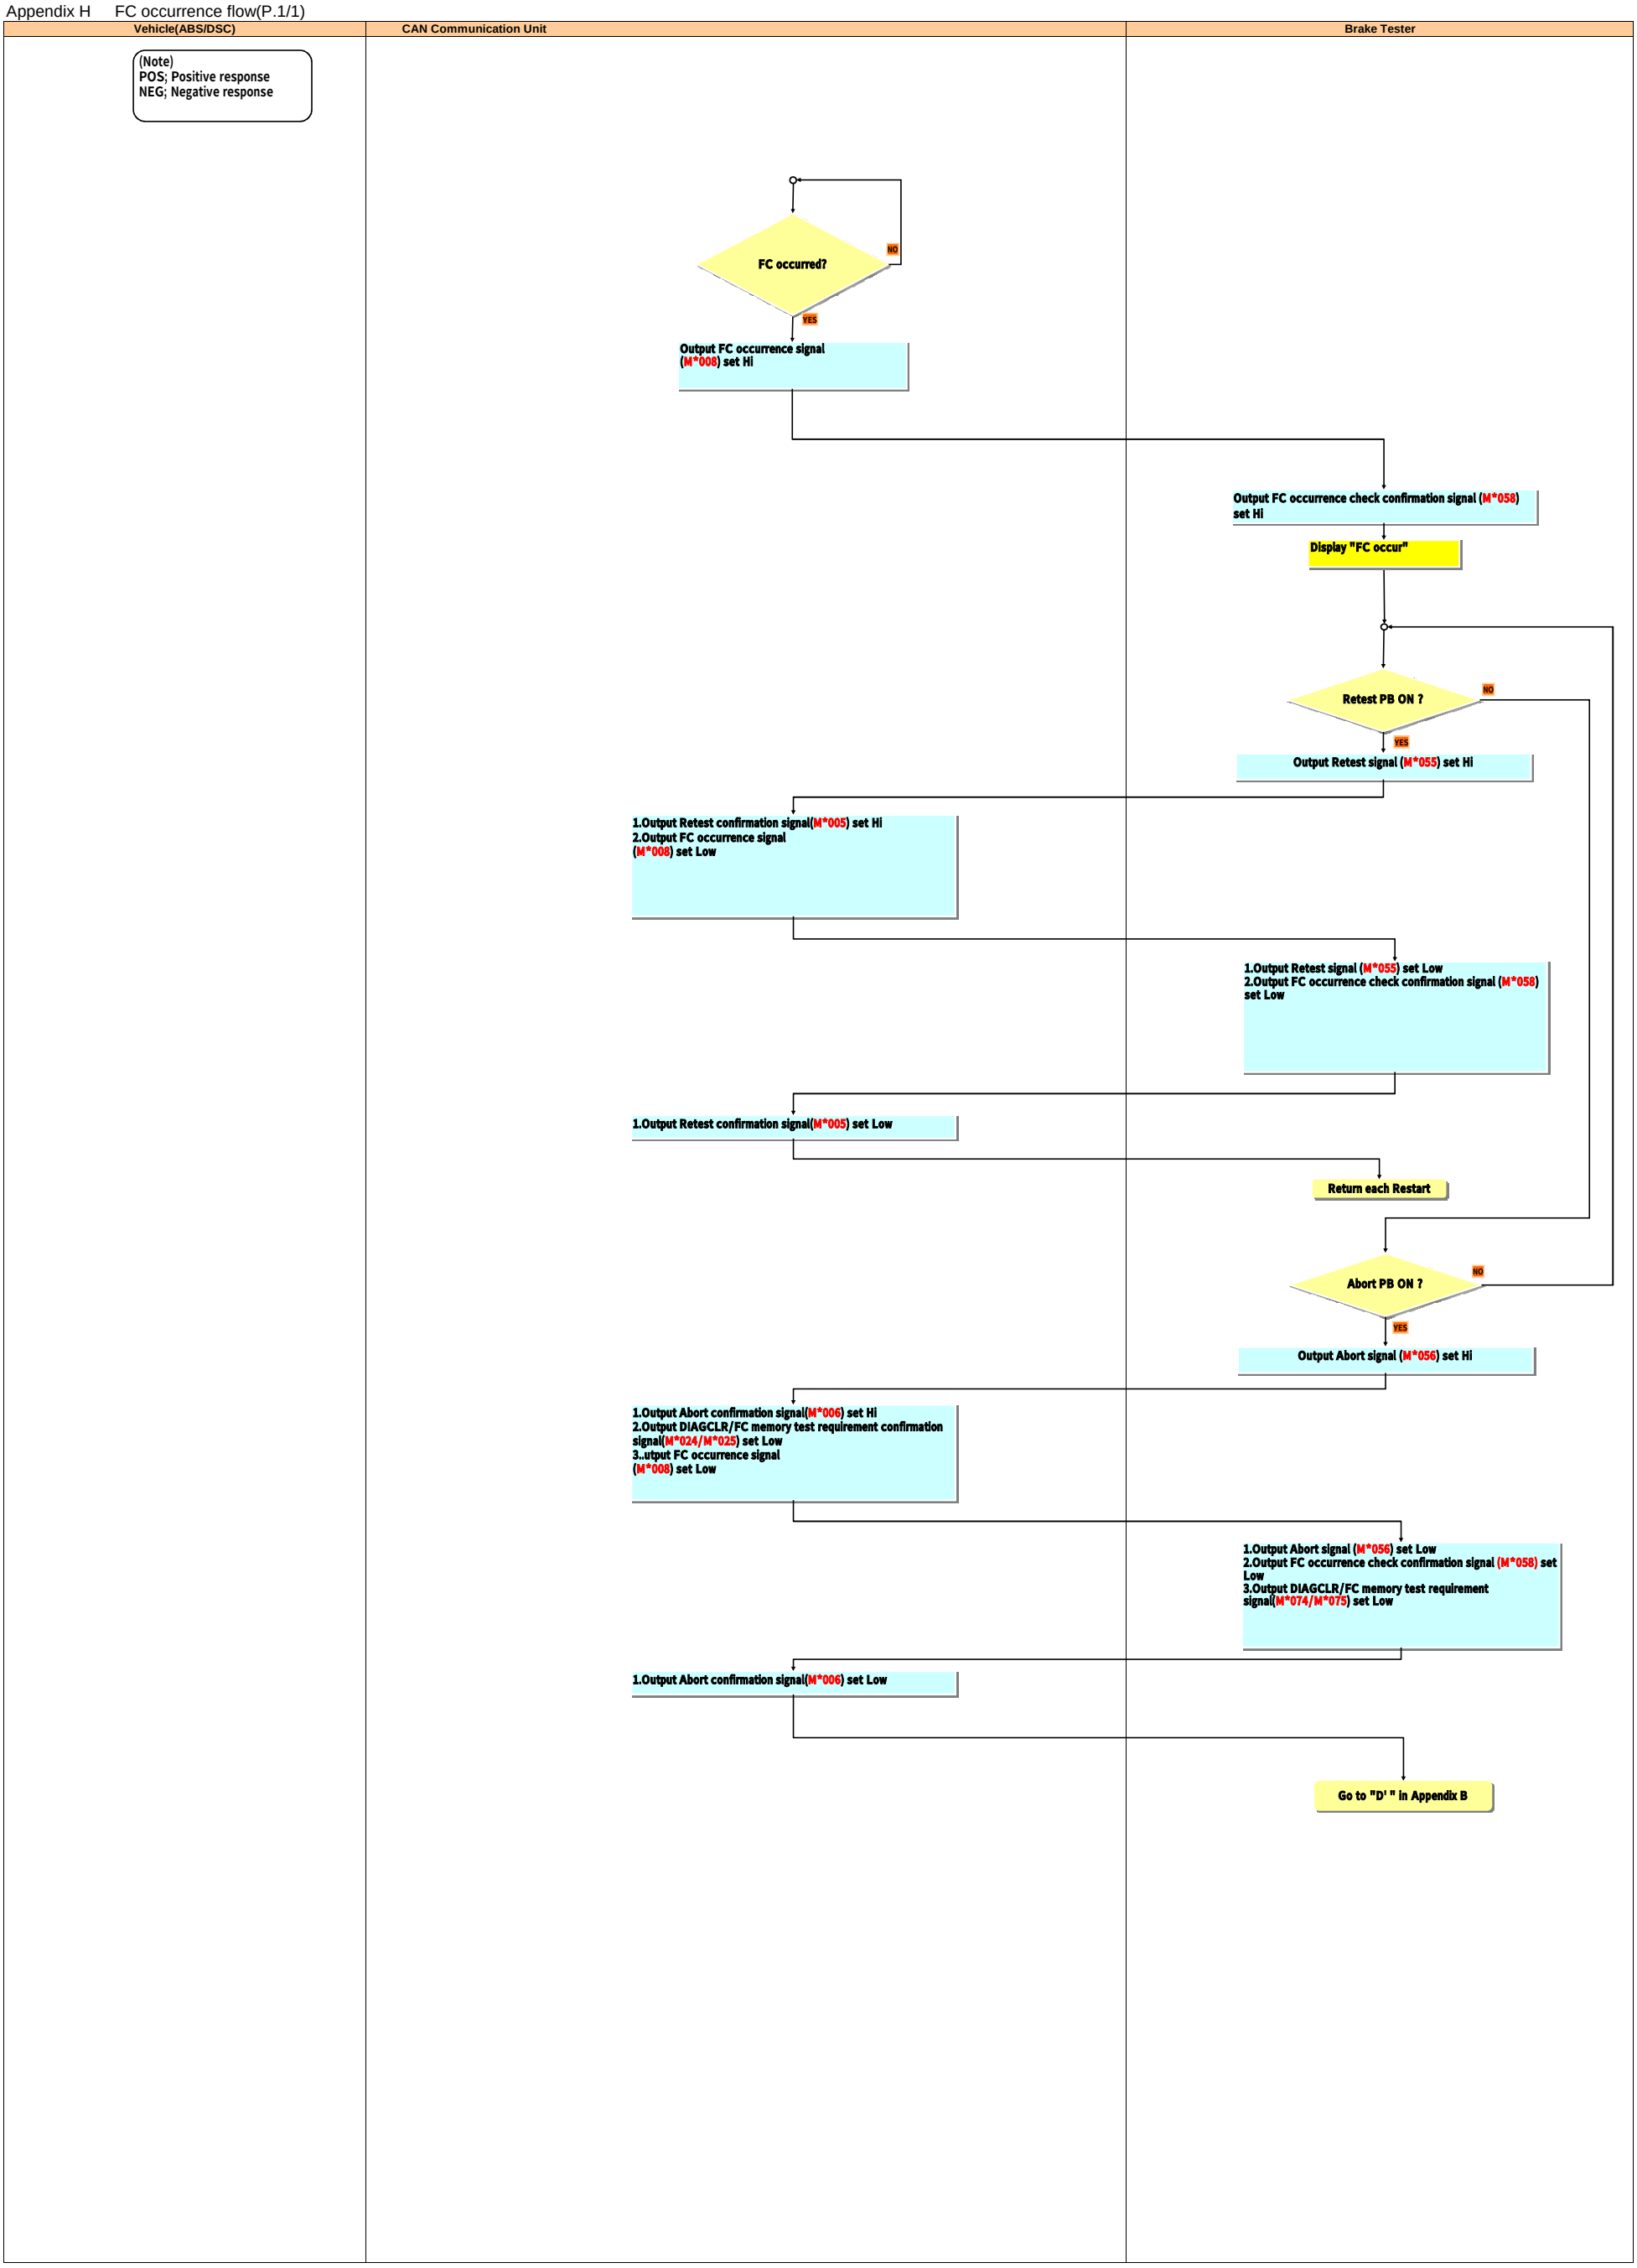

Appendix I Coupler Signal/Tester presence(P.1/1)

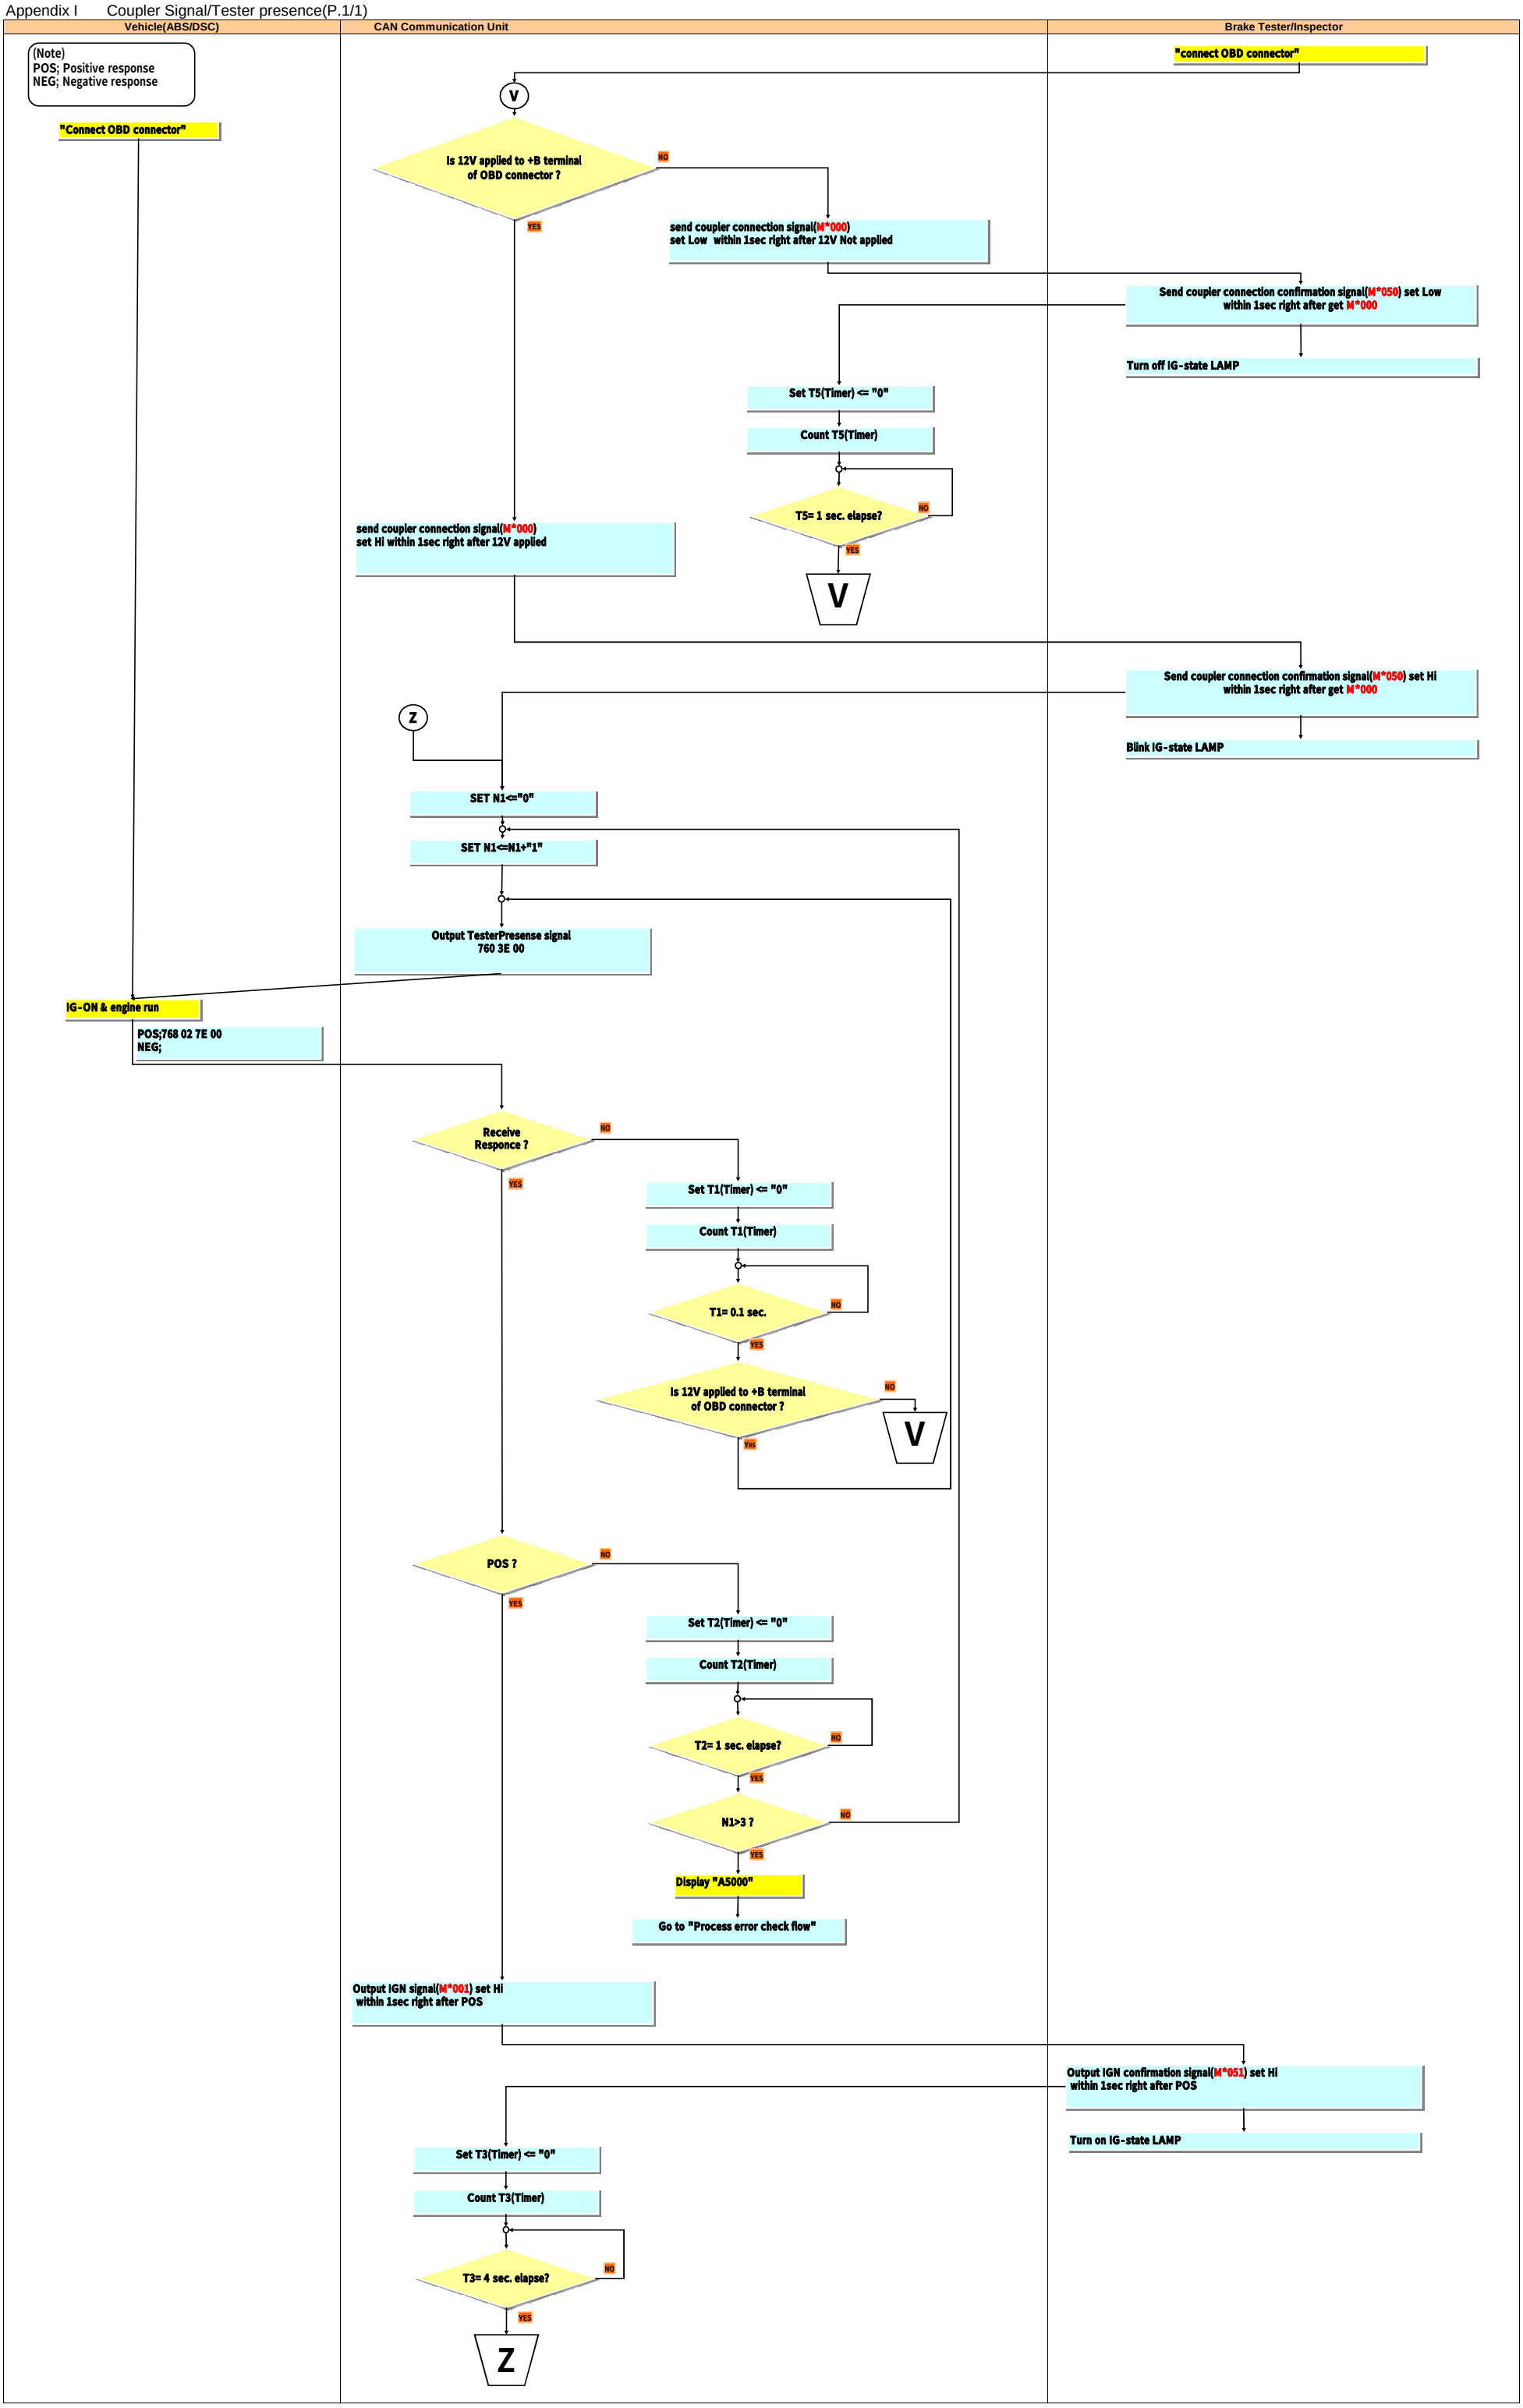

Perform	Part	**	##	@@	%%
Dump & Motor ON	Fr RH	0C	00	01	00
	FR LH	03	00	01	00
	Rr RH	C0	00	01	00
	Rr LH	30	00	01	00

Perform	Part	**	##	@@	%%
Holding & Motor ON	Fr RH	08	00	00	00
	FR LH	02	00	00	00
	Rr RH	80	00	00	00
	Rr LH	20	00	00	00

Perform	Part	**	##	@@	%%
Supplying & Motor OFF	Fr RH	00	00	00	00
	FR LH	00	00	00	00
	Rr RH	00	00	00	00
	Rr LH	00	00	00	00