


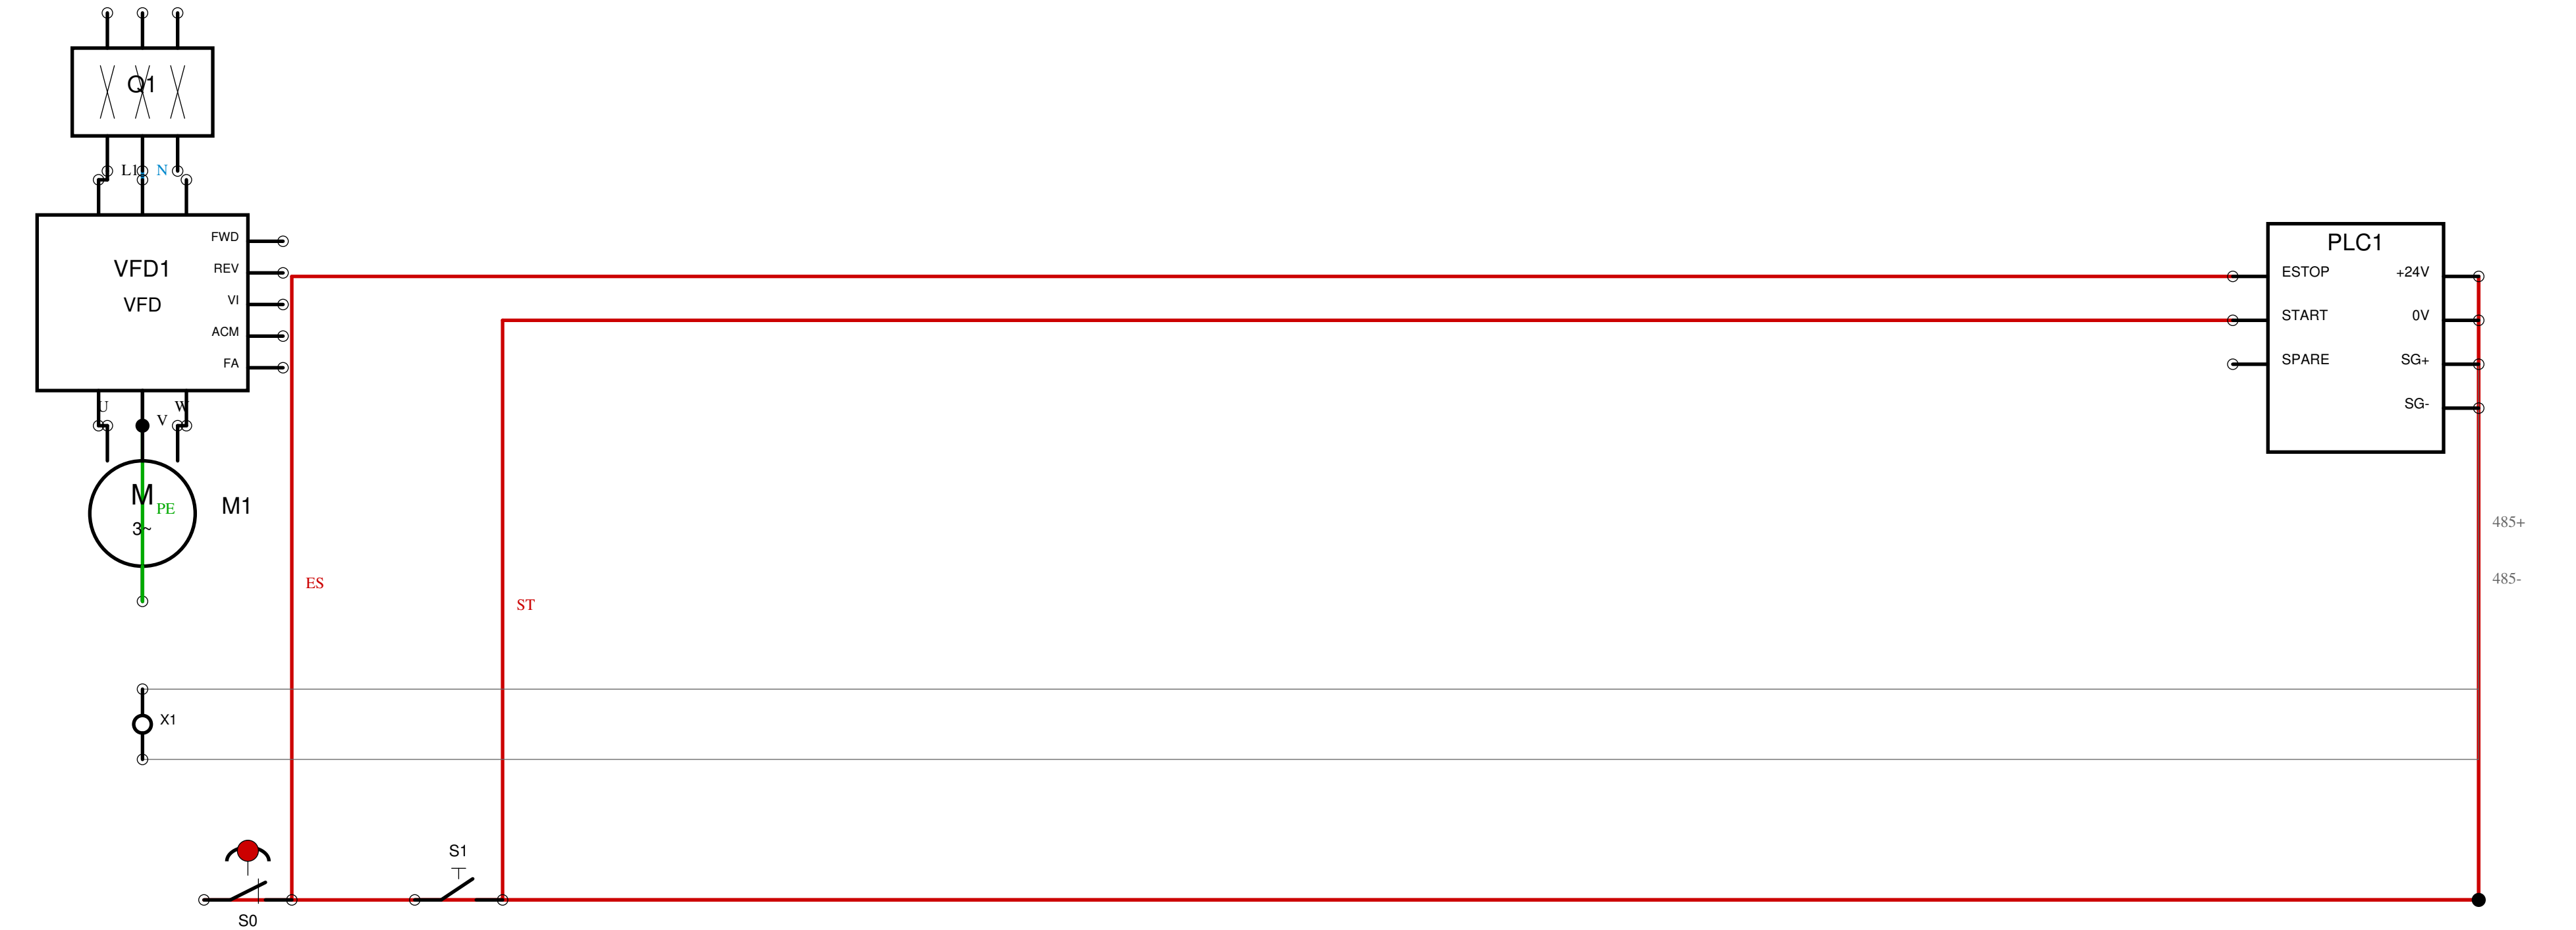

- Notes:**
1. Bench: Allen-Bradley Micro820 PLC + AutomationDirect GS10 (DURApulse) VFD driving a conveyor motor.
 2. GS10 commanded by Modbus RTU (RS-485) on Micro820 serial Ch2; Addr = wire# + 1; RS-485 lands on GS10 RJ12 (SG+/SG-).
 3. 24 VDC control supply (PSU from 120 VAC) powers the Micro820 and the E-Stop / Start input loop.
 4. Incoming 120 VAC 1-ph (L1/N, off-sheet) lands on main breaker Q1; motor driven 3-ph from GS10 U/V/W.
 5. SAFETY: E-Stop shown as a monitored PLC input only - a software stop is NOT a safety function.
 6. SAFETY: A compliant install MUST also hardwire E-Stop to remove drive power (NFPA 79 / EN 60204-1, stop cat 0/1).
 7. De-energize + LOTO before wiring. Bench/developer setup - not a customer-shipped architecture; read-only.

control earth neutral power signal

Conv_Simple Workbench — Control Wiring

FLM-WD-CONV-SIMPLE Rev A | NEMA | 2026-07-03

MIRA / FactoryLM