
Precharge v1.1 Pinout & test-points

HV IN => Accumulator + HV OUT => TS +

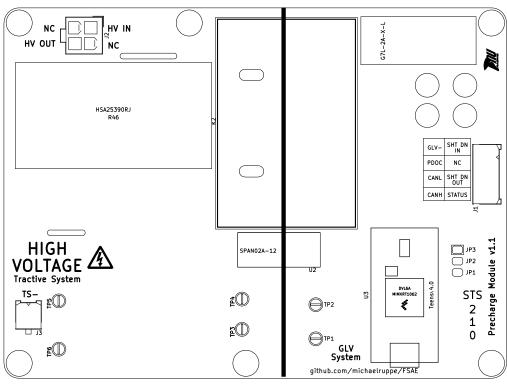

TS - => TS -

GLV- => Negative GLV connection SHT DN IN => Shutdown circuit (12V) in PDOC => PDOC OK output signal (high-side) SHT DN OUT => To AIR+

CANH+CANL => CAN interface