
Electrochemical Impedance Spectroscopy for Corrosion

M. Skocic, PhD Electrochemistry and Materials

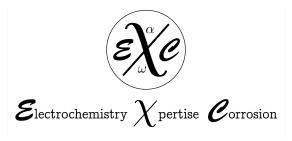

Contents

Introduction

Basics

What is EIS?

Visualization

Connections

Equivalent Circuits

Physical Parameters

Examples

Applications

Conductivity

Conclusion

Introduction

There are 2 categories of electrochemical techniques: time domain and frequency domain [1].

Time domain:

- ▶ Voltammetry: I = f(U).
- ▶ Chronoamperometry: ΔU , I(t).
- ▶ Zero Resistance Ammeter: $\int j_{gal} \cdot dt$.
- **.**..

Frequency domain:

- ► Electrochemical Impedance Spectroscopy: EIS.
- PhotoElectrochemical Impedance Spectroscopy: PEIS.

Advantages of EIS:

- Measurement in small perturbations (approximately linear).
- ▶ Different processes have different time constants.
- \blacktriangleright Large frequency range from μHz to GHz.

Black Box Approach


Assume a black box with terminals.


One applies a voltage and measures the current response (or vice versa).

Periodic signal with an angular frequency $\omega = 2\pi f$ with $0 \le \omega < \infty$:

- ▶ Voltage $V(\omega) = V_0 e^{j\omega t}$
- ▶ Voltage $I(\omega) = I_0 e^{j\omega t \Phi}$



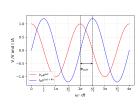

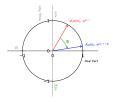

Complex Impedance

The complex impedance is determined from the imposed voltage/current and the measured current/voltage through the Ohm's law:

$$Z(\omega) = \frac{V(\omega)}{I(\omega)} = \frac{V_0}{I_0} e^{j\Phi} = Z_0 e^{j\Phi}$$

Therefore:

- resistive behavior: $ReZ = Z_0 \cdot \cos \Phi$
- ► capacitive/Inductive behavior $ImZ = Z_0 \cdot \sin Φ$

Sometimes, the complex admittance $Y(\omega)$ can also be used which is defined as the inverse of the complex impedance $Z(\omega)$

$$Y(\omega) = \frac{1}{Z(\omega)}$$

Representations I

The impedance $Z(\omega)$ can be represented in two different ways:

- Nyquist plot: represents the real and imaginary parts of $Z(\omega)$ using cartesian coordinates.
- Bode plot: shows the phase shift and magnitude changes in the rang of applied frequencies.


The Bode plot has great advantages for observing phase changes. Therefore, it is useful for the study of sensors, filters, and transistors in electronic devices.

The Nyquist plot provides a better insight into the possible mechanisms.




Representations II


Among these two types of representations, the Nyquist plot is more often used to analyze the characteristics of electrochemical processes occurring during corrosion.

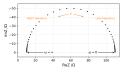

Nyquist Plot

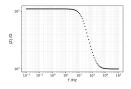

Bode Plot - Modulus

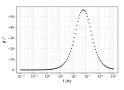

Bode Plot - Phase

Series and parallel connections

Series connections: $Z_1 - Z_2 - \ldots - Z_n$

$$Z_{eq} = \sum_{i=1}^{n} Z_i$$

Parallel connections: $Z_1 / Z_2 / ... / Z_n$

$$\frac{1}{Z_{eq}} = \sum_{i+1}^{n} \frac{1}{Z_i}$$

$$Z_{eq} = \left(\sum_{i=1}^{n} \frac{1}{Z_i}\right)^{-1}$$

The circuit model for EIS consists of a combination of electrical circuit elements[2]:

- ideal elements:
 - resistors (R)
 - capacitors (C)
 - inductors (L)
- nonideal capacitor-like element: Constant Phase Element (CPE or Q)
- diffusion elements:
 - semi-infinite Warburg (W)
 - Finite Length Warburg (W_δ or O)
 - ightharpoonup Finite Space Warburg (W_m or T)

The circuit model represents the entire system of the electrochemical cell.


The aim is to build an optimal circuit model that is physically meaningful and minimizes the number of variables [3].

References

Circuit Elements

$$R$$
 (Resistor): $Z(\omega) = R$ C (Capacitor): $Z(\omega) = \frac{1}{jC\omega}$ L (Inductor): $Z(\omega) = jL\omega$ Q (CPE⁴): $Z(\omega) = \frac{1}{Q(j\omega)^{\alpha}}$ W (SIW¹): $Z(\omega) = \frac{\sigma}{\sqrt{\omega}} \cdot (1-j)$ W_{δ} (FLW²): $Z(\omega) = \frac{R_{\delta} \cdot \tanh \sqrt{j\omega \tau}}{\sqrt{j\omega \tau}}$ W_m (FSW³): $Z(\omega) = \frac{R_m \cdot \coth \sqrt{j\omega \tau}}{\sqrt{j\omega \tau}}$

Basics 00000000000

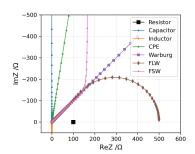

¹SIW = Semi-Infinite Warburg

²FLW = Finite Length Warburg

³FSW = Finite Space Warburg ⁴CPE = Constant Phase Element

Circuit Elements and Physical Parameters

Resistors can be linked to resistivity or kinetics [4]

$$\begin{split} R &= \rho \cdot \frac{\delta}{A} \\ R &= \frac{RT}{FAj_0(\alpha_s + \alpha_c)} = \frac{RT}{AF^2k^0K_c(\alpha_s + \alpha_c)} \end{split}$$

Basics

Capacitors can be linked to layer thickness:

$$C = \frac{\epsilon \epsilon_0 A}{\delta}$$

Warburg elements can be linked to diffusion

$$\sigma = \frac{RT}{Az^2 F^2 \sqrt{2}} \cdot \left(\frac{1}{\sqrt{D}C_O^*} + \frac{1}{\sqrt{D}C_R^*}\right)$$

$$R = \frac{RT}{Az^2 F^2 \sqrt{2}} \cdot \frac{\delta}{DC^*}$$

$$\tau = \frac{\delta^2}{D}$$

Coupling with other electrochemical techniques helps for determining all necessary parameters.

```
R: resistance [Ω]
ρ: resistivity [Ω · m]
\delta: thickness [m]
A: Area [m<sup>2</sup>]
j_0: exchange current density [A \cdot m^{-2}]
k^0: kinetics constant [m \cdot s^{-1}]
α a: anodic transfer coefficient
α<sub>C</sub>: cathodic transfer coefficient
ε: relative permittivity
\epsilon_0: vaccum permittivity [F \cdot m^{-1}]
C^*: bulk concentration [mol · m<sup>-3</sup>]
```

Examples


Simplified Randles Circuit


Reflects an electrochemical reaction controlled only by kinetics [5].

 R_{el} : electrolyte resistance

 $R_c t$: charge transfer resistance

 C_{dl} : double layer capacitance

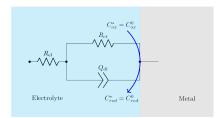

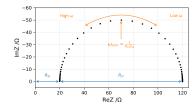

Examples

Randles Circuit


Reflects electrochemical reaction controlled by kinetics and diffusion [5].


 R_{el} : electrolyte resistance

 $R_c t$: charge transfer resistance

 C_{dl} : double layer capacitance

W: semi-infinite diffusion

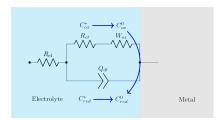

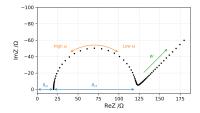

Conductivity vs Temperature

EIS can be used to estimate the electrolyte conductivity at different temperatures.

A calibration step is necessary at room temperature in order to define the cell constant: $\kappa = \frac{1}{4}$

Electrolyte containing 0.2 mmol \cdot L⁻¹ LiOH and 63 mmol \cdot L⁻¹ H₃BO₃.

Experimental values very close to those computed with the software OLI (v9.3) using the MSE database.

Conclusions

EIS technique

- ▶ EIS is a frequency domain electrochemical technique with small perturbations (linearization)
- The circuit model represents the entire system
- The objective is to build an optimal circuit model that is physically meaningful and minimizes the number of variables.
- Evaluation of model with equivalent circuits and numerical fitting (CNLS)

Applications

- Qualitative analysis of corrosion mechanism by observing the Nyquist plots for different alloys
- Quantitative analysis for estimating the corrosion current densities
- Quantitative analysis for computing physical parameters such as diffusion coefficients
- Computation of electrolyte conductivity with respect to temperature

Difficulties

- Noisy data at high temperature
- Choice of the equivalent circuit
- Propagation of errors on computed parameters

References I

- A. J. Bard and L. R. Faulkner, Electrochemical Methods: Fundamentals and Applications, 2nd ed. New York: John Wiley & Sons, Inc., 2001.
- [2] M. E. Orazem and B. Tribollet, Electrochemical Impedance Spectroscopy. Wiley, Feb. 2008.
- B. Boukamp, "A Nonlinear Least Squares Fit Procedure for Analysis of Immittance Data of Electrochemical Systems," Solid State Ionics, pp. 31–44, 1986.
- [4] E. Barsoukov and J. Macdonald, Impedance Spectroscopy: Theory, Experiment, and Applications, 2nd ed. Hoboken, NJ, USA: John Wiley & Sons, Inc., 2005.
- [5] A. C. Lazanas and M. I. Prodromidis, "Electrochemical Impedance Spectroscopy A Tutorial," ACS Meas. Sci. Au, vol. 3, no. 3, pp. 162–193, Jun. 2023.