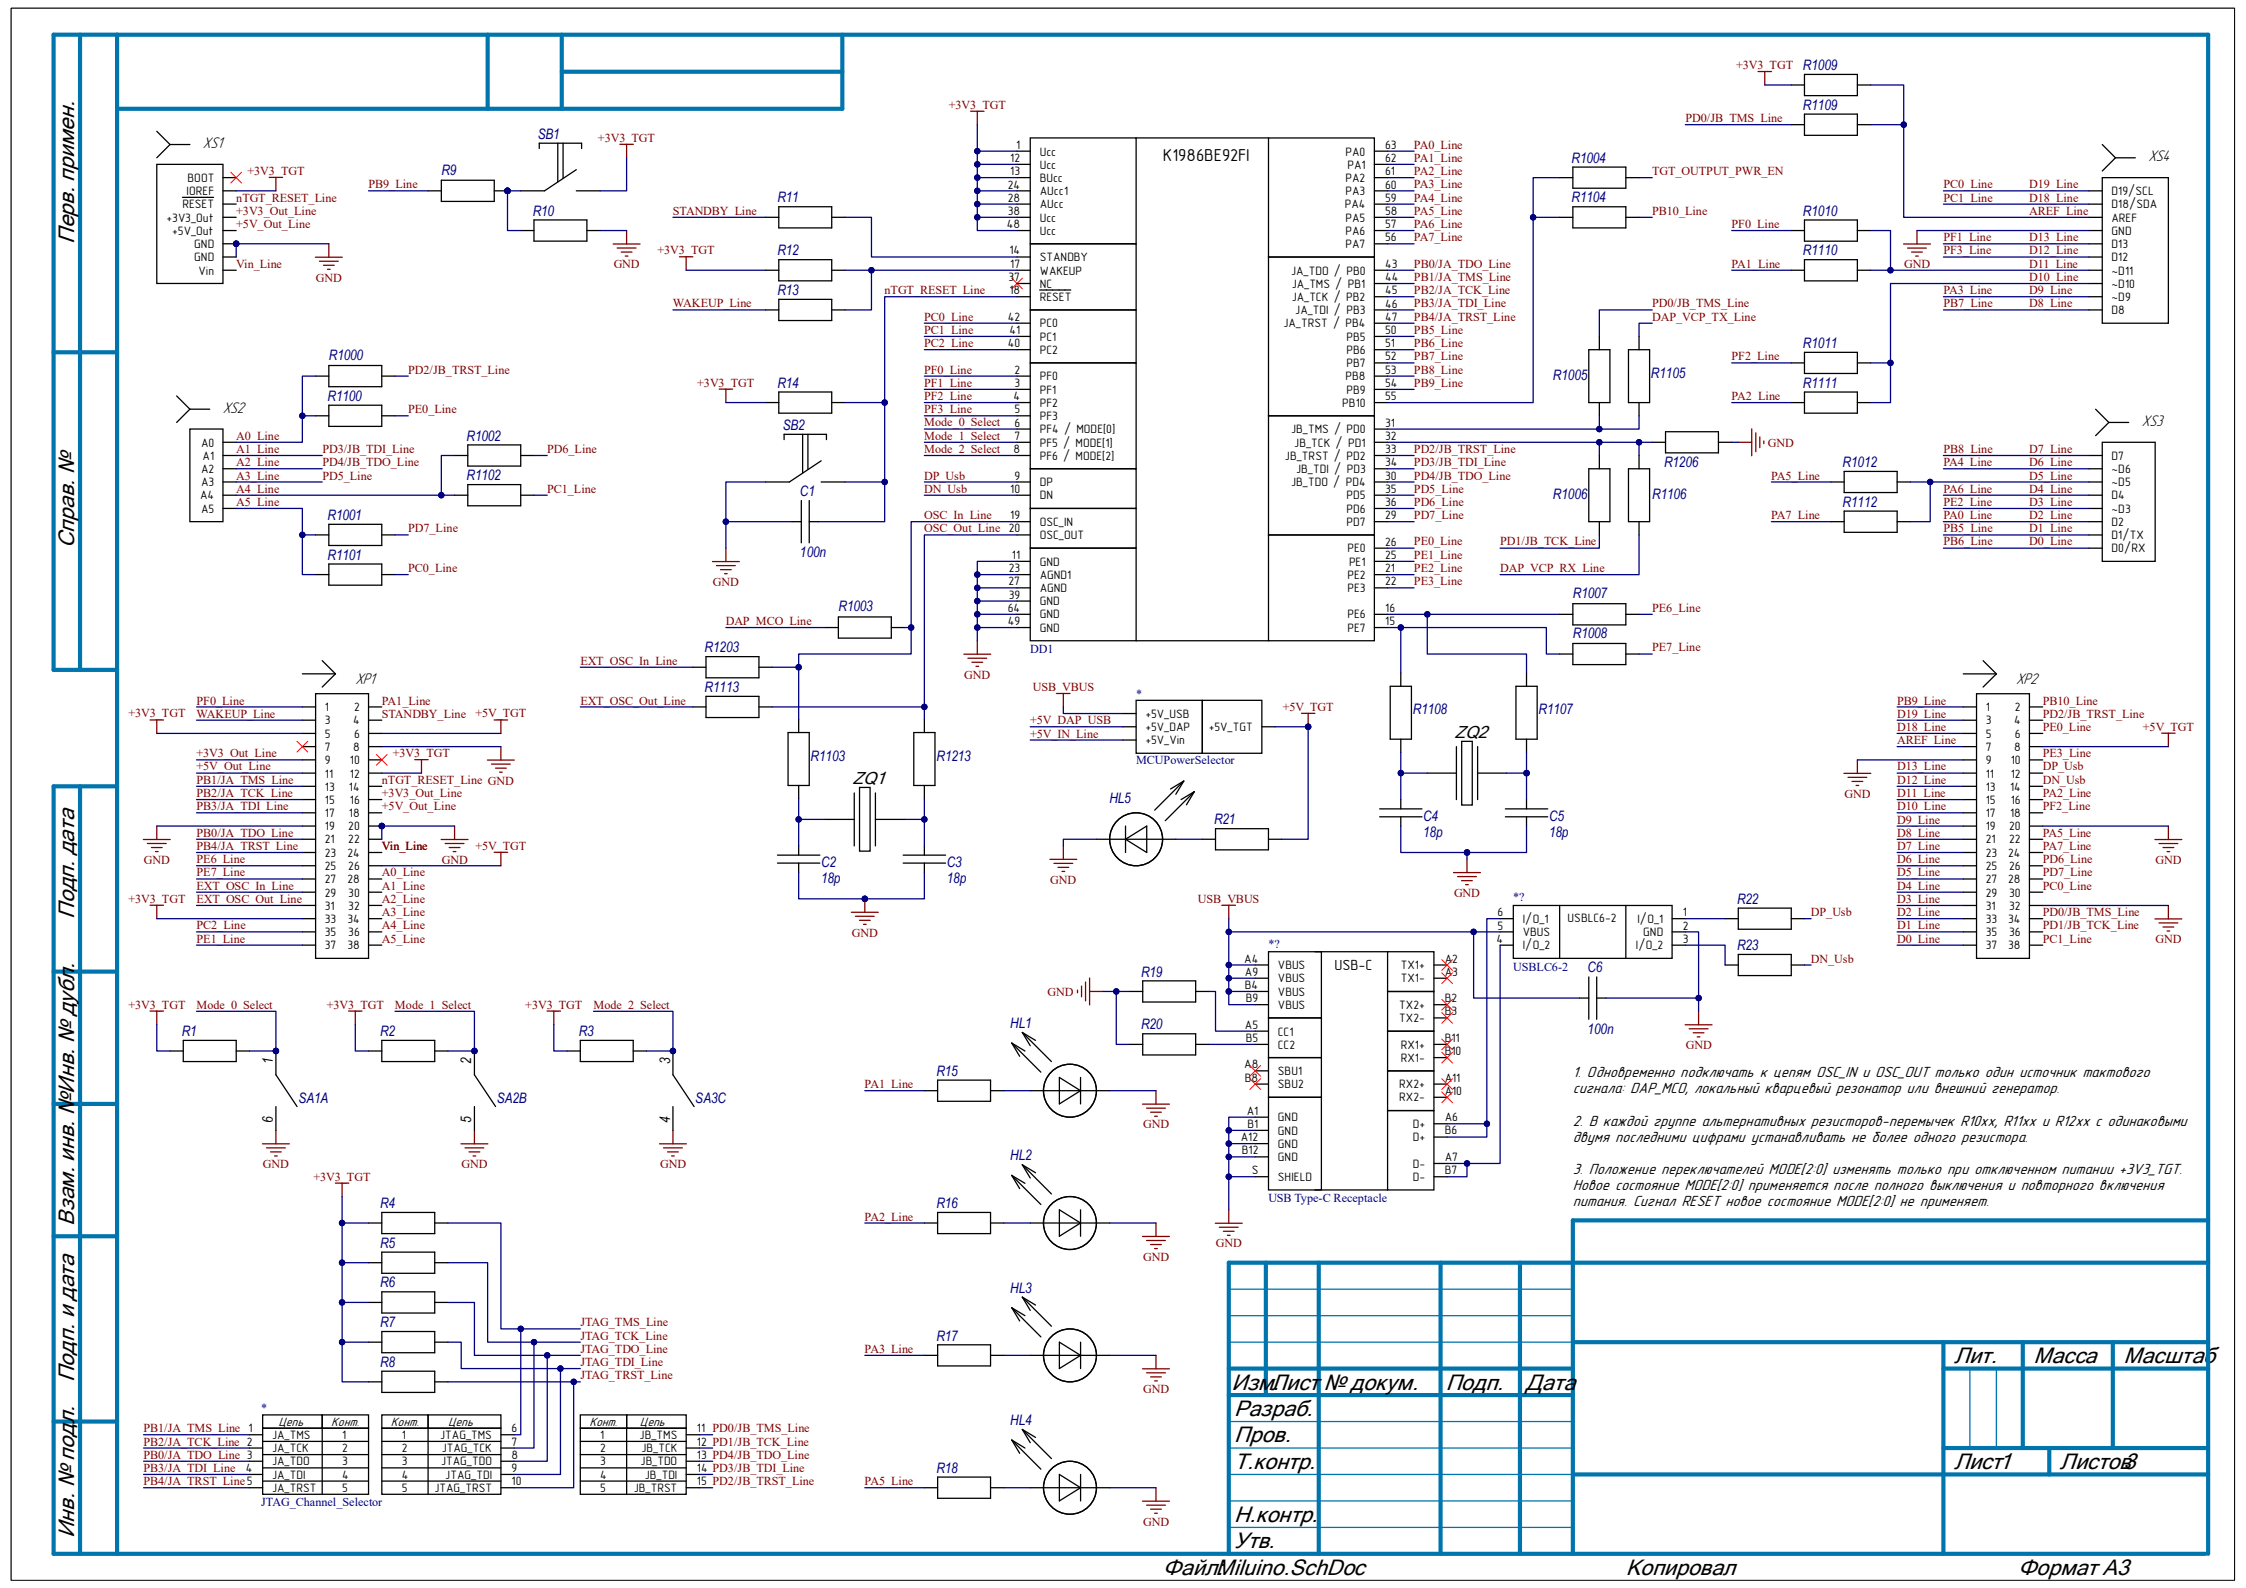
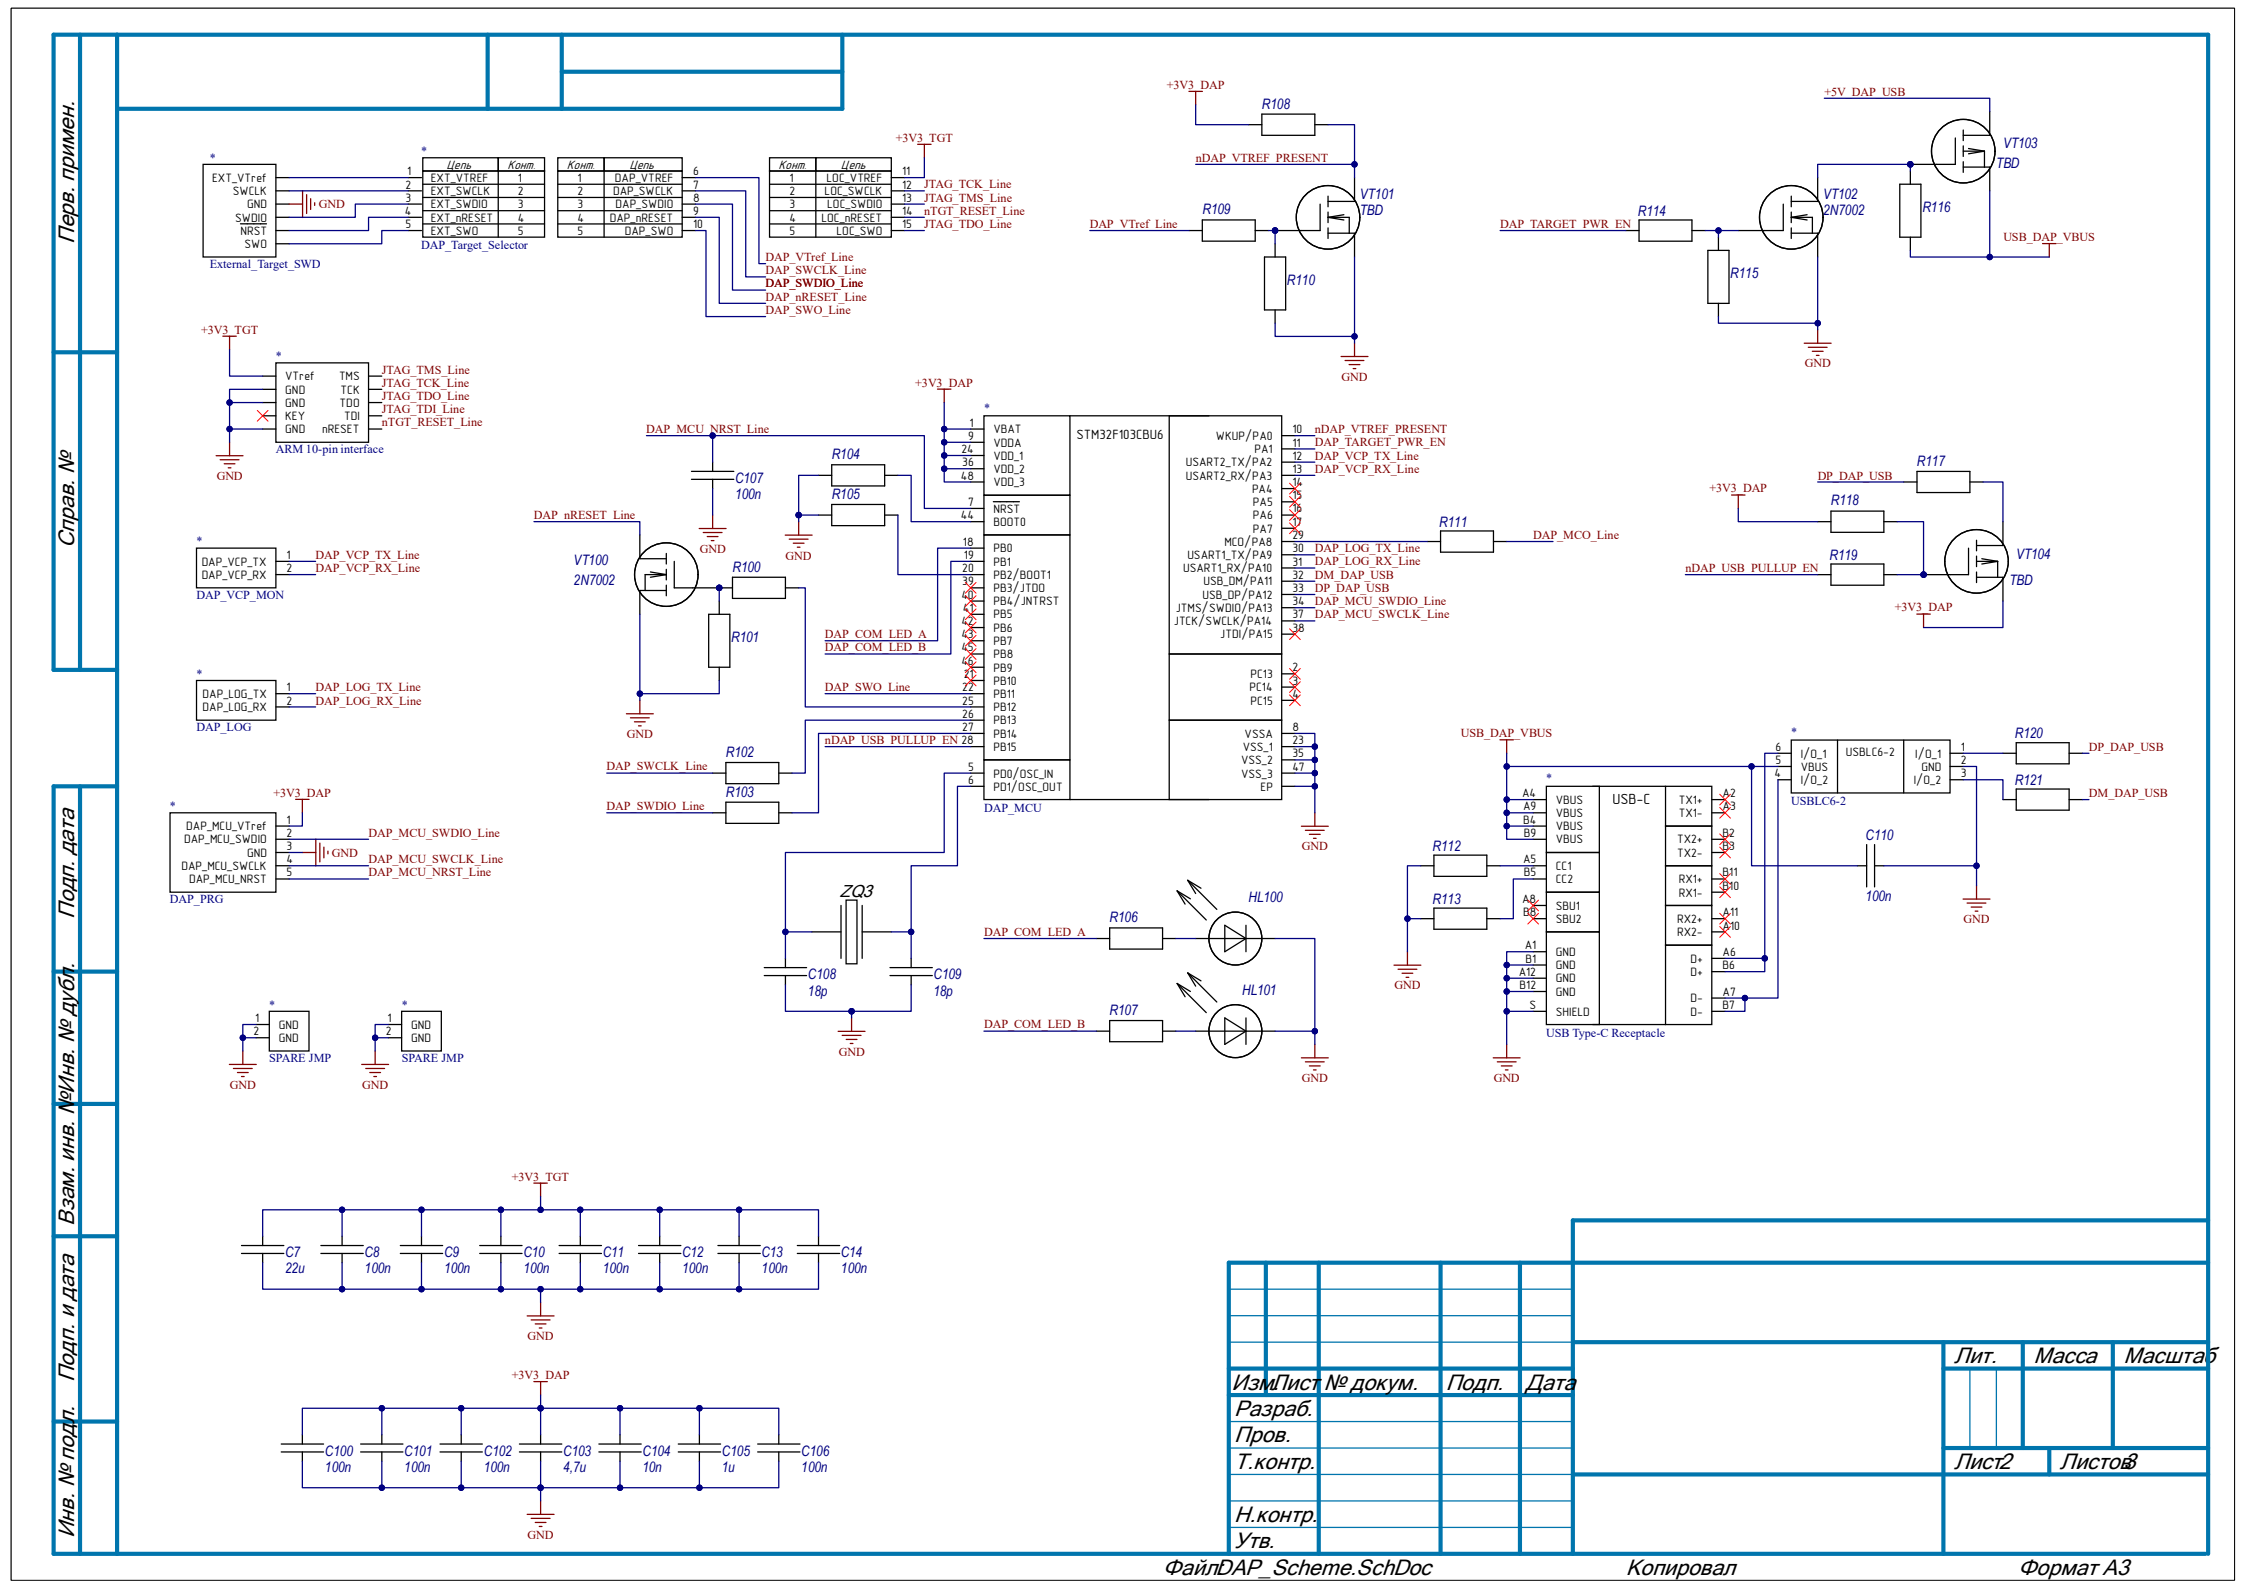

K1986BE92FI
DD1
XS1
XS2
XS3
XS4
XP1
XP2
SB1
SB2
R9
R10
R11
R12
R13
R14
C1
100n
STANDBY_Line
WAKEUP_Line
nTGT_RESET_Line
PB9_Line
+3V3_TGT
GND
R1000
R1100
R1001
R1101
R1002
R1102
PD2/JB_TRST_Line
PE0_Line
PD3/JB_TDI_Line
PD4/JB_TDO_Line
PD5_Line
PD6_Line
PC1_Line
PD7_Line
PC0_Line
A0_Line
A1_Line
A2_Line
A3_Line
A4_Line
A5_Line
R1003
DAP_MCO_Line
R1203
R1113
EXT_OSC_In_Line
EXT_OSC_Out_Line
R1103
R1213
ZQ1
C2
18p
C3
18p
USB_VBUS
+5V_USB
+5V_DAP
+5V_Vin
+5V_TGT
MCUPowerSelector
+5V_DAP_USB
+5V_IN_Line
HL5
R21
R1108
R1107
ZQ2
C4
18p
C5
18p
R1009
R1109
R1004
R1104
R1010
R1110
R1005
R1105
R1011
R1111
R1006
R1106
R1206
R1012
R1112
TGT_OUTPUT_PWR_EN
PB10_Line
PF0_Line
PA1_Line
PF2_Line
PA2_Line
PD0/JB_TMS_Line
DAP_VCP_TX_Line
PD1/JB_TCK_Line
DAP_VCP_RX_Line
PA5_Line
PA7_Line
PE6_Line
PE7_Line
R1007
R1008
PC0_Line
PC1_Line
PF1_Line
PF3_Line
PA3_Line
PB7_Line
D19_Line
D18_Line
AREF_Line
D13_Line
D12_Line
D11_Line
D10_Line
D9_Line
D8_Line
PB8_Line
PA4_Line
PA6_Line
PE2_Line
PB5_Line
PB6_Line
D7_Line
D6_Line
D5_Line
D4_Line
D3_Line
D2_Line
D1_Line
D0_Line
PB10_Line
PD2/JB_TRST_Line
PE0_Line
PE3_Line
DP_Usb
DN_Usb
PA2_Line
PF2_Line
PA5_Line
PA7_Line
PD6_Line
PD7_Line
PC0_Line
PD0/JB_TMS_Line
PD1/JB_TCK_Line
PC1_Line
R1
R2
R3
SA1A
SA2B
SA3C
Mode_0_Select
Mode_1_Select
Mode_2_Select
R4
R5
R6
R7
R8
JTAG_TMS_Line
JTAG_TCK_Line
JTAG_TDO_Line
JTAG_TDI_Line
JTAG_TRST_Line
JTAG_Channel_Selector
R19
R20
R15
R16
R17
R18
HL1
HL2
HL3
HL4
USB-C
USB Type-C Receptacle
USBLC6-2
R22
R23
C6
DP_Usb
DN_Usb
1. Одновременно подключать к цепям OSC_IN и OSC_OUT только один источник тактового сигнала: DAP_MCO, локальный кварцевый резонатор или внешний генератор.
2. В каждой группе альтернативных резисторов-перемычек R10xx, R11xx и R12xx с одинаковыми двумя последними цифрами устанавливать не более одного резистора.
3. Положение переключателей MODE[2:0] изменять только при отключенном питании +3V3_TGT. Новое состояние MODE[2:0] применяется после полного выключения и повторного включения питания. Сигнал RESET новое состояние MODE[2:0] не применяет.
Перв. примен.
Справ. №
Подп. дата
Взам. инв. №
Инв. № дубл.
Подп. и дата
Инв. № подл.
Изм
Лист
№ докум.
Подп.
Дата
Разраб.
Пров.
Т.контр.
Н.контр.
Утв.
Лит.
Масса
Масштаб
Лист1
Листов1
ФайлMiluino.SchDoc
Копировал
Формат А3



Перв. примен.

Справ. №

Подп. дата

Взам. инв. № / Инв. № дубл.

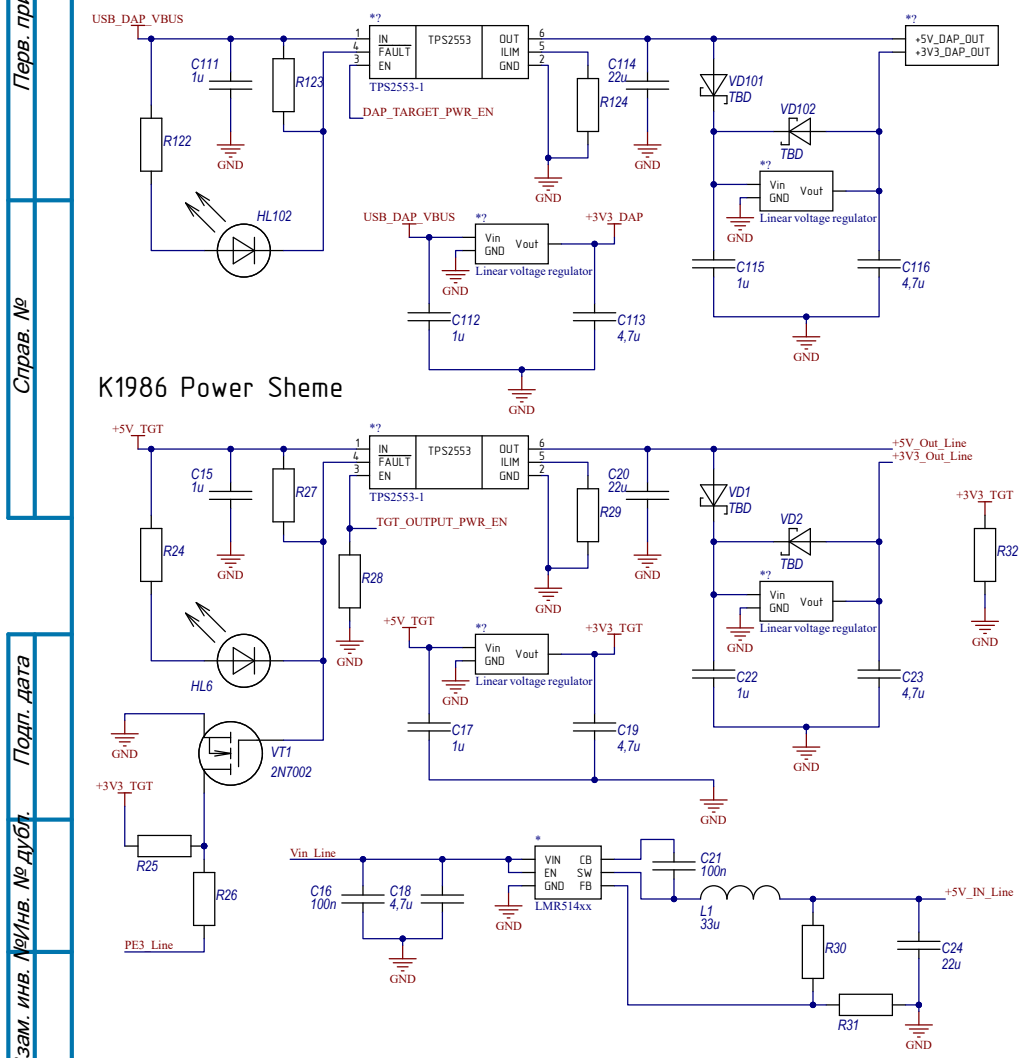
Подп. и дата

Инв. № подл.

Изм.	Лист	№ докум.	Подп.	Дата
Разраб.				
Пров.				
Т.контр.				
Н.контр.				
Утв.				

Лит.	Масса	Масштаб
Лист 2	Листов 3	

Файл DAP_Scheme.SchDoc Копировал Формат А3



Изм	Лист	№ докум.	Подп.	Дата
Разраб.				
Пров.				
Т.контр.				
Н.контр.				
Утв.				

Лит.	Масса	Масштаб
Лист 3	Листов 3	

Перв. примен. | Справ. № | Подп. дата | Инв. № дубл. | Взам. инв. № | Подп. и дата | Инв. № подл.

ФайлPower_Scheme.SchDoc | Копировал | Формат А4