



**ORDER
7110.1E**

Effective Date:
August 26, 2026

SUBJ: SLC ATCT Standard Operating Procedures

This document establishes the Salt Lake City Airport Traffic Control Tower (SLC ATCT) Standard Operating Procedures within the Salt Lake City ARTCC on VATSIM (vZLC). Controllers are required to be familiar with the provisions of this document and to exercise their best judgment if they encounter situations not covered by it. The provisions and procedures described herein are supplemental to vZLC Facility Policy and FAA Order JO 7110.65.

The information contained herein is to be used for flight simulation purposes only on the VATSIM network. It is not intended, nor should it be used for real-world navigation. The Virtual Salt Lake City ARTCC is not affiliated with the FAA, the actual Salt Lake City ARTCC, or any governing aviation body.

Cameron Negrete

Air Traffic Manager
Salt Lake City ARTCC

Cam Revelle

Deputy Air Traffic Manager
Salt Lake City ARTCC

Record of Changes

[illegible]

Table of Contents

Chapter 1. General Control	1
Section 1. Introduction	1
1-1-1. Purpose	1
1-1-2. Audience	1
1-1-3. Distribution	1
1-1-4. Cancellation	1
Section 2. Operational Positions	2
Section 3. Duty Familiarization and Transfer of Position Responsibility	3
1-3-1. Duty Familiarization	3
1-3-2. Transfer of Position Responsibility	3
Section 4. Flight Progress Strip (FPS) Marking	4
1-4-1. General	4
1-4-2. Flight Progress Strips	4
1-4-3. IFR Strips	4
1-4-4. VFR Strips	5
Section 5. Runway Flows and Runway Use Plans (RUP)	6
1-5-1. General	6
1-5-2. Flow/RUP Change Procedures	6
1-5-3. Runway Flows	7
1-5-4. RUP Naming	7
1-5-5. Normal Runways (NRI, NRV, NRV+, and NRVN)	7
1-5-6. Departure-Only	7
Section 6. Low Visibility Operations	8
1-6-1. General	8
1-6-2. Determination	8
1-6-3. Configuration Change Procedures	8
1-6-4. Taxiway Usage	8
Chapter 2. Clearance Delivery (CD)	9
Section 1. General	9
2-1-1. Position Relief Checklist	9
2-1-2. Position Responsibilities	9
Section 2. IFR Departures	10
2-2-1. IFR Departure Routing	10
2-2-2. IFR Departure Altitudes	10
2-2-3. IFR Departure Speeds	10
2-2-4. Use of Pre-Departure Clearances (PDCs)	11
2-2-5. Reroute Procedures	11
2-2-6. Gate Hold Procedures	12
2-2-7. Compliance with TMIs	12
2-2-8. FPS Handling/Marking	13

Section 3. VFR Departures	14
2-3-1. Flight Plan Generation	14
2-3-2. VFR Category I, Category II, and Category III Turboprop Aircraft	14
2-3-3. VFR Category III Turbojet Aircraft (Unrestricted VFR)	14
2-3-4. VFR Helicopters	15
2-3-5. Closed Traffic	15
2-3-6. FPS Handling/Marking	15
Chapter 3. Ramp Control (RC)	16
Section 1. General	16
3-1-1. Position Relief Checklist	16
3-1-2. Ramp Opening Prerequisites	16
3-1-3. Pushback Clearances & Gates	16
3-1-4. Ramp Flow	16
3-1-5. Traffic Flow	17
3-1-6. Deicing Operations	17
3-1-7. Compliance with TMIs	18
3-1-8. FPS Marking	18
3-1-9. FPS Handling	18
3-1-10. Outdated Scenery	18
Section 2. Ramp Control 1 (RC1)	19
3-2-1. Position Responsibilities	19
3-2-2. Area of Jurisdiction	19
3-2-3. Wingspan Restrictions	19
Chapter 4. Ground Control (GC)	22
Section 1. General	22
4-1-1. Position Relief Checklist	22
4-1-2. Traffic Flow	22
4-1-3. ATIS	22
4-1-4. Taxing To Ramp	22
4-1-5. Compliance with Routing	23
4-1-6. Deicing Operations	23
4-1-7. Compliance with TMIs	23
4-1-8. FPS Marking	23
4-1-9. FPS Handling	23
Section 2. Ground Control East (GCE)	24
4-2-1. Position Responsibilities	24
4-2-2. Area of Jurisdiction	24
4-2-3. Deicing Operations	24
Section 3. Ground Control West (GCW)	25
4-3-1. Position Responsibilities	25
4-3-2. Area of Jurisdiction	25

Chapter 5. Local Control	26
Section 1. General	26
5-1-1. Position Relief Checklist	26
5-1-2. Pre-Arranged Coordination	26
5-1-3. Compliance with TMIs	27
5-1-4. Coordination Procedures for Departure Releases	27
5-1-5. Line Up and Wait (LUAW)	28
5-1-6. SLC Diverse Vector Area (DVA)	28
5-1-7. Use of Radar	29
5-1-8. Departure Frequencies	29
5-1-9. Landing Clearance	29
5-1-10. Runway Exiting	29
5-1-11. FPS Marking	29
5-1-12. FPS Handling	29
Section 2. Local Assist City (CTY)	30
5-2-1. Position Responsibilities	30
5-2-2. Area of Jurisdiction	30
5-2-3. Sequencing	30
5-2-4. Routing	30
5-2-5. VFR Arrival Best Practices	30
Section 3. Local Control East (LCE)	32
5-3-1. Position Responsibilities	32
5-3-2. Area of Jurisdiction	32
5-3-3. VFR Departure Routing	32
5-3-4. Skypark Airport (BTF)	33
5-3-5. Local Assist City	33
Section 4. Local Control West (LCW)	34
5-4-1. Position Responsibilities	34
5-4-2. Area of Jurisdiction	34
5-4-3. Point NICHOL	34
Section 5. Local Control Center (LCC)	35
5-5-1. Position Responsibilities	35
5-5-2. Area of Jurisdiction	35
5-5-3. Releases	35
Appendix 1. Local Control Airspace	36
Appendix 1A. SLC Tower Airspace	36
Appendix 1B. SLC Tower Airspace North Flow	37
Appendix 1C. SLC Tower Airspace South Flow	38
Appendix 2. Pre-Arranged Coordination Areas	39
Appendix 2A. SLC Tower Pre-Arranged Coordination Area	39
Appendix 2B. P7 Pre-Arranged Coordination Area (North Flow)	40

Appendix 2C. P8 Pre-Arranged Coordination Area (South Flow)	41
Appendix 3. SLC Airport Supplemental Information	42
Appendix 3A. Runway 16R/34L Distance Remaining Chart	42
Appendix 3B. Runway 16L/34R Distance Remaining Chart	43
Appendix 3C. Runway 17/35 Distance Remaining Chart	44
Appendix 3D. Ground Control Control Areas	45
Appendix 4A. Ramp Appendix	46
Appendix 4B. Runway 16L Deice Pad	47
Appendix 4C. Runway 34L Deice Pad	48
Appendix 4D. Runway 34R Deice Pad	49
Appendix 4E. Taxiway L Deice Pad	50

Chapter 1. General Control

Section 1. Introduction

1-1-1. Purpose

This document establishes the Salt Lake City Airport Traffic Control Tower (SLC ATCT) Standard Operating Procedures within the Salt Lake City ARTCC on VATSIM (vZLC).

1-1-2. Audience

All vZLC controllers and visitors contained within the vZLC and VATUSA roster.

1-1-3. Distribution

This document is authorized for unrestricted use and release and is available in the Resources Section of the vZLC Website.

1-1-4. Cancellation

This document cancels SLC FD, effective June 19, 2024.

Section 2. Operational Positions

Table 1-2-1. SLC ATCT Operational Positions Table

Position	VATSIM Callsign	Frequency
Clearance Delivery (CD)	SLC_DEL	127.300
Ground Control East (GCE)	SLC_E_GND	121.900
Ground Control West (GCW)	SLC_W_GND	123.775
Ramp Control 1 (RC1)	SLC_01_RMP	131.275
Local Control Center (LCC)	SLC_C_TWR	119.050
Local Control East (LCE)	SLC_E_TWR	118.300
Local Control West (LCW)	SLC_W_TWR	132.650
Local Assist City (CTY)	SLC_A_TWR	120.200

Bold designates a primary position.

Section 3. Duty Familiarization and Transfer of Position Responsibility

1-3-1. Duty Familiarization

Prior to requesting a position relief briefing, controllers must accomplish the following items:

- a. Log-in to position and activate session.
- b. Log-in to vStrips.
- c. If applicable, log-in to vTDLS.
- d. Review current METAR.
- e. Review all Traffic Management Programs.
- f. Review pertinent overlying controller information.
- g. Verify integrity of ASDE-X and its configuration.

1-3-2. Transfer of Position Responsibility

- a. All position relief briefings must be conducted in accordance with FAA Order 7110.65 Appendix A. All controllers must follow the position-specific checklists located in each chapter pertaining to their operational position.
- b. Controllers must activate the session of the position they are assuming prior to the start of the position relief briefing.
- c. When traffic conditions warrant, the controller being relieved must monitor and observe the position for a minimum of 2 minutes after the conclusion of the briefing.

Section 4. Flight Progress Strip (FPS) Marking

1-4-1. General

- All operational positions must utilize FPSs at all times.
- IFR FPSs must be printed using the Flight Strip Printer.
- VFR FPSs must be handwritten.
- Times on FPSs may be abbreviated to the two digit time in minutes when the time indicated in the FPS is in the same hour as the current time.

1-4-2. Flight Progress Strips

Figures 1-4-1 and 1-4-2 identify box locations on various types of FPSs.

Figure 1-4-1. IFR FPS

A		F	I	J	K	1	2	3
B		G				4	5	6
C		H				7	8	9
D	E				L			

Figure 1-4-2. VFR FPS

A	D	G	J	1	2	3
B	E	H	K	4	5	6
C	F	I	L	7	8	9

1-4-3. IFR Strips

Enter data into the FPS boxes for IFR departures in accordance with Figure 1-4-1 as follows:

- Box 1: Clearance contraction. Write "PDC" if the aircraft has successfully been issued a departure clearance through vTDLS. Write "X" if the aircraft has been issued a departure clearance via CPDLC with a "W" response or if the aircraft has been verbally issued a departure clearance with a correct readback.
- Box 2: Speed restriction issued. Write the speed followed by a "K" for jet aircraft that have been issued a speed restriction on departure.
- Box 3: ATIS. Write the letter of the ATIS information that has been reported by the pilot.
- Box 4: TMI contraction. Write "GS" when the aircraft's arrival airport is placed under a ground stop. Write "EDCT" when the aircraft has been assigned an EDCT.
- Box 5: Release required. Write "CFR" when the aircraft requires a departure release.
- Box 6: Release time. Write the time at which the aircraft is released if an EDCT has been assigned or a departure release has been issued.
- Box 7: Assigned runway. Utilize an asterisk (*) to the right of the runway number if the runway is not a designated departure runway.
- Box 8: Runway intersection. If other than full length, write the intersection of the runway the aircraft will depart from.

- i. Box 9: Call up time. Write the time at which the aircraft requested startup when gate hold procedures are in effect.

1-4-4. VFR Strips

Write information into the FPS boxes for VFR departures in accordance with Figure 1-4-2 as follows:

- a. Box A: Callsign.
- b. Box B: Aircraft type. Equipment suffix is not required.
- c. Box D: Beacon code.
- d. Box F: Requested altitude in hundreds of feet, if given.
- e. Box G: Arrival airport, if given.
- f. Box J: Direction of flight or type of departure.
- g. Box 1: Clearance contraction. Write "X" if the aircraft has been verbally issued a clearance with a correct readback.
- h. Box 2: Assigned runway. Utilize an asterisk (*) to the right of the runway number if the runway is not a designated departure runway.
- i. Box 3: ATIS. Write the letter of the ATIS information that has been reported by the pilot.
- j. Box 5: Runway intersection. If other than full length, write the intersection of the runway the aircraft will depart from.

Section 5. Runway Flows and Runway Use Plans (RUP)

1-5-1. General

- a. The active Runway Flow refers to the general cardinal direction of departures and arrivals currently in use. Authorized Runway Flows are listed in paragraph 1-5-3.
- b. The active Runway Use Plan refers to the designation of traffic usage on individual runways in use. Authorized RUPs are listed below in paragraphs 1-5-5 and 1-5-6.
- c. RUPs must be selected in accordance with the active Runway Flow.
- d. RUPs must be selected by the CIC. If the CIC position has not been appointed, this duty is passed to the highest of the following operational positions:
 - (1) The least (current or anticipated) busy Local Control.
 - (2) The least busy Ground Control.
- e. When selecting a Runway Flow, the following factors must be considered:
 - (1) Wind direction.
 - (2) Wind speed. The gust factor takes precedence over the constant wind speed.
- f. When selecting a RUP, the following factors must be considered:
 - (1) Current and anticipated traffic volume.
 - (2) Current and anticipated type of traffic (departures and/or arrivals).
 - (3) Runway status.

1-5-2. Flow/RUP Change Procedures

When changing runway flows or the Runway Use Plan, the CIC (or other appointed position) must use the Runway Flow/RUP Change Checklist (below) and ensure the following:

- a. All operational positions acknowledge the new runway flow and/or RUP.
- b. All appropriate positions are informed of:
 - (1) Callsign of the last departure in the old flow/RUP.
 - (2) Callsign of the last arrival in the old flow/RUP.
 - (3) New type of approaches in progress.
 - (4) Automatic departure release status.

Runway Flow/RUP Change Checklist
<i>Coordinate with appropriate S56 CIC</i>
<i>Cancel automatic releases, advise S56 once complete</i>
Verbally advise all positions of impending changes
Make appropriate ASDE-X configuration changes
Ensure ATIS broadcast is correct
<i>Coordinate and resume automatic releases</i>

NOTE-

Items listed in the checklist in italics must only be completed if S56 is online.

1-5-3. Runway Flows

- a. North Flow:
 - (1) Runways 34L, 34R, and 35 may be used.
- b. South Flow:
 - (1) Runways 16L, 16R, and 17 may be used.

1-5-4. RUP Naming

RUPs are coded/named in accordance with the following:

- a. For Normal Runways RUPs:
 - (1) The first two characters are "NR"
 - (2) The third and fourth (if applicable) character(s) denote the departure plan (see SLC-S56 LOA) in use.
- b. For Departure-Only RUPs:
 - (1) The first two characters are "XX"
 - (2) The third character denotes the runway identifier that is not available for arrivals.
 - (3) The fourth and fifth (if applicable) character(s) denote the departure plan in use.

1-5-5. Normal Runways (NRI, NRV, NRV+, and NRVN)

During Normal Runways RUPs, all runways are available for arrivals and departures.

1-5-6. Departure-Only

When excessive departure demand and light arrival demand exist, one of the following RUPs should be used:

- a. XXRI, XXRV, or XXRV+:
 - (1) All runways are available for departures.
 - (2) All runways except Runway 34R are available for arrivals.
- b. XXLI, XMLV, or XMLV+:
 - (1) All runways are available for departures.
 - (2) All runways except Runway 16L are available for arrivals.
- c. XX7I, XX7V, or XX7V+:
 - (1) All runways are available for departures.
 - (2) All runways except Runway 17 are available for arrivals.
- d. XX5I, XX5V, XX5V+, or XX5VN:
 - (1) All runways are available for departures.
 - (2) All runways except Runway 35 are available for arrivals.

Section 6. Low Visibility Operations

1-6-1. General

- a. Unless otherwise determined in accordance with paragraph 1-6-2, low visibility operations must be in effect when any controlling RVR decreases to any RVR target value (see below) or a target value appears imminent.
 - (1) Low visibility operations begin when any controlling RVR decreases to less than 1,200 or a value of less than 1,200 appears imminent.
 - (2) More restrictive procedures are initiated when a controlling RVR decreases to less than 600.
- b. The ASDE-X must be used when low visibility operations are in progress.

1-6-2. Determination

When any controlling RVR decreases to an RVR target value or an RVR target value appears imminent, the CIC (or other appointed position) should consider the extent of the RVR obscuration before commencing any low visibility operational configuration changes (i.e. is it an isolated patch of ground fog or part of a larger weather system/trend).

1-6-3. Configuration Change Procedures

When commencing low visibility operations, the CIC (or other appointed position) must ensure the following:

- a. All operational positions acknowledge the configuration changes.
- b. The phrase "SMGCS LOW VISIBILITY PROCEDURES ARE IN EFFECT" is included on the ATIS broadcast.
- c. The ASDE-X is properly configured.
- d. All non-low visibility taxi routes and runways are clear of traffic.

1-6-4. Taxiway Usage

When low visibility procedures are in effect, the following taxiway restrictions exist:

- a. RVR 1,200 feet to 600 feet:
 - (1) Taxiway E must only be used for eastbound traffic.
 - (2) Taxiway F must only be used for westbound traffic.
 - (3) Taxiways A2, A3, A6, A9, A10, H6, H7, H12, and J must not be used.
- b. RVR 500 feet or less:
 - (1) All restrictions listed in paragraph 1-6-4.a.
 - (2) Taxiways H2, H3, H11, K4, K6, K7, K8, P, N, and R must not be used.

Chapter 2. Clearance Delivery (CD)

Section 1. General

2-1-1. Position Relief Checklist

Position relief briefings must occur in accordance with Section 1-3 of this document. Utilize the following checklist for position relief briefings of the Clearance Delivery position:

CD Position Relief Briefing Checklist
Position Information (which positions are being assumed)
ATIS Letter / Runway Flow / Runway Use Plan
Appropriate Departure Frequencies
Current TMs / Special Activities / Coordination Agreements
Traffic Impacted by TMs
Special Requests or Instructions
Other Traffic Status

2-1-2. Position Responsibilities

- Monitor the CD frequency (127.300 MHz).
- Prepare and update FPSs in accordance with paragraph 1-4-3, section 2-2, and section 2-3.
- Issue departure clearances to IFR aircraft in accordance with section 2-2, complying with posted traffic management initiatives (TMs), letters of agreement (LOAs), and published preferred routes.
- For clearances not yet issued, ensure routings comply with the new runway flow following any runway changes.
- Issue departure clearances to VFR aircraft in accordance with section 2-3.
- Perform gate hold procedures in accordance with paragraph 2-2-6.
- Assume other clearance delivery or other cab responsibilities, as assigned.

Section 2. IFR Departures

2-2-1. IFR Departure Routing

- a. All aircraft that will leave the Salt Lake City Terminal Radar Approach Control (TRACON) must be issued an appropriate SID in accordance with the following:
 - (1) Equipment capable turbojets must be assigned an RNAV departure procedure.
 - (a) The ARCHZ# departure must only be assigned when SLC is in North Flow.
 - (b) The ZIONZ# departure must only be assigned when SLC is in South Flow.
 - (2) All other turbojets and non-turbojet aircraft must be assigned a non-RNAV departure.
 - (a) The SEVYR# and FFU# departures are preferred for aircraft departing the OQUIRH (Land North), HOBBLE (Land South), or PAYSON (Land South) gates.
 - (i) The SEVYR# departure must only be assigned when SLC is in North Flow.
 - (ii) The FFU# departure must only be assigned when SLC is in South Flow.
 - (b) The SLC# departure should be used for departures to all other gates.
- b. All aircraft that will not leave the Salt Lake City TRACON should be assigned the latest rendition of the SLC# departure.
- c. Unless otherwise coordinated, all routes must be in compliance with posted traffic management initiatives (TMIs), letters of agreement (LOAs), and published preferred routes.

NOTE-

Published TMIs, LOAs, and preferred routes shall take precedence over paragraphs 2-2-1.a. and 2-2-1.b. of this document.

2-2-2. IFR Departure Altitudes

- a. All aircraft must be issued an initial departure altitude of 9,000.
- b. Pilots that file an altitude below 9,000, and cannot accept an initial altitude of 9,000, must be issued the filed altitude.

2-2-3. IFR Departure Speeds

All turbojet aircraft must be issued the restriction: "Maintain 240 knots."

NOTE-

The phrase “Maintain 240 knots” must be issued after issuing a cruise altitude to expect (if required).

EXAMPLE-

“Maintain niner thousand, expect flight level three zero zero one zero minutes after departure, maintain two four zero knots.”

2-2-4. Use of Pre-Departure Clearances (PDCs)

- a. Unless an operational necessity exists, a route amendment is required, or the aircraft is impacted by a posted TMI (except as outlined in paragraph 2-2-7), all PDC capable aircraft must be sent a PDC via vTDLS in lieu of a voice clearance.
- b. Fill out the boxes in vTDLS as follows:
 - (1) “Expect” box: Always select “10 MIN AFT DP” unless the aircraft’s initial climb instruction is equal to their requested/assigned altitude. In this instance, leave the selection in this box blank.
 - (2) “SID” and “Transition” boxes: Ensure both boxes match the assigned SID and transition.
 - (3) “Climb out” box: “MAINTAIN 240 KTS UNTIL ADVISED” must be selected for turbojet aircraft, otherwise leave blank.
 - (4) “Climb via” box: Must always be left blank.
 - (5) “Maintain” box: Select the initial altitude assignment in accordance with paragraph 2-2-2.
 - (6) “Contact info” box: Make an applicable selection that conforms to current staffing and special procedures. This box should be left blank unless gate hold procedures are in effect or the aircraft will push back into the movement area.
 - (7) “Departure frequency” box: Select the appropriate departure frequency for the aircraft’s assigned DP. Temporary non-standard departure frequencies can be added in the vTDLS Facility Menu.
 - (8) “Local info” box: Make a selection that matches the current flow and RUP.

2-2-5. Reroute Procedures

When a reroute is required, CD must proceed with the following steps in order:

- a. Dump the aircraft from vTDLS.
- b. Amend the flight plan as necessary in the flight plan window.
- c. Issue the amended departure clearance via CPDLC for CPDLC-capable aircraft. Aircraft not equipped with CPDLC must be issued the amended departure clearance verbally. Ensure compliance with paragraphs 2-2-1 and 2-2-2.
 - (1) To send an amended departure clearance via CPDLC, select the aircraft in the Messages Window and type the following command depending on the aircraft type:
 - (a) For turbojet aircraft: `.cpdlc [Departure Handoff ID]
[Departure runway]`

- (b) For non-turbojet aircraft: .cpdlcs [Departure Handoff ID]
[Departure runway]
- (c) Add the letter 'g' to the end of the initial command string when gate hold procedures are in effect.
- (2) CPDLC clearances are acknowledged with a "W" for Wilco or a "U" for Unable. If a "W" is received from the aircraft, move on to the next step. If a "U" is received from the aircraft, the aircraft must contact CD via the CD frequency. Aircraft must reply to the CPDLC message prior to moving on to the next step.
- d. Print the amended FPS, ensuring the revision number is correct, and delete the original FPS.
- e. Mark the amended FPS in accordance with paragraph 2-2-8.

2-2-6. Gate Hold Procedures

Gate hold procedures may be used to hold aircraft at the gate or other ground location whenever departure delays exceed or are anticipated to exceed 15 minutes after engine start and taxi time. When gate hold procedures are in effect, the following must apply:

- a. Aircraft must be advised to call CD prior to pushback.
 - (1) For aircraft being sent a PDC, the following statements must be used in the "Contact info" box of vTDLS:
 - (a) Aircraft parked within the terminal area or cargo ramps: "CTC 127.3 PRIOR TO PB"
 - (b) Aircraft parked elsewhere: "CTC 127.3 PRIOR TO ENG START"
 - (2) For aircraft issued a departure clearance via CPDLC, add the letter 'g' to the end of the initial command string (see paragraph 2-2-5).
 - (3) For aircraft being issued a verbal departure clearance, the following statement must be issued after confirmation of a correct readback: "Advise ready for pushback" or "Advise ready for engine start."
- b. When aircraft call prior to pushback/engine start, initial call-up time must be marked in Box 9 of the FPS.
- c. Coordinate with the appropriate GC, LC, TMU, or CIC to come up with a proposed engine start time and relay this information to the aircraft.
- d. Approve aircraft for pushback/engine start when expected delays are anticipated to be less than 15 minutes or if they choose to taxi to a delay absorbing area.
- e. Forward FPSs of aircraft approved for pushback/engine start to the appropriate GC.

NOTE-

The aircraft has the final authority to decide whether to absorb the delay at the gate or to taxi to a delay absorbing area.

2-2-7. Compliance with TMIs

- a. Aircraft affected by posted TMIs must be advised of any delays verbally.
- b. Aircraft affected by posted TMIs must have pertinent TMI information placed in their FPS in accordance with paragraph 1-4-3.
- c. Aircraft affected by posted TMIs must not be issued a PDC.

NOTE-

Aircraft affected by an ESP or CFR program that are not expected to be assigned an EDCT are exempt from this clause.

2-2-8. FPS Handling/Marking

- a. When a FPS is received through the Departure Printer, CD must move all strips to their strip bay.
- b. Mark boxes 1-9 on all IFR FPSs in accordance with paragraph 1-4-3.
- a. Upon completion of FPS preparation and after a departure clearance has been issued, forward the aircraft's FPS to the appropriate GC unless gate hold procedures are in effect (see paragraph 2-2-6).

Section 3. VFR Departures

2-3-1. Flight Plan Generation

Except for aircraft landing at BTF, remaining within LCE airspace, or will exit LCE airspace to the East, all VFR departures must have a VFR flight plan generated via the Flight Plan Editor with, at a minimum, the following items filled out:

- a. Aircraft type.
- b. Departure airport.
- c. Destination airport (if specified) (if not write NONE).
- d. Requested altitude (if specified).
 - (1) If no requested altitude is specified, enter "VFR" into the "ALT" box.
 - (2) If the requested altitude is specified, enter "VFR/" followed by the requested altitude in hundreds of feet into the "ALT" box.
- e. Direction of flight and type of radar service.
 - (1) If no flight following is requested, enter the direction of flight between forward slashes into the "RTE" box.
 - (2) If flight following is requested, enter the direction of flight after two "F"s and between forward slashes into the "RTE" box. Ex. "/FFSE/"

2-3-2. VFR Category I, Category II, and Category III Turboprop Aircraft

All VFR Category I prop, Category II prop, and Category III turboprop aircraft must be issued the following items:

- a. Clearance out of Salt Lake City Class Bravo airspace.
- b. An altitude restriction of at 5,500 feet.
- c. Appropriate departure frequency (if receiving flight following)

NOTE-

Aircraft that will land at BTF, remain within LCE airspace, or exit LCE airspace to the East must not be issued a departure frequency.

- d. Discrete beacon code.

EXAMPLE-

"Cleared out of the Salt Lake Class Bravo airspace. Maintain VFR at 5,500 while in Bravo airspace, squawk 1234."

2-3-3. VFR Category III Turbojet Aircraft (Unrestricted VFR)

All VFR Category III turbojet aircraft must be issued the following items:

- a. Clearance out of Salt Lake City Class Bravo airspace.
- b. An altitude restriction of 8,500 feet.
- c. Departure frequency in accordance with the IFR flow for the aircraft's direction of flight.
- d. Discrete beacon code.

2-3-4. VFR Helicopters

- a. All VFR helicopters departing to the East, North, or South must be issued the following items:
 - (1) Clearance out of Salt Lake City Class Bravo airspace.
 - (2) An altitude restriction at or below 5,000 feet.
 - (3) Appropriate departure frequency.
 - (4) Discrete beacon code.

EXAMPLE-

“Cleared out of Bravo airspace. Maintain VFR at or below 5,000 while in Bravo airspace. Departure frequency 120.9, squawk 1234.”

- b. All VFR helicopters departing to the West must be coordinated with LCE.

2-3-5. Closed Traffic

Aircraft requesting to remain in the pattern must be issued the following items:

- a. Clearance to enter Salt Lake City Class Bravo airspace.
- b. An altitude restriction at or below 5,500 feet.

2-3-6. FPS Handling/Marking

- a. VFR FPSs must be handwritten.
- b. Mark VFR FPSs in accordance with paragraph 1-4-4.
- c. Upon completion of FPS preparation and after a departure clearance has been issued, forward the aircraft's FPS to the appropriate GC or LC.

Chapter 3. Ramp Control (RC)

Section 1. General

3-1-1. Position Relief Checklist

Position relief briefings must occur in accordance with Section 1-3 of this document. Utilize the following checklist for position relief briefings of Ground Control positions:

GC Position Relief Briefing Checklist
Position Information (which positions are being assumed)
ATIS Letter / Runway Flow / Ramp Configuration
Taxilane / Taxiway Status
Other Relevant Active Positions
Current TMs / Special Activities / Coordination Agreements
Traffic Impacted by TMs
Traffic Standing By for Service
Other Active Traffic

3-1-2. Ramp Opening Prerequisites

Prior to any RC position being opened, GC and CD must both be online.

3-1-3. Pushback Clearances & Gates

- A. Aircraft shall check-in with gate number and RNAV Departure. Pushback clearances should be issued with a tail direction and taxilane.
- B. Aircraft that are entering the ramp shall be asked for their gate, if the aircraft does not provide a gate, one will be provided to them in accordance with the [SLC GATE INDEX](#).

PHRASEOLOGY-

PUSH ONTO (ramp line), TAIL (direction).

EXAMPLE-

"Push onto the 2 North Line, tail west."

3-1-4. Ramp Flow

Unless otherwise coordinated, traffic on the concourse ramps operates as follows:

- A. Ramp 1: Departure aircraft should be pushed in the direction that faces the exit of the ramp on the northern taxilane. Arrival aircraft will have Ramp Control assign either a north or south line for taxi to the gate upon contact. If they enter on the southern taxilane they will taxi along it until abeam to the gate and then turn into their gate barring any obstructions.
- B. Ramp 2: During peak periods 2 North runs EB and 2 South runs WB. Otherwise, aircraft will exit the ramp on the side closest to them. Arrival aircraft will have Ramp Control assign either a north or south line for taxi to the gate upon contact. Aircraft can cross to another taxilane with visual contact with obstructing aircraft then told where to rejoin whether in front or behind them, taxilane C can be used to cross aircraft over as well. Aircraft can be held out between Taxiway B and Taxilane C until the lane and their gate is clear then they will taxi along it until abeam to the gate and then turn into their gate barring any obstructions.
- C. Ramp 3: Departure aircraft should be pushed in the direction that faces the closest exit, unless an obstruction is present. Arrival aircraft should be coordinated with ramp so avoid any head on action. told to enter the closest spot to their gate.
- D. RC will instruct aircraft to taxi to the appropriate exit spot, instructed to hold short of the first taxiway, and contact ground.
- E. 180 degree turns are authorized on the ramp.

PHRASEOLOGY-

TAXI SPOT (spot), HOLD SHORT (taxiway), CONTACT GROUND (frequency).

EXAMPLE-

"Taxi Spot 1 West North, hold short B, contact ground 123.77."

3-1-5. Traffic Flow

- A. RC must ensure all aircraft yield to aircraft entering the ramp to prevent congestion on taxiways and runway exits.
- B. GND will instruct aircraft to taxi to a ramp and side (ex. 1 West) then will be switched to the ramp while approaching the ramp to be given a north/south taxilane to use to enter.

PHRASEOLOGY-

HOLD POSITION.

- b. GC is authorized to issue taxi instructions to arrival aircraft that allows them to continue their taxi into the ramp and clear the movement area.

3-1-6. Deicing Operations

- a. Aircraft requesting to deice from the concourse ramp should be taxied by the ground controller to the appropriate De-Ice Pad according to the aircraft's departure runway.
- b. Aircraft deicing at any De-Ice Pad must monitor ramp to receive deice pad assignment.

3-1-7. Compliance with TMIs

- a. Aircraft affected by newly posted TMIs must be advised of any delays verbally.
- b. If the aircraft's arrival airport is ground stopped, do not issue a pushback clearance.
 - (1) If a ground stop is issued after the aircraft begins pushback, the aircraft must either return to their gate or be taxied out of the traffic flow.
- c. Unless otherwise coordinated, do not allow an aircraft to begin pushback until the aircraft is within 30 minutes of their assigned EDCT.
- d. Aircraft affected by posted TMIs must have pertinent TMI information placed in their FPS in accordance with paragraph 1-4-4.
- e. If a newly posted TMI requires a new departure clearance to be issued, RC must instruct the aircraft to contact the appropriate CD.

3-1-8. FPS Marking

- a. Mark box 4 and, if applicable, boxes 6-8 of the aircraft's IFR FPS in accordance with section 1-4.
- b. Keep boxes 7 and 8 of an aircraft's IFR FPS up-to-date to the maximum extent possible.
- c. Mark box 9 with applicable ramp exit or entrance spot. Examples are listed in table 4-1-1.

Table 4-1-1. FPS Spot Marking Examples

Entry	Meaning
1WN	Spot 1 West North
2ES	Spot 2 East South
14	Spot 14

3-1-9. FPS Handling

- a. Coordinate with CD prior to removing a FPS from any CD strip bay.
- b. Departure FPSs must be pushed to the appropriate GC's flight strip bay and sequenced so as to reflect their actual sequence on the taxiway.
- c. Box 4 must be filled in correctly prior to the FPS being pushed to GC.
- d. If applicable, boxes 6-9 must be correctly marked prior to being pushed to GC.

3-1-10. Outdated Scenery

Aircraft with outdated scenery (scenery not with the current terminal layout, pre 2020) should be allowed to push at their discretion and be directed to the nearest taxiway or a direction that would benefit the flow of the ramp.

Section 2. Ramp Control 1 (RC1)

3-2-1. Position Responsibilities

- a. Monitor the RC1 frequency (**131.275** MHz).
- b. Issue pushback clearances to aircraft within the RC1 area of jurisdiction.
- c. Issue initial taxi instructions to the proper ramp spot(s) to aircraft within the RCS area of jurisdiction.
- d. Mark FPSs in accordance with section 1-4 and section 4-1.
- e. Assume other ramp control or other cab responsibilities, as assigned.

3-2-2. Area of Jurisdiction

RC1 has jurisdiction of the entire concourse area. This is defined to include:

- a. All A, B Gates.
- b. All De-icing Pads.
- c. All Taxilanes Within The Ramp Area.

3-2-3. Wingspan Restrictions

B757 and smaller have sufficient wingtip clearance when adhering to taxi lines to be side-by-side in The Ramp.

3-3-3. Ramp Activation

No controller shall log onto SLC_01_RMP unless SLC_GND and SLC_DEL are online.

Chapter 4. Ground Control (GC)

Section 1. General

4-1-1. Position Relief Checklist

Position relief briefings must occur in accordance with Section 1-3 of this document. Utilize the following checklist for position relief briefings of Ground Control positions:

GC Position Relief Briefing Checklist
Position Information (which positions are being assumed)
ATIS Letter / Runway Flow / Runway Use Plan
Runway / Taxiway Status
<i>Appropriate Departure Frequencies</i>
Other Relevant Active Positions
Current TMIs / Special Activities / Coordination Agreements
Traffic Impacted by TMIs
Traffic Standing By for Service
Other Active Traffic

NOTE-

Items above that are listed in italics must only be briefed when GC is combined with CD.

4-1-2. Traffic Flow

- GC must ensure all aircraft yield to aircraft exiting a runway.
- LC is authorized to issue taxi instructions to arrival aircraft that allows them to continue a taxi and clear the runway.

4-1-3. ATIS

Ensure all departure aircraft have the current ATIS.

4-1-4. Taxing To Ramp

- Ensure aircraft are routed to the correct ramp based on gate provided, if no gate is provided, taxi them to the ramp corresponding with the SLC Gate Index.
- Ensure aircraft are handed off to the ramp prior to entering the ramp with no possibility for conflict on the controlled taxiways outside of the ramp.

4-1-5. Compliance with Routing

- c. Prior to issuing a taxi clearance, check FPSs to ensure all aircraft are cleared via a departure procedure valid for the active runway flow (see paragraph 2-2-1).
- d. If a new departure clearance must be issued, GC may issue the amended clearance, workload permitting. Otherwise, taxi the aircraft out of the traffic flow and instruct them to contact CD.

4-1-6. Deicing Operations

Aircraft requesting to deice from the terminal area or cargo ramps should be taxied to a deicing pad that correlates to their departure runway and contact ramp control inside of the deice pad.

4-1-7. Compliance with TMIs

- a. Aircraft affected by posted TMIs during taxi must be advised of any delays verbally.
- b. Aircraft affected by posted TMIs must have pertinent TMI information placed in their FPS in accordance with paragraph 1-4-3.
- c. If a newly posted TMI requires a new departure clearance to be issued, GC may issue the amended clearance, workload permitting. Otherwise, taxi the aircraft out of the traffic flow and instruct them to contact CD.
- d. Every effort must be made to position any aircraft that has been assigned an EDCT to depart within plus or minus five (± 5) minutes of their assigned EDCT.
 - (1) If it becomes evident that the aircraft will be outside of this departure window, the aircraft must be taxied out of the traffic flow and a new EDCT must be assigned.

NOTE-

If the aircraft was delayed for reasons beyond its control, the aircraft may proceed to the runway. GC must notify the appropriate LC in this instance.

4-1-8. FPS Marking

- a. Mark boxes 3-9 of an aircraft's IFR FPS in accordance with section 1-4.
 - (1) Ensure that the letter in Box 3 matches the letter of the current ATIS prior to issuing taxi instructions.
 - (2) Keep boxes 4-6 up-to-date to the maximum extent possible.
 - (3) Mark Box 7 once a taxi instruction has been issued.
- b. Mark VFR FPSs in accordance with section 1-4.

4-1-9. FPS Handling

- a. Departure aircraft FPSs must be pushed to the appropriate LC's flight strip bay corresponding to the runway of departure and sequenced so as to reflect their actual sequence on the taxiway.
- b. All strip markings must be filled in correctly prior to the FPS being pushed to LC.

Section 2. Ground Control East (GCE)

4-2-1. Position Responsibilities

- a. Monitor the GCE frequency (121.900 MHz).
- b. Ensure all aircraft taxiing out of ramps east of Taxiway K have the current ATIS.
- c. Determine/finalize aircraft departure runway assignments.
- d. Mark FPSs in accordance with section 1-4 and section 3-1.
- e. Assume other ground control responsibilities, as assigned.

NOTE-

When only one GC position is open, GCE must combine to GCW.

4-2-2. Area of Jurisdiction

GCE has jurisdiction of all taxiways east of Runway 17/35.

4-2-3. Deicing Operations

- a. It is preferred that all non-Delta/Skywest aircraft requesting to deice shall be taxied to the Taxiway L Deice Pad.
- b. Aircraft requesting to deice must be taxied to hold short of Runway 17/35 at Taxiway K1, K5, or K6 and instructed to contact the appropriate LC.

Section 3. Ground Control West (GCW)

4-3-1. Position Responsibilities

- a. Monitor the GCW frequency (123.775 MHz).
- b. Ensure all aircraft taxiing out of ramps within the GCW area of jurisdiction have the current ATIS.
- c. Determine/finalize aircraft departure runway assignments.
- d. Mark FPSs in accordance with section 1-4 and section 3-1.
- e. Assume other ground control responsibilities, as assigned.
- f. Assume GCE responsibilities when combined.

4-3-2. Area of Jurisdiction

GCW has jurisdiction of all taxiways between Runways 16L/34R and 16R/34L.

Chapter 5. Local Control

Section 1. General

5-1-1. Position Relief Checklist

Position relief briefings must occur in accordance with Section 1-3 of this document. Utilize the following checklist for position relief briefings of Local Control positions:

LC Position Relief Briefing Checklist
Position Information (which positions are being assumed)
ATIS Letter / Runway Flow / Runway Use Plan
Runway / Taxiway Status
Appropriate Departure Frequencies
Other Relevant Active Positions
Current TMIs / Coordination Agreements / ODO Status
Traffic Impacted by TMIs
Other Active Traffic

5-1-2. Pre-Arranged Coordination

- a. Definition: a process by which one controller allows an aircraft to penetrate or transit another controller's airspace in a manner that ensures standard separation without individual coordination for each aircraft. Two operational positions may not penetrate each other's airspace simultaneously.
- b. Prerequisites:
 - (1) Full data blocks (FDBs) must be displayed.
 - (2) When the P7 or P8 Pre-Arranged Coordination Areas are in use, LCW, LCC, LCE, and CTY must all quick-look each other.
- c. Procedures:
 - (1) SLC Tower Pre-Arranged Coordination Area:
 - (a) LCC may not deviate arrival aircraft from the extended centerline of Runway 16L/34R.
 - (b) LCE is authorized to operate in LCC airspace, so long as the following criteria are met:
 - (i) Aircraft must remain over or east of the Runway 17 localizer (south flow) or over or east of the Runway 35 localizer (north flow).
 - (ii) LCE assumes responsibility for providing the appropriate separation from LCC traffic.

- (c) LCW is authorized to operate in LCC airspace, so long as the following criteria are met:
 - (i) Aircraft must remain over or west of the Runway 16R/34L extended centerline.
 - (ii) LCW assumes responsibility for providing the appropriate separation from LCC and LCE traffic.
- (2) P7 Pre-Arranged Coordination Area:
 - (a) Pre-arranged coordination must only be utilized within the airspace depicted in Appendix 2B.
 - (b) The P7 area must not be utilized in IFR conditions.
 - (c) LCW, LCC, and LCE must apply the required separation from any P7 Area traffic.
- (3) P8 Pre-Arranged Coordination Area:
 - (a) Pre-arranged coordination must only be utilized within the airspace depicted in Appendix 2C.
 - (b) The P8 area must not be utilized in IFR conditions.
 - (c) LCW, LCC, and LCE must apply the required separation from any P8 Area traffic.

5-1-3. Compliance with TMIs

- a. Aircraft affected by posted TMIs while waiting to depart must be advised of any new delays verbally.
- b. Aircraft affected by posted TMIs must have pertinent TMI information placed in their FPS in accordance with paragraph 1-4-3.
- c. If a newly posted TMI requires a new departure clearance to be issued, LC may issue the amended clearance, workload permitting. Otherwise, taxi the aircraft out of the traffic flow and instruct them to contact the appropriate CD.
- d. Aircraft with an assigned EDCT must depart within plus or minus five (± 5) minutes of their assigned EDCT.
- e. Do not authorize an aircraft to depart if the aircraft's destination airport is ground stopped.
- f. Do not authorize an aircraft to depart without an appropriate departure release when "CFR" is placed in Box 5 of the aircraft's FPS or a departure release is required.

5-1-4. Coordination Procedures for Departure Releases

Unless otherwise coordinated, LCC must hold IFR and Unrestricted VFR (UVFR) releases. LCE must hold Category I and Category II VFR releases.

- a. LC positions without departure releases must coordinate with the appropriate LC holding departure releases for each departure prior to issuing a takeoff clearance.
- b. The LC position that holds departure releases is authorized to operate within another LC's airspace when using the standard departure headings outlined in the SLC-S56 LOA.

5-1-5. Line Up and Wait (LUAW)

- a. Only one aircraft at a time, per runway, may be authorized to LUAW.
- b. LUAW must not be used for the application of the 2- or 3-minute interval for wake turbulence separation.
- c. When an aircraft has been authorized to LUAW, the FPS for that aircraft must be offset in the strip bay.
- d. When an aircraft has been authorized to LUAW, the first aircraft in the landing sequence on the Tower frequency, regardless of distance from the runway, must be advised of the traffic on the runway.
 - (1) When the reported ceiling is less than 800 feet or the reported visibility is less than 2 miles, landing clearance must be withheld until the aircraft in position begins takeoff roll.
- e. LUAW is not authorized when traffic volume or complexity issues negatively impact the ability to use the procedures in a safe and efficient manner.

5-1-6. SLC Diverse Vector Area (DVA)

- a. The DVA may be utilized for SLC departures only.
- b. Vectoring below the MVA in the areas described within Table 4-1-6 is approved; however, the aircraft must be assigned an altitude at or above the MVA.
- c. Leaving the confines of the DVA, the aircraft must be at or above the MVA.

Table 4-1-6. SLC Diverse Vector Area Headings

Airport	Runways	Available Headings	Distance from DER
SLC	16L, 16R, and 17	150° CW to 175°	9 NM
SLC	34L, 34R, and 35	260° CW to 345°	10 NM

5-1-7. Use of Radar

When using TDW/STARS, LC must comply with the provisions contained within FAA JO 7110.65 Chapter 5.

5-1-8. Departure Frequencies

Ensure aircraft have the appropriate departure frequency if the frequency in use is different than the frequency assigned or published on the assigned DP.

5-1-9. Landing Clearance

The use of a memory aid upon issuance of a landing clearance is mandatory. The preferred method for utilizing a landing clearance memory aid is by highlighting the aircraft's STARS Full Data Block (FDB).

5-1-10. Runway Exiting

LC is authorized to issue taxi instructions to arrival aircraft that allows them to continue a taxi and clear the runway.

5-1-11. FPS Marking

- a. Mark boxes 4-8 of an aircraft's IFR FPS in accordance with section 1-4.
- b. Mark Box 5 of an aircraft's VFR FPS in accordance with section 1-4.

5-1-12. FPS Handling

- a. Departure aircraft FPSs must be sequenced in the appropriate bay for the runway of departure and must reflect the order in which the aircraft will depart.
- b. Departure aircraft FPSs may be deleted when all conflicts are resolved and the aircraft has been instructed to contact departure.

Section 2. Local Assist City (CTY)

5-2-1. Position Responsibilities

- a. Monitor the CTY frequency (120.200 MHz).
- b. Provide control instructions to aircraft within the CTY area of jurisdiction.
- c. Mark FPSs in accordance with section 1-4 and paragraph 4-1-10.
- d. Assume other local control or other cab responsibilities, as assigned.

5-2-2. Area of Jurisdiction

CTY has jurisdiction of LCE airspace (see Appendix 1), except that airspace between Redwood Road and the extended centerline of Runway 17/35, at and below 5,500 feet.

5-2-3. Sequencing

- a. Sequence VFR aircraft landing at SLC into a downwind over Redwood Road at 6,000 feet MSL and assign LCE frequency.
- b. Verbally coordinate the VFR arrival sequence with LCE prior to sequencing aircraft over Redwood Road.

5-2-4. Routing

- a. Route VFR overflight traffic in accordance with the following:
 - (1) From the north transitioning southbound: over or east of I-15 at 5,500, 6,500, or 7,500 feet MSL.
 - (2) From the south transitioning northbound: over or east of I-15 at 5,000, 6,000, or 7,000 feet MSL.
 - (3) From the west transitioning eastbound:
 - (a) North Flow: via I-80 transition at 5,500 feet MSL.
 - (b) South Flow: via BARN transition at 5,500 feet MSL.
 - (4) From the east transitioning westbound:
 - (a) North Flow: via I-80 transition at 5,500 feet MSL.
 - (b) South Flow: via BARN transition at 5,500 feet MSL.

PHRASEOLOGY-

*CLEARED INTO THE SALT LAKE CLASS BRAVO AIRSPACE VIA (transition) (direction).
MAINTAIN VFR AT (altitude).*

5-2-5. VFR Arrival Best Practices

The following are considered best practices for handling VFR arrival traffic, but are not required.

- a. When sequencing aircraft into a downwind in accordance with paragraph 4-2-3, utilize I-15 north/south parallel to the upwind direction prior to turning aircraft into a downwind over Redwood Road.
- b. Advise aircraft on initial contact the type of pattern entry/direction and the landing runway to expect.

EXAMPLE-

“Expect right traffic runway three five over Redwood Road.”

- c. During north flow, instruct aircraft inbound via the I-80 transition to maintain 6,500 until abeam the arrival end of Runway 35, then sequence into an upwind over I-15 (if required) and/or a downwind over Redwood Road at 6,000.

PHRASEOLOGY-

CONTINUE VIA/FOLLOW I-80 EASTBOUND. MAINTAIN VFR AT (altitude).

and once abeam Runway 35, if applicable,

TURN LEFT, JOIN/FOLLOW I-15 NORTHBOUND. DESCEND AND MAINTAIN VFR AT (altitude).

and/or, if applicable,

TURN LEFT/RIGHT, JOIN/FOLLOW REDWOOD ROAD SOUTHBOUND.

- d. During south flow, instruct aircraft inbound via the BARN transition to maintain 6,500 until over the arrival end of Runway 17, then sequence into an upwind over I-15 (if required) and/or a downwind over Redwood Road at 6,000.

PHRASEOLOGY-

CONTINUE VIA BARN TRANSITION EASTBOUND. MAINTAIN VFR AT (altitude).

and once over Runway 17, if applicable,

TURN RIGHT, JOIN/FOLLOW I-15 SOUTHBOUND. DESCEND AND MAINTAIN VFR AT (altitude).

and/or, if applicable,

TURN LEFT/RIGHT, JOIN/FOLLOW REDWOOD ROAD NORTHBOUND.

- e. Be practical and coordinate with LCE to the maximum extent possible in order to move aircraft in the most efficient manner possible. For example, if a gap/shortcut exists, separation will be maintained, and sequencing the aircraft into a downwind would not be advantageous, coordinate with LCE to get the aircraft sequenced toward the airport as quickly as practical.

Section 3. Local Control East (LCE)

5-3-1. Position Responsibilities

- a. Monitor the LCE frequency (118.300 MHz).
- b. Provide control instructions to aircraft within the LCE area of jurisdiction.
- c. Mark FPSs in accordance with section 1-4 and paragraph 4-1-10.
- d. Assume other local control or other cab responsibilities, as assigned.
- e. Assume CTY responsibilities when combined.

5-3-2. Area of Jurisdiction

LCE has jurisdiction of the following:

- a. LCE airspace, as depicted in Appendix 1.

NOTE-

When CTY is staffed, LCE has jurisdiction over that airspace within LCE airspace between Redwood Road and the extended centerline of Runway 17/35, at and below 5,500 feet.

- b. Runway 17/35.
- c. All taxiways between Runway 16L/34R and Runway 17/35.

5-3-3. VFR Departure Routing

- a. Route north/south/east departures via I-15 at one of the following altitudes:
 - (1) Northbound fixed-wing: 5,500 feet MSL.
 - (2) South/eastbound fixed-wing: 5,500 feet MSL.

NOTE-

East departures must only be routed over I-15 when CTY is staffed. Otherwise, east departures may be turned on course as soon as practical.

- (3) Helicopters: at or below 5,000 feet MSL.

PHRASEOLOGY-

TURN LEFT/RIGHT, JOIN/FOLLOW I-15 (direction).

- b. Route west departures in accordance with the following:
 - (1) North Flow: initially via I-15 southbound. After radar identification, via I-80 transition at or below 6,000 feet MSL.

PHRASEOLOGY-

*TURN RIGHT, JOIN/FOLLOW I-15 SOUTHBOUND. RUNWAY (runway),
CLEARED FOR TAKEOFF.*

and after radar identification,

TURN RIGHT, JOIN/FOLLOW I-80 WESTBOUND.

or, if appropriate,

CONTINUE VIA I-15 SOUTHBOUND, THEN TURN RIGHT, JOIN/FOLLOW I-80 WESTBOUND.

- (2) South Flow: initially via I-15 northbound. After radar identification, via BARN transition at or below 6,000 feet MSL.

PHRASEOLOGY-

*TURN LEFT, JOIN/FOLLOW I-15 NORTHBOUND. RUNWAY (runway),
CLEARED FOR TAKEOFF.*

and after radar identification,

*TURN LEFT, OVERFLY/PROCEED TO THE RUNWAY ONE SIX RIGHT
NUMBERS, THEN PROCEED TO THE BARN.*

or,

*TURN LEFT, OVERFLY/PROCEED TO THE RUNWAY ONE SIX RIGHT
NUMBERS, JOIN/FOLLOW BARN TRANSITION WESTBOUND.*

5-3-4. Skypark Airport (BTF)

- a. LCE must provide radar services to BTF VFR arrivals/departures to/from all directions except north.
- b. Assign BTF VFR departures initial routing and altitudes consistent with the SLC VFR flow.

5-3-5. Local Assist City

When CTY is staffed, LCE must:

- a. Ensure traffic in the pattern for Runway 17/35 remains over or west of Redwood Road, at or below 5,500 feet MSL.
- b. Have control for descent over Redwood Road for VFR arrivals.
- c. Maintain separation responsibility for all operations between Redwood Road and the extended centerline of Runway 17/35 within LCE airspace, at and below 5,500 feet MSL.
- d. Assign CTY frequency to Category I & II VFR departures.

Section 4. Local Control West (LCW)

5-4-1. Position Responsibilities

- a. Monitor the LCW frequency (132.650 MHz).
- b. Provide control instructions to aircraft within the LCW area of jurisdiction.
- c. Mark FPSs in accordance with section 1-4 and paragraph 4-1-10.
- d. Assume other local control or other cab responsibilities, as assigned.

5-4-2. Area of Jurisdiction

LCW has jurisdiction of the following:

- a. LCW airspace, as depicted in Appendix 1.
- b. Runway 16R/34L.

5-4-3. Point NICHOL

During South Flow, LCW must ensure all turn departures remain over or south of Point NICHOL (see Appendix 1A) at all times.

Section 5. Local Control Center (LCC)

5-5-1. Position Responsibilities

- a. Monitor the LCC frequency (119.050 MHz).
- b. Provide control instructions to aircraft within the LCC area of jurisdiction.
- c. Mark FPSs in accordance with section 1-4 and paragraph 4-1-10.
- d. Assume other local control or other cab responsibilities, as assigned.
- e. Assume LCE and/or LCW responsibilities when combined.

5-5-2. Area of Jurisdiction

LCC has jurisdiction of the following:

- a. LCC airspace, as depicted in Appendix 1.
- b. Runway 16L/34R.

5-5-3. Releases

- a. Unless otherwise coordinated, LCC must hold all IFR/UVFR releases.
- b. LCC may release control of turn releases and/or straight-out releases to LCW or LCE as needed.

NOTE-


When turn releases have been released to LCW, LCC assumes responsibility for separation of aircraft departing on a heading of 310° from turn departures.

Appendix 1. Local Control Airspace


Appendix 1A. SLC Tower Airspace



Appendix 1B. SLC Tower Airspace North Flow

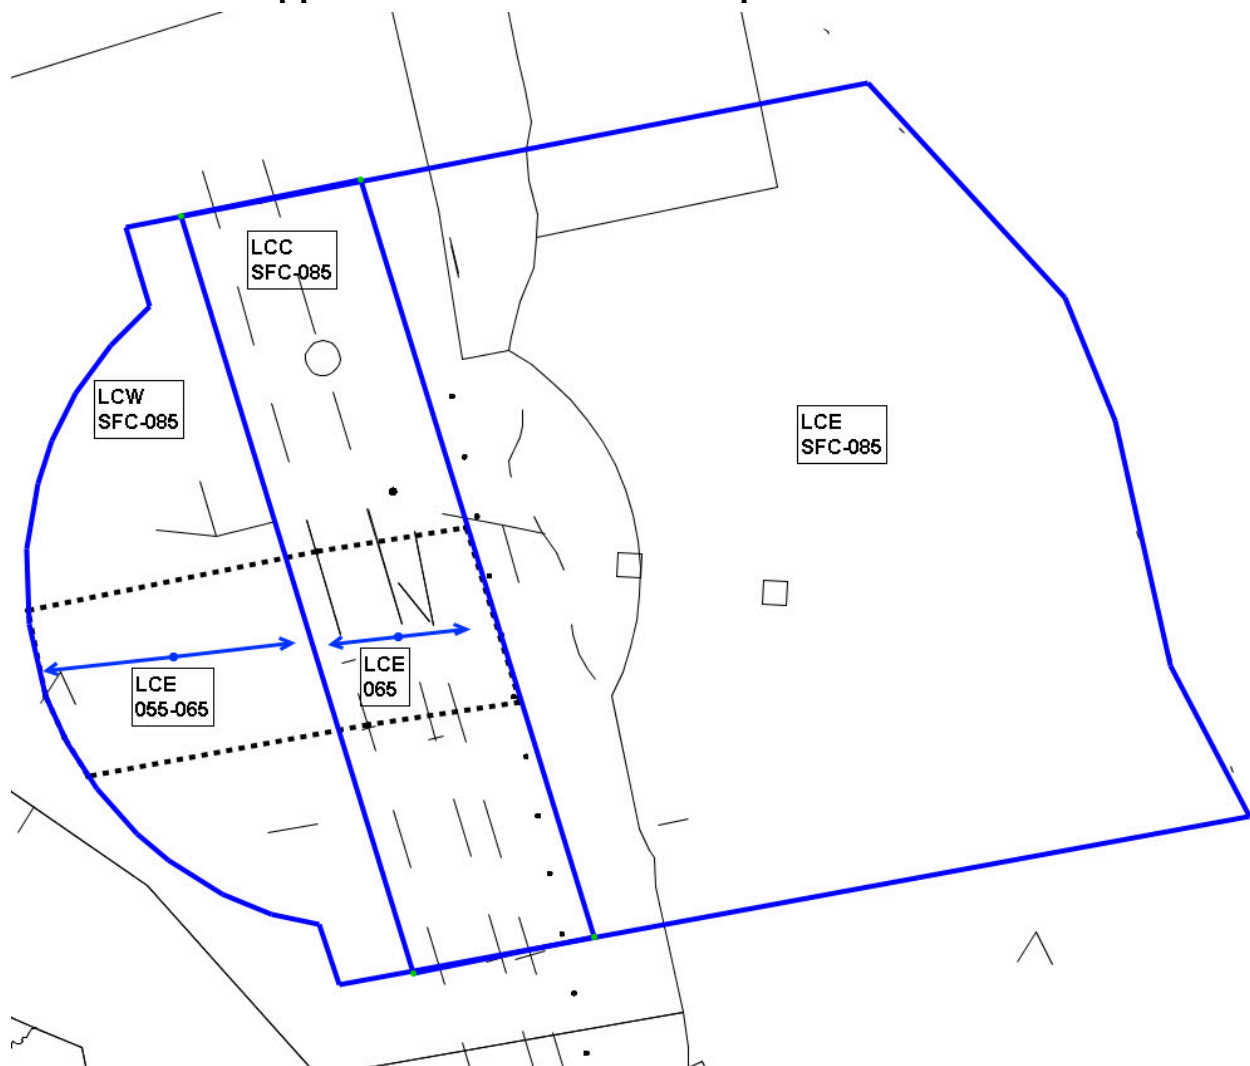


Appendix 1C. SLC Tower Airspace South Flow

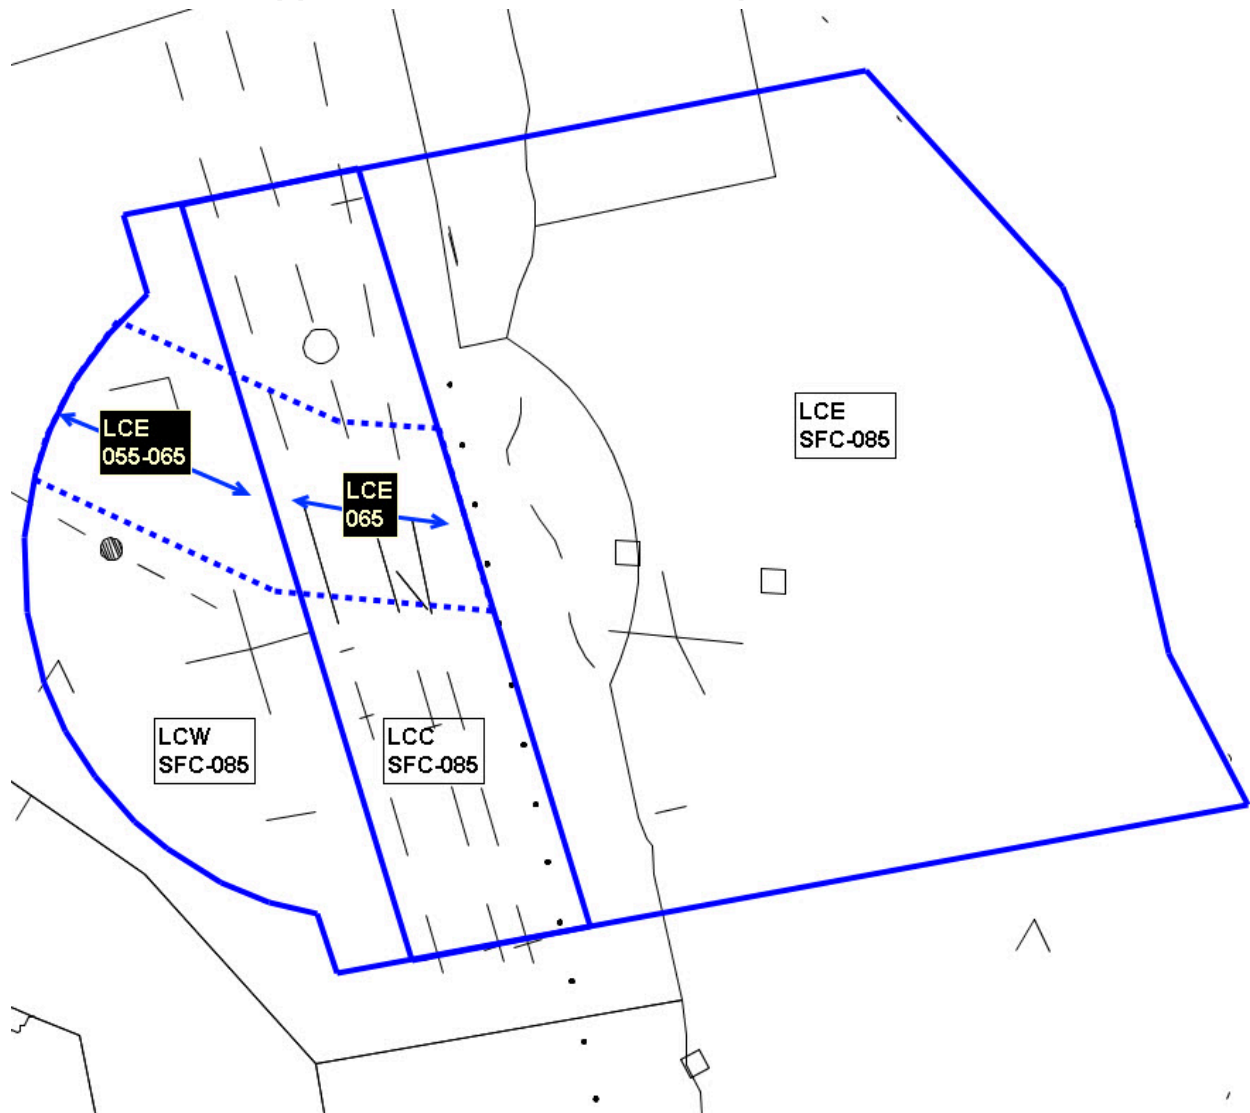

Appendix 2. Pre-Arranged Coordination Areas

Appendix 2A. SLC Tower Pre-Arranged Coordination Area

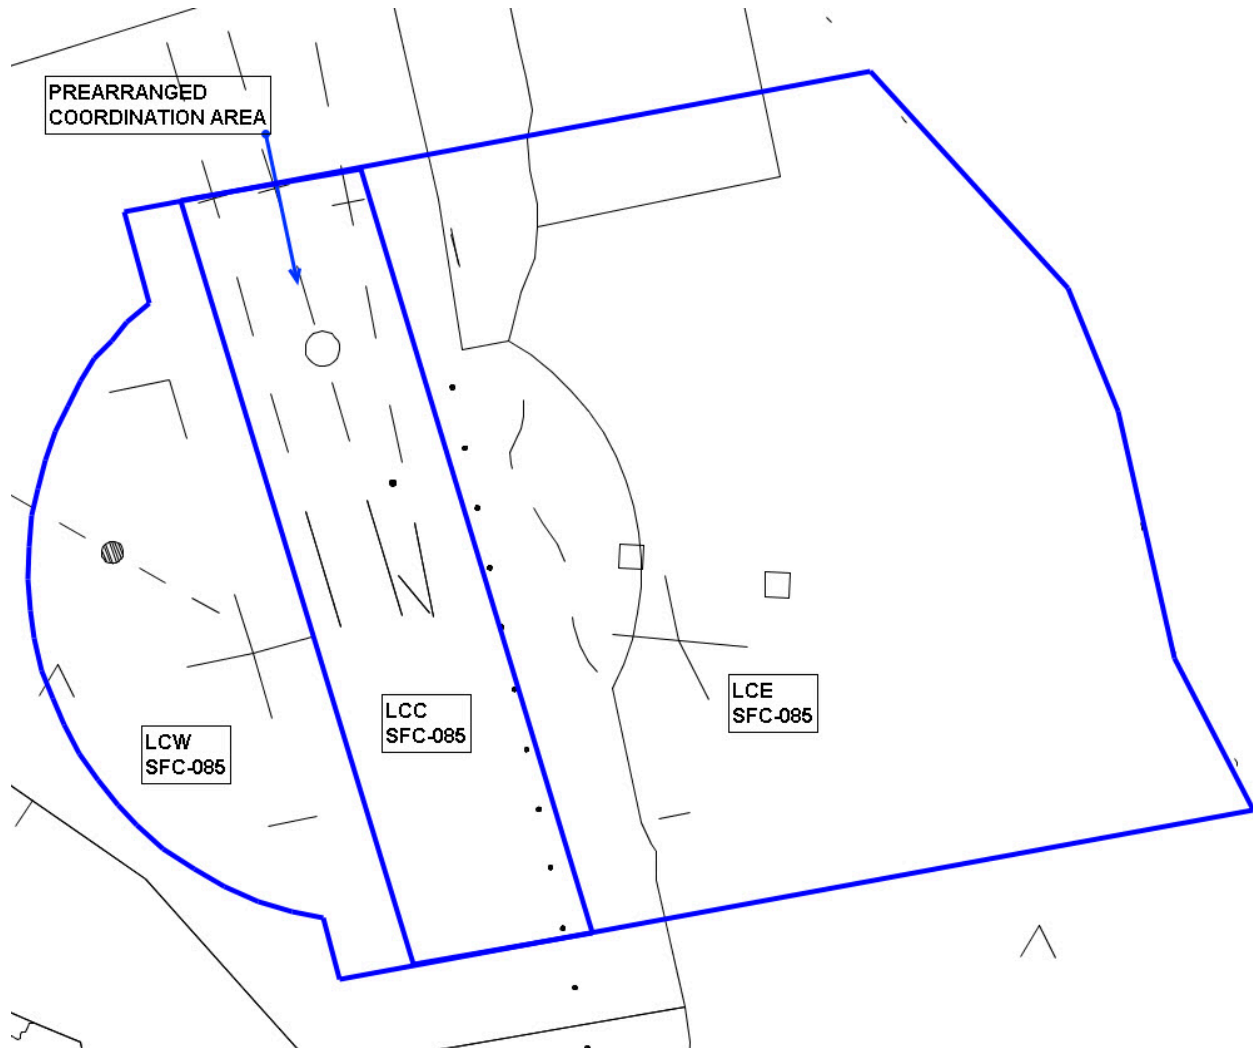

Appendix 2B. P7 Pre-Arranged Coordination Area (North Flow)




Appendix 2C. P8 Pre-Arranged Coordination Area (South Flow)



Appendix 3. SLC Airport Supplemental Information

Appendix 3A. Runway 16R/34L Distance Remaining Chart

RUNWAY 16R/34L INTERSECTION DISTANCE REMAINING

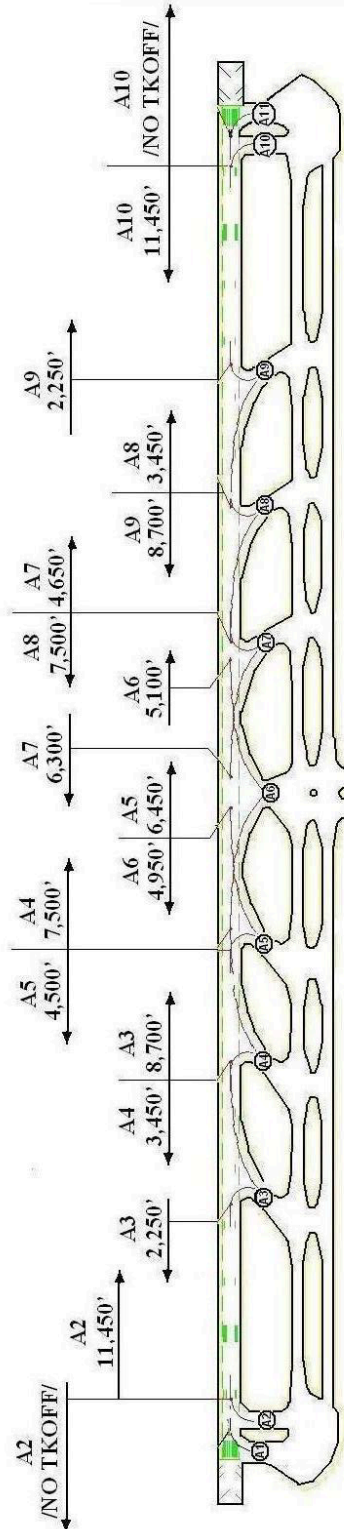


RUNWAY 34L
A10 = /NO TKOFF/
A9 = 2,250 FEET
A8 = 3,450 FEET
A7 = 4,650 FEET
A6 = 5,100 FEET
A5 = 6,450 FEET
A4 = 7,500 FEET
A3 = 8,700 FEET
A2 = 11,450 FEET
A1 = 11,700 FEET

RUNWAY 16R
A2 = /NO TKOFF/
A3 = 2,250 FEET
A4 = 3,450 FEET
A5 = 4,500 FEET
A6 = 4,950 FEET
A7 = 6,300 FEET
A8 = 7,500 FEET
A9 = 8,700 FEET
A10 = 11,450 FEET
A11 = 11,700 FEET

Appendix 3B. Runway 16L/34R Distance Remaining Chart

Runway 16L/34R Intersection Distance Remaining

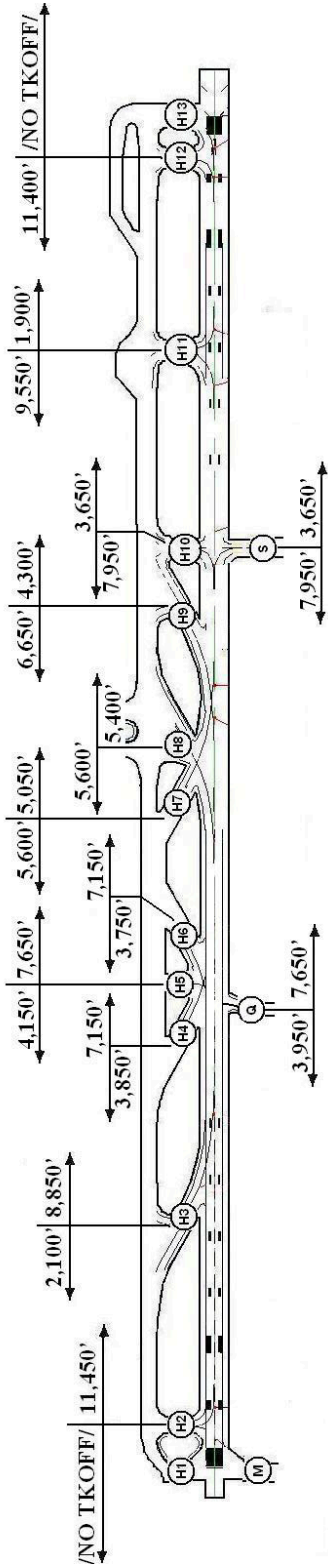

Runway 34R


- H1 = 11,700 FEET
- H2 = 11,450 FEET
- H3 = 8,850 FEET
- H4 = 7,150 FEET
- H5 = 7,650 FEET
- H6 = 7,150 FEET
- H7 = 5,050 FEET
- H8 = 5,400 FEET
- H9 = 4,300 FEET
- H10 = 3,650 FEET
- H11 = 1,900 FEET
- H12 = /NO TKOFF/
- Q = 7,650 FEET
- S = 3,650 FEET

Runway 16L


- H13 = 11,650 FEET
- H12 = 11,400 FEET
- H11 = 9,550 FEET
- H10 = 7,950 FEET
- H9 = 6,650 FEET
- H8 = 5,600 FEET
- H7 = 5,600 FEET
- H6 = 3,750 FEET
- H5 = 4,150 FEET
- H4 = 3,850 FEET
- H3 = 2,100 FEET
- H2 = /NO TKOFF/
- Q = 3,950 FEET
- S = 7,950 FEET

Appendix 3C. Runway 17/35 Distance Remaining Chart


RUNWAYS 17/35 AND 14/32 DISTANCE REMAINING

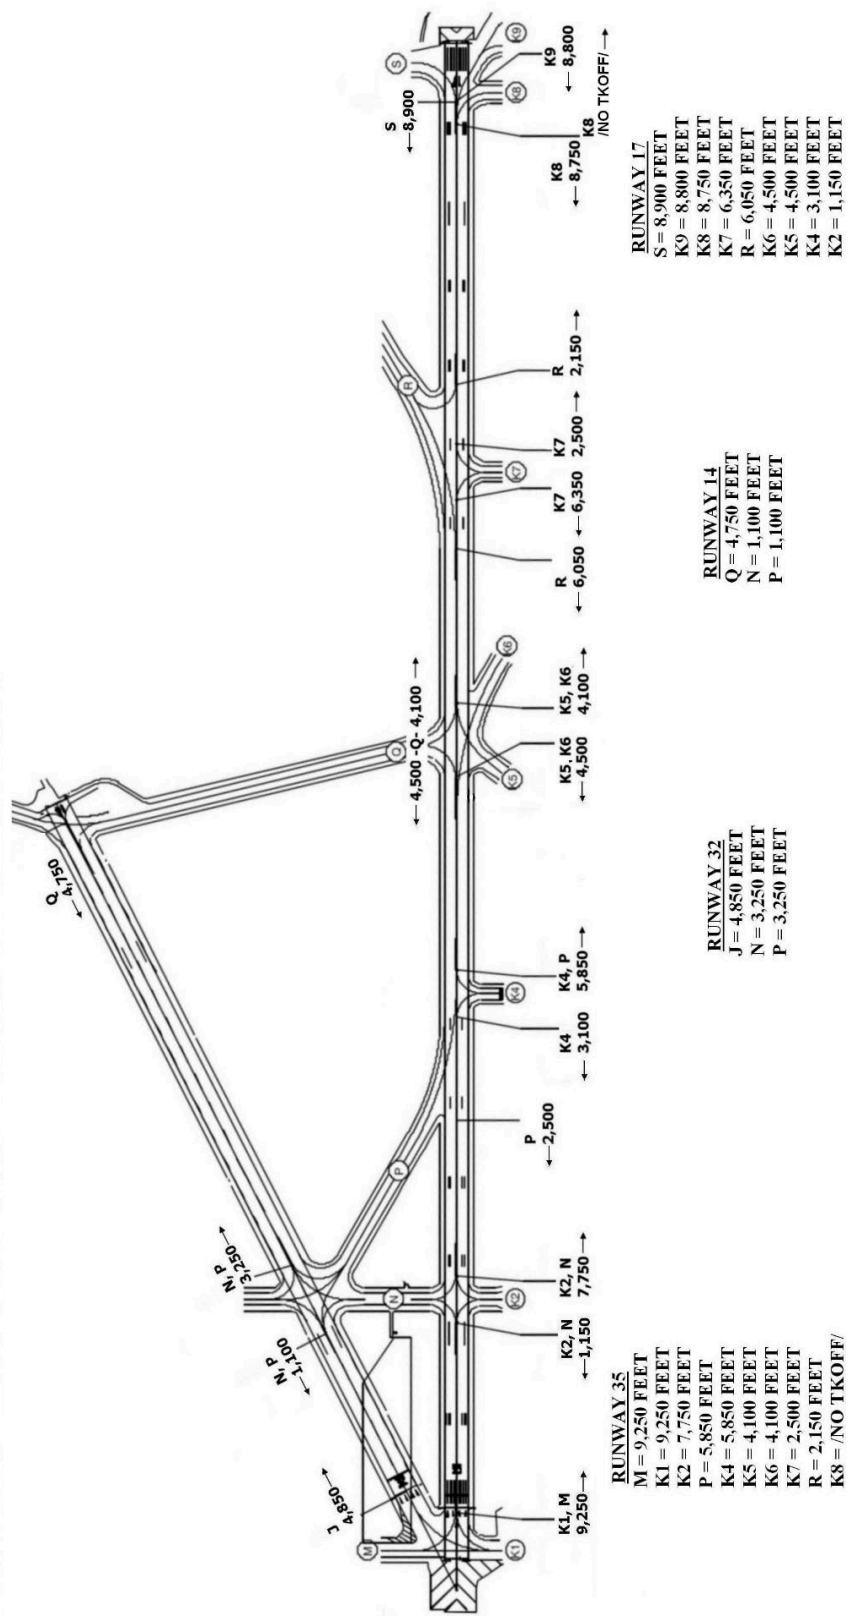


Appendix 3D. Ground Control Control Areas

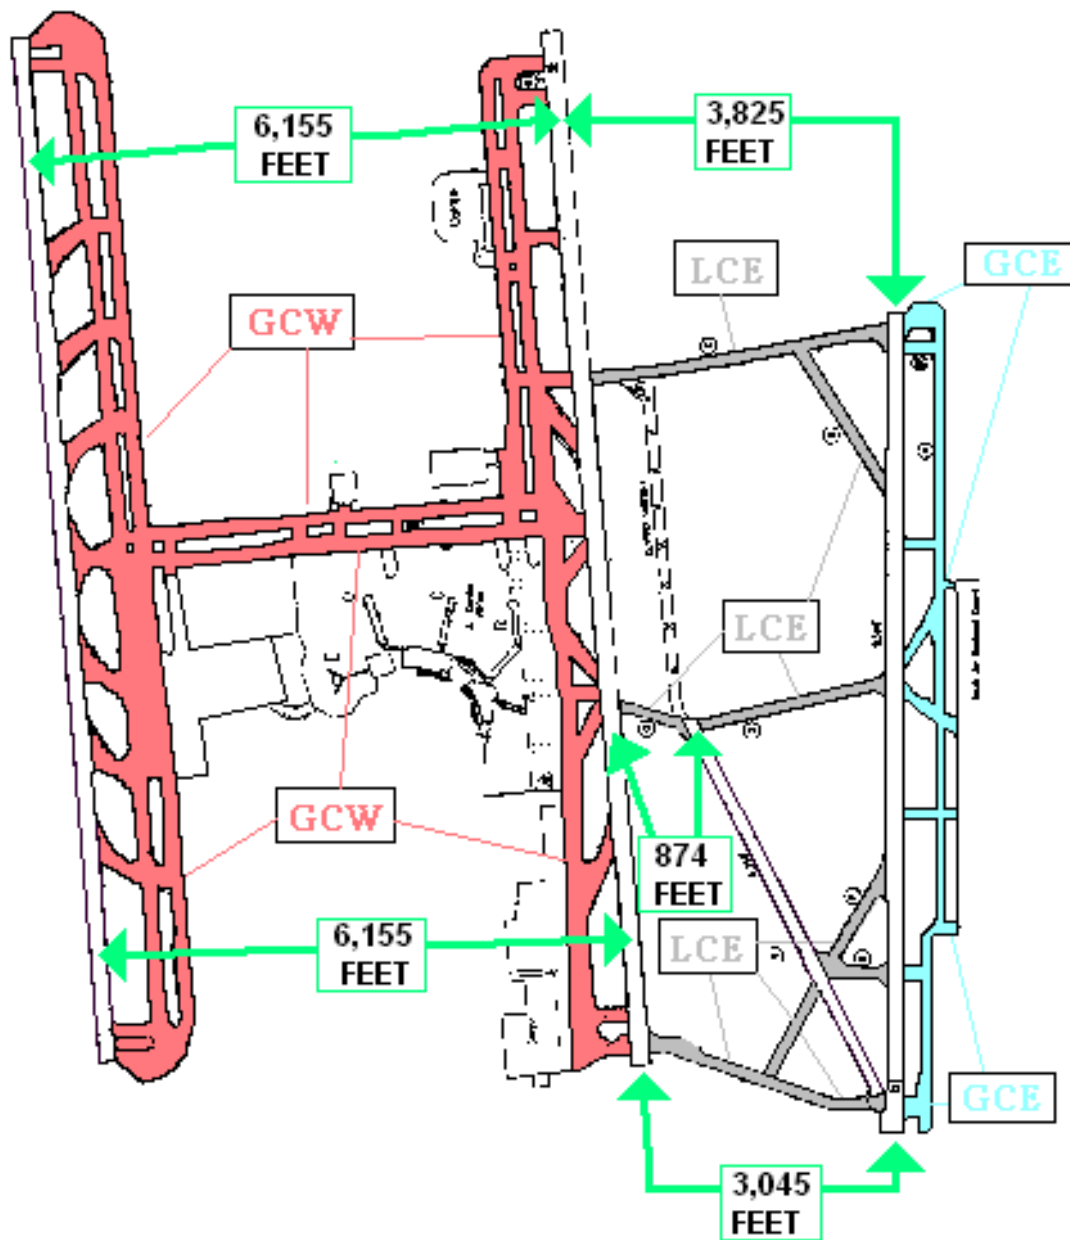


Appendix 4A. Ramp Appendix

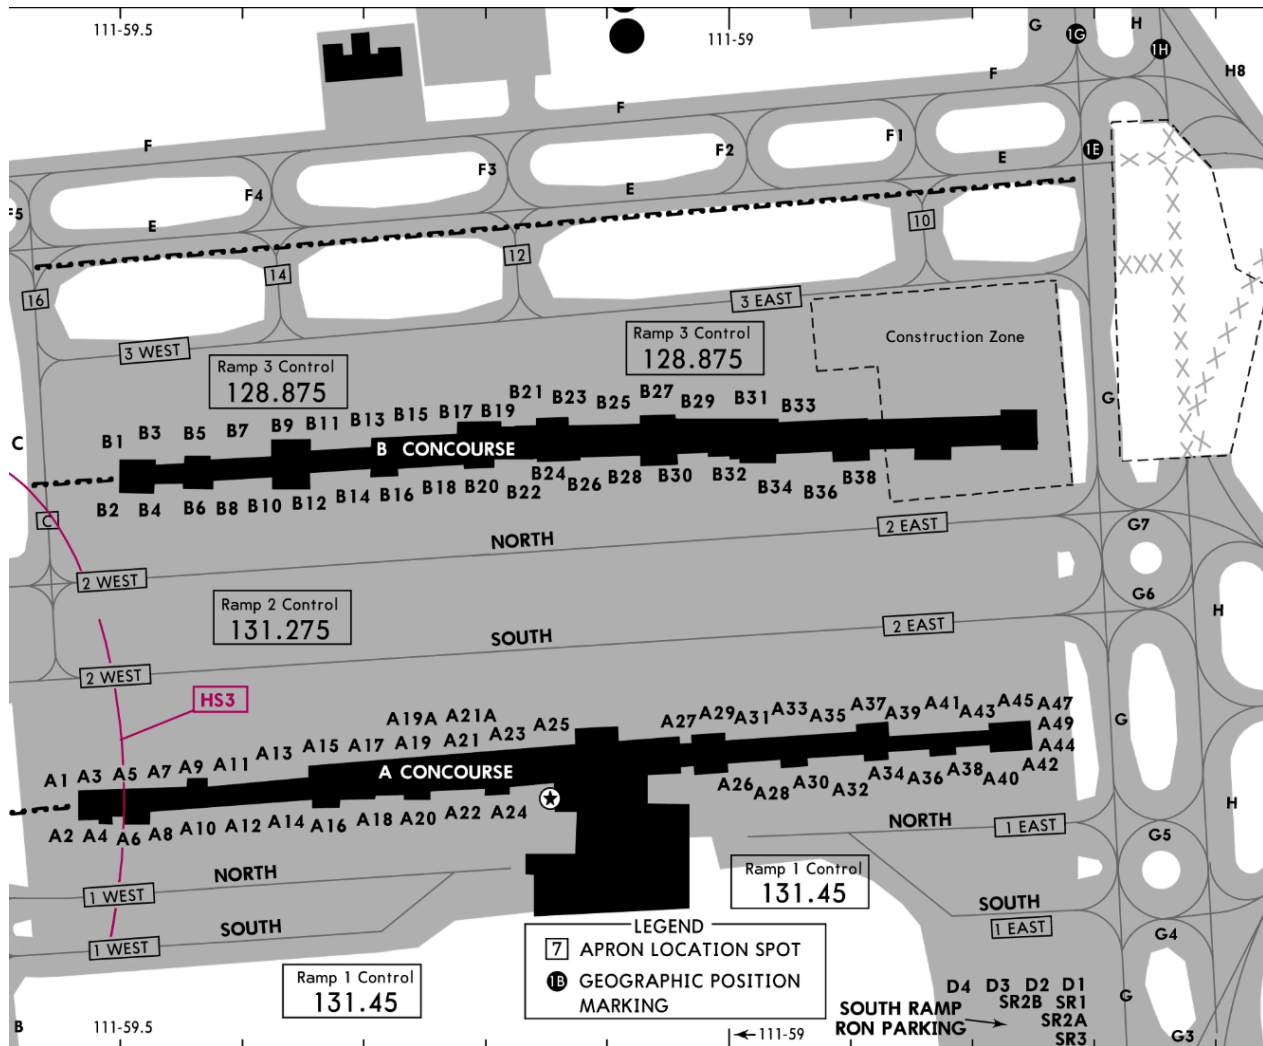


Appendix 4B. Runway 16L Deice Pad

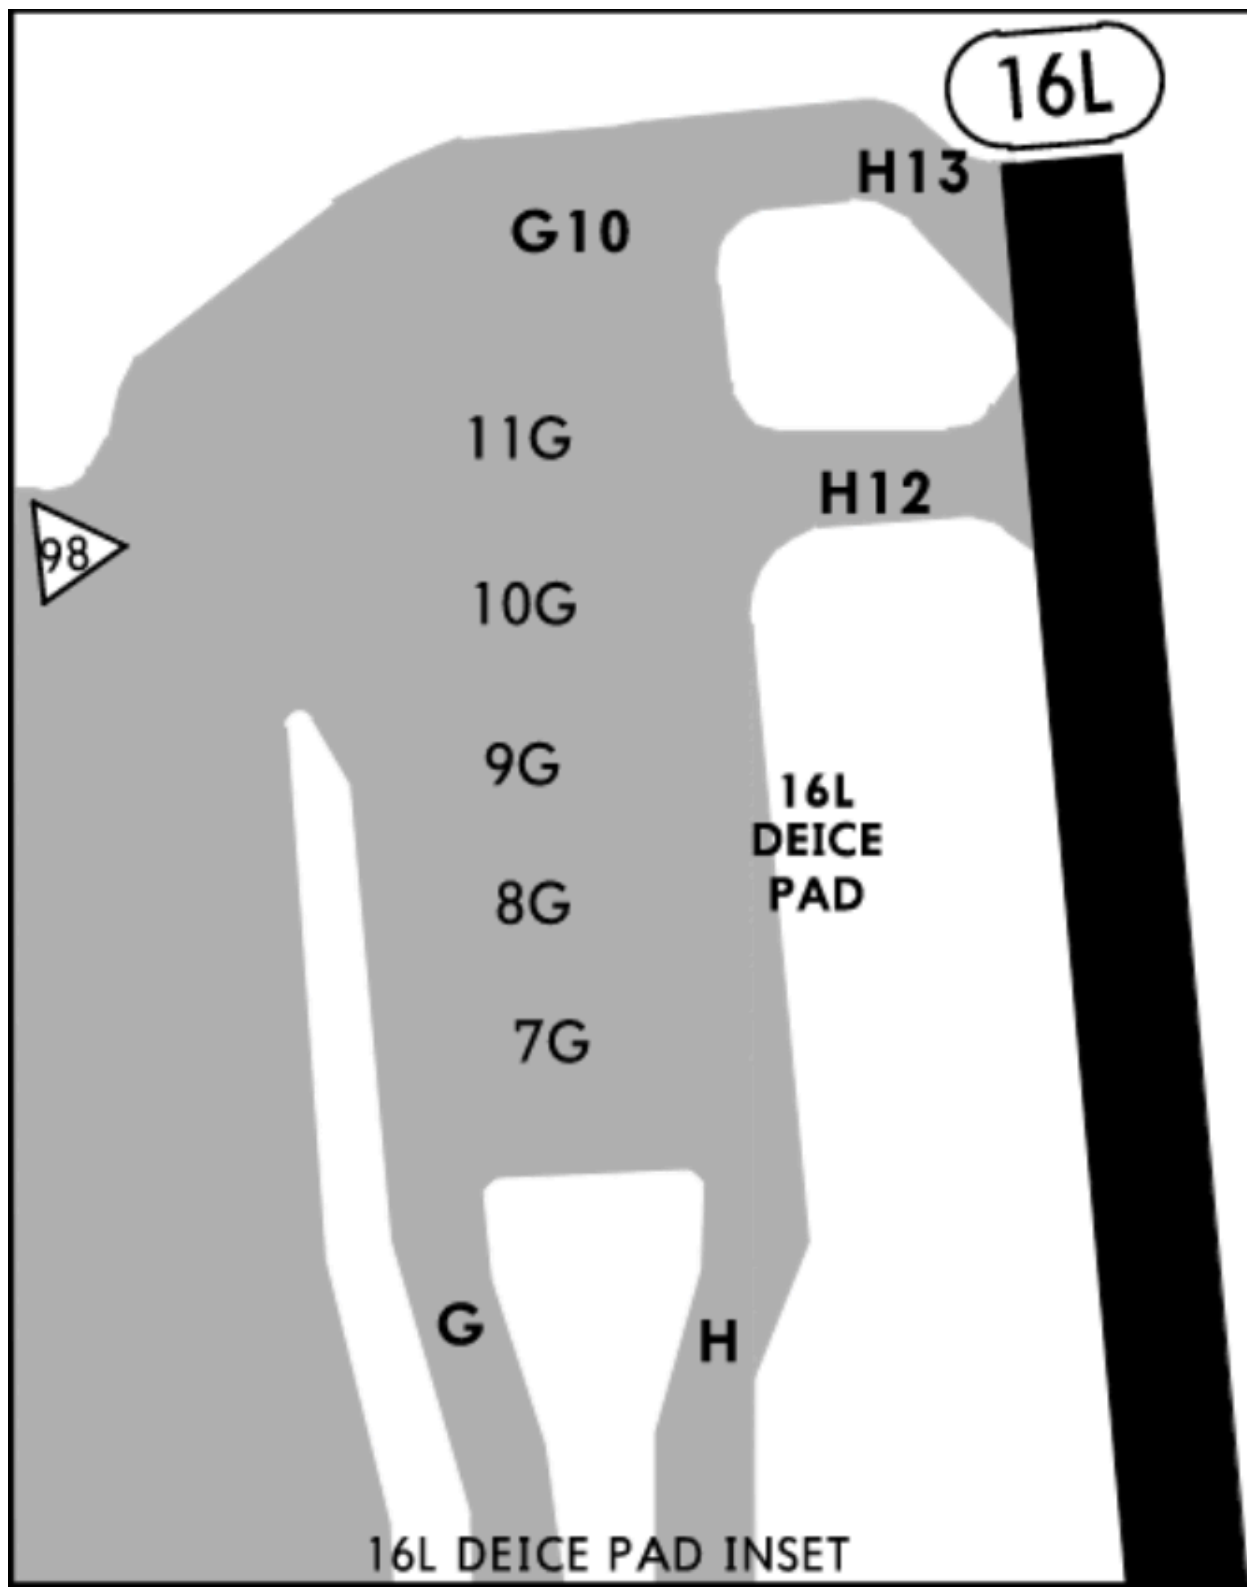

Appendix 4C. Runway 34L Deice Pad

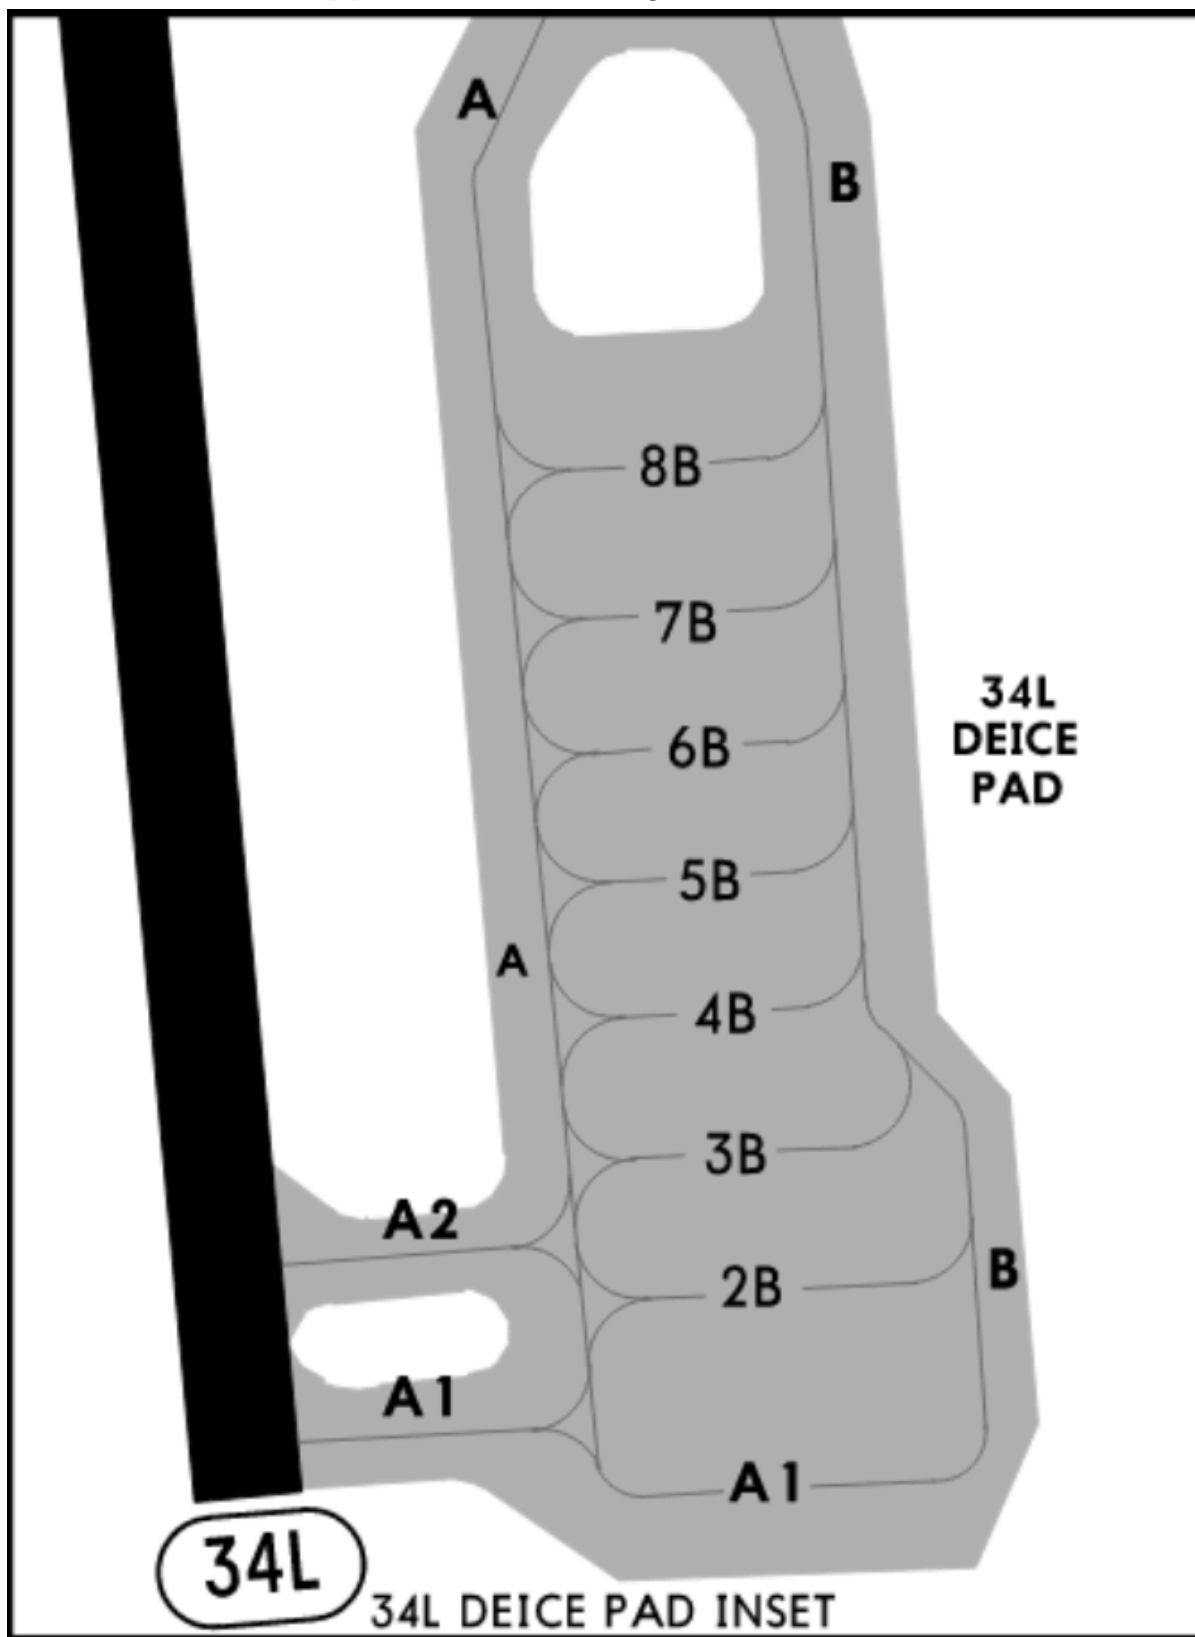

Appendix 4D. Runway 34R Deice Pad

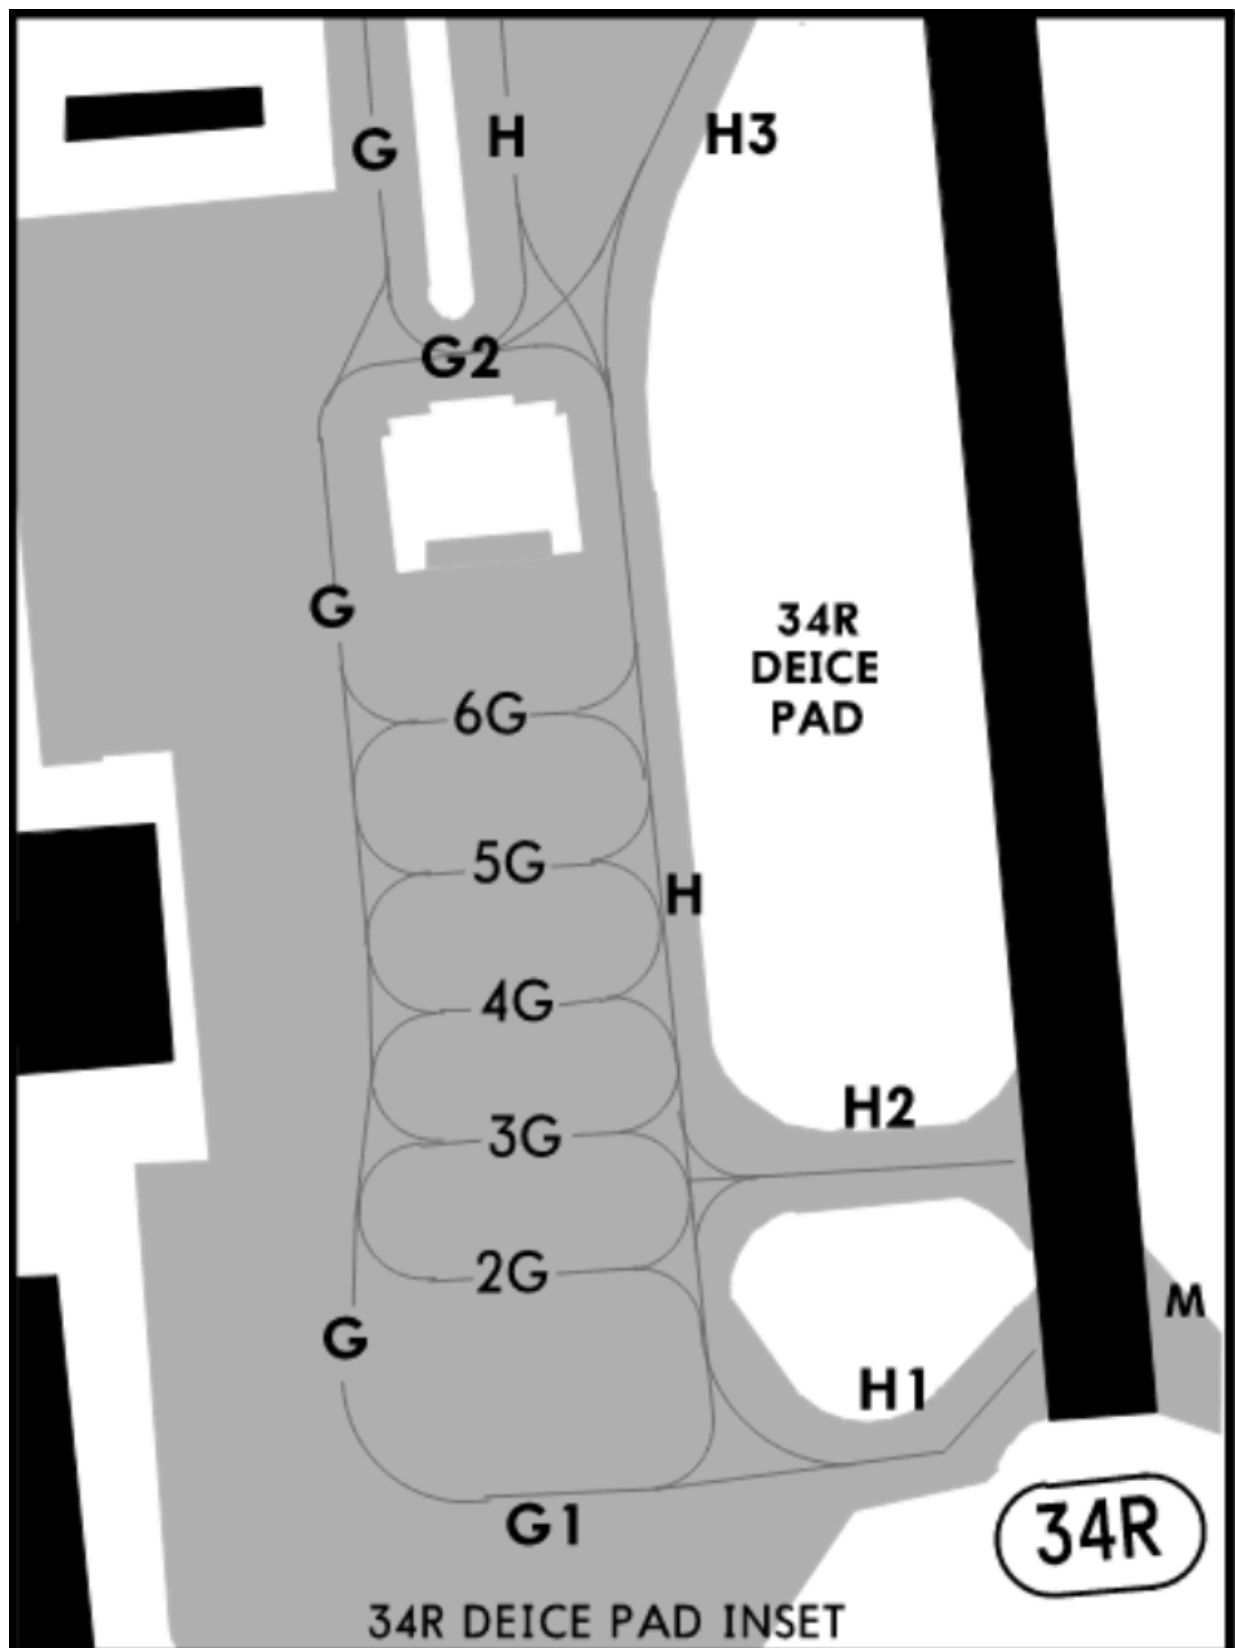

Appendix 4E. Taxiway L Deice Pad

