
Moving_code_to_flash_space

Step 1: Check for the Switch SW3 position1(default it will be in ON condition) is in ON condition before loading the code.

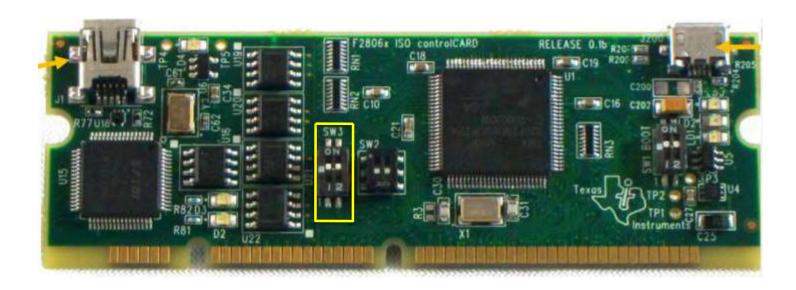


<u>Step 2:</u> In Workspace select **1 Flash (Optimization level 2, Flash build)** from the
¶ ▼ option as shown below,




Or, Go to Project -> Build Configuration -> Set Active-> 1 Flash (Optimization level 2, Flash build).

<u>Step 3:</u> To Load the code **Run -> Load -> Select Program to Load**.

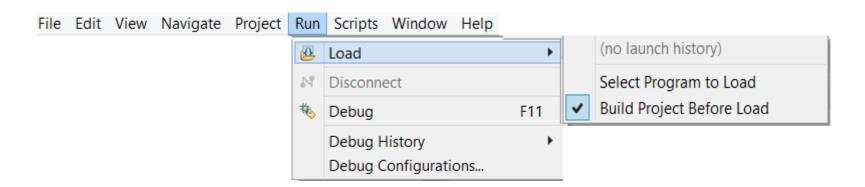

<u>Step 4:</u> Unplug the JTAG probe from controller and Switch off DRV8301 kit.

Step 5: Move the Switch SW3 position1 to down.

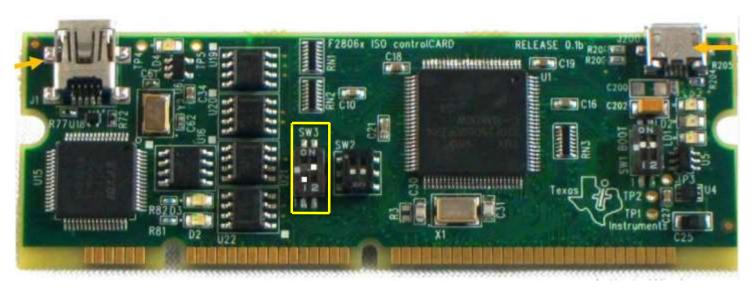

<u>Step 6:</u> Then turn on the kit . Now the program is loaded into the Flash memory.