


By podmienić A-tail w gotowym produkcie w SAP ME w menadzeze aktywności odszukujemy poniższą transakcję

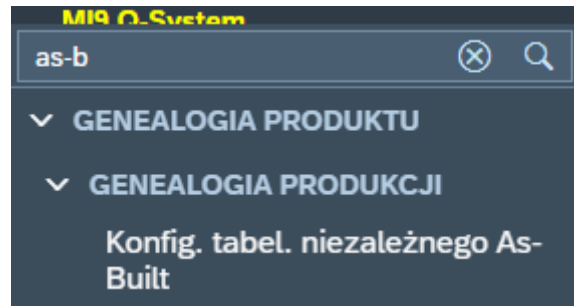

W oknie jak poniżej wpisujemy numer gotowego produktu, klikamy „Pobieranie”.

Component State: Assembled and Unassembled			
* SFC 7988236501291120			
Filter by Component			
Status: Done			
Retrieve			
BOM Component/Version	Actual Component/Version	Qty Assem/Qty Req	Assembly Data Details
7091130/A	7091130/A (Active)	1/1	External Serial: 709113097585254500
7981178/A	7981178/A (Active)	1/1	External Serial: 7981178565150104
7093236/A	7093236/A (Active)	1/1	External Serial: 7093236610137105
7964766/A	7964766/A (Active)	1/1	External Serial: WHP07600PSDPC9KQ0020251015W5WNSH0DDR3307964
7979751/A	7979751/A (Active)	1/1	External Serial: 7979751600364107
7093416/A	7093416/A (Active)	1/1	External Serial: 709341626402254600
7281117/A	7281117/A (Active)	1/1	External Serial: 7281117627677125
7281004/A		0/1	

Add Remove
Actions Clear

Wyskoczy lista wszystkich zeskanowanych A-taili. Zaznaczamy wybrany A-tail jak na zdjęciu powyżej i klikamy usuwanie.

Wyskoczy kolejne okno:

Remove component

As-Built Configuration

SFC: 7988236501291120 Status: Done

Material/Version: 7988236/A **Material Description:** ODU 150-AAWMOF-151.A1.04-230-V001

Routing/Version: **Routing Description:**

BOM/Version: 160014165989-7988236-3-1/A-1 **BOM Description:** 7988236

Assembly Details **Remove assembly details**

BOM Component/Vers.: 7093416/A * Qty to Remove: 1

Actual Component/Vers.: 7093416/A **Remove Operation:**

Qty Required: 1 **Remove Resource:**

Qty Assembled: 1

Assembly Operation: MBK_PAROWNIK

Assembly Resource:

Assembly Date/Time: Jan 19, 2026 10:46:14 PM

Assembled By: JSZB

Assembly Type: Manual

External Serial:

Klikamy przycisk „Zwrot”. System wróci do poprzedniego okna:

Component State Assembled and Unassembled			
★ SFC T968236501291120			
Filter by Component 		Retrieve	
SFC: T968236501291120	BOM Component/Version	Actual Component/Version	Status: Done
		Qty Assem/Qty Req	Assembly Data Details
☐	7091130/A	1/1	
☐			External Serial: 709113097585254500
☐	7981178/A	1/1	
☐			External Serial: 7981178565150104
☐	7093236/A	1/1	
☐			External Serial: 7093236610137105
☐	7964766/A	1/1	
☐			External Serial: VHP07600PDPCHWC00020251015/W5WNHSHDCR3307964766
☐	7979751/A	1/1	
☐			External Serial: 7979751600364107
☒	7093416/A	0/1	
☐	7281117/A	1/1	
☐			External Serial: 7281117627677125
☐	7281004/A	0/1	
☐	9695269/A	1/1	

Ponownie zaznaczamy wiersz z A-tailem który chcemy dodać i klikamy „Dodawanie”

Wyskoczy okno:

Add Component

As-Built Configuration

SFC: 7988236501291120 Status: Done

Material/Version: 7988236/A **Material Description:** ODU 150-A AWMOF-151.A1.04-230-V001

Routing/Version: **Routing Description:**

BOM/Version: 160014165989-7988236-3-1/A-1 **BOM Description:** 7988236

Component Details **Add Assembly Details**

* **Component:** 7093416 **Assembly Operation:** MBK_PAROWNIK

* **Version:** A **Assembly Resource:**

Description: Lamellenwärmeübertrager 7-25-3x4x6 LUVÉ **Qty Assembled:** 0

Qty Required: 1 * **Qty to Assemble:** 1

Ref Des:

Assembly Sequence: 4790 * **External Serial:** 709341626537254600

Component Type: Normal

Add **Cancel**

Wpisujemy numer seryjny poprawnego A-taila i klikamy „Dodaj”.

✓ Component added

* Site 1605

Component State: Assembled and Unassembled

* SFC: 7988236501291120

Filter by Component

SFC: 7988236501291120 Status: Done **Retrieve**

BOM Component/Version	Actual Component/Version	Qty Assem/Qty Req	Assembly Data Details
7091130/A	7091130/A (Active)	1/1	External Serial: 709113097585254500
7981178/A	7981178/A (Active)	1/1	External Serial: 7981178565150104
7093236/A	7093236/A (Active)	1/1	External Serial: 7093236610137105
7964766/A	7964766/A (Active)	1/1	External Serial: WHP07600P/SDPC/9KQ0020251015W5/WHSH/DDR3307964766
7979751/A	7979751/A (Active)	1/1	External Serial: 7979751600364107
7093416/A	7093416/A (Active)	1/1	External Serial: 709341626537254600
7981171/A		1/1	

Wyświetli się ponownie tabela w której zobaczymy potwierdzenie dokonanej zmiany.