

Sky Scout Trainer

LETTER landscape | 5 pattern tiles | 1 PDF unit = 1 mm

Print and assemble the paper templates

1. Select Actual size / 100%. Disable Fit, Shrink, borderless enlargement and duplex printing. Measure the calibration box: 50 mm wide and 10 mm tall. Do not cut if either measurement is wrong.
2. Keep each part's tiles together. Rows run top to bottom; columns run left to right. Adjacent tiles repeat 10 mm of geometry. Trim one sheet within the overlap, align the matching crosshairs and repeated outlines, then tape.
3. Solid dark lines are cuts. Dashed blue lines are fold / score / glue-seat guides, not through-cuts. Gray crosses and borders are paper alignment marks. This is not a balsa stock nesting plan.

Part list (use the thickness specified for each part)

Profile Fuselage: 3.175 mm sheet; 1 row(s) x 2 column(s).

Main Wing Panel: 1.587 mm sheet; 1 row(s) x 2 column(s).

Horizontal Stabilizer: 1.587 mm sheet; 1 row(s) x 1 column(s).

Build notes

Chord arc-length allowance applied. This is an approximate forming blank; sweep, taper and center folds need a prototype fit check.

Form the wing to the design chord, then dry-fit the wing and tail in their slots. Through-slots include clearance for the final assembled wing, but insertion paths and wood bending are not simulated. Check on scrap before cutting final stock. A separate fin or pylon needs a glue joint. Verify physical balance before a gentle test launch.

Dimensions are nominal. Cutting-tool kerf is not applied. Use measured stock thickness and test the fit. Glue, finish and actual wood density can change the mass and balance.

Current design checks - review before building

WARNING: Approximate Cambered Wing Blank. Chord arc-length allowance applied. This is an approximate forming blank; sweep, taper and center folds need a prototype fit check.

WARNING: Prototype the Relieved Center Joint. The slot includes relief from the assembled wing across the fuselage thickness. This checks the final position, not the insertion path or wood bending.


Calibration: 50 mm x 10 mm



Profile Fuselage | R1 C1 of 1 x 2

Sky Scout Trainer | 3.175 mm stock | Print 100% | 10 mm overlap

Solid: cut Dashed blue: guide Gray: paper registration (do not cut wood on gray marks)

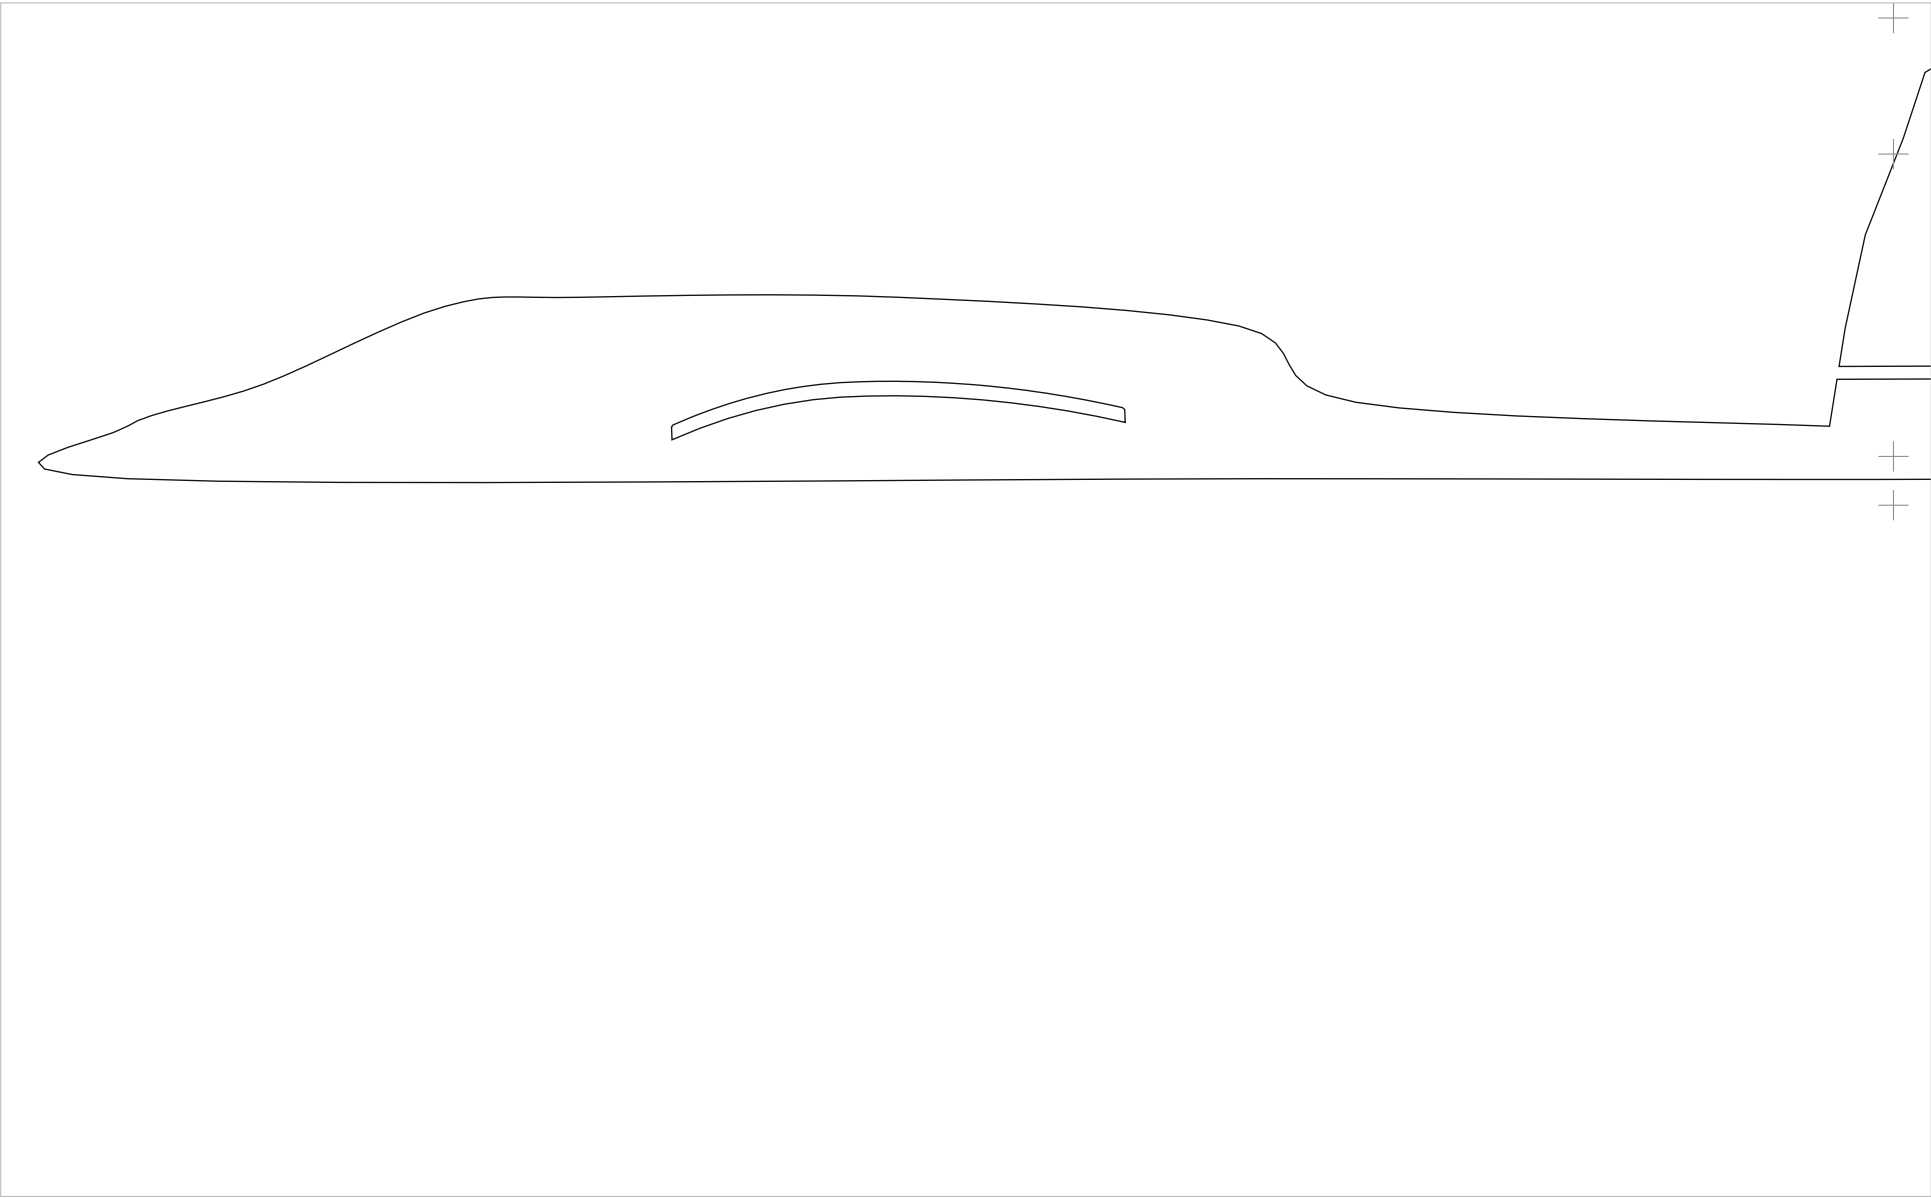


Calibration: 50 mm x 10 mm



Profile Fuselage | R1 C2 of 1 x 2

Sky Scout Trainer | 3.175 mm stock | Print 100% | 10 mm overlap

Solid: cut Dashed blue: guide Gray: paper registration (do not cut wood on gray marks)

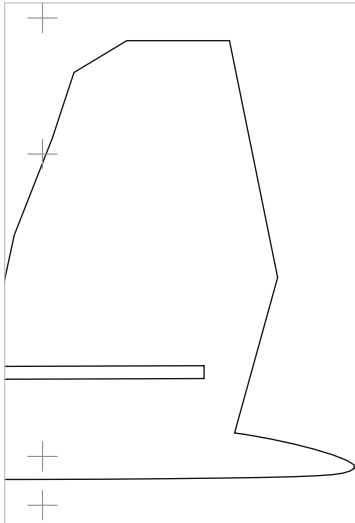


Calibration: 50 mm x 10 mm



Main Wing Panel | R1 C1 of 1 x 2

Sky Scout Trainer | 1.587 mm stock | Print 100% | 10 mm overlap

Solid: cut Dashed blue: guide Gray: paper registration (do not cut wood on gray marks)

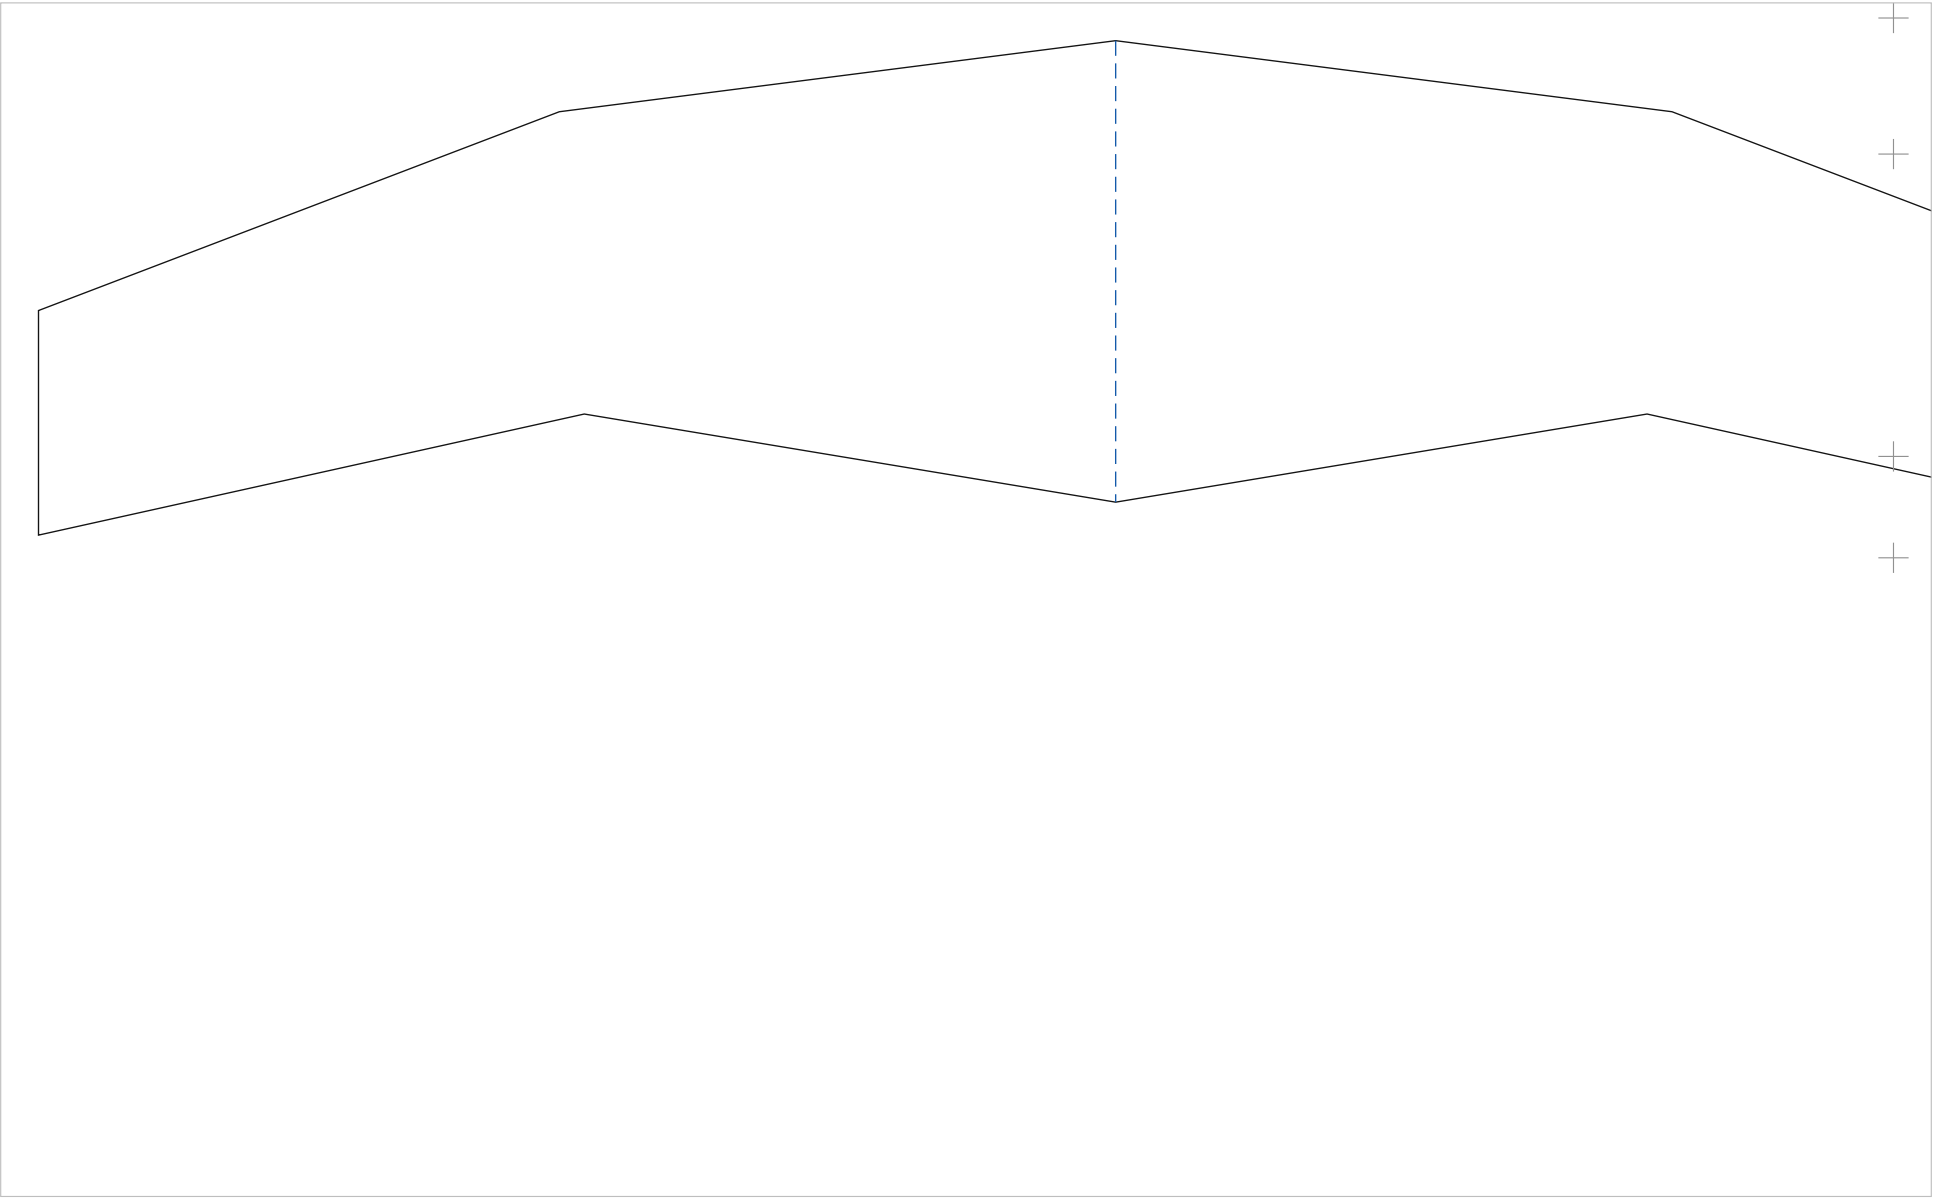

Calibration: 50 mm x 10 mm



Main Wing Panel | R1 C2 of 1 x 2

Sky Scout Trainer | 1.587 mm stock | Print 100% | 10 mm overlap

Solid: cut Dashed blue: guide Gray: paper registration (do not cut wood on gray marks)




Calibration: 50 mm x 10 mm



Horizontal Stabilizer | R1 C1 of 1 x 1

Sky Scout Trainer | 1.587 mm stock | Print 100% | 10 mm overlap

Solid: cut Dashed blue: guide Gray: paper registration (do not cut wood on gray marks)

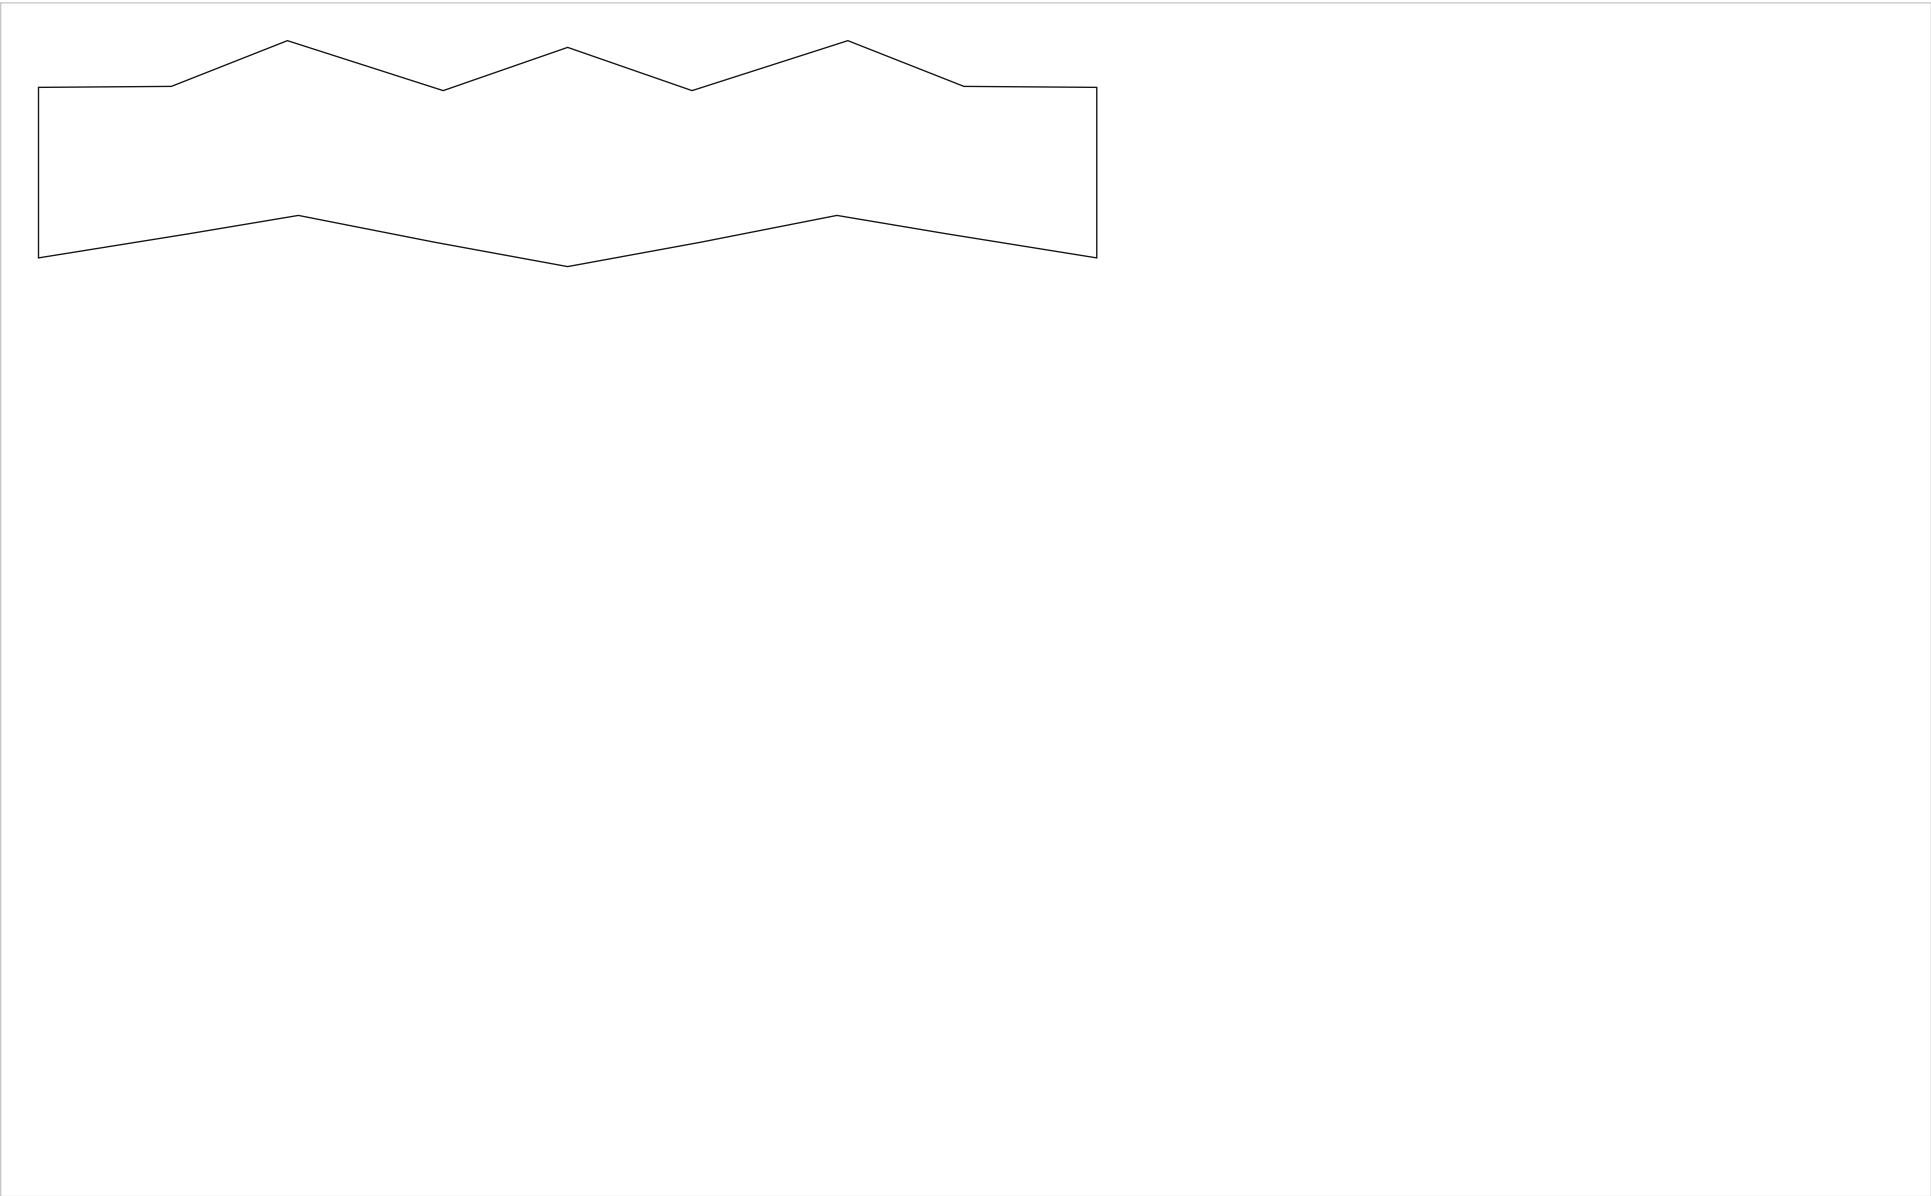

Calibration: 50 mm x 10 mm

