8 Experimental Vibrations

Experimental vibration testing requires the practitioner to understand the basics of testing hardware and digital signal processing.

8.1 Hardware for vibration testing

The measurements of vibrations requires specialized hardware. While an variety of vendors sell vibration measurement systems in a number of form factors, the general hardware requirements remain constant. To study the dynamic response of systems subjected to a wide range of excitation, the basic hardware requirements are: *Exciter* - A system to provide a measurable input to the system, *Transducers* - Sensors used for converting the mechanical movements of the structure, and *data acquisition* - Hardware for digitizing the the signal generated by the transducers.

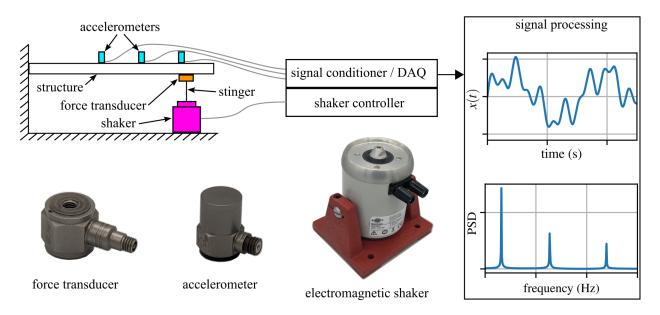


Figure 8.1: Key components for performing experimental modal analysis.

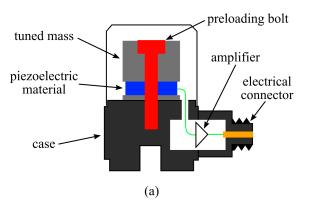




Figure 8.2: Integrated Electronics Piezo-Electric (IEPE) accelerometers, showing: (a) the cross section of a typical IEPE) accelerometer with key components annotated, and; (b) selection of IEPE accelerometers for various applications.

Table 1: Parameters for various IEPE accelerometers.

Tuble 1: I didincters for various ILI E decelerometers.					
parameter	accelerometers				
model number	PCB 393B31	PCB 393B04	PCB 352C67	PCB 352A21	PCB 352A92
Sensitivity(± 10 %)	10.0 V/g	1000 mV/g	100 mV/g	10 mV/g	0.25 mV/g
Measurement Range	\pm 0.5 g pk	\pm 5 g pk	\pm 50 g pk	\pm 500 g pk	\pm 20 kg pk
Frequency Range(± 5 %)	0.1 to 200 Hz	0.06 to 450 Hz	0.5 to 10 kHz	1.0 to 10 kHz	1.2 to 10 kHz
Resonant Frequency	>700 Hz	>2.5 kHz	>35 kHz	>50 kHz	>100 kHz
Non-Linearity	≤1%	≤1%	≤1%	≤1%	
Transverse Sensitivity	≤5%	≤5%	≤5%	≤5 %	

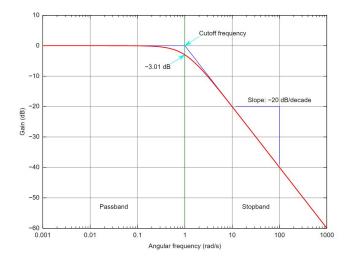


Figure 8.3: frequency rolloff.^a

^aPDerivative work: KrishnavedalaOriginal: Omegatron, CC BY-SA 3.0 https://creativecommons.org/licenses/by-sa/3.0, via Wikimedia Commons

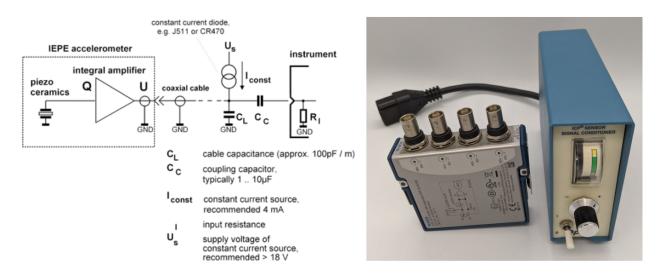


Figure 8.4: Integrated Electronics Piezo-Electric (IEPE)-based measurement system showing the: (a) simplified circuit schematic^a; and (b) IEPE data acquisition systems in various form factors.

A modal hammer is used to impart a measured impact into the structure. Figure 8.5 shows a model hammer with interchangeable tips and the responses generated by the tips.

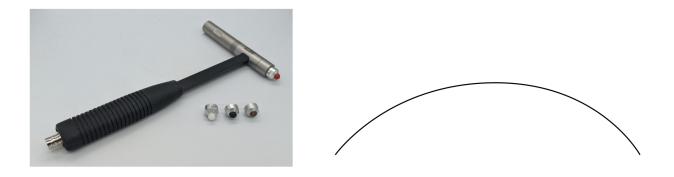


Figure 8.5: Model hammer with interchangeable tips.

^a"IEPE sensor connected to the input of an instrument" by JanBurg CC BY-SA 4.0

8.2 Digital Signal Processing

Review 8.1 Harry Nyquist (February 7, 1889? April 4, 1976) was a Swedish physicist and electronic engineer. His parents emigrated to the U.S. in 1907. He attended the University of North Dakota starting in 1912 where he obtained a B.S. in 1914 and an M.S. in 1915, both in electrical engineering (entry to M.S. was 3 years!). Thereafter, he went to Yale University where he received a Ph.D. in physics in 1917.



Figure 8.6: Picture of Harry Nyquist from the American Institute of Physics.^a

^aFair use, via Wikimedia Commons

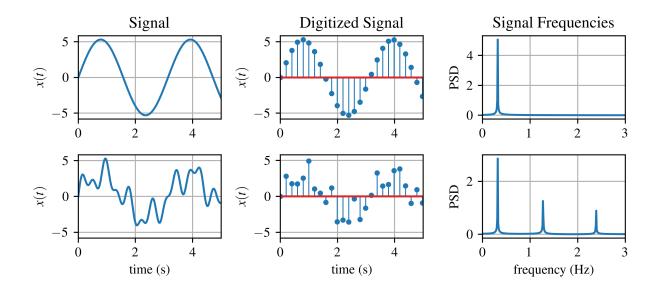


Figure 8.7: Digitization of two continuous time-series signals sampled at 5 S/s.

The Nyquist-Shannon sampling theorem is a theorem in the field of signal processing that defines the sample rate that permits a discrete sequence of samples (i.e. discrete-time) to sample a continuous-time signal of finite bandwidth.

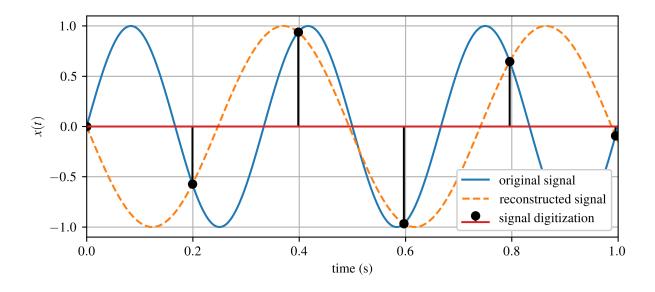


Figure 8.8: Aliasing of a 3 Hz signal that is sampled at 5 S/s.

In signal processing, aliasing is an effect that causes different signals to become indistinguishable from each other. In this way, the signals become an alias of one another when sampled. Aliasing also accounts for the development of distortion or artifact in a reconstructed signal when compared to the original continuous signal.

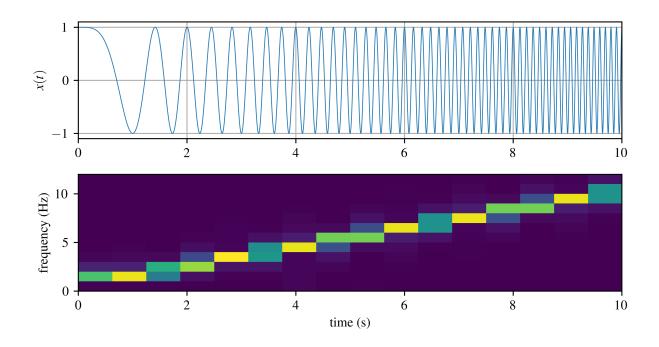


Figure 8.9: Spectrogram of a 0-10 Hz chirp signal.

Some of the key parameters in a spectrogram include:

- window
- segment length
- overlap

8.3 Frequency response function