A330	A330 DRIVER	REV 01 12.24	QRH NC

COCKPIT PREPARATION

GEAR PINS & COVERS.....REMOVED
FUEL QUANTITY.....___KG/LB
SEAT BELTS.....ON
ADIRS.....NAV
BARO REF.....___(BOTH)

BEFORE START

PARKING BRAKE.....___
T.O SPEEDS & THRUST.....___(BOTH)
WINDOWS.....CLOSED (BOTH)
BEACON.....ON

AFTER START

ANTI ICE.....___
ECAM STATUS.....CHECKED
PITCH TRIM.....___%
RUDDER TRIM.....CHECKED

TAXI

FLIGHT CONTROLS.....CHECKED (BOTH)
FLAPS SETTING.....CONF___(BOTH)
RADAR & PRED W/S.....ON & AUTO
ENG START SEL.....___
ECAM MEMO.....T.O NO BLUE

LINE-UP

T.O RWY.....___(BOTH)
TCAS.....___
PACKS 1 & 2.....___

<<DEPARTURE CHANGE>>

RWY & SID.....___
FLAPS SETTING.....CONF___(BOTH)
T.O SPEEDS & THRUST.....___(BOTH)
FCU ALT.....___

Use if a change of RWY or SID occurs after the initial T.O briefing

APPROACH

BARO REF.....___(BOTH)
SEAT BELTS.....ON
MINIMUM.....___
AUTO BRAKE.....___
ENG START SEL.....___

LANDING

ECAM MEMO.....LDG NO BLUE

AFTER LANDING

RADAR & PRED W/S.....OFF

PARKING

PARKING BRAKE OR CHOCKS.....___SET
ENGINES.....OFF
FUEL PUMPS.....OFF

SECURING THE AIRCRAFT

OXYGEN.....OFF
EMER EXIT LT.....OFF
BATTERIES.....OFF

TAKEOFF CG / TRIM POSITION

A330-200

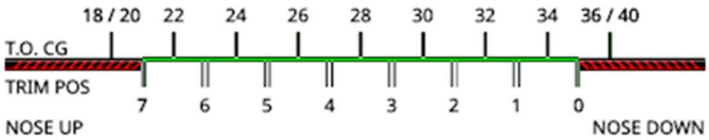

A330-300

Airbus Smarter Briefing

The smarter briefing concept provides an easy to use briefing concept, which ensures both crew members have the same mental image during operations.
Before conducting the briefing, always crosscheck the FMS first.
Bullet Points are enough, a longer briefing is not necessarily a better one!

DEPARTURE BRIEFING

PF	PM
	T.O RWY (INTC) SID DESIGNATOR First Cleared Altitude MSA/MORA on SID Extra fuel & time
Hotspots of taxi route Stop margin for RTO EOSID Return/Diversion Special Operation Non-standard operation	
	THREATS
THREATS	
MITIGATIONS MISCELLANEOUS	

ARRIVAL BRIEFING

PF	PM
	STAR/TRANS DESIGNATOR MSA/MORA on STAR RWY & APPR TYPE MINIMUM Go-Around trajectory Extra fuel & time
Guidance for Approach Landing flaps setting Stop margin Use of reverse thrust Use of autobrake Planned RWY exit Hotspots for taxi-in Special Operation Non-Standard Operation	
	THREATS
THREATS	
MITIGATIONS MISCELLANEOUS	

SINGLE ENGINE TAXI OUT GUIDELINE

Consider Single Engine Taxi Out (SETO) if the estimated taxi time is 15 minutes or greater.
To avoid thermal shock and to avoid jet blast, operate any engine at no more than 40% N1. If more brake away thrust is needed, set the parking brake and start the remaining engine.
Respect the engine warm up time before takeoff (GE: 3 min, RR 5 min if engine is cold or 3 min if warm).

Procedure is not recommended:
On slippery taxiways
Uphill slopes
Gross Weight above 220t
Low Visibility Operation
Strong winds exist
When crossing a runways

ENG 1.....START

When ENG 1 is stabilized

X-BLEED.....OPEN
APU BLEED.....OFF
APU.....KEEP RUNNING
AFTER START NORMAL PROCEDURE (EXCEPT ECAM STS).....APPLY
GRND EQUIPMENT.....REMOVED
TAXI NORMAL PROCEDURE.....APPLY
- Delay flight controls check until all Engines started
- Arm autobrake after flight controls check

ENG WARM-UP TIME (REMAINING ENG: GE 3min, RR 5min).....ANTICIPATE

For ENG 2 start and when taxiing in a straight line

APU BLEED.....ON
START SELECTOR.....IGN/START
ENG 2.....START

When ENG 2 is stabilized

CHRONO (WARM-UP TIME GE 3min, RR 5min).....START
START SELECTOR.....NORM
APU.....AS RQRD
X-BLEED.....AUTO
AFTER START NORMAL PROCEDURE.....APPLY
- ECAM STS check perform
- Anti-Ice as required

AFTER START CHECKLIST.....COMPLETE
FLIGHT CONTROLS.....CHECK
AUTO BRK.....MAX

Resume Normal Operations

SINGLE ENGINE TAXI IN GUIDELINE

Use Single Engine Taxi In (SETI) if the expected taxi in time is 2 minutes or greater.
Procedure not recommended in icing conditions, slippery taxiways, uphill slopes and at high GW.
Observe Engine cooldown requirements (GE 3min, RR 1min)

APU.....CONFIRM AVAIL
ENG 2.....SHUT DOWN