



Maintenance Schedule

Diesel engine
12V/16V/18V2000Gx6F
Application group 3D

MS50163/04E

Engine model	kW/cyl.	Application group
12V2000G76F	61 kW/cyl.	3D, Emergency Standby power, IFN
12V2000G86F	73,9 kW/cyl.	3D, Emergency Standby power, IFN
16V2000G76F	61,2 kW/cyl.	3D, Emergency Standby power, IFN
16V2000G86F	68,8 kW/cyl.	3D, Emergency Standby power, IFN
18V2000G76F	68,6 kW/cyl.	3D, Emergency Standby power, IFN

Table 1: Applicability

Rolls-Royce Solutions refers to Rolls-Royce Solutions GmbH or an affiliated company pursuant to § 15 AktG (German Stock Corporation Act) or a controlled company (joint venture), and Rolls-Royce Solutions Ruhstorf GmbH.

© Copyright Rolls-Royce Solutions

This publication is protected by copyright and may not be used in any way, whether in whole or in part, without the prior written consent of Rolls-Royce Solutions. This particularly applies to its reproduction, distribution, editing, translation, microfilming and storage and/or processing in electronic systems including databases and online services.

All information in this publication was the latest information available at the time of going to print. Rolls-Royce Solutions reserves the right to change, delete or supplement the information provided as and when required.

Table of contents

1	Maintenance Schedule		
1.1	Preface	4	
1.2	Maintenance task tolerances	5	
1.3	Load profile	6	
1.4	Noncyclical maintenance tasks		7
1.5	Maintenance Schedule Matrix 9000 HRS		8
1.6	Cyclical maintenance tasks 9000 HRS		10

DCL-IB-0000000000-000

1 Maintenance Schedule

1.1 Preface

This manual provides instructions for your product manufactured by Rolls-Royce Solutions.

Maintenance concept

The maintenance system for Rolls-Royce Solutions products is based on a preventive maintenance concept. Preventive maintenance facilitates advance operational planning and ensures a high level of operational availability. The maintenance intervals as well as the required maintenance task scopes are based on operational experience and are therefore to be considered as recommendations. Additional maintenance work and/or changes to the maintenance intervals may be required in the case of demanding operational and ambient conditions.

Observance of the specified maintenance intervals is essential to maintain product safety.

The intervals at which the maintenance tasks are to be performed are specified as operating hours and time limits. Whichever value is reached first shall apply.

The maintenance intervals are determined and verified by the load profile. Load profiles can be evaluated by the Service Partner of Rolls-Royce Solutions. Reading out load profile data is recommended for the first time after between 500 and 1000 operating hours depending on the application concerned, or after changing the duty profile or operating area.

The individual maintenance intervals are assigned to the qualification levels QL1 to QL4.

QL1: Operational monitoring and maintenance work which does not require disassembly of the product

QL2: Exchange of components and parts in case of repair (corrective only, not part of the maintenance schedule)

QL3: Maintenance work which requires partial disassembly of the product

QL4: Maintenance work which requires complete disassembly of the product

Additional notes on maintenance and preservation:

Maintenance activities stipulated in any documentation provided by third-parties (suppliers and component manufacturers), particularly those relating to individual components and subsystems, may differ from the information specified in this Maintenance Schedule. The Maintenance Schedule provided by Rolls-Royce Solutions shall take precedence in such case.

The relevant component manufacturer's instructions apply with respect to the maintenance of any components which do not appear in this maintenance schedule.

Refer to the applicable Fluids and Lubricants Specifications for details of fluid and lubricant change intervals.

If the product is to remain out of service for a longer period of time, Rolls-Royce Solutions recommends carrying out a monthly test run until the engine has reached its normal operating temperature. If the engine is scheduled to remain out of service for more than 1 month, carry out engine preservation procedures in accordance with the Preservation and Represervation Specifications.

The latest version of the specifications is available at <http://www.mtu-solutions.com>.

TM-ID: 000004281 - 014

1.2 Maintenance task tolerances

Maintenance tasks shall be completed within certain tolerances comprising a percentage and a maximum value, whereby the smaller value shall apply. Taking full advantage of such tolerances does not influence the scheduled timing of the ensuing maintenance task.

Interval (HRS)/limit	Limit in %	Limit max.
Operating hours	± 10%	± 500 hrs
Years	± 10%	± 30 days
Example 1	Task every 1000 hrs	Between 900 hrs and 1100 hrs (10% of 1000 hrs)
Example 2	Task every 30000 hrs	Between 29500 hrs and 30500 hrs (10% of 30000 hrs, but max. 500 hrs)

1.3 Load profile

Load profile		Load profile					
Load %	Time %	Load factor %	Load indicator %	46 to 77 kW/cyl.			
110 ₍₁₀₀₋₁₁₀₎	—	≤ 90	≤ 39	9,000	—	—	—
100 ₍₉₀₋₁₀₀₎	5						
90 ₍₈₀₋₉₀₎	95						
80 ₍₆₅₋₈₀₎	—						
65 ₍₅₀₋₆₅₎	—						
50 ₍₃₀₋₅₀₎	—						
30 ₍₅₋₃₀₎	—						
Idle speed ₍₀₋₅₎	—						

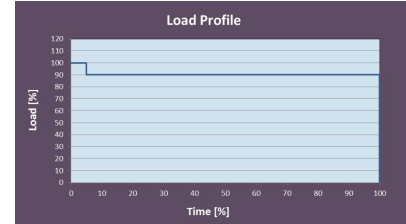


Table 2: Load profile

1.4 Noncyclical maintenance tasks

No.	Qualification	Task	Maintenance tasks	Reference task	Offset	Value	Unit	Option
0010	QL1	WM00094	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		0	1000	HRS	
Reference task: Name of the maintenance task the offset refers to Offset: Interval of a maintenance task which depends on another interval Value: Fixed value for binding execution of a maintenance task								