



Maintenance Schedule

Diesel engine

12V4000P83

16V4000P83

20V4000P83

Application group 3A 3B 3C

MS50247/03E



A Rolls-Royce
solution

Engine model	Cylinder power	Application Group
12V4000P83	121 kW/cyl.	3A, Heavy duty, unrestricted, ICXN
12V4000P83	140 kW/cyl.	3B, Continuous service, variable load, ICXN
12V4000P83	140 kW/cyl.	3C, Time-limited operation, ICXN
16V4000P83	121 kW/cyl.	3A, Heavy duty, unrestricted, ICXN
16V4000P83	140 kW/cyl.	3B, Continuous service, variable load, ICXN
16V4000P83	140 kW/cyl.	3C, Time-limited operation, ICXN
20V4000P83	121 kW/cyl.	3A, Heavy duty, unrestricted, ICXN
20V4000P83	140 kW/cyl.	3B, Continuous service, variable load, ICXN
20V4000P83	140 kW/cyl.	3C, Time-limited operation, ICXN

Table 1: Applicability

Rolls-Royce Solutions refers to Rolls-Royce Solutions GmbH or an affiliated company pursuant to §15 AktG (German Stock Corporation Act) or a controlled company (joint venture), and Rolls-Royce Solutions Ruhstorf GmbH.

© Copyright Rolls-Royce Solutions

This publication is protected by copyright and may not be used in any way, whether in whole or in part, without the prior written consent of Rolls-Royce Solutions. This particularly applies to its reproduction, distribution, editing, translation, microfilming and storage and/or processing in electronic systems including databases and online services.

All information in this publication was the latest information available at the time of going to print. Rolls-Royce Solutions reserves the right to change, delete or supplement the information provided as and when required.

Table of contents

1	Maintenance Schedule		1.9	Maintenance Schedule Matrix 27000 HRS	27
1.1	Preface	4	1.10	Cyclical maintenance tasks 27000 HRS	32
1.2	Maintenance task tolerances	5	1.11	Maintenance Schedule Matrix 21000 HRS	35
1.3	Allocation matrix application group 3A, 3B, 3C	6	1.12	Cyclical maintenance tasks 21000 HRS	40
1.4	Noncyclical maintenance tasks	8	1.13	Maintenance Schedule Matrix 18000 HRS	43
1.5	Maintenance Schedule Matrix 36000 HRS	9	1.14	Cyclical maintenance tasks 18000 HRS	48
1.6	Cyclical maintenance tasks 36000 HRS	16	1.15	Maintenance Schedule Matrix 15000 HRS	51
1.7	Maintenance Schedule Matrix 30000 HRS	19	1.16	Cyclical maintenance tasks 15000 HRS	54
1.8	Cyclical maintenance tasks 30000 HRS	24	1.17	Maintenance Schedule Matrix 9000 HRS	57
			1.18	Cyclical maintenance tasks 9000 HRS	60

1 Maintenance Schedule

1.1 Preface

This manual provides instructions for your product manufactured by Rolls-Royce Solutions.

Maintenance concept

The maintenance system for Rolls-Royce Solutions products is based on a preventive maintenance concept. Preventive maintenance facilitates advance operational planning and ensures a high level of operational availability. The maintenance intervals as well as the required maintenance task scopes are based on operational experience and are therefore to be considered as recommendations. Additional maintenance work and/or changes to the maintenance intervals may be required in the case of demanding operational and ambient conditions.

Observance of the specified maintenance intervals is essential to maintain product safety.

The intervals at which the maintenance tasks are to be performed are specified as operating hours and time limits. Whichever value is reached first shall apply.

The maintenance intervals are determined and verified by the load profile. Load profiles can be evaluated by the Service Partner of Rolls-Royce Solutions. Reading out load profile data is recommended for the first time after between 500 and 1000 operating hours depending on the application concerned, or after changing the duty profile or operating area.

The individual maintenance intervals are assigned to the qualification levels QL1 to QL4.

QL1: Operational monitoring and maintenance work which does not require disassembly of the product

QL2: Exchange of components and parts in case of repair (corrective only, not part of the maintenance schedule)

QL3: Maintenance work which requires partial disassembly of the product

QL4: Maintenance work which requires complete disassembly of the product

Additional notes on maintenance and preservation:

Maintenance activities stipulated in any documentation provided by third-parties (suppliers and component manufacturers), particularly those relating to individual components and subsystems, may differ from the information specified in this Maintenance Schedule. The Maintenance Schedule provided by Rolls-Royce Solutions shall take precedence in such case.

The relevant component manufacturer's instructions apply with respect to the maintenance of any components which do not appear in this maintenance schedule.

Refer to the applicable Fluids and Lubricants Specifications for details of fluid and lubricant change intervals.

If the product is to remain out of service for a longer period of time, Rolls-Royce Solutions recommends carrying out a monthly test run until the engine has reached its normal operating temperature. If the engine is scheduled to remain out of service for more than 1 month, carry out engine preservation procedures in accordance with the Preservation and Represervation Specifications.

The latest version of the specifications is available at <http://www.mtu-solutions.com>.

1.2 Maintenance task tolerances

Maintenance tasks shall be completed within certain tolerances comprising a percentage and a maximum value, whereby the smaller value shall apply. Taking full advantage of such tolerances does not influence the scheduled timing of the ensuing maintenance task.

Interval (HRS)/limit	Limit in %	Limit max.
Operating hours	± 10%	± 500 hrs
Years	± 10%	± 30 days
Example 1	Task every 1000 hrs	Between 900 hrs and 1100 hrs (10% of 1000 hrs)
Example 2	Task every 30000 hrs	Between 29500 hrs and 30500 hrs (10% of 30000 hrs, but max. 500 hrs)

1.3 Allocation matrix application group 3A, 3B, 3C

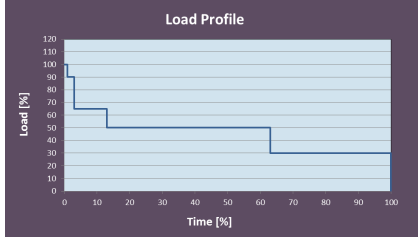
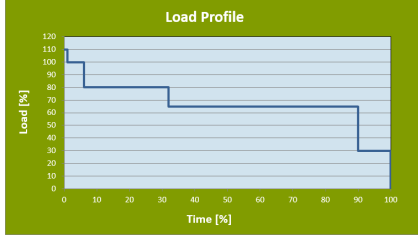
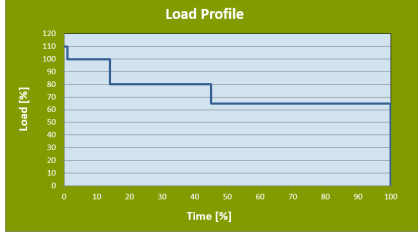
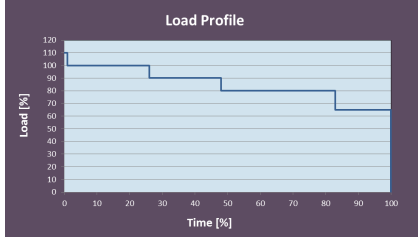
Load profile		Load factor %	Load indicator %	0 to 121 kW/cyl.	122 to 140 kW/cyl.	—	—	
Load %	Time %							
110 ₍₁₀₀₋₁₁₀₎	—	0 to 45	≤ 3	36,000	30,000	—	—	
100 ₍₉₀₋₁₀₀₎	1							
90 ₍₈₀₋₉₀₎	2							
80 ₍₆₅₋₈₀₎	—							
65 ₍₅₀₋₆₅₎	10							
50 ₍₃₀₋₅₀₎	50							
30 ₍₅₋₃₀₎	37							
Idle speed ₍₀₋₅₎	—							
110 ₍₁₀₀₋₁₁₀₎	1	46 to 68	≤ 12	30,000	27,000	—	—	Standard 3A and 3B 
100 ₍₉₀₋₁₀₀₎	5							
90 ₍₈₀₋₉₀₎	—							
80 ₍₆₅₋₈₀₎	26							
65 ₍₅₀₋₆₅₎	58							
50 ₍₃₀₋₅₀₎	—							
30 ₍₅₋₃₀₎	10							
Idle speed ₍₀₋₅₎	—							
110 ₍₁₀₀₋₁₁₀₎	1	69 to 75	≤ 20	27,000	21,000	—	—	Standard 3C 
100 ₍₉₀₋₁₀₀₎	13							
90 ₍₈₀₋₉₀₎	—							
80 ₍₆₅₋₈₀₎	31							
65 ₍₅₀₋₆₅₎	55							
50 ₍₃₀₋₅₀₎	—							
30 ₍₅₋₃₀₎	—							
Idle speed ₍₀₋₅₎	—							
110 ₍₁₀₀₋₁₁₀₎	1	76 to 85	≤ 40	21,000	18,000	—	—	
100 ₍₉₀₋₁₀₀₎	25							
90 ₍₈₀₋₉₀₎	22							
80 ₍₆₅₋₈₀₎	35							
65 ₍₅₀₋₆₅₎	17							
50 ₍₃₀₋₅₀₎	—							
30 ₍₅₋₃₀₎	—							
Idle speed ₍₀₋₅₎	—							

Table 2: Allocation matrix application group 3A, 3B, 3C

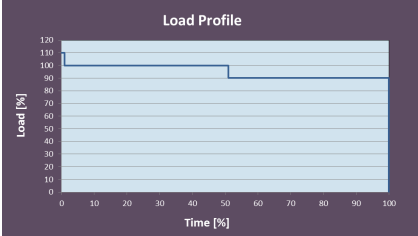
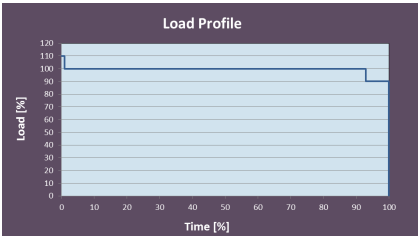
Load profile		Load factor %	Load indicator %	0 to 121 kW/cyl.	122 to 140 kW/cyl.	I	I	
Load %	Time %							
110 ₍₁₀₀₋₁₁₀₎	1	86 to 95	≤ 70	18,000	15,000	—	—	
100 ₍₉₀₋₁₀₀₎	50							
90 ₍₈₀₋₉₀₎	49							
80 ₍₆₅₋₈₀₎	—							
65 ₍₅₀₋₆₅₎	—							
50 ₍₃₀₋₅₀₎	—							
30 ₍₅₋₃₀₎	—							
Idle speed ₍₀₋₅₎	—							
110 ₍₁₀₀₋₁₁₀₎	1	96 to 99	≤ 98	15,000	9,000	—	—	
100 ₍₉₀₋₁₀₀₎	92							
90 ₍₈₀₋₉₀₎	7							
80 ₍₆₅₋₈₀₎	—							
65 ₍₅₀₋₆₅₎	—							
50 ₍₃₀₋₅₀₎	—							
30 ₍₅₋₃₀₎	—							
Idle speed ₍₀₋₅₎	—							

Table 3: Allocation matrix application group 3A, 3B, 3C

1.4 Noncyclical maintenance tasks

No.	Qualification	Task	Maintenance tasks	Reference task	Offset	Value	Unit	Option
0001	QL1	WM00094	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		0	1000	HRS	
Reference task: Name of the maintenance task the offset refers to Offset: Interval of a maintenance task which depends on another interval Value: Fixed value for binding execution of a maintenance task								

1.5 Maintenance Schedule Matrix 36000 HRS

500 to 15000 Operating hours

Task	Limit	Operating hours [HRS]																			
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000
WM00285	1 DAY																				
WM00286	1 DAY																				
WM00287	1 DAY																				
WM00288	1 DAY																				
WM00289	1 DAY																				
WM00290	1 DAY																				
WM00291	1 DAY																				
WM00174	1 WK																				
WM00201	1 MON																				
WM00296	1 MON																				
WM00321	1 MON																				
WM00639	1 MON																				
WM00881	1 MON																				
WM00126	1 YR																				
WM00128	1 YR																				
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00066	9 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00245	3 MON		X		X		X		X		X		X		X		X		X		X
WM00084	2 YR		X		X		X		X		X		X		X		X		X		X
WM00085	2 YR		X		X		X		X		X		X		X		X		X		X
WM00086	2 YR		X		X		X		X		X		X		X		X		X		X
WM00170	2 YR		X		X		X		X		X		X		X		X		X		X
WM00050	1 YR						X					X						X			X
WM00136	1 YR						X					X						X			X
WM00076	3 YR						X					X						X			X
WM00124	3 YR						X					X						X			X
WM00052	18 YR						X					X						X			X
WM00094	18 YR		X				X					X						X			X
WM00119	3 YR										X								X		
WM00089	18 YR																X				
WM00090	18 YR																X				
WM00098	18 YR																X				
WM00110	18 YR																X				
WM00775	18 YR																		X		
WM00087	18 YR																				
WM00091	18 YR																				
WM00971	18 YR																		X		
WM00976	18 YR																		X		
WM00008	6 YR																				
WM00065	9 YR																				

DAY = Days
WK = Weeks
MON = Months
YR = Years
HRS = Hours

Task	Limit	Operating hours [HRS]																			
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000
WM00188	1 YR						X						X						X		
WM00189	1 YR						X						X						X		
WM00020	18 YR																				
WM00144	6 YR																				
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

15500 to 30000 Operating hours

Task	Limit	Operating hours [HRS]																			
		15500	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000	21500	22000	22500	23000	23500	24000	24500	25000
WM00285	1 DAY																				
WM00286	1 DAY																				
WM00287	1 DAY																				
WM00288	1 DAY																				
WM00289	1 DAY																				
WM00290	1 DAY																				
WM00291	1 DAY																				
WM00174	1 WK																				
WM00201	1 MON																				
WM00296	1 MON																				
WM00321	1 MON																				
WM00639	1 MON																				
WM00881	1 MON																				
WM00126	1 YR																				
WM00128	1 YR																				
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00066	9 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00245	3 MON		X		X		X		X		X		X		X		X		X		X
WM00084	2 YR		X		X		X		X		X		X		X		X		X		X
WM00085	2 YR		X		X		X		X		X		X		X		X		X		X
WM00086	2 YR		X		X		X		X		X		X		X		X		X		X
WM00170	2 YR		X		X		X		X		X		X		X		X		X		X
WM00050	1 YR						X						X						X		
WM00136	1 YR						X						X						X		
WM00076	3 YR						X						X						X		
WM00124	3 YR						X						X						X		
WM00052	18 YR						X						X						X		
WM00094	18 YR						X						X						X		
WM00119	3 YR						X														
WM00089	18 YR						X												X		
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

Task	Limit	Operating hours [HRS]																			
		15500	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000	21500	22000	22500	23000	23500	24000	24500	25000
WM00090	18 YR						X														
WM00098	18 YR						X													X	
WM00110	18 YR						X													X	
WM00775	18 YR																	X			
WM00087	18 YR						X														
WM00091	18 YR						X														
WM00971	18 YR																	X			
WM00976	18 YR																	X			
WM00008	6 YR						X														
WM00065	9 YR						X														
WM00054	18 YR						X														
WM00056	18 YR						X														
WM00062	18 YR						X														
WM00093	18 YR						X														
WM00096	18 YR						X														
WM00164	18 YR						X														
WM00921	18 YR						X														
WM00970	18 YR						X														
WM00973	18 YR						X														
WM00974	18 YR						X														
WM00986	18 YR						X														
WM00005	6 YR																				
WM00006	6 YR																				
WM00011	18 YR																				
WM00045	18 YR																				
WM00061	18 YR																				
WM00072	18 YR																				
WM00079	18 YR																				
WM00088	18 YR																				
WM00092	18 YR																				
WM00099	18 YR																				
WM00100	18 YR																				
WM00104	18 YR																				
WM00108	18 YR																				
WM00127	18 YR																				
WM00137	18 YR																				
WM00353	18 YR																				
WM00439	18 YR																				
WM00925	18 YR																				
WM00980	18 YR																				
WM00001	18 YR																				
WM00002	18 YR																				
WM00070	18 YR																				
WM00095	18 YR																				

DAY = Days
WK = Weeks
MON = Months
YR = Years
HRS = Hours

Task	Limit	Operating hours [HRS]																													
		15500	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000	21500	22000	22500	23000	23500	24000	24500	25000	25500	26000	26500	27000	27500	28000	28500	29000	29500	30000
WM00103	18 YR																														
WM00111	18 YR																														
WM01941	1 MON																														
WM00978	18 YR																														
WM00222	1 YR																														
WM00148	3 YR																														
WM00979	18 YR																														
WM00228	6 MON	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00190	1 YR																														
WM00191	1 YR																														
WM00188	1 YR						X					X					X							X						X	
WM00189	1 YR						X					X					X							X							X
WM00020	18 YR																														
WM00144	6 YR																														
DAY = Days																															
WK = Weeks																															
MON = Months																															
YR = Years																															
HRS = Hours																															

30500 to 36000 Operating hours

Task	Limit	Operating hours [HRS]																											
		30500	31000	31500	32000	32500	33000	33500	34000	34500	35000	35500	36000																
WM00285	1 DAY																												
WM00286	1 DAY																												
WM00287	1 DAY																												
WM00288	1 DAY																												
WM00289	1 DAY																												
WM00290	1 DAY																												
WM00291	1 DAY																												
WM00174	1 WK																												
WM00201	1 MON																												
WM00296	1 MON																												
WM00321	1 MON																												
WM00639	1 MON																												
WM00881	1 MON																												
WM00126	1 YR																												
WM00128	1 YR																												
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X																
WM00066	9 YR	X	X	X	X	X	X	X	X	X	X	X	X																
WM00245	3 MON		X		X		X		X		X		X																
WM00084	2 YR		X		X		X		X		X		X																
WM00085	2 YR		X		X		X		X		X		X																
DAY = Days																													
WK = Weeks																													
MON = Months																													
YR = Years																													
HRS = Hours																													

TIM-ID: 000000000 - 000

Task	Limit	Operating hours [HRS]																	
		30500	31000	31500	32000	32500	33000	33500	34000	34500	35000	35500	36000						
WM00086	2 YR	X			X		X		X		X		X						
WM00170	2 YR		X		X		X		X		X		X						
WM00050	1 YR						X						X						
WM00136	1 YR						X						X						
WM00076	3 YR						X						X						
WM00124	3 YR						X						X						
WM00052	18 YR						X						X						
WM00094	18 YR						X						X						
WM00119	3 YR												X						
WM00089	18 YR												X						
WM00090	18 YR												X						
WM00098	18 YR												X						
WM00110	18 YR												X						
WM00775	18 YR												X						
WM00087	18 YR												X						
WM00091	18 YR												X						
WM00971	18 YR												X						
WM00976	18 YR												X						
WM00008	6 YR												X						
WM00065	9 YR												X						
WM00054	18 YR												X						
WM00056	18 YR												X						
WM00062	18 YR												X						
WM00093	18 YR												X						
WM00096	18 YR												X						
WM00164	18 YR												X						
WM00921	18 YR												X						
WM00970	18 YR												X						
WM00973	18 YR												X						
WM00974	18 YR												X						
WM00986	18 YR												X						
WM00005	6 YR												X						
WM00006	6 YR												X						
WM00011	18 YR												X						
WM00045	18 YR												X						
WM00061	18 YR												X						
WM00072	18 YR												X						
WM00079	18 YR												X						
WM00088	18 YR												X						
WM00092	18 YR												X						
WM00099	18 YR												X						
WM00100	18 YR												X						
WM00104	18 YR												X						
WM00108	18 YR												X						

DAY = Days
 WK = Weeks
 MON = Months
 YR = Years
 HRS = Hours

Task	Limit	Operating hours [HRS]																											
		30500	31000	31500	32000	32500	33000	33500	34000	34500	35000	35500	36000																
WM00127	18 YR												X																
WM00137	18 YR												X																
WM00353	18 YR												X																
WM00439	18 YR												X																
WM00925	18 YR												X																
WM00980	18 YR												X																
WM00001	18 YR												X																
WM00002	18 YR												X																
WM00070	18 YR												X																
WM00095	18 YR												X																
WM00103	18 YR												X																
WM00111	18 YR												X																
WM01941	1 MON																												
WM00978	18 YR												X																
WM00222	1 YR																												
WM00148	3 YR																												
WM00979	18 YR												X																
WM00228	6 MON	X	X	X	X	X	X	X	X	X	X	X	X																
WM00190	1 YR																												
WM00191	1 YR																												
WM00188	1 YR						X						X																
WM00189	1 YR						X						X																
WM00020	18 YR												X																
WM00144	6 YR																												
DAY = Days																													
WK = Weeks																													
MON = Months																													
YR = Years																													
HRS = Hours																													

1.6 Cyclical maintenance tasks 36000 HRS

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect engine for leaks and check its general condition		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check position of contamination indicator of fuel prefilter	X	WM00291
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 MON	GOVERNOR	Check engine control units		WM00201
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Perform test run, minimum duration: until operating temperature is reached, no less than 1/3 load		WM00296
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Check condensate drain of intercooler		WM00321
QL1	-	1 MON	STARTING SYSTEM	Check starting valve	X	WM00639
QL1	-	1 MON	BENDING / TORS. RESILIENT COUPLING AND STEEL-SPRING COUPLING	Check coupling (visual inspection), replace as necessary	X	WM00881
QL1	-	1 YR	ENGINE MOUNTING	Measure height of rubber element		WM00126
QL1	-	1 YR	ENGINE MOUNTING	Measure buffer play, adjust if necessary		WM00128
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest	X	WM00063
QL1	500	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, check and clean filtering screen	X	WM00066
QL1	1000	3 MON	EMERGENCY AIR SHUT-OFF FLAPS	Lubricate lubrication points of emergency air shut-off flaps		WM00245
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter	X	WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of resilient mounts (visual inspection)		WM00050
QL1	3000	1 YR	ENGINE MOUNTING	Check securing screws for firm seating		WM00136
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover		WM00124
QL1	3000	18 YR	GENERATOR	Check condition of coupling	X	WM00052
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1M-ID: 0000000000 - 000

Qualifica- tion	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	6000	3 YR	CRANKCASE VENTILA- TION	Replace filter or filter element	X	WM00119
QL1	9000	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	9000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	9000	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	9000	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL1	12000	18 YR	CRANKCASE VENTILA- TION	Replace oil separator (cyclone)	X	WM00775
QL1	18000	18 YR	FUEL SYSTEM (LOW PRESSURE)	Replace pump		WM00087
QL1	18000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP pump		WM00091
QL3	12000	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	12000	18 YR	GENERATOR	Overhaul or replace battery-charging generator	X	WM00976
QL3	18000	6 YR	RUBBER SLEEVE	Replace rubber sleeve		WM00008
QL3	18000	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, remove and clean filter housing, re- place filter element and bearing	X	WM00065
QL3	18000	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actua- tor		WM00054
QL3	18000	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actua- tor		WM00056
QL3	18000	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear	X	WM00062
QL3	18000	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually in- spect swing follower with endoscope through pushrod bore		WM00093
QL3	18000	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endo- scope through pushrod bore		WM00096
QL3	18000	18 YR	AIR PIPING TO CYLIN- DERS	Clean air piping		WM00164
QL3	18000	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	18000	18 YR	EXHAUST TURBOCHARG- ER	Overhaul or replace exhaust turbocharger		WM00970
QL3	18000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	18000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	18000	18 YR	AIR PIPING TO CYLIN- DERS	Clean intercooler and check for leaks or replace		WM00986
QL3	36000	6 YR	RUBBER BELLOWS	Replace rubber bellows		WM00005
QL3	36000	6 YR	HOSE	Replace hose line		WM00006
QL3	36000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP fuel sensor		WM00011
QL3	36000	18 YR	BENDING / TORS. RESIL- IENT COUPLING AND STEEL-SPRING COU- PLING	Check coupling, replace if necessary	X	WM00045
QL3	36000	18 YR	OIL REPLENISHING UNIT	Replace gear pump	X	WM00061
QL3	36000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

Qualifica- tion	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	36000	18 YR	EXHAUST TURBOCHARGER	Replace compressor wheel of exhaust turbocharger		WM00079
QL3	36000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace pressure relief valve		WM00088
QL3	36000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL3	36000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL3	36000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL3	36000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL3	36000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL3	36000	18 YR	ENGINE MOUNTING	Replace rubber element of resilient mounts		WM00127
QL3	36000	18 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace wiring harness		WM00137
QL3	36000	18 YR	RUNNING GEAR	Replace conrod		WM00353
QL3	36000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	36000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)	X	WM00925
QL3	36000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	36000	18 YR	ENGINE, GENERAL	Replace elastomeric members and seals		WM00001
QL4	36000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	36000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	36000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	36000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	36000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
Oil priming pump						
QL1	-	1 MON	PRELUBRICATION	Check function of oil priming system	X	WM01941
QL3	36000	18 YR	PRELUBRICATION	Overhaul or replace oil priming pump	X	WM00978
Preheater						
QL1	-	1 YR	PREHEATING	Preheater, check for function and leaks	X	WM00222
QL1	-	3 YR	PREHEATING	Preheater, replace thermostat (electric)	X	WM00148
QL3	36000	18 YR	PREHEATING	Overhaul or replace preheating unit	X	WM00979
Fuel cooler						
QL1	500	6 MON	FUEL COOLER	Check cooler elements externally for contamination and leaks	X	WM00228
Generator mounting						
QL1	-	1 YR	GENERATOR MOUNTING	Measure height of rubber element of generator mounts	X	WM00190
QL1	-	1 YR	GENERATOR MOUNTING	Measure buffer clearance of generator mounts, adjust if necessary	X	WM00191
QL1	3000	1 YR	GENERATOR MOUNTING	Check securing screws of generator mounts for secure seating	X	WM00188
QL1	3000	1 YR	GENERATOR MOUNTING	Check general condition of rubber elements of generator mounts (visual inspection)	X	WM00189
QL3	36000	18 YR	GENERATOR MOUNTING	Replace rubber elements of generator mounts	X	WM00020
Electronics						
QL1	-	6 YR	MONITORING SYSTEM	Replace backup battery	X	WM00144
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1W-ID: 0000000000 - 000

1.7 Maintenance Schedule Matrix 30000 HRS

500 to 15000 Operating hours

Task	Limit	Operating hours [HRS]																			
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000
WM00285	1 DAY																				
WM00286	1 DAY																				
WM00287	1 DAY																				
WM00288	1 DAY																				
WM00289	1 DAY																				
WM00290	1 DAY																				
WM00291	1 DAY																				
WM00174	1 WK																				
WM00201	1 MON																				
WM00296	1 MON																				
WM00321	1 MON																				
WM00639	1 MON																				
WM00881	1 MON																				
WM00126	1 YR																				
WM00128	1 YR																				
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00066	9 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00245	3 MON		X		X		X		X		X		X		X		X		X		X
WM00084	2 YR		X		X		X		X		X		X		X		X		X		X
WM00085	2 YR		X		X		X		X		X		X		X		X		X		X
WM00086	2 YR		X		X		X		X		X		X		X		X		X		X
WM00170	2 YR		X		X		X		X		X		X		X		X		X		X
WM00050	1 YR						X						X						X		X
WM00136	1 YR						X						X						X		X
WM00076	3 YR						X						X						X		X
WM00124	3 YR						X						X						X		X
WM00052	18 YR						X						X						X		X
WM00094	18 YR		X				X						X						X		X
WM00119	3 YR												X						X		
WM00089	18 YR														X						X
WM00090	18 YR														X						X
WM00098	18 YR														X						X
WM00110	18 YR														X						X
WM00087	18 YR																				X
WM00091	18 YR																				X
WM00775	18 YR																				X
WM00971	18 YR																		X		
WM00008	6 YR																				X
WM00065	9 YR																				X
WM00054	18 YR																				X

DAY = Days
 WK = Weeks
 MON = Months
 YR = Years
 HRS = Hours

Task	Limit	Operating hours [HRS]																			
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000
WM00056	18 YR																				
WM00062	18 YR																				
WM00093	18 YR																				
WM00096	18 YR																				
WM00164	18 YR																				
WM00921	18 YR																				
WM00970	18 YR																				
WM00973	18 YR																				
WM00974	18 YR																				
WM00976	18 YR																				
WM00986	18 YR																				
WM00005	6 YR																				
WM00006	6 YR																				
WM00011	18 YR																				
WM00045	18 YR																				
WM00061	18 YR																				
WM00072	18 YR																				
WM00079	18 YR																				
WM00088	18 YR																				
WM00092	18 YR																				
WM00099	18 YR																				
WM00100	18 YR																				
WM00104	18 YR																				
WM00108	18 YR																				
WM00127	18 YR																				
WM00137	18 YR																				
WM00353	18 YR																				
WM00439	18 YR																				
WM00925	18 YR																				
WM00980	18 YR																				
WM00001	18 YR																				
WM00002	18 YR																				
WM00070	18 YR																				
WM00095	18 YR																				
WM00103	18 YR																				
WM00111	18 YR																				
WM01941	1 MON																				
WM00978	18 YR																				
WM00222	1 YR																				
WM00148	3 YR																				
WM00979	18 YR																				
WM00228	6 MON	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00190	1 YR																				
WM00191	1 YR																				
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

Task	Limit	Operating hours [HRS]																			
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000
WM00188	1 YR						X						X						X		
WM00189	1 YR						X						X						X		
WM00020	18 YR																				
WM00144	6 YR																				
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

15500 to 30000 Operating hours

Task	Limit	Operating hours [HRS]																			
		15500	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000	21500	22000	22500	23000	23500	24000	24500	25000
WM00285	1 DAY																				
WM00286	1 DAY																				
WM00287	1 DAY																				
WM00288	1 DAY																				
WM00289	1 DAY																				
WM00290	1 DAY																				
WM00291	1 DAY																				
WM00174	1 WK																				
WM00201	1 MON																				
WM00296	1 MON																				
WM00321	1 MON																				
WM00639	1 MON																				
WM00881	1 MON																				
WM00126	1 YR																				
WM00128	1 YR																				
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00066	9 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00245	3 MON		X		X		X		X		X		X		X		X		X		X
WM00084	2 YR		X		X		X		X		X		X		X		X		X		X
WM00085	2 YR		X		X		X		X		X		X		X		X		X		X
WM00086	2 YR		X		X		X		X		X		X		X		X		X		X
WM00170	2 YR		X		X		X		X		X		X		X		X		X		X
WM00050	1 YR						X						X						X		
WM00136	1 YR						X						X						X		
WM00076	3 YR						X						X						X		
WM00124	3 YR						X						X						X		
WM00052	18 YR						X						X						X		
WM00094	18 YR						X						X						X		
WM00119	3 YR						X														
WM00089	18 YR														X						
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

Task	Limit	Operating hours [HRS]																													
		15500	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000	21500	22000	22500	23000	23500	24000	24500	25000	25500	26000	26500	27000	27500	28000	28500	29000	29500	30000
WM00090	18 YR															X															X
WM00098	18 YR															X															X
WM00110	18 YR															X															X
WM00087	18 YR																														X
WM00091	18 YR																														X
WM00775	18 YR																														X
WM00971	18 YR										X																				X
WM00008	6 YR																														X
WM00065	9 YR																														X
WM00054	18 YR																														X
WM00056	18 YR																														X
WM00062	18 YR																														X
WM00093	18 YR																														X
WM00096	18 YR																														X
WM00164	18 YR																														X
WM00921	18 YR																														X
WM00970	18 YR																														X
WM00973	18 YR																														X
WM00974	18 YR																														X
WM00976	18 YR																														X
WM00986	18 YR																														X
WM00005	6 YR																														X
WM00006	6 YR																														X
WM00011	18 YR																														X
WM00045	18 YR																														X
WM00061	18 YR																														X
WM00072	18 YR																														X
WM00079	18 YR																														X
WM00088	18 YR																														X
WM00092	18 YR																														X
WM00099	18 YR																														X
WM00100	18 YR																														X
WM00104	18 YR																														X
WM00108	18 YR																														X
WM00127	18 YR																														X
WM00137	18 YR																														X
WM00353	18 YR																														X
WM00439	18 YR																														X
WM00925	18 YR																														X
WM00980	18 YR																														X
WM00001	18 YR																														X
WM00002	18 YR																														X
WM00070	18 YR																														X
WM00095	18 YR																														X

DAY = Days
 WK = Weeks
 MON = Months
 YR = Years
 HRS = Hours

Task	Limit	Operating hours [HRS]																													
		15500	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000	21500	22000	22500	23000	23500	24000	24500	25000	25500	26000	26500	27000	27500	28000	28500	29000	29500	30000
WM00103	18 YR																														X
WM00111	18 YR																														X
WM01941	1 MON																														
WM00978	18 YR																														X
WM00222	1 YR																														
WM00148	3 YR																														
WM00979	18 YR																														X
WM00228	6 MON	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00190	1 YR																														
WM00191	1 YR																														
WM00188	1 YR						X						X					X							X						X
WM00189	1 YR						X						X					X							X						X
WM00020	18 YR																														X
WM00144	6 YR																														
DAY = Days																															
WK = Weeks																															
MON = Months																															
YR = Years																															
HRS = Hours																															

1.8 Cyclical maintenance tasks 30000 HRS

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect engine for leaks and check its general condition		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check position of contamination indicator of fuel prefilter	X	WM00291
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 MON	GOVERNOR	Check engine control units		WM00201
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Perform test run, minimum duration: until operating temperature is reached, no less than 1/3 load		WM00296
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Check condensate drain of intercooler		WM00321
QL1	-	1 MON	STARTING SYSTEM	Check starting valve	X	WM00639
QL1	-	1 MON	BENDING / TORS. RESILIENT COUPLING AND STEEL-SPRING COUPLING	Check coupling (visual inspection), replace as necessary	X	WM00881
QL1	-	1 YR	ENGINE MOUNTING	Measure height of rubber element		WM00126
QL1	-	1 YR	ENGINE MOUNTING	Measure buffer play, adjust if necessary		WM00128
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest	X	WM00063
QL1	500	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, check and clean filtering screen	X	WM00066
QL1	1000	3 MON	EMERGENCY AIR SHUT-OFF FLAPS	Lubricate lubrication points of emergency air shut-off flaps		WM00245
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter	X	WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of resilient mounts (visual inspection)		WM00050
QL1	3000	1 YR	ENGINE MOUNTING	Check securing screws for firm seating		WM00136
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover		WM00124
QL1	3000	18 YR	GENERATOR	Check condition of coupling	X	WM00052
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1M-ID: 0000000000 - 000

Qualifica- tion	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	6000	3 YR	CRANKCASE VENTILA- TION	Replace filter or filter element	X	WM00119
QL1	7500	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	7500	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	7500	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	7500	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL1	15000	18 YR	FUEL SYSTEM (LOW PRESSURE)	Replace pump		WM00087
QL1	15000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP pump		WM00091
QL1	15000	18 YR	CRANKCASE VENTILA- TION	Replace oil separator (cyclone)	X	WM00775
QL3	10000	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	15000	6 YR	RUBBER SLEEVE	Replace rubber sleeve		WM00008
QL3	15000	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, remove and clean filter housing, re- place filter element and bearing	X	WM00065
QL3	15000	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actua- tor		WM00054
QL3	15000	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actua- tor		WM00056
QL3	15000	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear	X	WM00062
QL3	15000	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually in- spect swing follower with endoscope through pushrod bore		WM00093
QL3	15000	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endo- scope through pushrod bore		WM00096
QL3	15000	18 YR	AIR PIPING TO CYLIN- DERS	Clean air piping		WM00164
QL3	15000	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	15000	18 YR	EXHAUST TURBOCHARG- ER	Overhaul or replace exhaust turbocharger		WM00970
QL3	15000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	15000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	15000	18 YR	GENERATOR	Overhaul or replace battery-charging generator	X	WM00976
QL3	15000	18 YR	AIR PIPING TO CYLIN- DERS	Clean intercooler and check for leaks or replace		WM00986
QL3	30000	6 YR	RUBBER BELLOWS	Replace rubber bellows		WM00005
QL3	30000	6 YR	HOSE	Replace hose line		WM00006
QL3	30000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP fuel sensor		WM00011
QL3	30000	18 YR	BENDING / TORS. RESIL- IENT COUPLING AND STEEL-SPRING COU- PLING	Check coupling, replace if necessary	X	WM00045
QL3	30000	18 YR	OIL REPLENISHING UNIT	Replace gear pump	X	WM00061
QL3	30000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072

DAY = Days
WK = Weeks
MON = Months
YR = Years
HRS = Hours

Qualifica- tion	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	30000	18 YR	EXHAUST TURBOCHARGER	Replace compressor wheel of exhaust turbocharger		WM00079
QL3	30000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace pressure relief valve		WM00088
QL3	30000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL3	30000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL3	30000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL3	30000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL3	30000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL3	30000	18 YR	ENGINE MOUNTING	Replace rubber element of resilient mounts		WM00127
QL3	30000	18 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace wiring harness		WM00137
QL3	30000	18 YR	RUNNING GEAR	Replace conrod		WM00353
QL3	30000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	30000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)	X	WM00925
QL3	30000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	30000	18 YR	ENGINE, GENERAL	Replace elastomeric members and seals		WM00001
QL4	30000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	30000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	30000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	30000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	30000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
Oil priming pump						
QL1	-	1 MON	PRELUBRICATION	Check function of oil priming system	X	WM01941
QL3	30000	18 YR	PRELUBRICATION	Overhaul or replace oil priming pump	X	WM00978
Preheater						
QL1	-	1 YR	PREHEATING	Preheater, check for function and leaks	X	WM00222
QL1	-	3 YR	PREHEATING	Preheater, replace thermostat (electric)	X	WM00148
QL3	30000	18 YR	PREHEATING	Overhaul or replace preheating unit	X	WM00979
Fuel cooler						
QL1	500	6 MON	FUEL COOLER	Check cooler elements externally for contamination and leaks	X	WM00228
Generator mounting						
QL1	-	1 YR	GENERATOR MOUNTING	Measure height of rubber element of generator mounts	X	WM00190
QL1	-	1 YR	GENERATOR MOUNTING	Measure buffer clearance of generator mounts, adjust if necessary	X	WM00191
QL1	3000	1 YR	GENERATOR MOUNTING	Check securing screws of generator mounts for secure seating	X	WM00188
QL1	3000	1 YR	GENERATOR MOUNTING	Check general condition of rubber elements of generator mounts (visual inspection)	X	WM00189
QL3	30000	18 YR	GENERATOR MOUNTING	Replace rubber elements of generator mounts	X	WM00020
Electronics						
QL1	-	6 YR	MONITORING SYSTEM	Replace backup battery	X	WM00144
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1W-ID: 0000000000 - 000

1.9 Maintenance Schedule Matrix 27000 HRS

500 to 14500 Operating hours

Task	Limit	Operating hours [HRS]																													
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	6750	7000	7500	8000	8500	9000	9500	10000	10500	11000	11500	12000	12500	13000	13500	14000	14500
WM00285	1 DAY																														
WM00286	1 DAY																														
WM00287	1 DAY																														
WM00288	1 DAY																														
WM00289	1 DAY																														
WM00290	1 DAY																														
WM00291	1 DAY																														
WM00174	1 WK																														
WM00201	1 MON																														
WM00296	1 MON																														
WM00321	1 MON																														
WM00639	1 MON																														
WM00881	1 MON																														
WM00126	1 YR																														
WM00128	1 YR																														
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00066	9 YR	X	X	X	X	X	X	X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00245	3 MON		X		X		X		X		X		X			X		X		X		X		X		X		X		X	
WM00084	2 YR		X		X		X		X		X		X			X		X		X		X		X		X		X		X	
WM00085	2 YR		X		X		X		X		X		X			X		X		X		X		X		X		X		X	
WM00086	2 YR		X		X		X		X		X		X			X		X		X		X		X		X		X		X	
WM00170	2 YR		X		X		X		X		X		X			X		X		X		X		X		X		X		X	
WM00050	1 YR						X						X							X						X					
WM00136	1 YR						X						X							X						X					
WM00076	3 YR						X						X							X						X					
WM00124	3 YR						X						X							X						X					
WM00052	18 YR						X						X							X						X					
WM00094	18 YR		X				X						X							X						X					
WM00119	3 YR									X										X										X	
WM00089	18 YR														X														X		
WM00090	18 YR														X														X		
WM00098	18 YR														X														X		
WM00110	18 YR														X														X		
WM00087	18 YR																												X		
WM00091	18 YR																												X		
WM00775	18 YR																												X		
WM00008	6 YR																												X		
WM00065	9 YR																												X		
WM00054	18 YR																												X		
WM00056	18 YR																												X		

DAY = Days
 WK = Weeks
 MON = Months
 YR = Years
 HRS = Hours

Task	Limit	Operating hours [HRS]																														
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	6750	7000	7500	8000	8500	9000	9500	10000	10500	11000	11500	12000	12500	13000	13500	14000	14500	
WM00062	18 YR																													X		
WM00093	18 YR																													X		
WM00096	18 YR																													X		
WM00164	18 YR																													X		
WM00921	18 YR																													X		
WM00970	18 YR																													X		
WM00971	18 YR																													X		
WM00973	18 YR																													X		
WM00974	18 YR																													X		
WM00976	18 YR																													X		
WM00986	18 YR																													X		
WM00005	6 YR																															
WM00006	6 YR																															
WM00011	18 YR																															
WM00045	18 YR																															
WM00061	18 YR																															
WM00072	18 YR																															
WM00079	18 YR																															
WM00088	18 YR																															
WM00092	18 YR																															
WM00099	18 YR																															
WM00100	18 YR																															
WM00104	18 YR																															
WM00108	18 YR																															
WM00127	18 YR																															
WM00137	18 YR																															
WM00353	18 YR																															
WM00439	18 YR																															
WM00925	18 YR																															
WM00980	18 YR																															
WM00001	18 YR																															
WM00002	18 YR																															
WM00070	18 YR																															
WM00095	18 YR																															
WM00103	18 YR																															
WM00111	18 YR																															
WM01941	1 MON																															
WM00978	18 YR																															
WM00222	1 YR																															
WM00148	3 YR																															
WM00979	18 YR																															
WM00228	6 MON	X	X	X	X	X	X	X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00190	1 YR																															
WM00191	1 YR																															
DAY = Days																																
WK = Weeks																																
MON = Months																																
YR = Years																																
HRS = Hours																																

Task	Limit	Operating hours [HRS]																			
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	6750	7000	7500	8000	8500	9000	9500
WM00188	1 YR						X						X						X		
WM00189	1 YR						X						X						X		
WM00020	18 YR																				
WM00144	6 YR																				
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

15000 to 27000 Operating hours

Task	Limit	Operating hours [HRS]																			
		15000	15500	16000	16500	17000	17500	18000	18500	19000	19500	20000	20250	20500	21000	21500	22000	22500	23000	23500	24000
WM00285	1 DAY																				
WM00286	1 DAY																				
WM00287	1 DAY																				
WM00288	1 DAY																				
WM00289	1 DAY																				
WM00290	1 DAY																				
WM00291	1 DAY																				
WM00174	1 WK																				
WM00201	1 MON																				
WM00296	1 MON																				
WM00321	1 MON																				
WM00639	1 MON																				
WM00881	1 MON																				
WM00126	1 YR																				
WM00128	1 YR																				
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X		X	X	X	X	X	X	X	X
WM00066	9 YR	X	X	X	X	X	X	X	X	X	X	X		X	X	X	X	X	X	X	X
WM00245	3 MON	X		X		X		X		X		X			X		X		X		X
WM00084	2 YR	X		X		X		X		X		X			X		X		X		X
WM00085	2 YR	X		X		X		X		X		X			X		X		X		X
WM00086	2 YR	X		X		X		X		X		X			X		X		X		X
WM00170	2 YR	X		X		X		X		X		X			X		X		X		X
WM00050	1 YR	X						X							X						X
WM00136	1 YR	X						X							X						X
WM00076	3 YR	X						X							X						X
WM00124	3 YR	X						X							X						X
WM00052	18 YR	X						X							X						X
WM00094	18 YR	X						X							X						X
WM00119	3 YR							X								X					X
WM00089	18 YR												X								X
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

TIM-ID: 000000000 - 000

Task	Limit	Operating hours [HRS]																															
		1500	1550	1600	1650	1700	1750	1800	1850	1900	1950	2000	20250	2050	2100	2150	2200	2250	2300	2350	2400	2450	2500	2550	2600	2650	27000						
WM00090	18 YR											X																X					
WM00098	18 YR											X																X					
WM00110	18 YR											X																X					
WM00087	18 YR																											X					
WM00091	18 YR																											X					
WM00775	18 YR																											X					
WM00008	6 YR																											X					
WM00065	9 YR																											X					
WM00054	18 YR																											X					
WM00056	18 YR																											X					
WM00062	18 YR																											X					
WM00093	18 YR																											X					
WM00096	18 YR																											X					
WM00164	18 YR																											X					
WM00921	18 YR																											X					
WM00970	18 YR																											X					
WM00971	18 YR																											X					
WM00973	18 YR																											X					
WM00974	18 YR																											X					
WM00976	18 YR																											X					
WM00986	18 YR																											X					
WM00005	6 YR																											X					
WM00006	6 YR																											X					
WM00011	18 YR																											X					
WM00045	18 YR																											X					
WM00061	18 YR																											X					
WM00072	18 YR																											X					
WM00079	18 YR																											X					
WM00088	18 YR																											X					
WM00092	18 YR																											X					
WM00099	18 YR																											X					
WM00100	18 YR																											X					
WM00104	18 YR																											X					
WM00108	18 YR																											X					
WM00127	18 YR																											X					
WM00137	18 YR																											X					
WM00353	18 YR																											X					
WM00439	18 YR																											X					
WM00925	18 YR																											X					
WM00980	18 YR																											X					
WM00001	18 YR																											X					
WM00002	18 YR																											X					
WM00070	18 YR																											X					
WM00095	18 YR																											X					

DAY = Days
WK = Weeks
MON = Months
YR = Years
HRS = Hours

Task	Limit	Operating hours [HRS]																														
		15000	15500	16000	16500	17000	17500	18000	18500	19000	19500	20000	20250	20500	21000	21500	22000	22500	23000	23500	24000	24500	25000	25500	26000	26500	27000					
WM00103	18 YR																											X				
WM00111	18 YR																										X					
WM01941	1 MON																															
WM00978	18 YR																										X					
WM00222	1 YR																															
WM00148	3 YR																															
WM00979	18 YR																										X					
WM00228	6 MON	X	X	X	X	X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X				
WM00190	1 YR																															
WM00191	1 YR																															
WM00188	1 YR	X						X						X						X							X					
WM00189	1 YR	X						X						X						X							X					
WM00020	18 YR																										X					
WM00144	6 YR																															
DAY = Days																																
WK = Weeks																																
MON = Months																																
YR = Years																																
HRS = Hours																																

1.10 Cyclical maintenance tasks 27000 HRS

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect engine for leaks and check its general condition		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check position of contamination indicator of fuel prefilter	X	WM00291
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 MON	GOVERNOR	Check engine control units		WM00201
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Perform test run, minimum duration: until operating temperature is reached, no less than 1/3 load		WM00296
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Check condensate drain of intercooler		WM00321
QL1	-	1 MON	STARTING SYSTEM	Check starting valve	X	WM00639
QL1	-	1 MON	BENDING / TORS. RESILIENT COUPLING AND STEEL-SPRING COUPLING	Check coupling (visual inspection), replace as necessary	X	WM00881
QL1	-	1 YR	ENGINE MOUNTING	Measure height of rubber element		WM00126
QL1	-	1 YR	ENGINE MOUNTING	Measure buffer play, adjust if necessary		WM00128
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest	X	WM00063
QL1	500	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, check and clean filtering screen	X	WM00066
QL1	1000	3 MON	EMERGENCY AIR SHUT-OFF FLAPS	Lubricate lubrication points of emergency air shut-off flaps		WM00245
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter	X	WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of resilient mounts (visual inspection)		WM00050
QL1	3000	1 YR	ENGINE MOUNTING	Check securing screws for firm seating		WM00136
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover		WM00124
QL1	3000	18 YR	GENERATOR	Check condition of coupling	X	WM00052
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1M-ID: 0000000000 - 000

Qualifica- tion	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	4500	3 YR	CRANKCASE VENTILA- TION	Replace filter or filter element	X	WM00119
QL1	6750	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	6750	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	6750	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	6750	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL1	13500	18 YR	FUEL SYSTEM (LOW PRESSURE)	Replace pump		WM00087
QL1	13500	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP pump		WM00091
QL1	13500	18 YR	CRANKCASE VENTILA- TION	Replace oil separator (cyclone)	X	WM00775
QL3	13500	6 YR	RUBBER SLEEVE	Replace rubber sleeve		WM00008
QL3	13500	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, remove and clean filter housing, re- place filter element and bearing	X	WM00065
QL3	13500	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actua- tor		WM00054
QL3	13500	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actua- tor		WM00056
QL3	13500	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear	X	WM00062
QL3	13500	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually in- spect swing follower with endoscope through pushrod bore		WM00093
QL3	13500	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endo- scope through pushrod bore		WM00096
QL3	13500	18 YR	AIR PIPING TO CYLIN- DERS	Clean air piping		WM00164
QL3	13500	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	13500	18 YR	EXHAUST TURBOCHARG- ER	Overhaul or replace exhaust turbocharger		WM00970
QL3	13500	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	13500	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	13500	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	13500	18 YR	GENERATOR	Overhaul or replace battery-charging generator	X	WM00976
QL3	13500	18 YR	AIR PIPING TO CYLIN- DERS	Clean intercooler and check for leaks or replace		WM00986
QL3	27000	6 YR	RUBBER BELLOWS	Replace rubber bellows		WM00005
QL3	27000	6 YR	HOSE	Replace hose line		WM00006
QL3	27000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP fuel sensor		WM00011
QL3	27000	18 YR	BENDING / TORS. RESIL- IENT COUPLING AND STEEL-SPRING COU- PLING	Check coupling, replace if necessary	X	WM00045
QL3	27000	18 YR	OIL REPLENISHING UNIT	Replace gear pump	X	WM00061
QL3	27000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072

DAY = Days
 WK = Weeks
 MON = Months
 YR = Years
 HRS = Hours

Qualifica- tion	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	27000	18 YR	EXHAUST TURBOCHARGER	Replace compressor wheel of exhaust turbocharger		WM00079
QL3	27000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace pressure relief valve		WM00088
QL3	27000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL3	27000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL3	27000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL3	27000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL3	27000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL3	27000	18 YR	ENGINE MOUNTING	Replace rubber element of resilient mounts		WM00127
QL3	27000	18 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace wiring harness		WM00137
QL3	27000	18 YR	RUNNING GEAR	Replace conrod		WM00353
QL3	27000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	27000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)	X	WM00925
QL3	27000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	27000	18 YR	ENGINE, GENERAL	Replace elastomeric members and seals		WM00001
QL4	27000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	27000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	27000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	27000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	27000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
Oil priming pump						
QL1	-	1 MON	PRELUBRICATION	Check function of oil priming system	X	WM01941
QL3	27000	18 YR	PRELUBRICATION	Overhaul or replace oil priming pump	X	WM00978
Preheater						
QL1	-	1 YR	PREHEATING	Preheater, check for function and leaks	X	WM00222
QL1	-	3 YR	PREHEATING	Preheater, replace thermostat (electric)	X	WM00148
QL3	27000	18 YR	PREHEATING	Overhaul or replace preheating unit	X	WM00979
Fuel cooler						
QL1	500	6 MON	FUEL COOLER	Check cooler elements externally for contamination and leaks	X	WM00228
Generator mounting						
QL1	-	1 YR	GENERATOR MOUNTING	Measure height of rubber element of generator mounts	X	WM00190
QL1	-	1 YR	GENERATOR MOUNTING	Measure buffer clearance of generator mounts, adjust if necessary	X	WM00191
QL1	3000	1 YR	GENERATOR MOUNTING	Check securing screws of generator mounts for secure seating	X	WM00188
QL1	3000	1 YR	GENERATOR MOUNTING	Check general condition of rubber elements of generator mounts (visual inspection)	X	WM00189
QL3	27000	18 YR	GENERATOR MOUNTING	Replace rubber elements of generator mounts	X	WM00020
Electronics						
QL1	-	6 YR	MONITORING SYSTEM	Replace backup battery	X	WM00144
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1W-ID: 0000000000 - 000

1.11 Maintenance Schedule Matrix 21000 HRS

500 to 14500 Operating hours

Task	Limit	Operating hours [HRS]																													
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5250	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000	10500	11000	11500	12000	12500	13000	13500	14000	14500
WM00285	1 DAY																														
WM00286	1 DAY																														
WM00287	1 DAY																														
WM00288	1 DAY																														
WM00289	1 DAY																														
WM00290	1 DAY																														
WM00291	1 DAY																														
WM00174	1 WK																														
WM00201	1 MON																														
WM00296	1 MON																														
WM00321	1 MON																														
WM00639	1 MON																														
WM00881	1 MON																														
WM00126	1 YR																														
WM00128	1 YR																														
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00066	9 YR	X	X	X	X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00245	3 MON		X		X		X		X		X			X		X		X		X		X		X		X		X		X	
WM00084	2 YR		X		X		X		X		X			X		X		X		X		X		X		X		X		X	
WM00085	2 YR		X		X		X		X		X			X		X		X		X		X		X		X		X		X	
WM00086	2 YR		X		X		X		X		X			X		X		X		X		X		X		X		X		X	
WM00170	2 YR		X		X		X		X		X			X		X		X		X		X		X		X		X		X	
WM00050	1 YR						X							X						X						X					
WM00136	1 YR						X							X						X						X					
WM00076	3 YR						X							X						X						X					
WM00124	3 YR						X							X						X						X					
WM00052	18 YR						X							X						X						X					
WM00094	18 YR		X				X							X						X						X					
WM00119	3 YR											X										X									
WM00089	18 YR														X															X	
WM00090	18 YR														X															X	
WM00098	18 YR														X															X	
WM00110	18 YR														X															X	
WM00775	18 YR																					X									
WM00087	18 YR																														
WM00091	18 YR																														
WM00008	6 YR																					X									
WM00054	18 YR																					X									
WM00056	18 YR																					X									
WM00062	18 YR																					X									

DAY = Days
 WK = Weeks
 MON = Months
 YR = Years
 HRS = Hours

[illegible]

Task	Limit	Operating hours [HRS]																			
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5250	5500	6000	6500	7000	7500	8000	8500	9000	9500
WM00188	1 YR						X							X					X		
WM00189	1 YR						X							X					X		
WM00020	18 YR																				
WM00144	6 YR																				
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

15000 to 21000 Operating hours

Task	Limit	Operating hours [HRS]																			
		15000	15500	15750	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000						
WM00285	1 DAY																				
WM00286	1 DAY																				
WM00287	1 DAY																				
WM00288	1 DAY																				
WM00289	1 DAY																				
WM00290	1 DAY																				
WM00291	1 DAY																				
WM00174	1 WK																				
WM00201	1 MON																				
WM00296	1 MON																				
WM00321	1 MON																				
WM00639	1 MON																				
WM00881	1 MON																				
WM00126	1 YR																				
WM00128	1 YR																				
WM00063	2 YR	X	X		X	X	X	X	X	X	X	X	X	X	X						
WM00066	9 YR	X	X		X	X	X	X	X	X	X	X	X	X	X						
WM00245	3 MON	X			X		X		X		X		X		X						
WM00084	2 YR	X			X		X		X		X		X		X						
WM00085	2 YR	X			X		X		X		X		X		X						
WM00086	2 YR	X			X		X		X		X		X		X						
WM00170	2 YR	X			X		X		X		X		X		X						
WM00050	1 YR	X							X						X						
WM00136	1 YR	X							X						X						
WM00076	3 YR	X							X						X						
WM00124	3 YR	X							X						X						
WM00052	18 YR	X							X						X						
WM00094	18 YR	X							X						X						
WM00119	3 YR			X											X						
WM00089	18 YR														X						
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

TIM-ID: 0000000000 - 000

Task	Limit	Operating hours [HRS]																			
		15000	15500	15750	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000						
WM00090	18 YR														X						
WM00098	18 YR														X						
WM00110	18 YR														X						
WM00775	18 YR														X						
WM00087	18 YR														X						
WM00091	18 YR														X						
WM00008	6 YR														X						
WM00054	18 YR														X						
WM00056	18 YR														X						
WM00062	18 YR														X						
WM00093	18 YR														X						
WM00096	18 YR														X						
WM00164	18 YR														X						
WM00921	18 YR														X						
WM00970	18 YR														X						
WM00971	18 YR														X						
WM00976	18 YR														X						
WM00986	18 YR														X						
WM00005	6 YR														X						
WM00006	6 YR														X						
WM00065	9 YR														X						
WM00011	18 YR														X						
WM00045	18 YR														X						
WM00061	18 YR														X						
WM00072	18 YR														X						
WM00079	18 YR														X						
WM00088	18 YR														X						
WM00092	18 YR														X						
WM00099	18 YR														X						
WM00100	18 YR														X						
WM00104	18 YR														X						
WM00108	18 YR														X						
WM00127	18 YR														X						
WM00137	18 YR														X						
WM00353	18 YR														X						
WM00439	18 YR														X						
WM00925	18 YR														X						
WM00973	18 YR														X						
WM00974	18 YR														X						
WM00980	18 YR														X						
WM00001	18 YR														X						
WM00002	18 YR														X						
WM00070	18 YR														X						
WM00095	18 YR														X						

DAY = Days
WK = Weeks
MON = Months
YR = Years
HRS = Hours

Task	Limit	Operating hours [HRS]																							
		15000	15500	15750	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000										
WM00103	18 YR														X										
WM00111	18 YR														X										
WM01941	1 MON																								
WM00978	18 YR														X										
WM00222	1 YR																								
WM00148	3 YR																								
WM00979	18 YR														X										
WM00228	6 MON	X	X		X	X	X	X	X	X	X	X	X	X	X	X									
WM00190	1 YR																								
WM00191	1 YR																								
WM00188	1 YR	X							X						X										
WM00189	1 YR	X							X						X										
WM00020	18 YR														X										
WM00144	6 YR																								
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																									

1.12 Cyclical maintenance tasks 21000 HRS

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect engine for leaks and check its general condition		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check position of contamination indicator of fuel prefilter	X	WM00291
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 MON	GOVERNOR	Check engine control units		WM00201
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Perform test run, minimum duration: until operating temperature is reached, no less than 1/3 load		WM00296
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Check condensate drain of intercooler		WM00321
QL1	-	1 MON	STARTING SYSTEM	Check starting valve	X	WM00639
QL1	-	1 MON	BENDING / TORS. RESILIENT COUPLING AND STEEL-SPRING COUPLING	Check coupling (visual inspection), replace as necessary	X	WM00881
QL1	-	1 YR	ENGINE MOUNTING	Measure height of rubber element		WM00126
QL1	-	1 YR	ENGINE MOUNTING	Measure buffer play, adjust if necessary		WM00128
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest	X	WM00063
QL1	500	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, check and clean filtering screen	X	WM00066
QL1	1000	3 MON	EMERGENCY AIR SHUT-OFF FLAPS	Lubricate lubrication points of emergency air shut-off flaps		WM00245
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter	X	WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of resilient mounts (visual inspection)		WM00050
QL1	3000	1 YR	ENGINE MOUNTING	Check securing screws for firm seating		WM00136
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover		WM00124
QL1	3000	18 YR	GENERATOR	Check condition of coupling	X	WM00052
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1M-ID: 0000000000 - 000

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	5250	3 YR	CRANKCASE VENTILATION	Replace filter or filter element	X	WM00119
QL1	7000	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	7000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	7000	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	7000	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL1	10500	18 YR	CRANKCASE VENTILATION	Replace oil separator (cyclone)	X	WM00775
QL1	21000	18 YR	FUEL SYSTEM (LOW PRESSURE)	Replace pump		WM00087
QL1	21000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP pump		WM00091
QL3	10500	6 YR	RUBBER SLEEVE	Replace rubber sleeve		WM00008
QL3	10500	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actuator		WM00054
QL3	10500	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actuator		WM00056
QL3	10500	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear	X	WM00062
QL3	10500	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually inspect swing follower with endoscope through pushrod bore		WM00093
QL3	10500	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endoscope through pushrod bore		WM00096
QL3	10500	18 YR	AIR PIPING TO CYLINDERS	Clean air piping		WM00164
QL3	10500	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	10500	18 YR	EXHAUST TURBOCHARGER	Overhaul or replace exhaust turbocharger		WM00970
QL3	10500	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	10500	18 YR	GENERATOR	Overhaul or replace battery-charging generator	X	WM00976
QL3	10500	18 YR	AIR PIPING TO CYLINDERS	Clean intercooler and check for leaks or replace		WM00986
QL3	21000	6 YR	RUBBER BELLOWS	Replace rubber bellows		WM00005
QL3	21000	6 YR	HOSE	Replace hose line		WM00006
QL3	21000	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, remove and clean filter housing, replace filter element and bearing	X	WM00065
QL3	21000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP fuel sensor		WM00011
QL3	21000	18 YR	BENDING / TORS. RESILIENT COUPLING AND STEEL-SPRING COUPLING	Check coupling, replace if necessary	X	WM00045
QL3	21000	18 YR	OIL REPLENISHING UNIT	Replace gear pump	X	WM00061
QL3	21000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072
QL3	21000	18 YR	EXHAUST TURBOCHARGER	Replace compressor wheel of exhaust turbocharger		WM00079

DAY = Days
 WK = Weeks
 MON = Months
 YR = Years
 HRS = Hours

Qualifica- tion	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	21000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace pressure relief valve		WM00088
QL3	21000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL3	21000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL3	21000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL3	21000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL3	21000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL3	21000	18 YR	ENGINE MOUNTING	Replace rubber element of resilient mounts		WM00127
QL3	21000	18 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace wiring harness		WM00137
QL3	21000	18 YR	RUNNING GEAR	Replace conrod		WM00353
QL3	21000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	21000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)	X	WM00925
QL3	21000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	21000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	21000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	21000	18 YR	ENGINE, GENERAL	Replace elastomeric members and seals		WM00001
QL4	21000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	21000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	21000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	21000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	21000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
Oil priming pump						
QL1	-	1 MON	PRELUBRICATION	Check function of oil priming system	X	WM01941
QL3	21000	18 YR	PRELUBRICATION	Overhaul or replace oil priming pump	X	WM00978
Preheater						
QL1	-	1 YR	PREHEATING	Preheater, check for function and leaks	X	WM00222
QL1	-	3 YR	PREHEATING	Preheater, replace thermostat (electric)	X	WM00148
QL3	21000	18 YR	PREHEATING	Overhaul or replace preheating unit	X	WM00979
Fuel cooler						
QL1	500	6 MON	FUEL COOLER	Check cooler elements externally for contamination and leaks	X	WM00228
Generator mounting						
QL1	-	1 YR	GENERATOR MOUNTING	Measure height of rubber element of generator mounts	X	WM00190
QL1	-	1 YR	GENERATOR MOUNTING	Measure buffer clearance of generator mounts, adjust if necessary	X	WM00191
QL1	3000	1 YR	GENERATOR MOUNTING	Check securing screws of generator mounts for secure seating	X	WM00188
QL1	3000	1 YR	GENERATOR MOUNTING	Check general condition of rubber elements of generator mounts (visual inspection)	X	WM00189
QL3	21000	18 YR	GENERATOR MOUNTING	Replace rubber elements of generator mounts	X	WM00020
Electronics						
QL1	-	6 YR	MONITORING SYSTEM	Replace backup battery	X	WM00144
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1W-ID: 0000000000 - 000

1.13 Maintenance Schedule Matrix 18000 HRS

500 to 15000 Operating hours

Task	Limit	Operating hours [HRS]																													
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000	10500	11000	11500	12000	12500	13000	13500	14000	14500	15000
WM00285	1 DAY																														
WM00286	1 DAY																														
WM00287	1 DAY																														
WM00288	1 DAY																														
WM00289	1 DAY																														
WM00290	1 DAY																														
WM00291	1 DAY																														
WM00174	1 WK																														
WM00201	1 MON																														
WM00296	1 MON																														
WM00321	1 MON																														
WM00639	1 MON																														
WM00881	1 MON																														
WM00126	1 YR																														
WM00128	1 YR																														
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00066	9 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00245	3 MON		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00084	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00085	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00086	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00170	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00050	1 YR						X						X						X						X						X
WM00136	1 YR						X						X						X						X						X
WM00076	3 YR						X						X						X						X						X
WM00124	3 YR						X						X						X						X						X
WM00052	18 YR						X						X						X						X						X
WM00094	18 YR		X				X						X						X						X						X
WM00119	3 YR												X												X						
WM00089	18 YR												X												X						
WM00090	18 YR												X												X						
WM00098	18 YR												X												X						
WM00110	18 YR												X												X						
WM00775	18 YR																		X												
WM00087	18 YR																														
WM00091	18 YR																														
WM00008	6 YR																		X												
WM00054	18 YR																		X												
WM00056	18 YR																		X												
WM00062	18 YR																		X												

DAY = Days
 WK = Weeks
 MON = Months
 YR = Years
 HRS = Hours

[illegible]

DAY = Days
WK = Weeks
MON = Months
YR = Years
HRS = Hours

Task	Limit	Operating hours [HRS]																			
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000
WM00188	1 YR						X						X						X		
WM00189	1 YR						X						X						X		
WM00020	18 YR																				
WM00144	6 YR																				
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

15500 to 18000 Operating hours

Task	Limit	Operating hours [HRS]																			
		15500	16000	16500	17000	17500	18000														
WM00285	1 DAY																				
WM00286	1 DAY																				
WM00287	1 DAY																				
WM00288	1 DAY																				
WM00289	1 DAY																				
WM00290	1 DAY																				
WM00291	1 DAY																				
WM00174	1 WK																				
WM00201	1 MON																				
WM00296	1 MON																				
WM00321	1 MON																				
WM00639	1 MON																				
WM00881	1 MON																				
WM00126	1 YR																				
WM00128	1 YR																				
WM00063	2 YR	X	X	X	X	X	X														
WM00066	9 YR	X	X	X	X	X	X														
WM00245	3 MON		X		X		X														
WM00084	2 YR		X		X		X														
WM00085	2 YR		X		X		X														
WM00086	2 YR		X		X		X														
WM00170	2 YR		X		X		X														
WM00050	1 YR						X														
WM00136	1 YR						X														
WM00076	3 YR						X														
WM00124	3 YR						X														
WM00052	18 YR						X														
WM00094	18 YR						X														
WM00119	3 YR						X														
WM00089	18 YR						X														
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

TIM-ID: 000000000 - 000

Task	Limit	Operating hours [HRS]																											
		15500	16000	16500	17000	17500	18000																						
WM00090	18 YR						X																						
WM00098	18 YR						X																						
WM00110	18 YR						X																						
WM00775	18 YR						X																						
WM00087	18 YR						X																						
WM00091	18 YR						X																						
WM00008	6 YR						X																						
WM00054	18 YR						X																						
WM00056	18 YR						X																						
WM00062	18 YR						X																						
WM00093	18 YR						X																						
WM00096	18 YR						X																						
WM00164	18 YR						X																						
WM00921	18 YR						X																						
WM00970	18 YR						X																						
WM00971	18 YR						X																						
WM00976	18 YR						X																						
WM00986	18 YR						X																						
WM00005	6 YR						X																						
WM00006	6 YR						X																						
WM00065	9 YR						X																						
WM00011	18 YR						X																						
WM00045	18 YR						X																						
WM00061	18 YR						X																						
WM00072	18 YR						X																						
WM00079	18 YR						X																						
WM00088	18 YR						X																						
WM00092	18 YR						X																						
WM00099	18 YR						X																						
WM00100	18 YR						X																						
WM00104	18 YR						X																						
WM00108	18 YR						X																						
WM00127	18 YR						X																						
WM00137	18 YR						X																						
WM00353	18 YR						X																						
WM00439	18 YR						X																						
WM00925	18 YR						X																						
WM00973	18 YR						X																						
WM00974	18 YR						X																						
WM00980	18 YR						X																						
WM00001	18 YR						X																						
WM00002	18 YR						X																						
WM00070	18 YR						X																						
WM00095	18 YR						X																						
DAY = Days																													
WK = Weeks																													
MON = Months																													
YR = Years																													
HRS = Hours																													

Task	Limit	Operating hours [HRS]																											
		15500	16000	16500	17000	17500	18000																						
WM00103	18 YR						X																						
WM00111	18 YR						X																						
WM01941	1 MON																												
WM00978	18 YR						X																						
WM00222	1 YR																												
WM00148	3 YR																												
WM00979	18 YR						X																						
WM00228	6 MON	X	X	X	X	X	X																						
WM00190	1 YR																												
WM00191	1 YR																												
WM00188	1 YR						X																						
WM00189	1 YR						X																						
WM00020	18 YR						X																						
WM00144	6 YR																												
DAY = Days																													
WK = Weeks																													
MON = Months																													
YR = Years																													
HRS = Hours																													

1.14 Cyclical maintenance tasks 18000 HRS

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect engine for leaks and check its general condition		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check position of contamination indicator of fuel prefilter	X	WM00291
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 MON	GOVERNOR	Check engine control units		WM00201
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Perform test run, minimum duration: until operating temperature is reached, no less than 1/3 load		WM00296
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Check condensate drain of intercooler		WM00321
QL1	-	1 MON	STARTING SYSTEM	Check starting valve	X	WM00639
QL1	-	1 MON	BENDING / TORS. RESILIENT COUPLING AND STEEL-SPRING COUPLING	Check coupling (visual inspection), replace as necessary	X	WM00881
QL1	-	1 YR	ENGINE MOUNTING	Measure height of rubber element		WM00126
QL1	-	1 YR	ENGINE MOUNTING	Measure buffer play, adjust if necessary		WM00128
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest	X	WM00063
QL1	500	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, check and clean filtering screen	X	WM00066
QL1	1000	3 MON	EMERGENCY AIR SHUT-OFF FLAPS	Lubricate lubrication points of emergency air shut-off flaps		WM00245
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter	X	WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of resilient mounts (visual inspection)		WM00050
QL1	3000	1 YR	ENGINE MOUNTING	Check securing screws for firm seating		WM00136
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover		WM00124
QL1	3000	18 YR	GENERATOR	Check condition of coupling	X	WM00052
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1M-ID: 0000000000 - 000

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	6000	3 YR	CRANKCASE VENTILATION	Replace filter or filter element	X	WM00119
QL1	6000	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	6000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	6000	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	6000	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL1	9000	18 YR	CRANKCASE VENTILATION	Replace oil separator (cyclone)	X	WM00775
QL1	18000	18 YR	FUEL SYSTEM (LOW PRESSURE)	Replace pump		WM00087
QL1	18000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP pump		WM00091
QL3	9000	6 YR	RUBBER SLEEVE	Replace rubber sleeve		WM00008
QL3	9000	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actuator		WM00054
QL3	9000	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actuator		WM00056
QL3	9000	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear	X	WM00062
QL3	9000	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually inspect swing follower with endoscope through pushrod bore		WM00093
QL3	9000	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endoscope through pushrod bore		WM00096
QL3	9000	18 YR	AIR PIPING TO CYLINDERS	Clean air piping		WM00164
QL3	9000	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	9000	18 YR	EXHAUST TURBOCHARGER	Overhaul or replace exhaust turbocharger		WM00970
QL3	9000	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	9000	18 YR	GENERATOR	Overhaul or replace battery-charging generator	X	WM00976
QL3	9000	18 YR	AIR PIPING TO CYLINDERS	Clean intercooler and check for leaks or replace		WM00986
QL3	18000	6 YR	RUBBER BELLOWS	Replace rubber bellows		WM00005
QL3	18000	6 YR	HOSE	Replace hose line		WM00006
QL3	18000	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, remove and clean filter housing, replace filter element and bearing	X	WM00065
QL3	18000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP fuel sensor		WM00011
QL3	18000	18 YR	BENDING / TORS. RESILIENT COUPLING AND STEEL-SPRING COUPLING	Check coupling, replace if necessary	X	WM00045
QL3	18000	18 YR	OIL REPLENISHING UNIT	Replace gear pump	X	WM00061
QL3	18000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072
QL3	18000	18 YR	EXHAUST TURBOCHARGER	Replace compressor wheel of exhaust turbocharger		WM00079

DAY = Days
 WK = Weeks
 MON = Months
 YR = Years
 HRS = Hours

Qualifica- tion	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	18000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace pressure relief valve		WM00088
QL3	18000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL3	18000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL3	18000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL3	18000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL3	18000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL3	18000	18 YR	ENGINE MOUNTING	Replace rubber element of resilient mounts		WM00127
QL3	18000	18 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace wiring harness		WM00137
QL3	18000	18 YR	RUNNING GEAR	Replace conrod		WM00353
QL3	18000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	18000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)	X	WM00925
QL3	18000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	18000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	18000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	18000	18 YR	ENGINE, GENERAL	Replace elastomeric members and seals		WM00001
QL4	18000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	18000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	18000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	18000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	18000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
Oil priming pump						
QL1	-	1 MON	PRELUBRICATION	Check function of oil priming system	X	WM01941
QL3	18000	18 YR	PRELUBRICATION	Overhaul or replace oil priming pump	X	WM00978
Preheater						
QL1	-	1 YR	PREHEATING	Preheater, check for function and leaks	X	WM00222
QL1	-	3 YR	PREHEATING	Preheater, replace thermostat (electric)	X	WM00148
QL3	18000	18 YR	PREHEATING	Overhaul or replace preheating unit	X	WM00979
Fuel cooler						
QL1	500	6 MON	FUEL COOLER	Check cooler elements externally for contamination and leaks	X	WM00228
Generator mounting						
QL1	-	1 YR	GENERATOR MOUNTING	Measure height of rubber element of generator mounts	X	WM00190
QL1	-	1 YR	GENERATOR MOUNTING	Measure buffer clearance of generator mounts, adjust if necessary	X	WM00191
QL1	3000	1 YR	GENERATOR MOUNTING	Check securing screws of generator mounts for secure seating	X	WM00188
QL1	3000	1 YR	GENERATOR MOUNTING	Check general condition of rubber elements of generator mounts (visual inspection)	X	WM00189
QL3	18000	18 YR	GENERATOR MOUNTING	Replace rubber elements of generator mounts	X	WM00020
Electronics						
QL1	-	6 YR	MONITORING SYSTEM	Replace backup battery	X	WM00144
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1W-ID: 0000000000 - 000

1.15 Maintenance Schedule Matrix 15000 HRS

500 to 15000 Operating hours

Task	Limit	Operating hours [HRS]																													
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000	10500	11000	11500	12000	12500	13000	13500	14000	14500	15000
WM00285	1 DAY																														
WM00286	1 DAY																														
WM00287	1 DAY																														
WM00288	1 DAY																														
WM00289	1 DAY																														
WM00290	1 DAY																														
WM00291	1 DAY																														
WM00174	1 WK																														
WM00201	1 MON																														
WM00296	1 MON																														
WM00321	1 MON																														
WM00639	1 MON																														
WM00881	1 MON																														
WM00126	1 YR																														
WM00128	1 YR																														
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00066	9 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00245	3 MON		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00084	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00085	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00086	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00170	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00050	1 YR						X						X						X					X							X
WM00136	1 YR						X						X						X					X							X
WM00076	3 YR						X						X						X					X							X
WM00124	3 YR						X						X						X					X							X
WM00052	18 YR						X						X						X					X							X
WM00094	18 YR		X				X						X						X					X							X
WM00119	3 YR										X										X										X
WM00089	18 YR															X															X
WM00090	18 YR															X															X
WM00098	18 YR															X															X
WM00110	18 YR															X															X
WM00087	18 YR																														X
WM00091	18 YR																														X
WM00775	18 YR																														X
WM00008	6 YR															X															X
WM00054	18 YR															X															X
WM00056	18 YR															X															X
WM00062	18 YR															X															X
DAY = Days																															
WK = Weeks																															
MON = Months																															
YR = Years																															
HRS = Hours																															

TID-ID: 0000000000 - 000

Task	Limit	Operating hours [HRS]																													
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000	10500	11000	11500	12000	12500	13000	13500	14000	14500	15000
WM00093	18 YR															X															X
WM00096	18 YR															X															X
WM00164	18 YR															X															X
WM00921	18 YR															X															X
WM00970	18 YR															X															X
WM00971	18 YR															X															X
WM00973	18 YR															X															X
WM00974	18 YR															X															X
WM00986	18 YR															X															X
WM00005	6 YR																														X
WM00006	6 YR																														X
WM00065	9 YR																														X
WM00011	18 YR																														X
WM00045	18 YR																														X
WM00061	18 YR																														X
WM00072	18 YR																														X
WM00079	18 YR																														X
WM00088	18 YR																														X
WM00092	18 YR																														X
WM00099	18 YR																														X
WM00100	18 YR																														X
WM00104	18 YR																														X
WM00108	18 YR																														X
WM00127	18 YR																														X
WM00137	18 YR																														X
WM00353	18 YR																														X
WM00439	18 YR																														X
WM00925	18 YR																														X
WM00976	18 YR																														X
WM00980	18 YR																														X
WM00001	18 YR																														X
WM00002	18 YR																														X
WM00070	18 YR																														X
WM00095	18 YR																														X
WM00103	18 YR																														X
WM00111	18 YR																														X
WM01941	1 MON																														
WM00978	18 YR																														X
WM00222	1 YR																														
WM00148	3 YR																														
WM00979	18 YR																														X
WM00228	6 MON	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00190	1 YR																														
WM00191	1 YR																														
DAY = Days																															
WK = Weeks																															
MON = Months																															
YR = Years																															
HRS = Hours																															

Task	Limit	Operating hours [HRS]																			
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000
WM00188	1 YR						X						X						X		
WM00189	1 YR						X						X						X		
WM00020	18 YR																				
WM00144	6 YR																				
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

1.16 Cyclical maintenance tasks 15000 HRS

Qualifica- tion	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect engine for leaks and check its general condition		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check position of contamination indicator of fuel prefilter	X	WM00291
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 MON	GOVERNOR	Check engine control units		WM00201
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Perform test run, minimum duration: until operating temperature is reached, no less than 1/3 load		WM00296
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Check condensate drain of intercooler		WM00321
QL1	-	1 MON	STARTING SYSTEM	Check starting valve	X	WM00639
QL1	-	1 MON	BENDING / TORS. RESILIENT COUPLING AND STEEL-SPRING COUPLING	Check coupling (visual inspection), replace as necessary	X	WM00881
QL1	-	1 YR	ENGINE MOUNTING	Measure height of rubber element		WM00126
QL1	-	1 YR	ENGINE MOUNTING	Measure buffer play, adjust if necessary		WM00128
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest	X	WM00063
QL1	500	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, check and clean filtering screen	X	WM00066
QL1	1000	3 MON	EMERGENCY AIR SHUT-OFF FLAPS	Lubricate lubrication points of emergency air shut-off flaps		WM00245
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter	X	WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of resilient mounts (visual inspection)		WM00050
QL1	3000	1 YR	ENGINE MOUNTING	Check securing screws for firm seating		WM00136
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover		WM00124
QL1	3000	18 YR	GENERATOR	Check condition of coupling	X	WM00052
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1M-ID: 0000000000 - 000

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	5000	3 YR	CRANKCASE VENTILATION	Replace filter or filter element	X	WM00119
QL1	7500	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	7500	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	7500	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	7500	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL1	15000	18 YR	FUEL SYSTEM (LOW PRESSURE)	Replace pump		WM00087
QL1	15000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP pump		WM00091
QL1	15000	18 YR	CRANKCASE VENTILATION	Replace oil separator (cyclone)	X	WM00775
QL3	7500	6 YR	RUBBER SLEEVE	Replace rubber sleeve		WM00008
QL3	7500	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actuator		WM00054
QL3	7500	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actuator		WM00056
QL3	7500	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear	X	WM00062
QL3	7500	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually inspect swing follower with endoscope through pushrod bore		WM00093
QL3	7500	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endoscope through pushrod bore		WM00096
QL3	7500	18 YR	AIR PIPING TO CYLINDERS	Clean air piping		WM00164
QL3	7500	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	7500	18 YR	EXHAUST TURBOCHARGER	Overhaul or replace exhaust turbocharger		WM00970
QL3	7500	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	7500	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	7500	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	7500	18 YR	AIR PIPING TO CYLINDERS	Clean intercooler and check for leaks or replace		WM00986
QL3	15000	6 YR	RUBBER BELLOWS	Replace rubber bellows		WM00005
QL3	15000	6 YR	HOSE	Replace hose line		WM00006
QL3	15000	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, remove and clean filter housing, replace filter element and bearing	X	WM00065
QL3	15000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP fuel sensor		WM00011
QL3	15000	18 YR	BENDING / TORS. RESILIENT COUPLING AND STEEL-SPRING COUPLING	Check coupling, replace if necessary	X	WM00045
QL3	15000	18 YR	OIL REPLENISHING UNIT	Replace gear pump	X	WM00061
QL3	15000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072
QL3	15000	18 YR	EXHAUST TURBOCHARGER	Replace compressor wheel of exhaust turbocharger		WM00079

DAY = Days
 WK = Weeks
 MON = Months
 YR = Years
 HRS = Hours

Qualifica- tion	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	15000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace pressure relief valve		WM00088
QL3	15000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL3	15000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL3	15000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL3	15000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL3	15000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL3	15000	18 YR	ENGINE MOUNTING	Replace rubber element of resilient mounts		WM00127
QL3	15000	18 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace wiring harness		WM00137
QL3	15000	18 YR	RUNNING GEAR	Replace conrod		WM00353
QL3	15000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	15000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)	X	WM00925
QL3	15000	18 YR	GENERATOR	Overhaul or replace battery-charging generator	X	WM00976
QL3	15000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	15000	18 YR	ENGINE, GENERAL	Replace elastomeric members and seals		WM00001
QL4	15000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	15000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	15000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	15000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	15000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
Oil priming pump						
QL1	-	1 MON	PRELUBRICATION	Check function of oil priming system	X	WM01941
QL3	15000	18 YR	PRELUBRICATION	Overhaul or replace oil priming pump	X	WM00978
Preheater						
QL1	-	1 YR	PREHEATING	Preheater, check for function and leaks	X	WM00222
QL1	-	3 YR	PREHEATING	Preheater, replace thermostat (electric)	X	WM00148
QL3	15000	18 YR	PREHEATING	Overhaul or replace preheating unit	X	WM00979
Fuel cooler						
QL1	500	6 MON	FUEL COOLER	Check cooler elements externally for contamination and leaks	X	WM00228
Generator mounting						
QL1	-	1 YR	GENERATOR MOUNTING	Measure height of rubber element of generator mounts	X	WM00190
QL1	-	1 YR	GENERATOR MOUNTING	Measure buffer clearance of generator mounts, adjust if necessary	X	WM00191
QL1	3000	1 YR	GENERATOR MOUNTING	Check securing screws of generator mounts for secure seating	X	WM00188
QL1	3000	1 YR	GENERATOR MOUNTING	Check general condition of rubber elements of generator mounts (visual inspection)	X	WM00189
QL3	15000	18 YR	GENERATOR MOUNTING	Replace rubber elements of generator mounts	X	WM00020
Electronics						
QL1	-	6 YR	MONITORING SYSTEM	Replace backup battery	X	WM00144
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1W-ID: 0000000000 - 000

1.17 Maintenance Schedule Matrix 9000 HRS

500 to 9000 Operating hours

Task	Limit	Operating hours [HRS]																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																															

TID-ID: 000000000 - 000

[illegible]

Task	Limit	Operating hours [HRS]																			
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000		
WM00188	1 YR						X						X						X		
WM00189	1 YR						X						X						X		
WM00020	18 YR																		X		
WM00144	6 YR																				
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours																					

1.18 Cyclical maintenance tasks 9000 HRS

Qualifica- tion	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect engine for leaks and check its general condition		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check position of contamination indicator of fuel prefilter	X	WM00291
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 MON	GOVERNOR	Check engine control units		WM00201
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Perform test run, minimum duration: until operating temperature is reached, no less than 1/3 load		WM00296
QL1	-	1 MON	ENGINE OPERATIONAL MONITORING	Check condensate drain of intercooler		WM00321
QL1	-	1 MON	STARTING SYSTEM	Check starting valve	X	WM00639
QL1	-	1 MON	BENDING / TORS. RESILIENT COUPLING AND STEEL-SPRING COUPLING	Check coupling (visual inspection), replace as necessary	X	WM00881
QL1	-	1 YR	ENGINE MOUNTING	Measure height of rubber element		WM00126
QL1	-	1 YR	ENGINE MOUNTING	Measure buffer play, adjust if necessary		WM00128
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest	X	WM00063
QL1	500	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, check and clean filtering screen	X	WM00066
QL1	1000	3 MON	EMERGENCY AIR SHUT-OFF FLAPS	Lubricate lubrication points of emergency air shut-off flaps		WM00245
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter	X	WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of resilient mounts (visual inspection)		WM00050
QL1	3000	1 YR	ENGINE MOUNTING	Check securing screws for firm seating		WM00136
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover		WM00124
QL1	3000	18 YR	GENERATOR	Check condition of coupling	X	WM00052
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1W-ID: 0000000000 - 000

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	4500	3 YR	CRANKCASE VENTILATION	Replace filter or filter element	X	WM00119
QL1	4500	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	4500	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	4500	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	4500	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL1	9000	18 YR	FUEL SYSTEM (LOW PRESSURE)	Replace pump		WM00087
QL1	9000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP pump		WM00091
QL1	9000	18 YR	CRANKCASE VENTILATION	Replace oil separator (cyclone)	X	WM00775
QL3	4500	6 YR	RUBBER SLEEVE	Replace rubber sleeve		WM00008
QL3	4500	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actuator		WM00054
QL3	4500	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actuator		WM00056
QL3	4500	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear	X	WM00062
QL3	4500	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually inspect swing follower with endoscope through pushrod bore		WM00093
QL3	4500	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endoscope through pushrod bore		WM00096
QL3	4500	18 YR	AIR PIPING TO CYLINDERS	Clean air piping		WM00164
QL3	4500	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	4500	18 YR	EXHAUST TURBOCHARGER	Overhaul or replace exhaust turbocharger		WM00970
QL3	4500	18 YR	AIR PIPING TO CYLINDERS	Clean intercooler and check for leaks or replace		WM00986
QL3	9000	6 YR	RUBBER BELLOWS	Replace rubber bellows		WM00005
QL3	9000	6 YR	HOSE	Replace hose line		WM00006
QL3	9000	9 YR	AUTOMATIC OIL FILTER	Automatic oil filter, remove and clean filter housing, replace filter element and bearing	X	WM00065
QL3	9000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP fuel sensor		WM00011
QL3	9000	18 YR	BENDING / TORS. RESILIENT COUPLING AND STEEL-SPRING COUPLING	Check coupling, replace if necessary	X	WM00045
QL3	9000	18 YR	OIL REPLENISHING UNIT	Replace gear pump	X	WM00061
QL3	9000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072
QL3	9000	18 YR	EXHAUST TURBOCHARGER	Replace compressor wheel of exhaust turbocharger		WM00079
QL3	9000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace pressure relief valve		WM00088
QL3	9000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092

DAY = Days
 WK = Weeks
 MON = Months
 YR = Years
 HRS = Hours

Qualifica- tion	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	9000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL3	9000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL3	9000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL3	9000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL3	9000	18 YR	ENGINE MOUNTING	Replace rubber element of resilient mounts		WM00127
QL3	9000	18 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace wiring harness		WM00137
QL3	9000	18 YR	RUNNING GEAR	Replace conrod		WM00353
QL3	9000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	9000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)	X	WM00925
QL3	9000	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	9000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	9000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	9000	18 YR	GENERATOR	Overhaul or replace battery-charging generator	X	WM00976
QL3	9000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	9000	18 YR	ENGINE, GENERAL	Replace elastomeric members and seals		WM00001
QL4	9000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	9000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	9000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	9000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	9000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
Oil priming pump						
QL1	-	1 MON	PRELUBRICATION	Check function of oil priming system	X	WM01941
QL3	9000	18 YR	PRELUBRICATION	Overhaul or replace oil priming pump	X	WM00978
Preheater						
QL1	-	1 YR	PREHEATING	Preheater, check for function and leaks	X	WM00222
QL1	-	3 YR	PREHEATING	Preheater, replace thermostat (electric)	X	WM00148
QL3	9000	18 YR	PREHEATING	Overhaul or replace preheating unit	X	WM00979
Fuel cooler						
QL1	500	6 MON	FUEL COOLER	Check cooler elements externally for contamination and leaks	X	WM00228
Generator mounting						
QL1	-	1 YR	GENERATOR MOUNTING	Measure height of rubber element of generator mounts	X	WM00190
QL1	-	1 YR	GENERATOR MOUNTING	Measure buffer clearance of generator mounts, adjust if necessary	X	WM00191
QL1	3000	1 YR	GENERATOR MOUNTING	Check securing screws of generator mounts for secure seating	X	WM00188
QL1	3000	1 YR	GENERATOR MOUNTING	Check general condition of rubber elements of generator mounts (visual inspection)	X	WM00189
QL3	9000	18 YR	GENERATOR MOUNTING	Replace rubber elements of generator mounts	X	WM00020
Electronics						
QL1	-	6 YR	MONITORING SYSTEM	Replace backup battery	X	WM00144
DAY = Days WK = Weeks MON = Months YR = Years HRS = Hours						

T1M-ID: 0000000000 - 000