
SO101 table board: ChArUco 5 x 4


For the WRIST D405's hand-eye calibration (lies flat on the desk).
Print at 100 % / 'Actual size' (NOT 'Fit to page'), on matte paper, best printer quality.
Glue it FLAT to something rigid (foam board, 3 mm plywood, acrylic). No wrinkles, no lamination glare.
Dictionary DICT_4X4_50, first marker id 20.

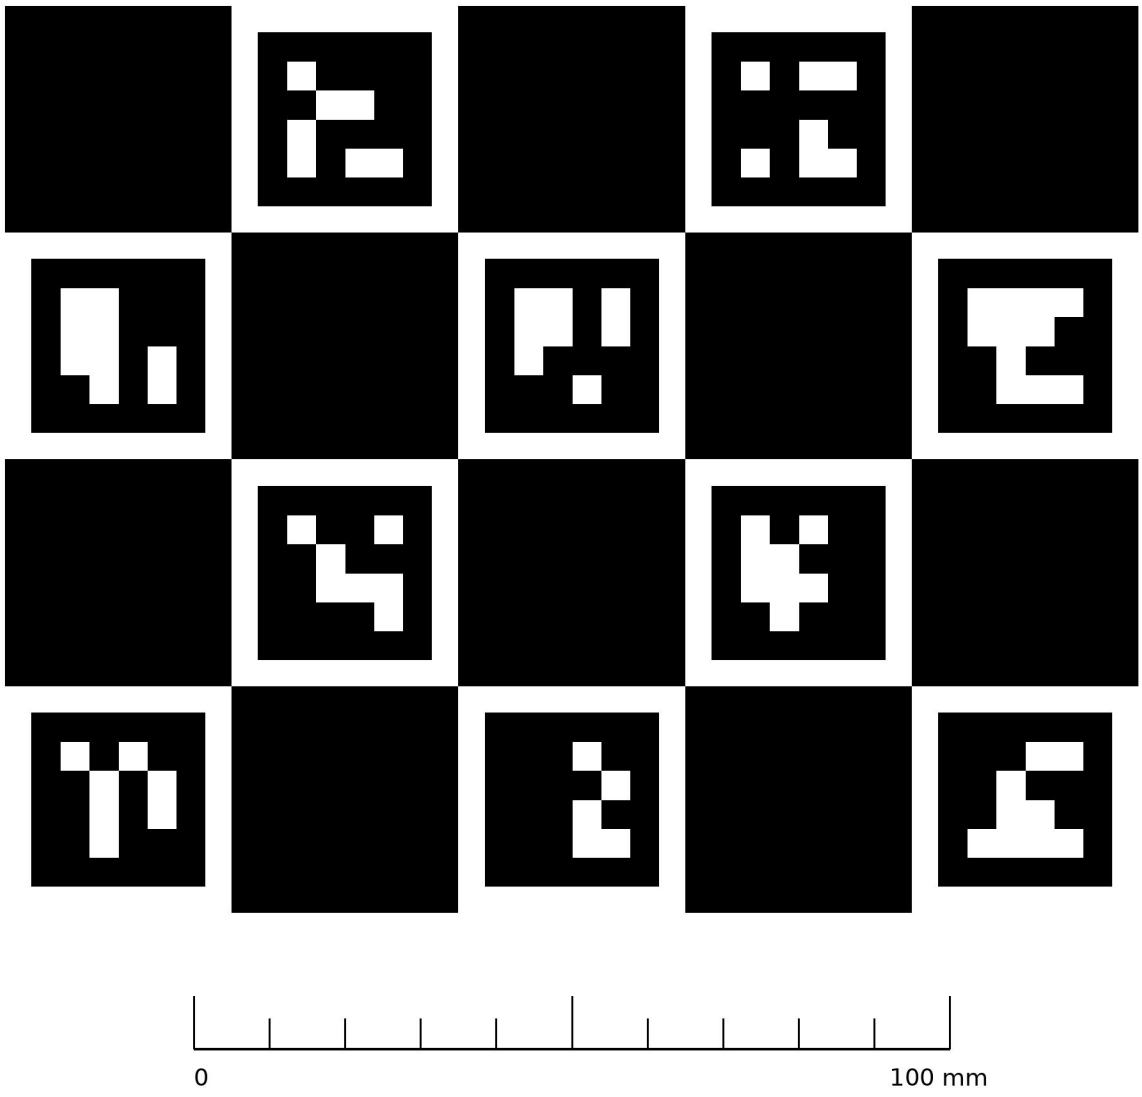

CHECK 1: the scale bar measures exactly 100 mm (else the printer scaled: reprint).
CHECK 2: measure across 4 squares with calipers / a steel ruler:
  expected 4 x 30.0 = 120.0 mm (markers 23.0 mm).
Enter the measured square size (m) as table_board.square_m and marker_m (scaled the same)
in config/calibration_targets_so101.yaml.

SO101 hand board: ChArUco 5 x 4


For the fixed D435i's calibration (held in the SO-101's jaw), later.
Print at 100 % / 'Actual size' (NOT 'Fit to page'), on matte paper, best printer quality.
Glue it FLAT to something rigid (foam board, 3 mm plywood, acrylic). No wrinkles, no lamination glare.
Dictionary DICT_4X4_50, first marker id 0.

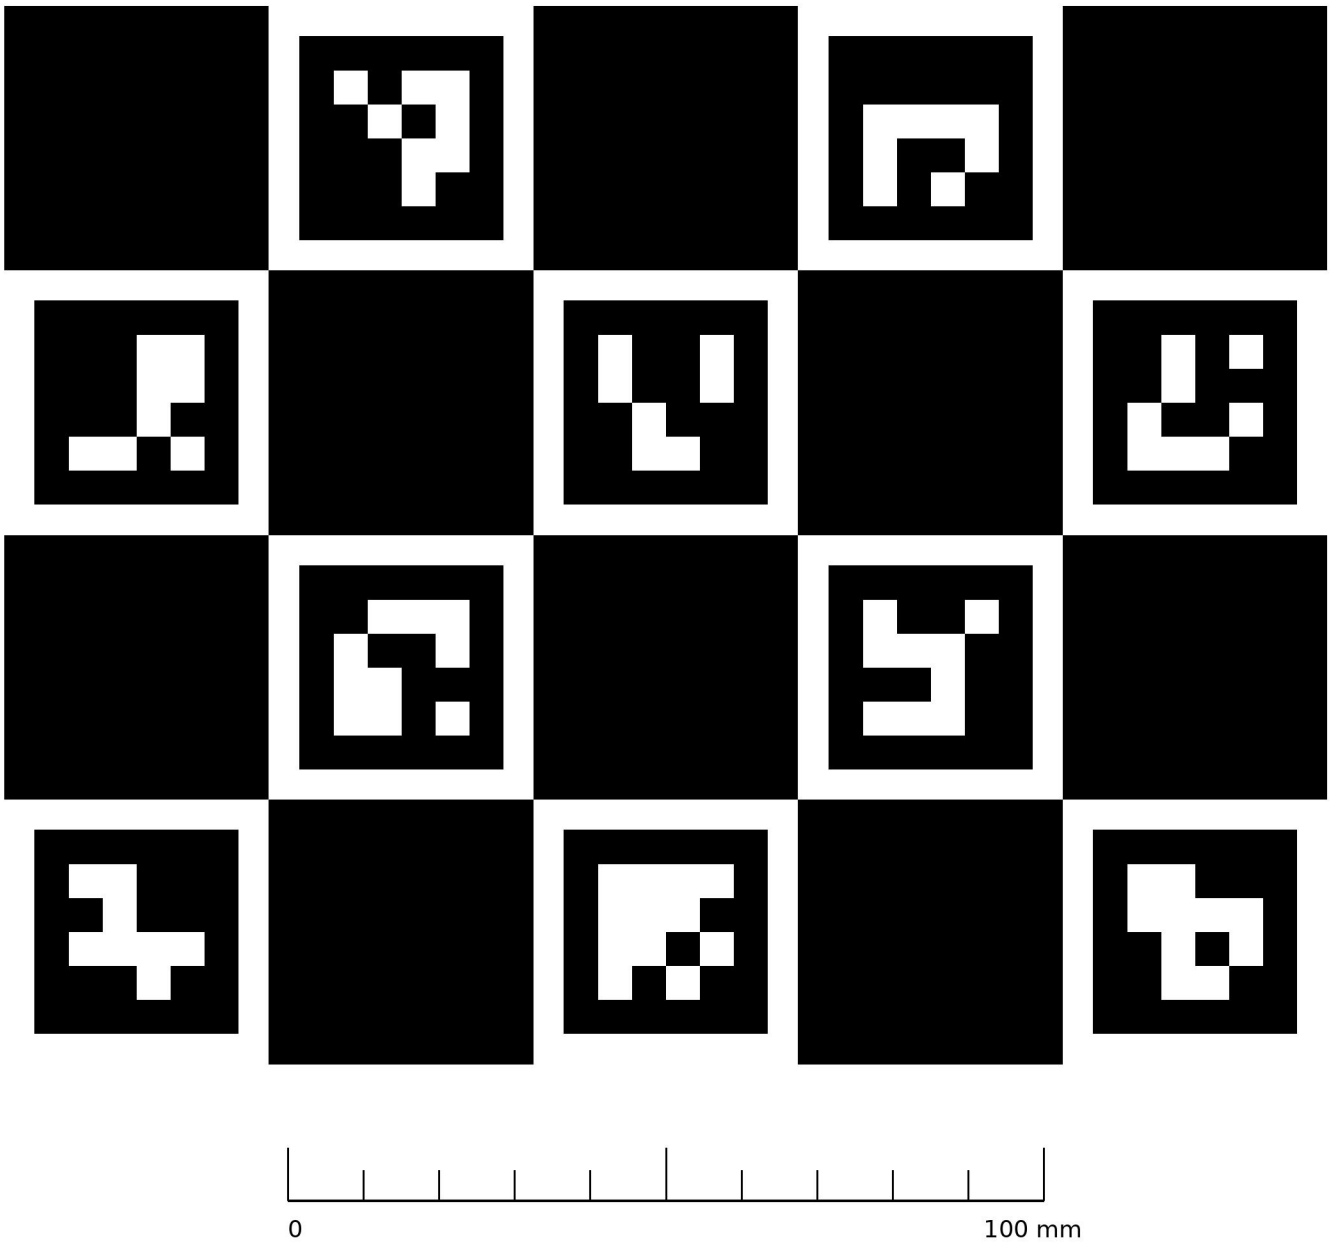

CHECK 1: the scale bar measures exactly 100 mm (else the printer scaled: reprint).
CHECK 2: measure across 4 squares with calipers / a steel ruler:
  expected 4 x 35.0 = 140.0 mm (markers 27.0 mm).
Enter the measured square size (m) as hand_board.square_m and marker_m (scaled the same)
in config/calibration_targets_so101.yaml.

SO101 AprilTag 0 (DICT_APRILTAG_36h11)

The drift monitor's fixed reference on the desk (outside the work band).
Print at 100 % / 'Actual size' (NOT 'Fit to page'), on matte paper, best printer quality.
Glue it FLAT to something rigid (foam board, 3 mm plywood, acrylic). No wrinkles, no lamination glare.

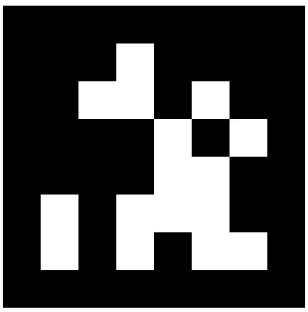



CHECK: the scale bar measures 100 mm; the black square measures 40.0 mm.
Enter the measured size as apriltags.size_m in config/calibration_targets_so101.yaml.