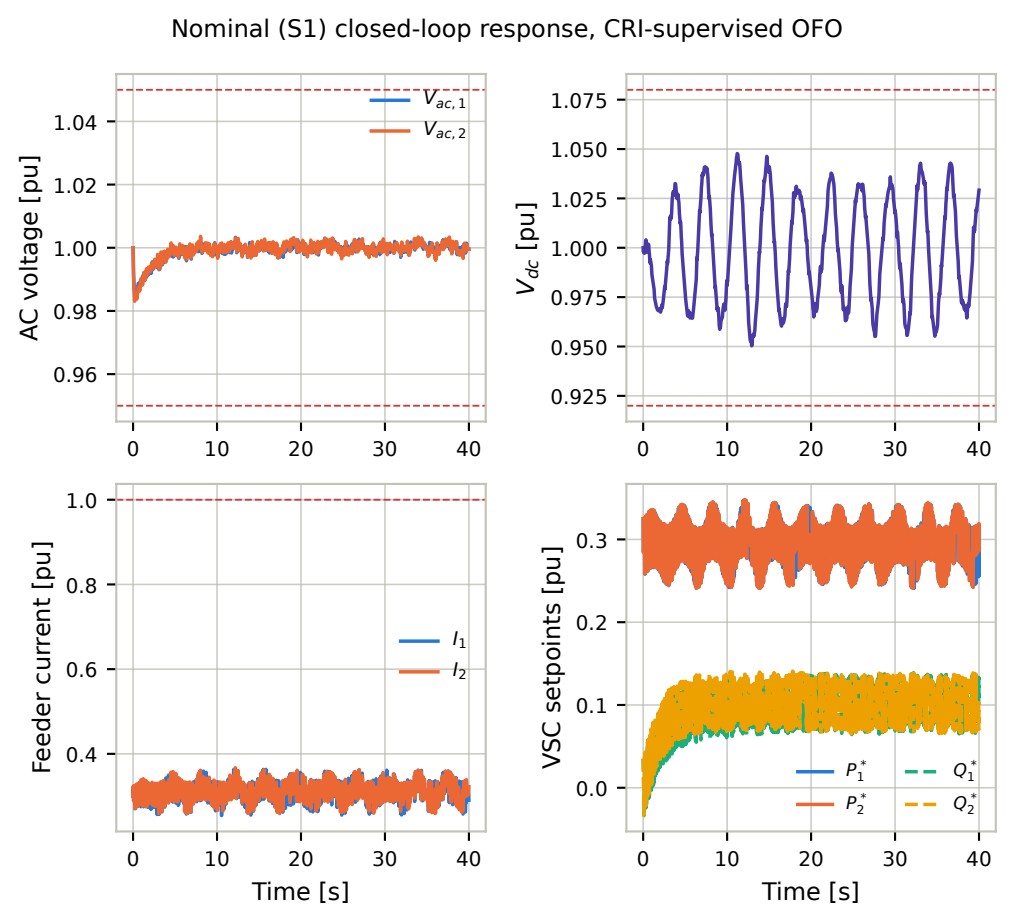

Nominal (S1) closed-loop response, CRI-supervised OFO
AC voltage [pu]
$V_{ac,1}$
$V_{ac,2}$
V_{dc} [pu]
Feeder current [pu]
I_1
I_2
VSC setpoints [pu]
P_1^*
P_2^*
Q_1^*
Q_2^*
Time [s]
Time [s]