




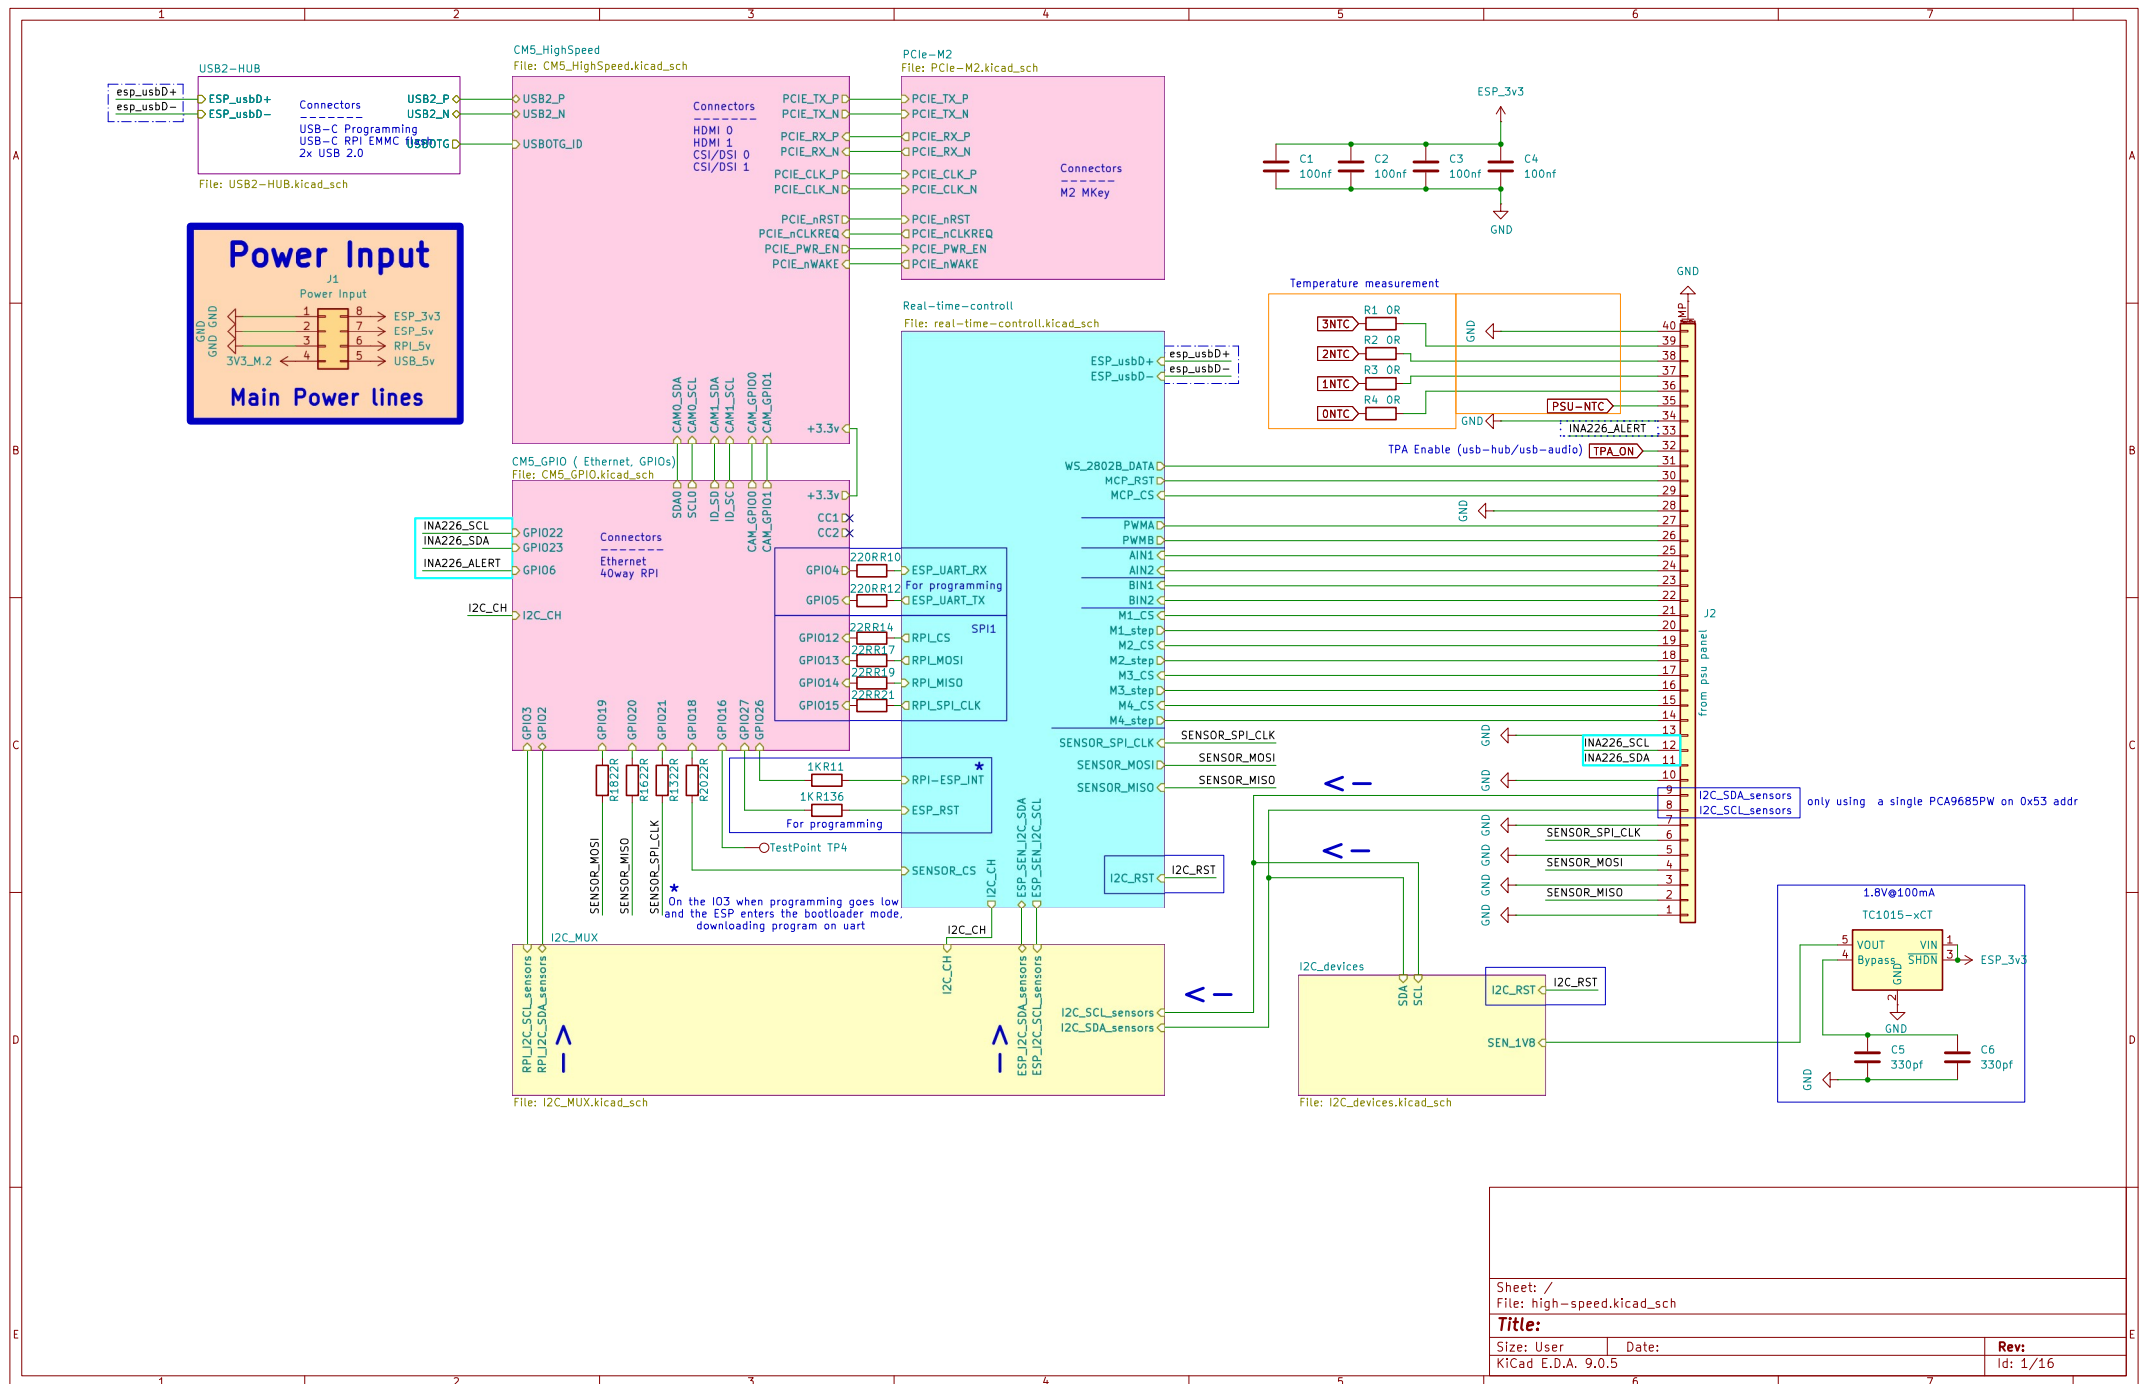

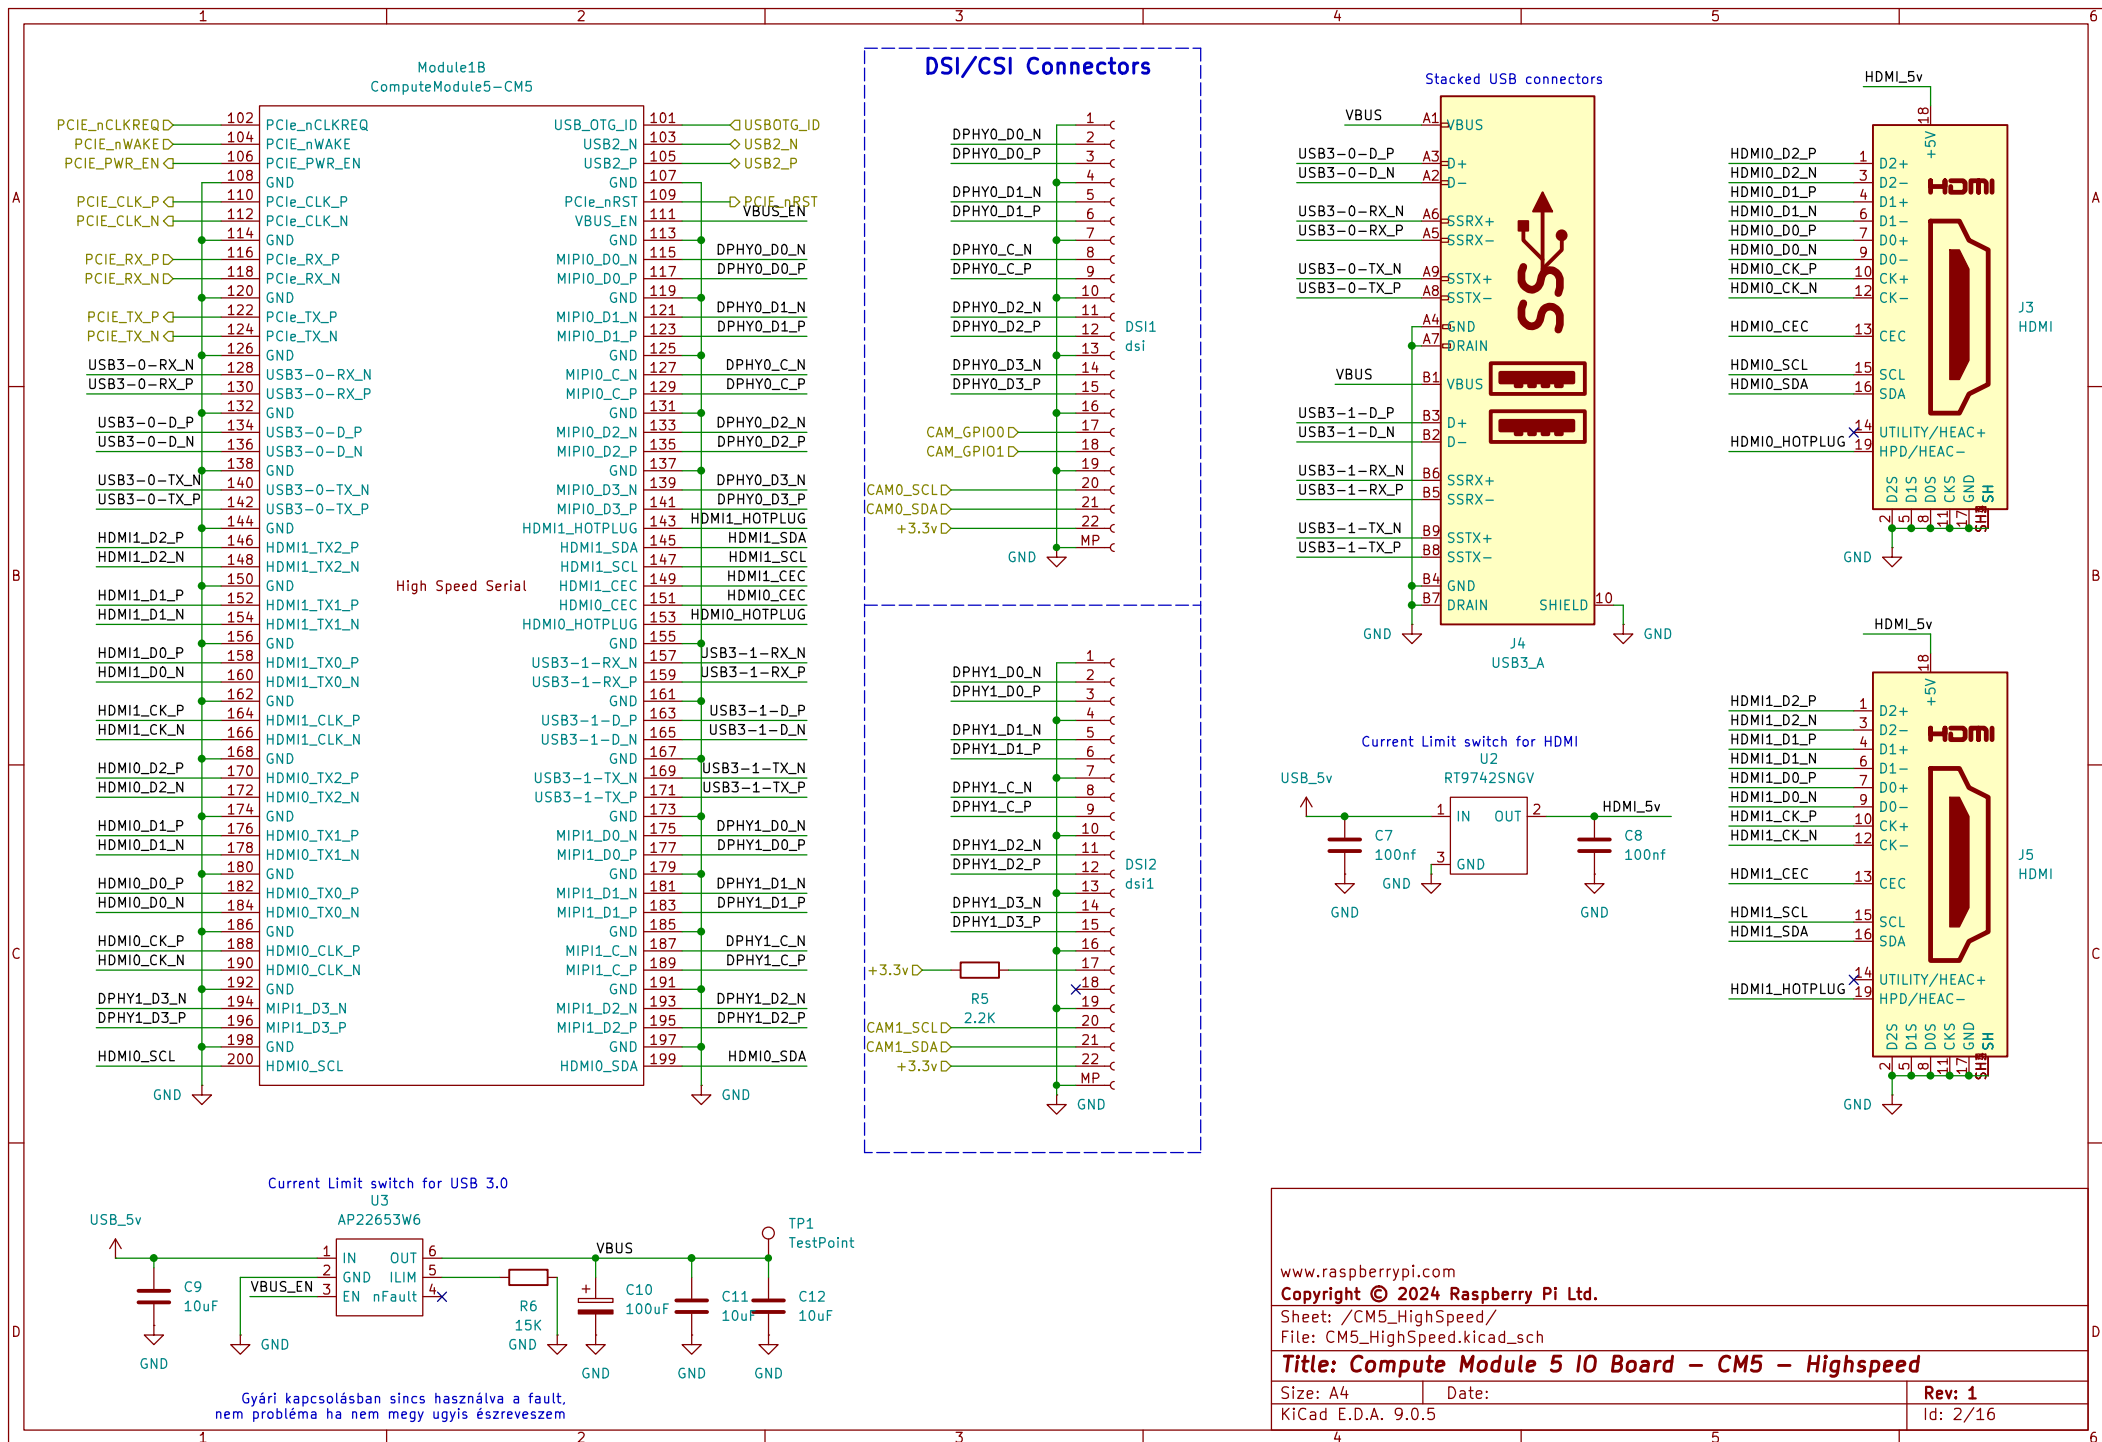

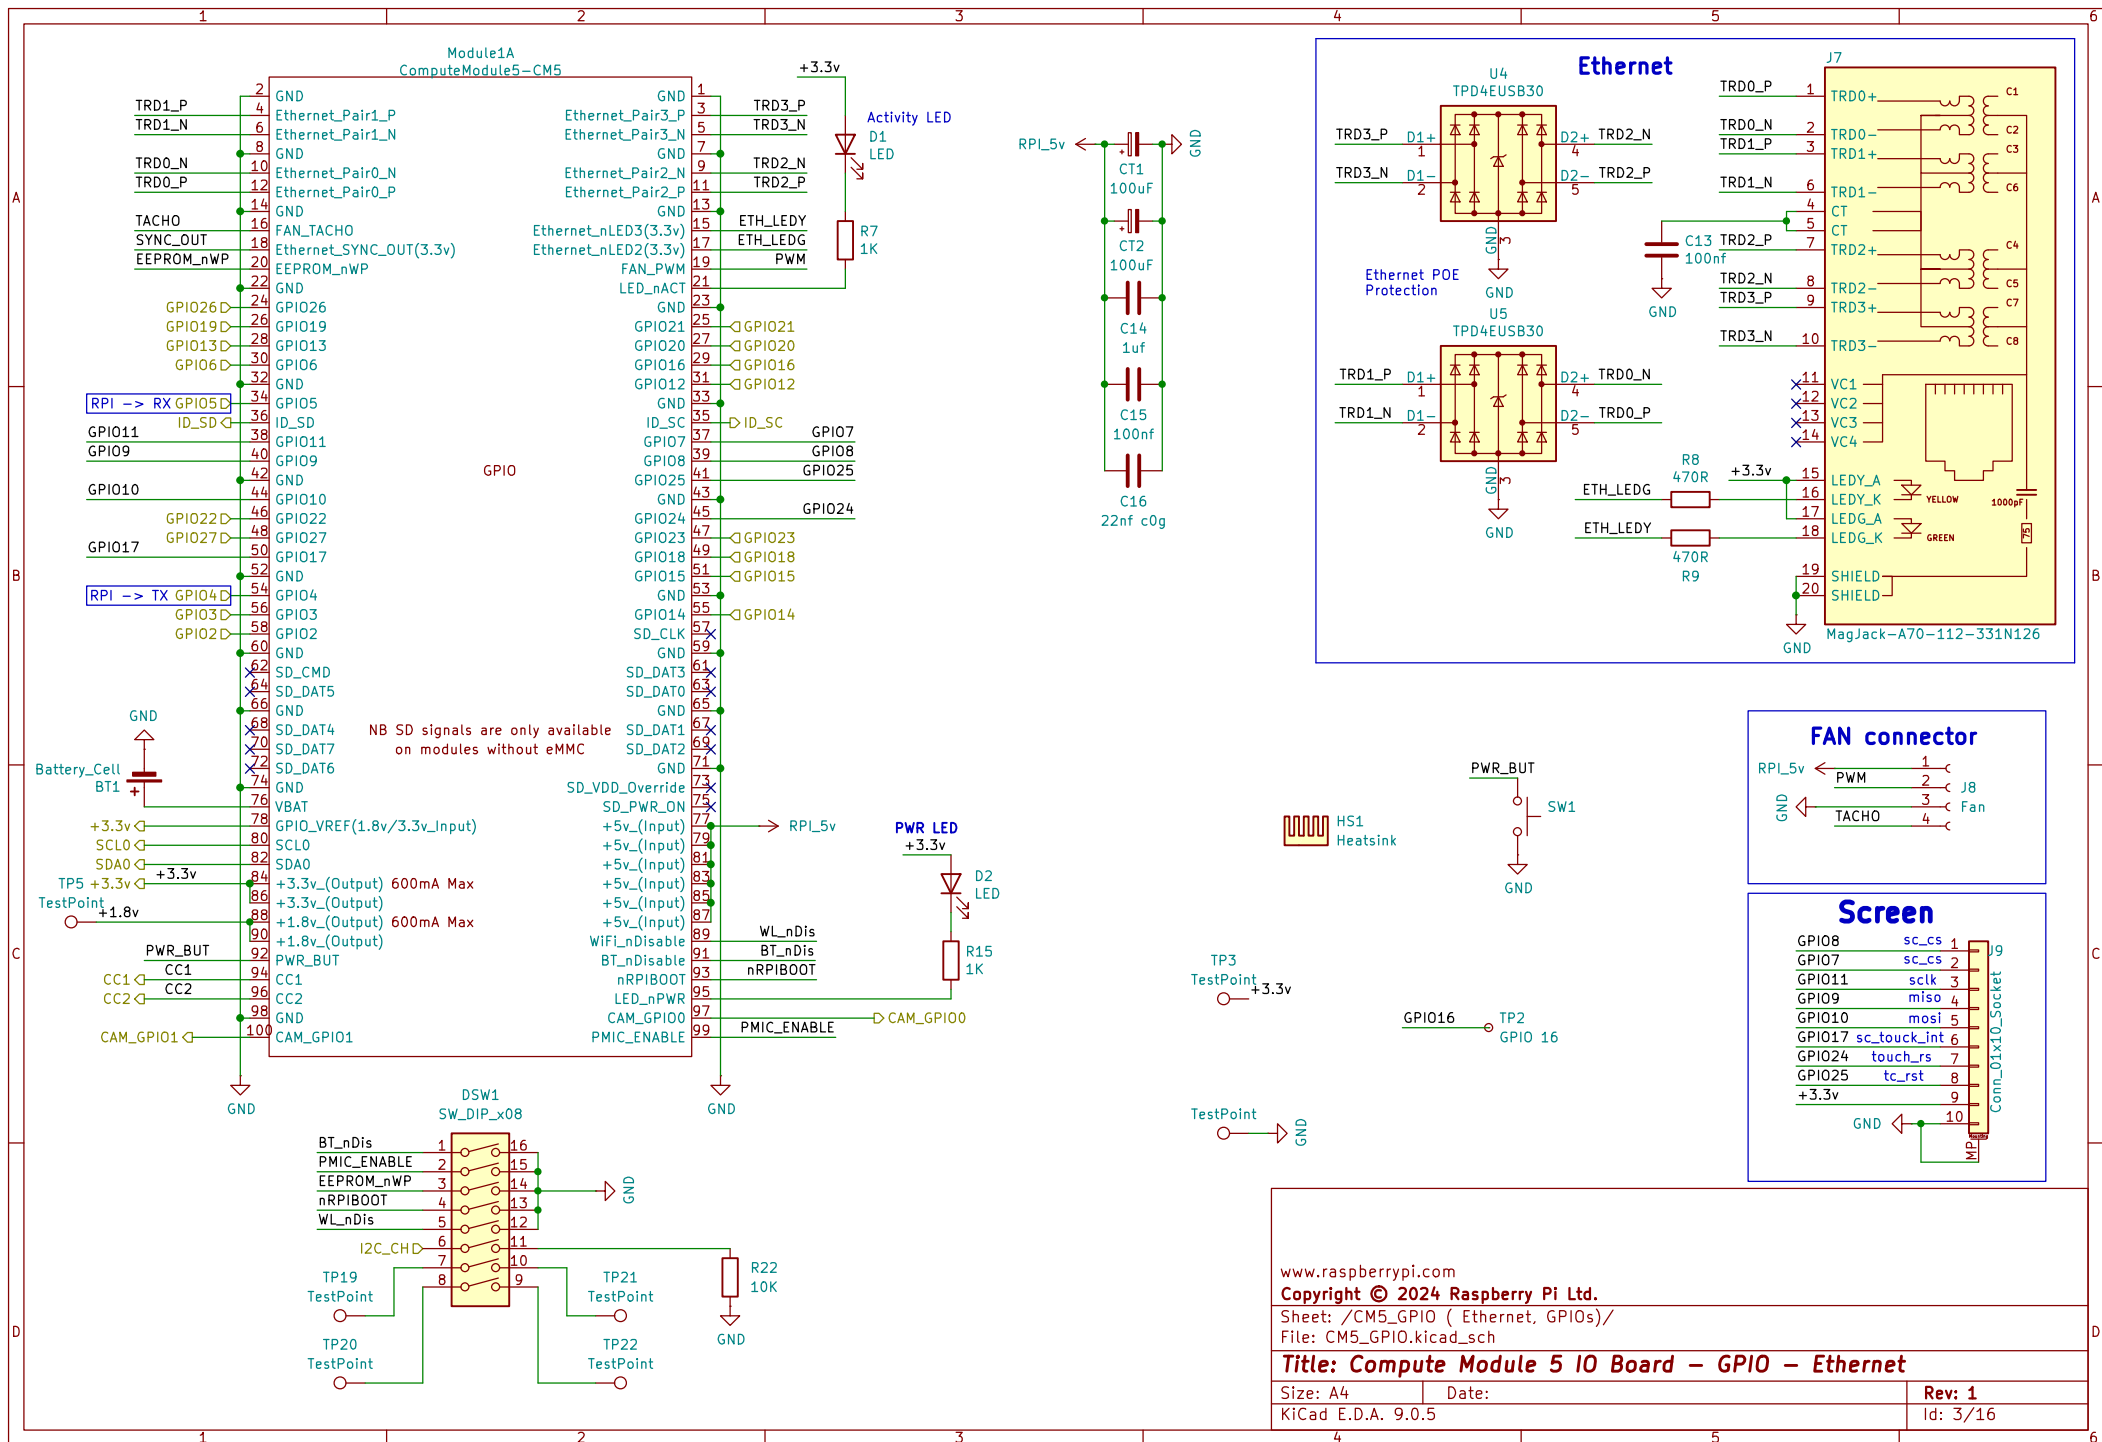

www.raspberrypi.com

Copyright © 2024 Raspberry Pi Ltd.

Sheet: /CM5_GPIO (Ethernet, GPIOs)/

File: CM5_GPIO.kicad_sch

Title: Compute Module 5 IO Board – GPIO – Ethernet


Size: A4

Date:


Rev: 1

KiCad E.D.A. 9.0.5

Id: 3/16

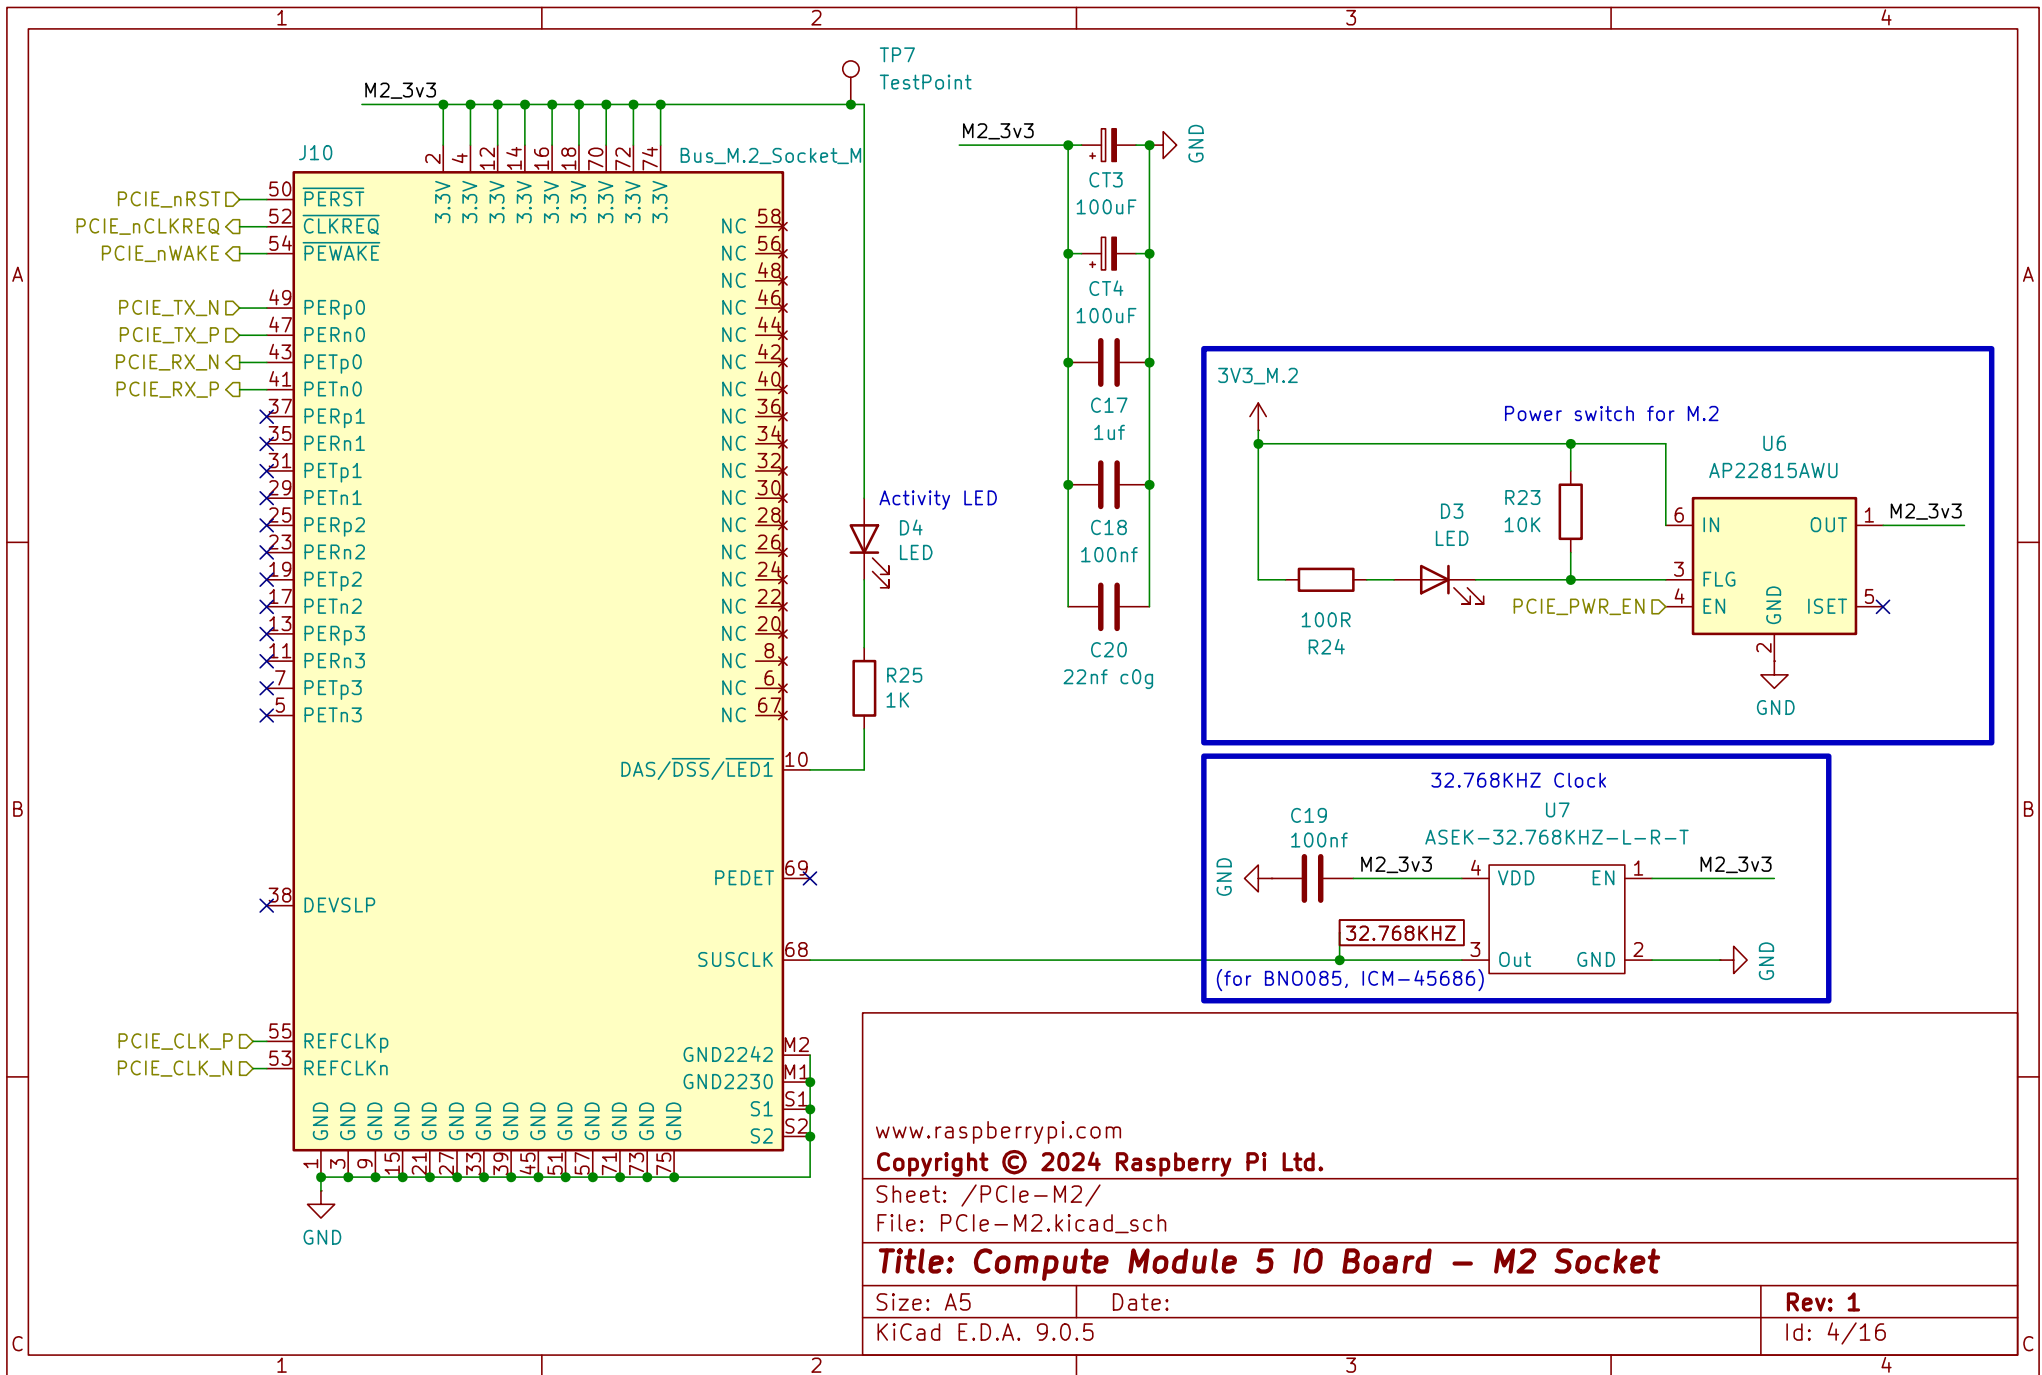

RPI EMMC flash

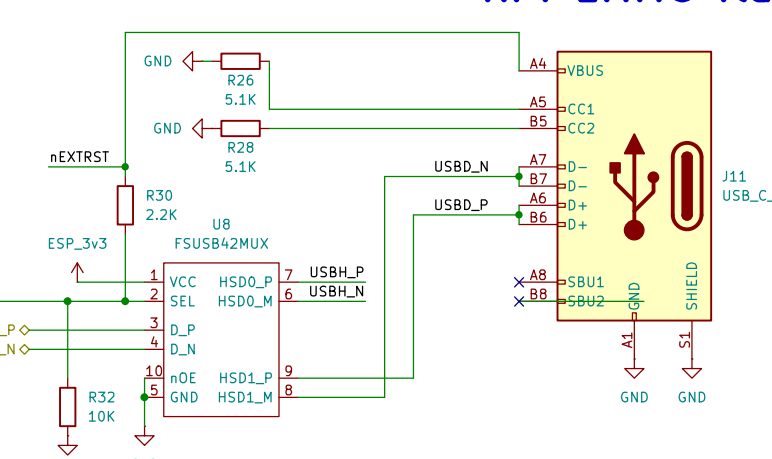

The diagram illustrates the electrical connection between an RPi USB C Flash (J11) and an EMMC flash. The USB C Flash is represented by a yellow box with various pins. The EMMC flash is represented by a red box with various pins. The connections are as follows:


- VBUS:** Connected to A4 of the USB C Flash.
- CC1:** Connected to A5 of the USB C Flash.
- CC2:** Connected to B5 of the USB C Flash.
- D-:** Connected to A7 of the USB C Flash.
- D+:** Connected to A6 of the USB C Flash.
- SBU1:** Connected to A8 of the USB C Flash.
- SBU2:** Connected to B8 of the USB C Flash.
- SHIELD:** Connected to A1 of the USB C Flash.
- GND:** Connected to S1 of the USB C Flash.
- USBH_P:** Connected to 7 of the EMMC flash.
- USBH_N:** Connected to 6 of the EMMC flash.
- USBP_P:** Connected to 9 of the EMMC flash.
- USBP_N:** Connected to 8 of the EMMC flash.
- nEXTRST:** Connected to 1 of the EMMC flash.
- ESP_3v3:** Connected to 2 of the EMMC flash.
- USBOTG:** Connected to 3 of the EMMC flash.
- USB2_P:** Connected to 4 of the EMMC flash.
- USB2_N:** Connected to 5 of the EMMC flash.
- nOE:** Connected to 10 of the EMMC flash.
- GND:** Connected to 11 of the EMMC flash.


Resistors shown in the diagram include R26 (5.1K), R28 (5.1K), R30 (2.2K), and R32 (10K).


ESP JTAG & programming


The diagram illustrates the connection of an ESP32 to an FSUSB42MUX (U10) for JTAG and programming. The ESP32's VCC is connected to ESP_3v3, and its GND is connected to GND. The FSUSB42MUX's VCC is connected to ESP_3v3, and its GND is connected to GND. The FSUSB42MUX's HSD0_P and HSD0_M are connected to HD3_P and HD3_N, respectively. The FSUSB42MUX's HSD1_P and HSD1_M are connected to USBF_N and USBF_P, respectively. The FSUSB42MUX's SEL is connected to ESP_usbD+ and ESP_usbD-. The FSUSB42MUX's D_P and D_N are connected to GND. The FSUSB42MUX's nOE is connected to GND. The FSUSB42MUX's SBU1 and SBU2 are connected to GND. The FSUSB42MUX's A4, A5, B5, and B6 are connected to the USB_C_ESP connector. The USB_C_ESP connector is labeled J1.2 and has pins A4 (VBUS), A5 (CC1), B5 (CC2), A7 (D-), B7 (D-), A6 (D+), B6 (D+), A8 (SBU1), B8 (SBU2), A1 (GND), and S1 (SHIELD).


[illegible]

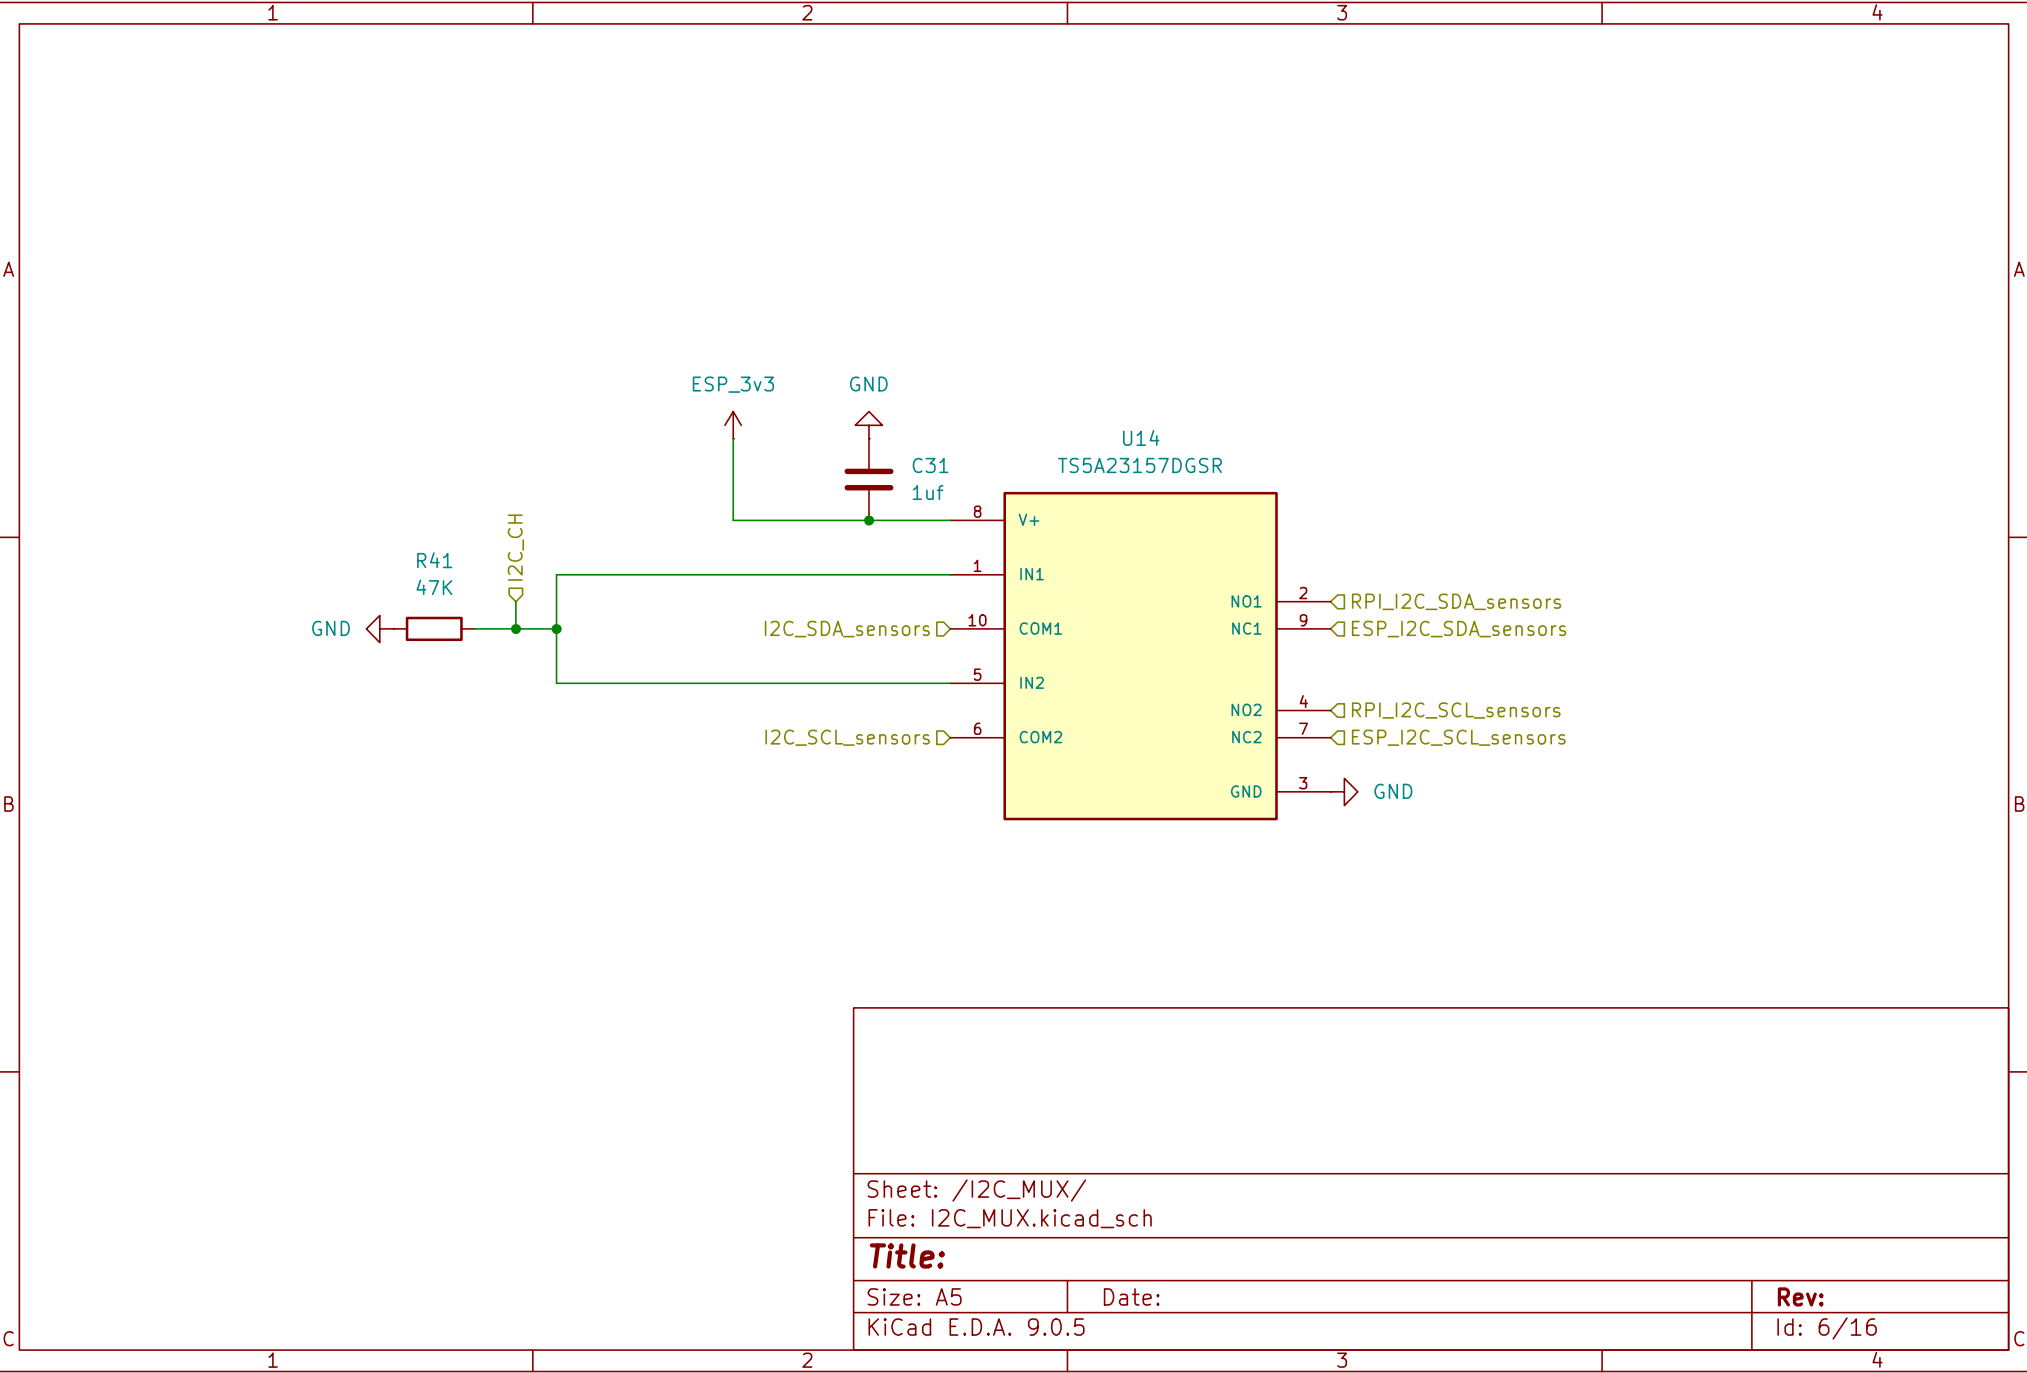


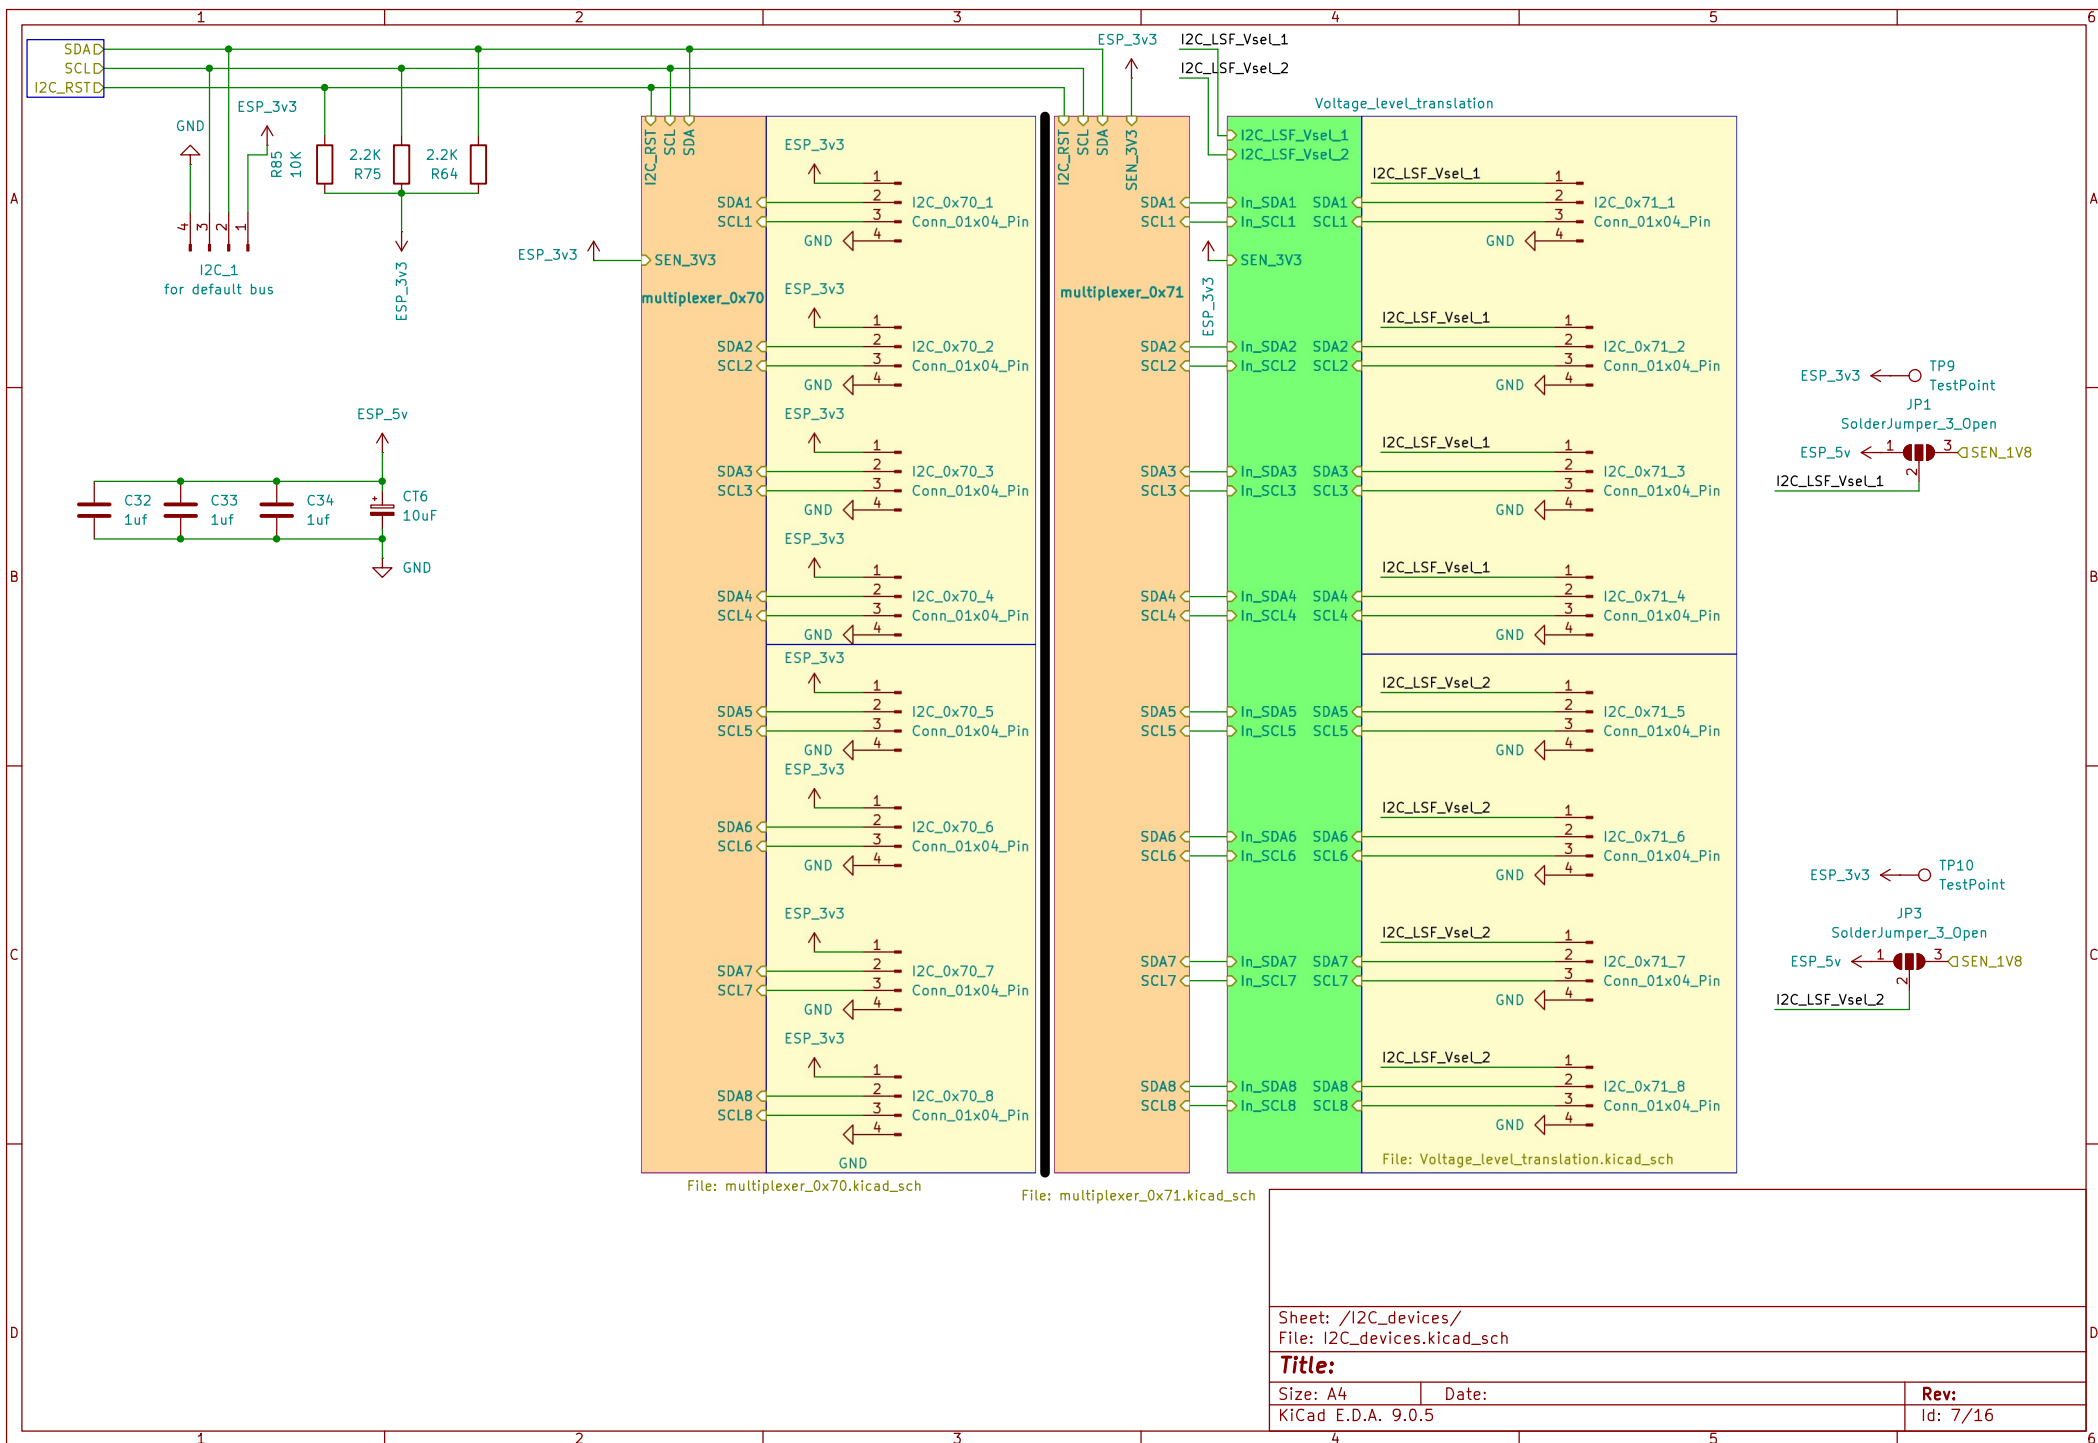


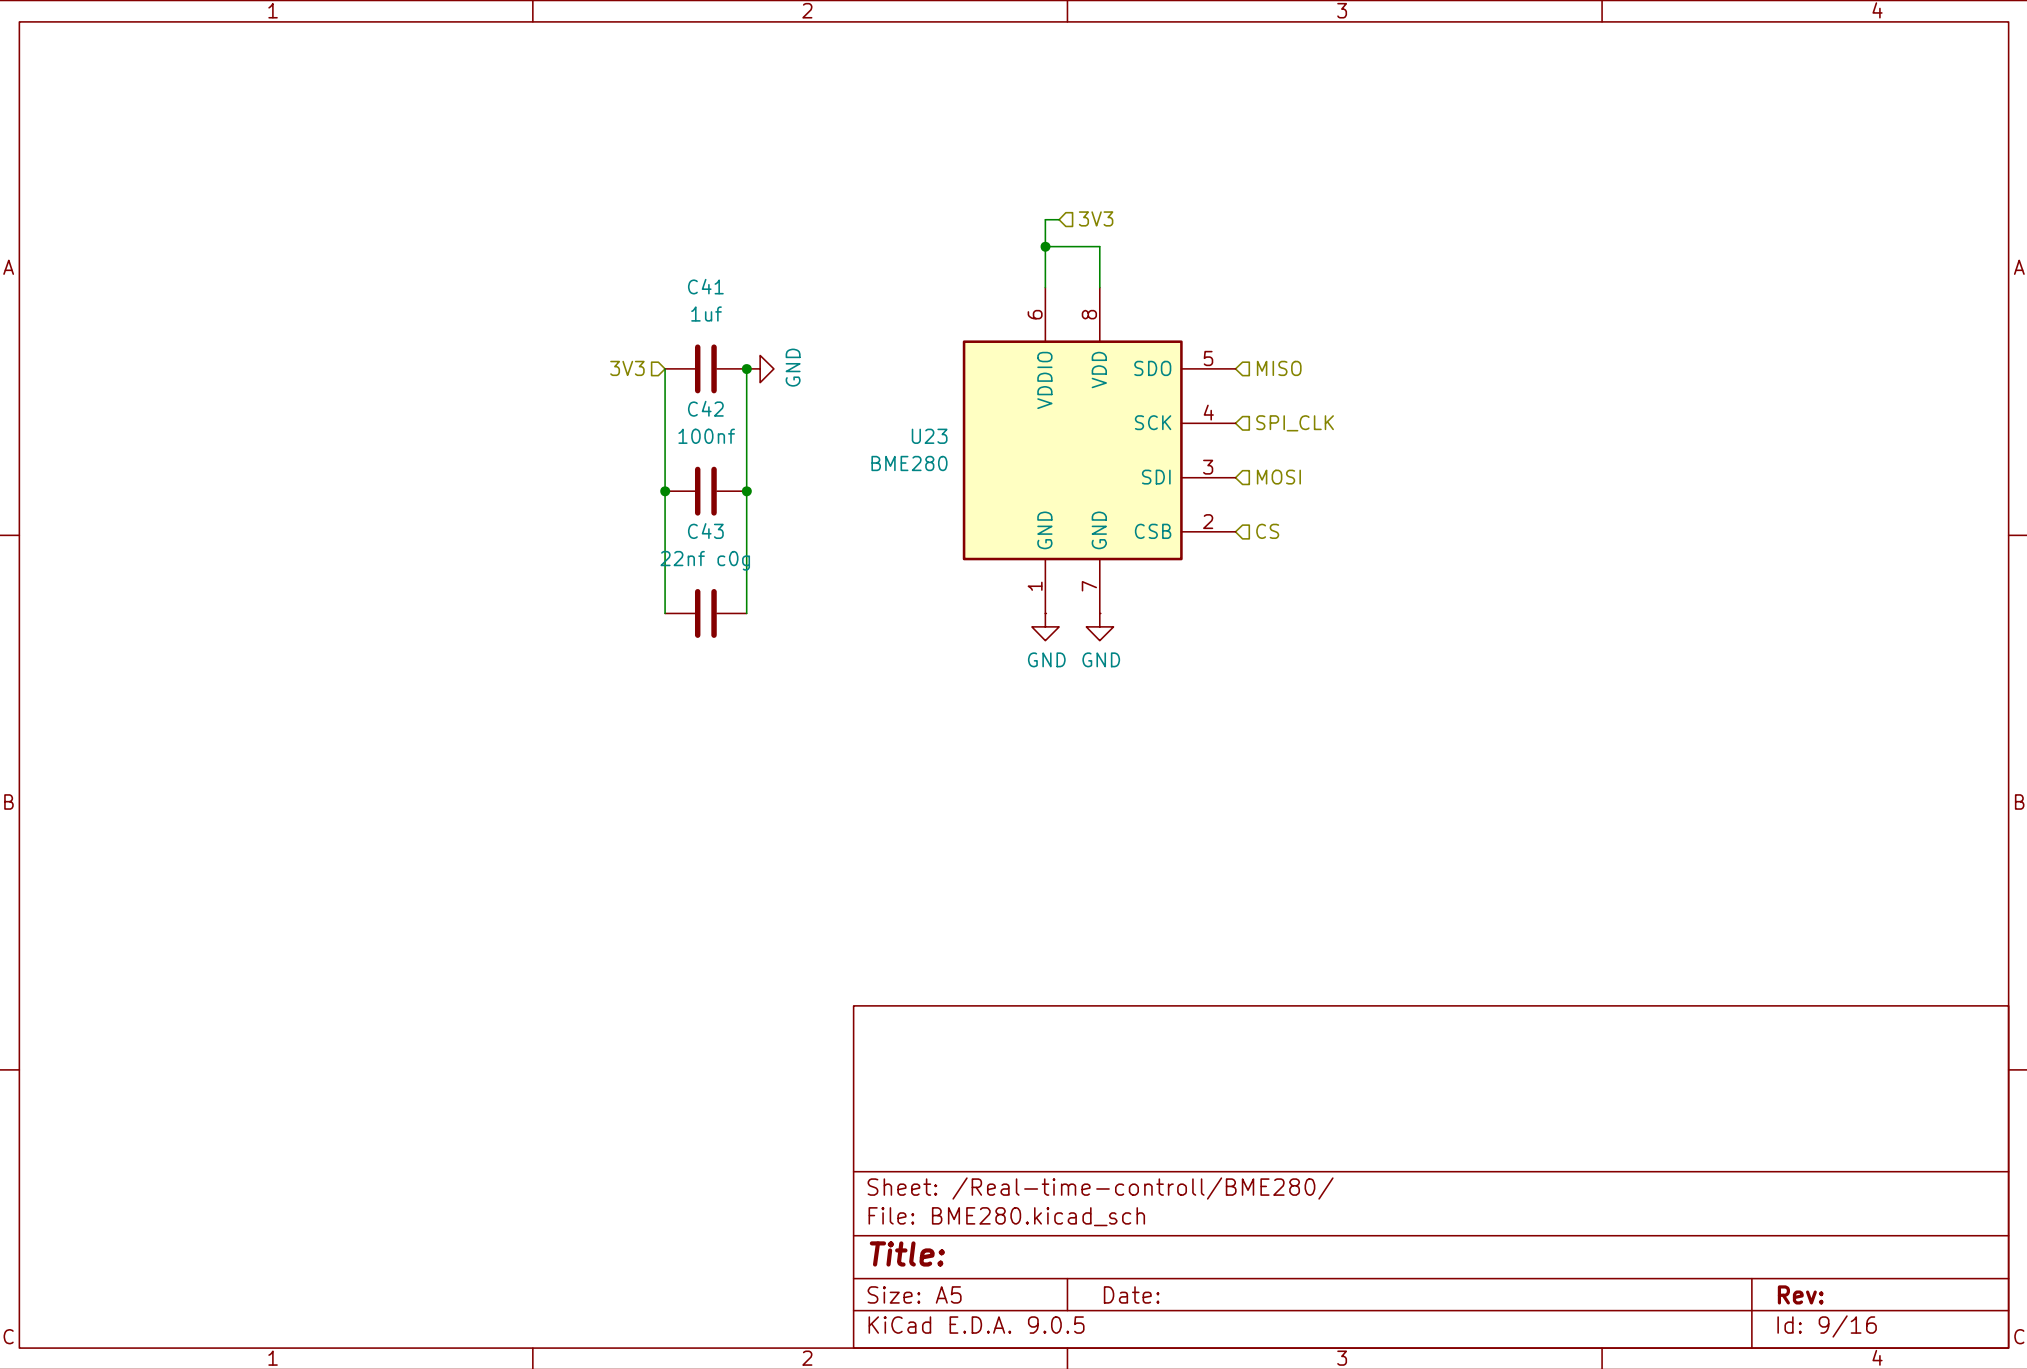

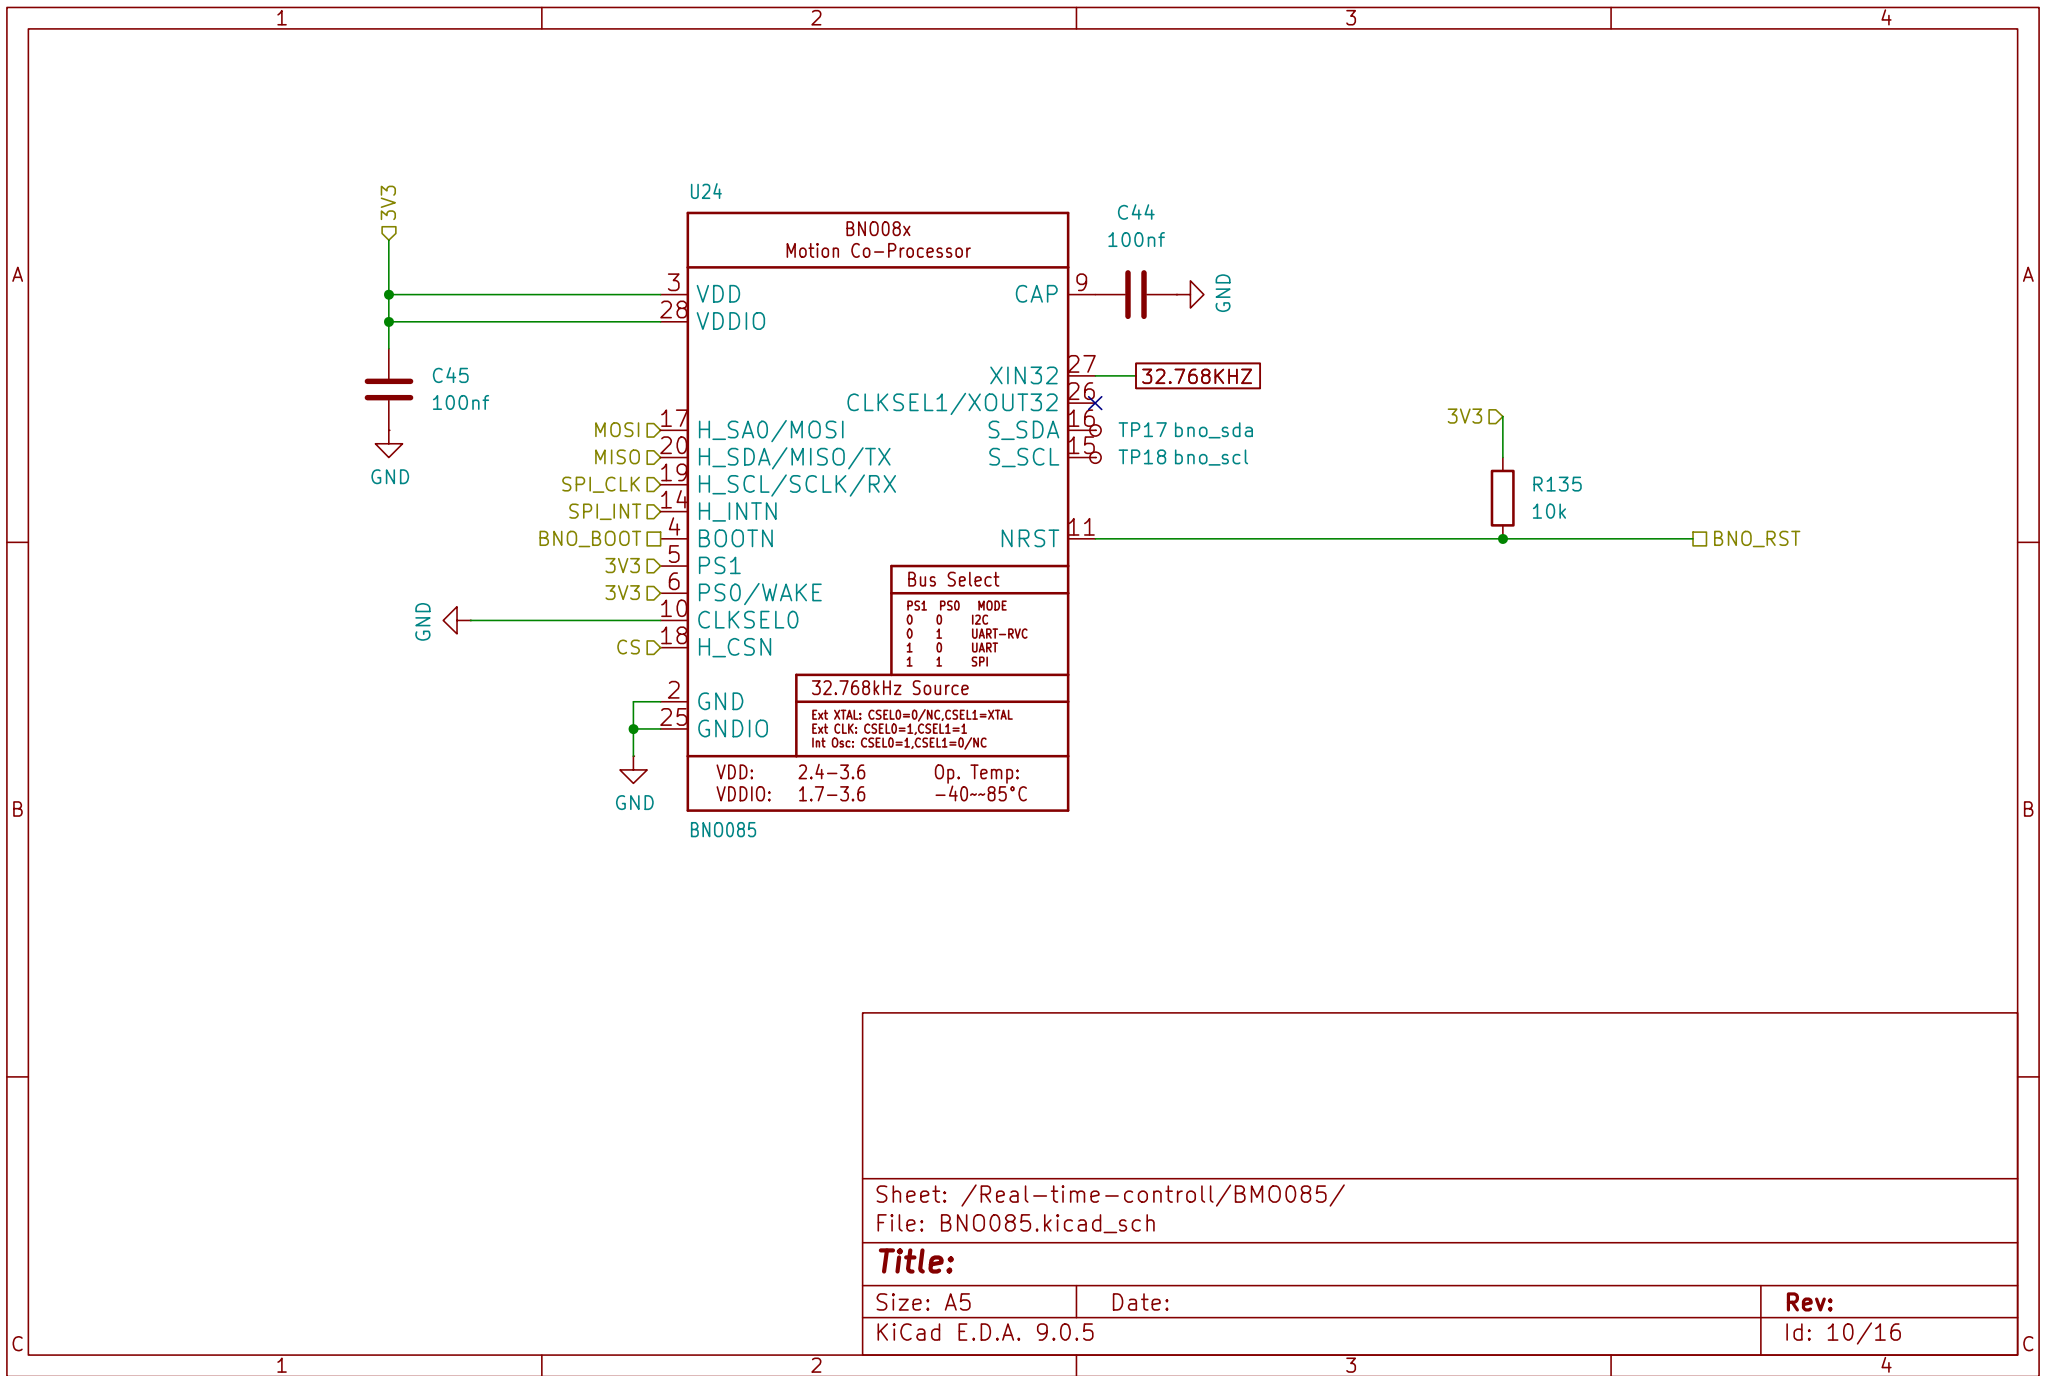

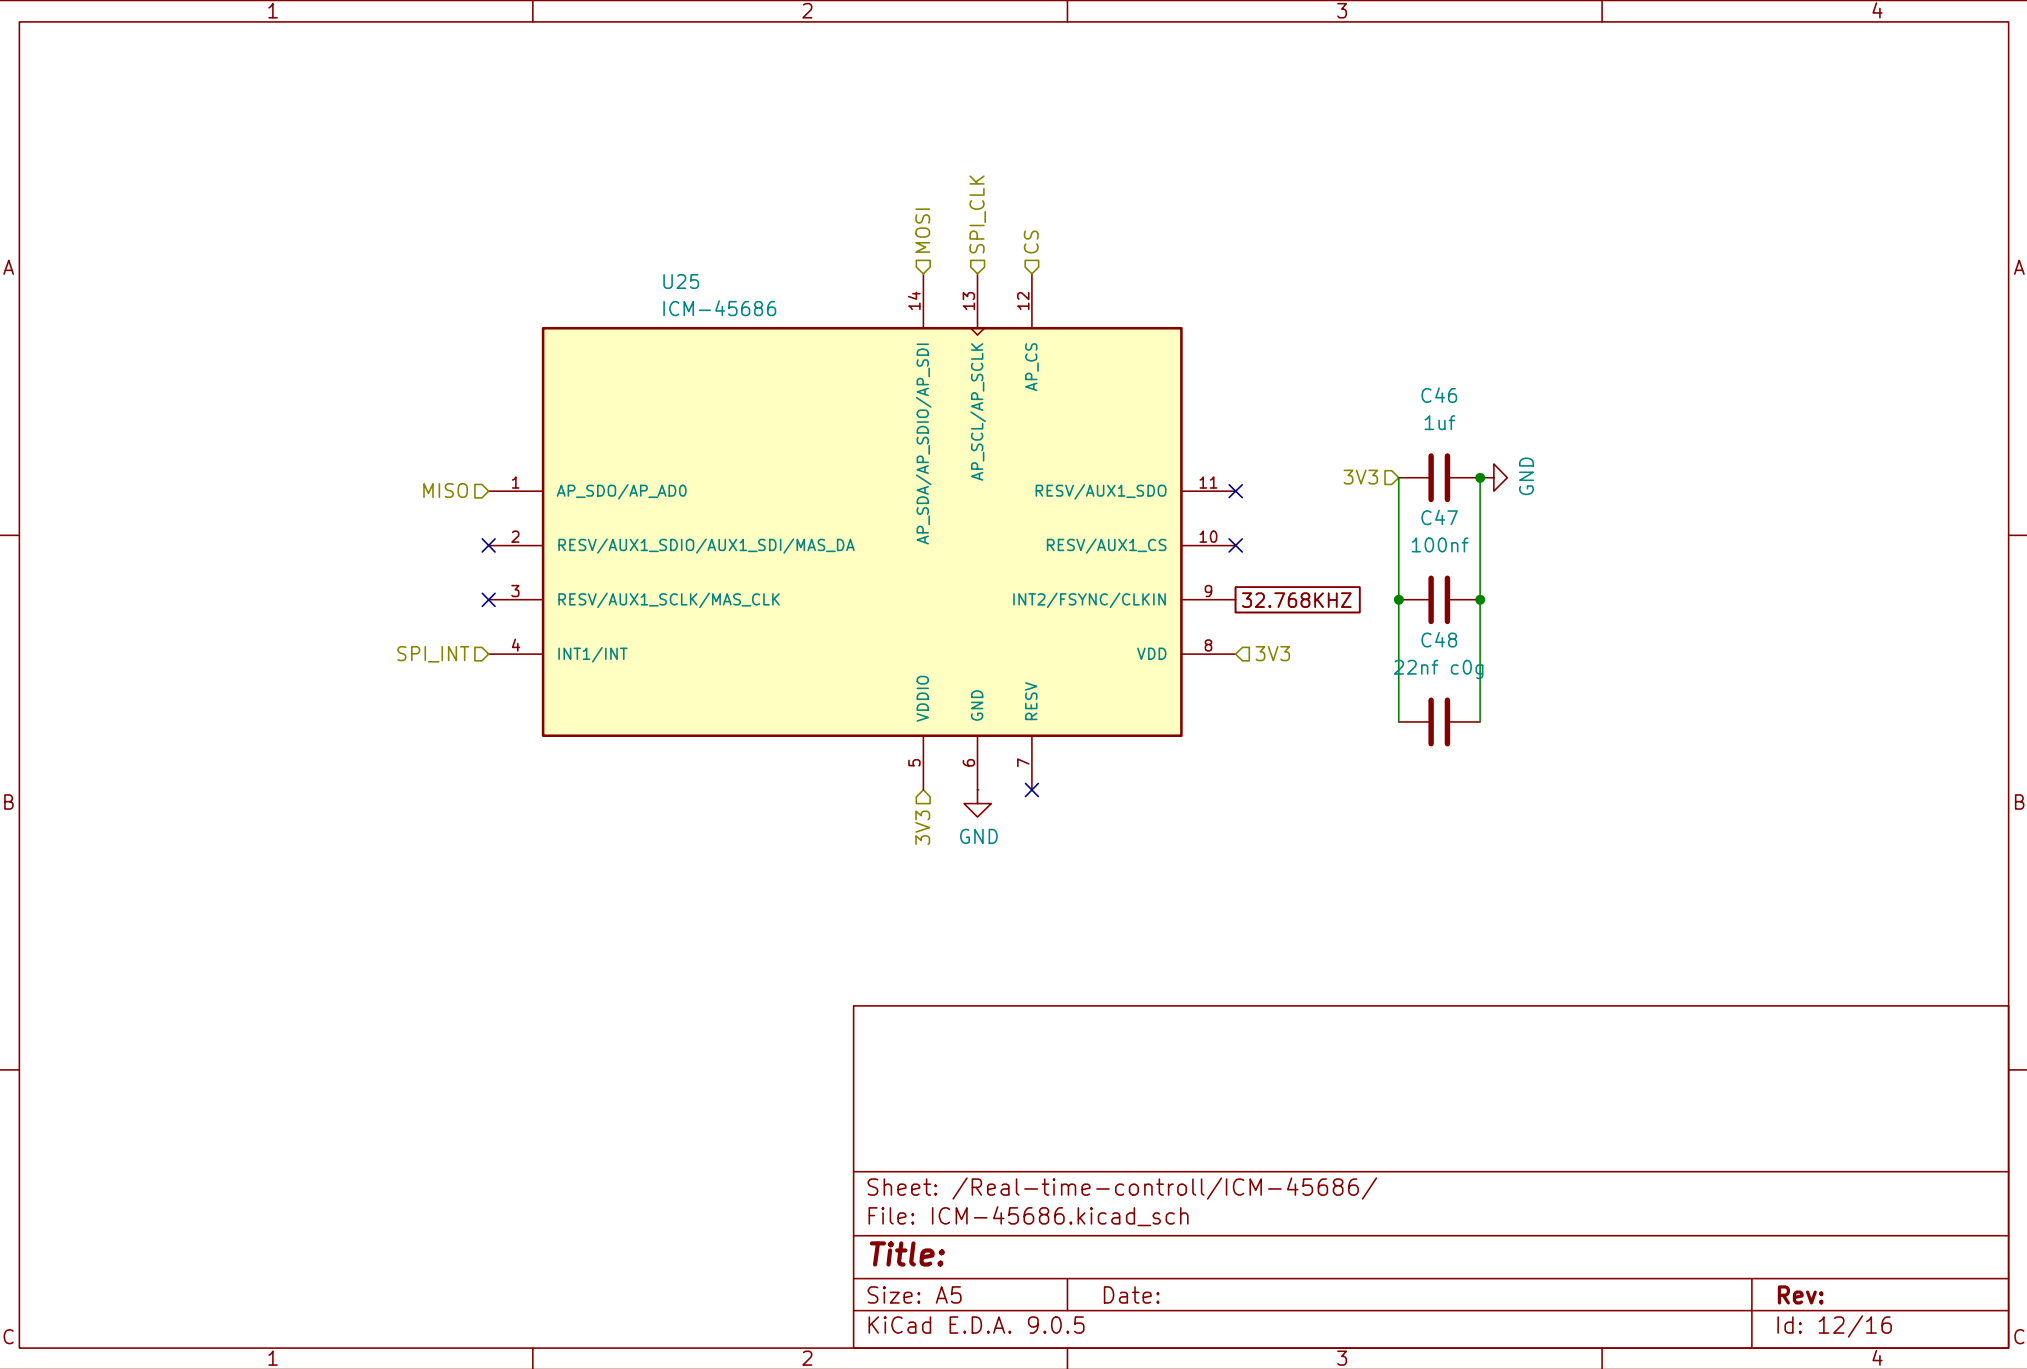

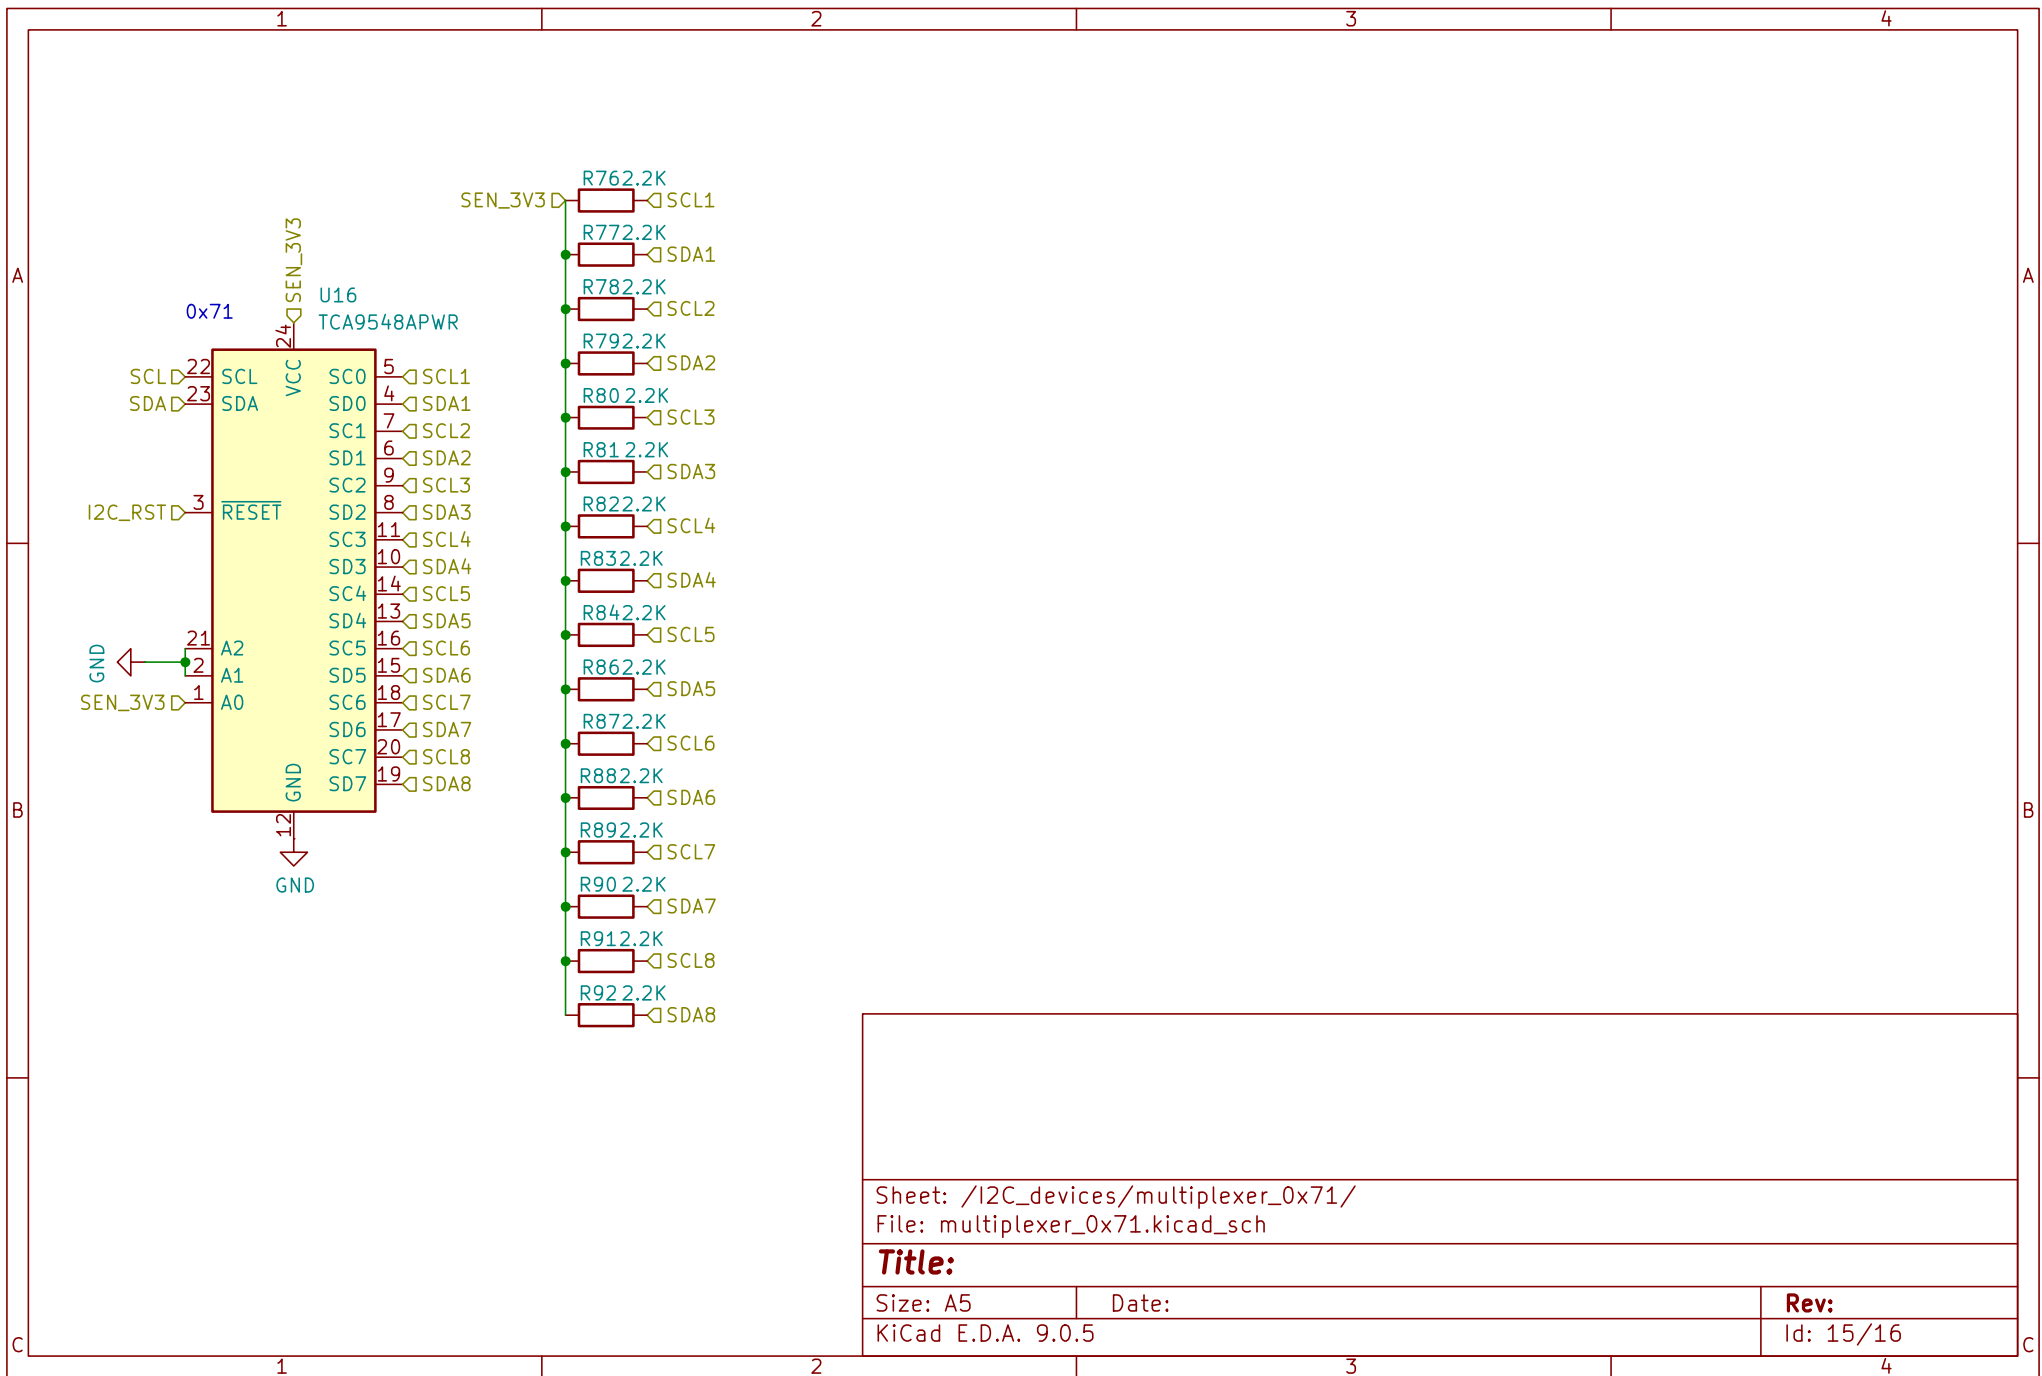

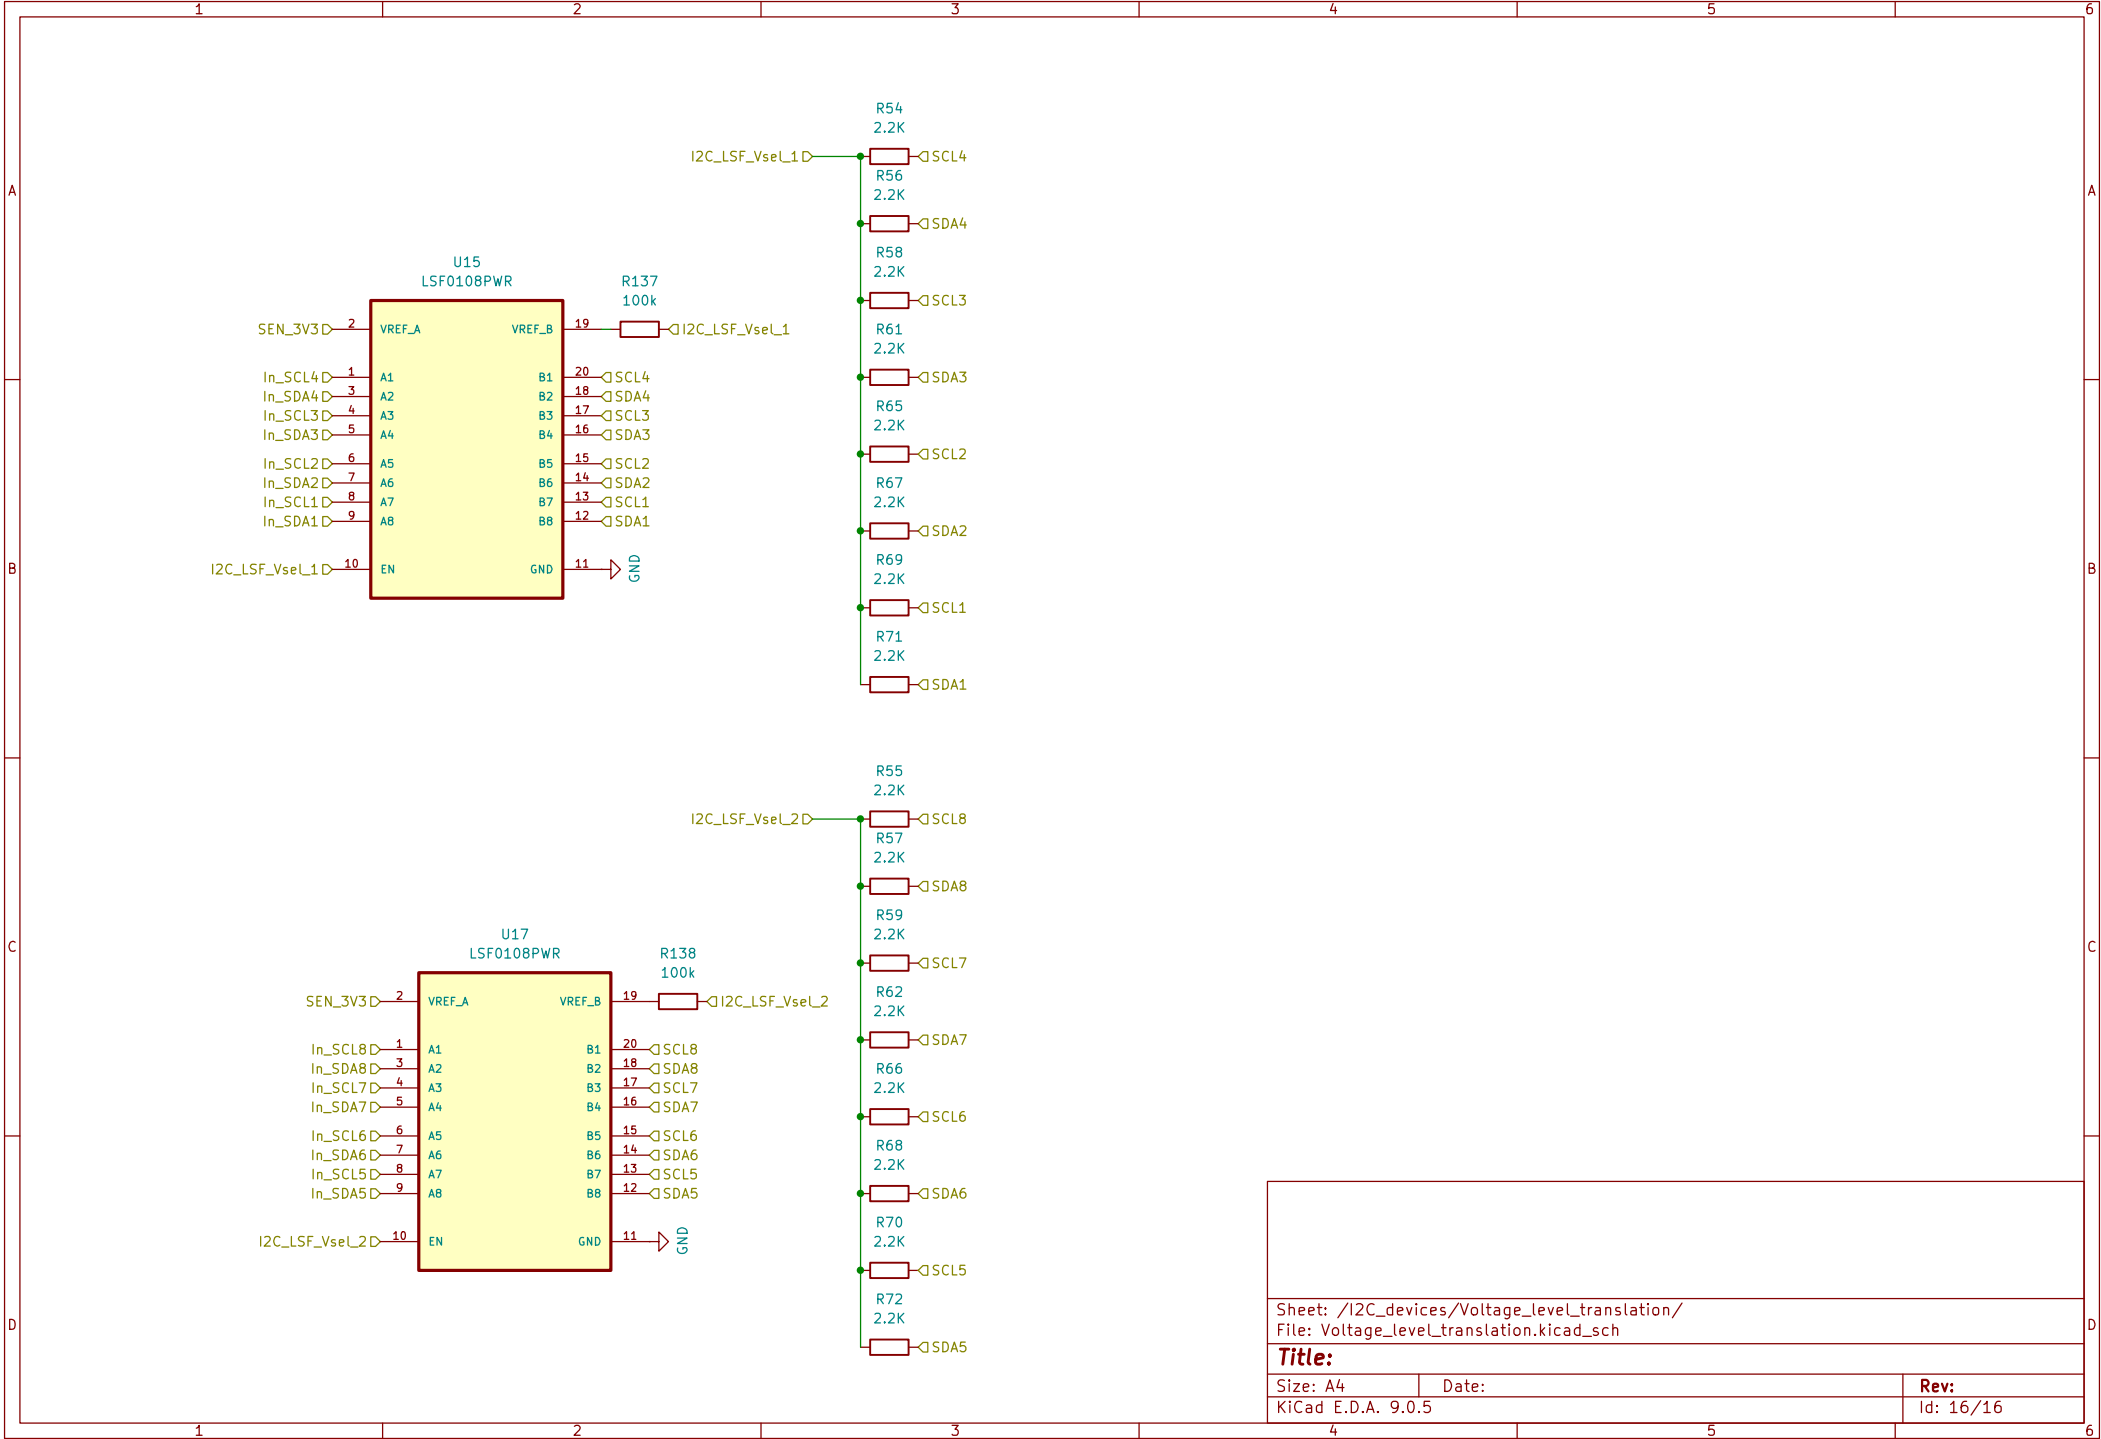

Sheet: /I2C_devices/Voltage_level_translation/
File: Voltage_level_translation.kicad_sch

Title:


Size: A4

Date:

Rev:

KiCad E.D.A. 9.0.5

Id: 16/16

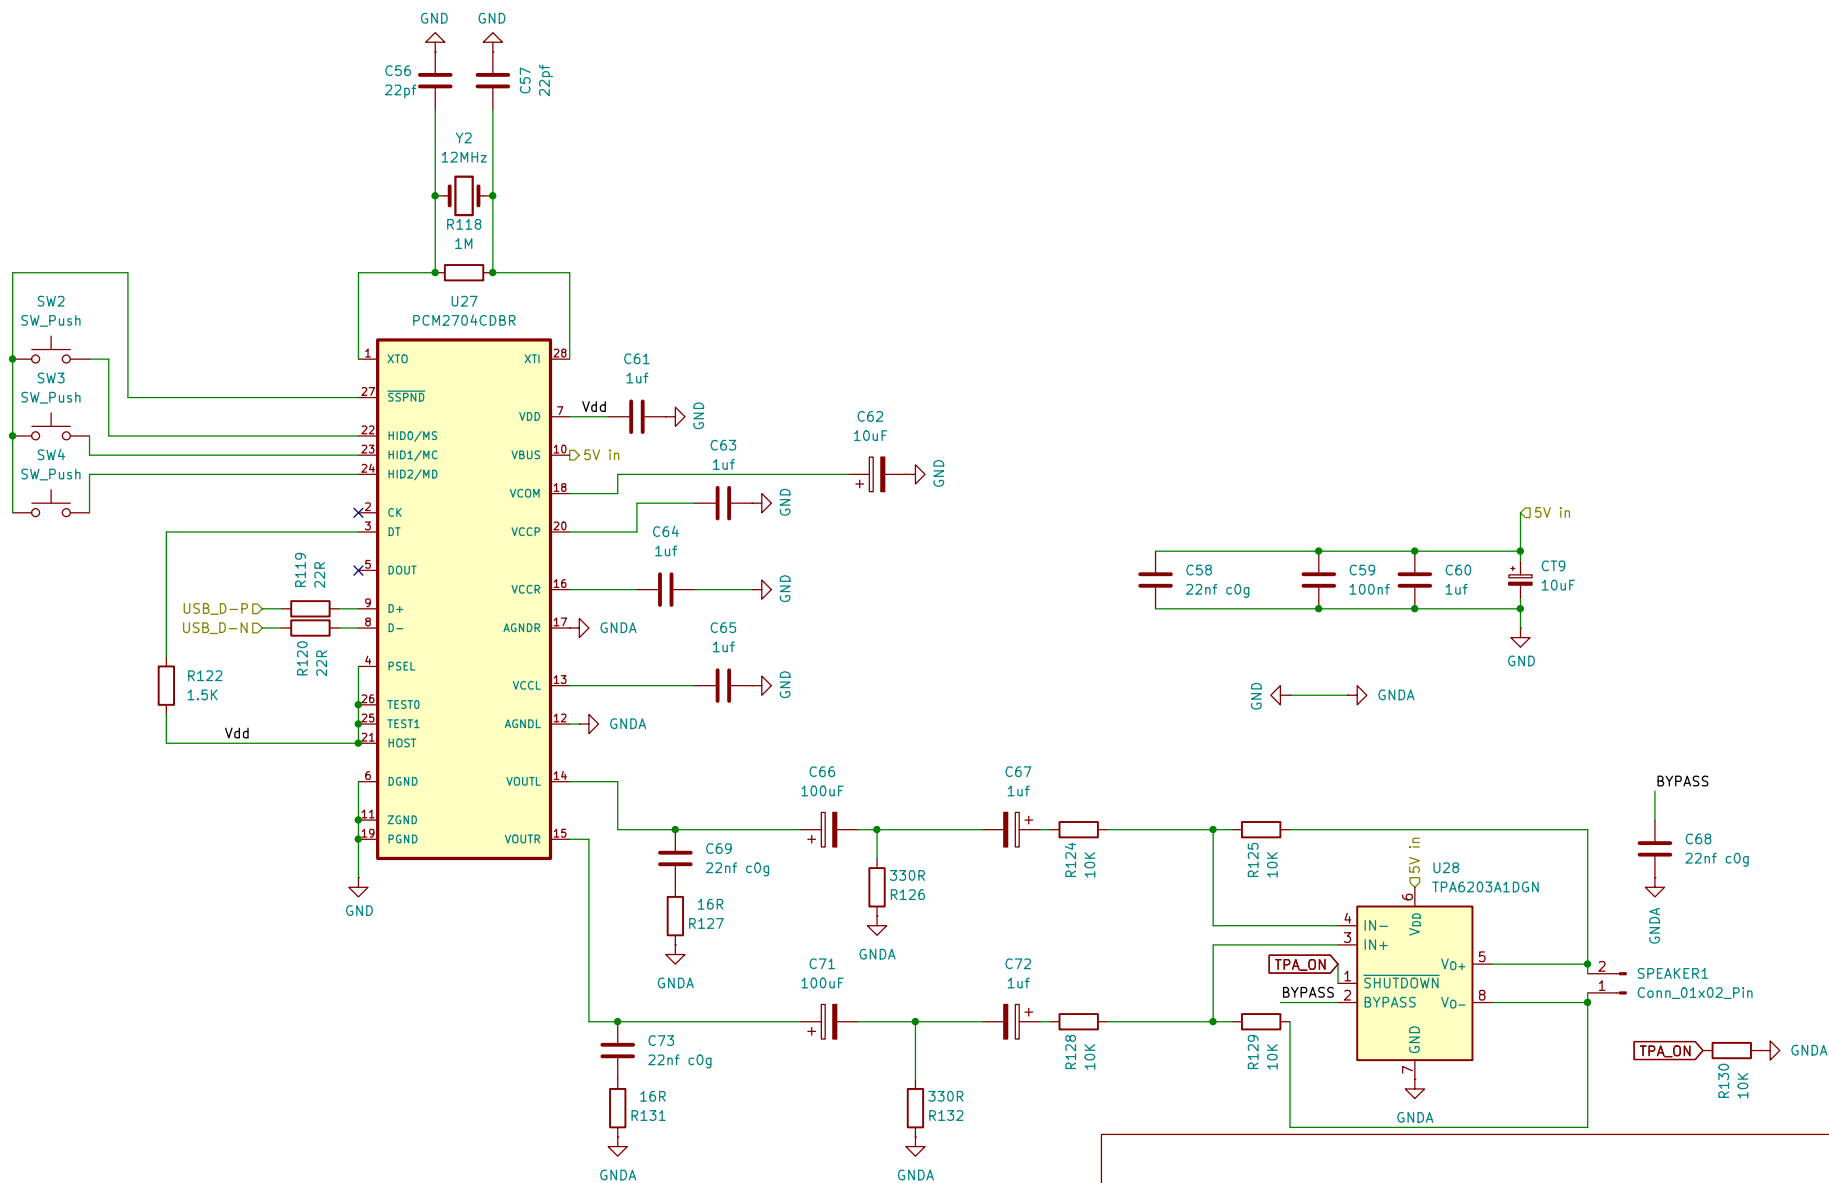

Sheet: /USB2-HUB/USB-AUDIO/
File: USB_AUDIO.kicad_sch

Title:

Size: A4
KiCad E.D.A. 9.0.5

Date:

Rev:
Id: 22/16