
Numerical Techniques for Process Modelling Part I: Finite Volume Method and Computational Fluid Dynamics

 $\begin{array}{c} {\rm KEB\text{-}45250} \\ {\rm Numerical\ Techniques\ for\ Process\ Modelling}, \\ {\rm Prosessien\ numeerinen\ mallinnus} \\ {\rm 5\ credits} \end{array}$

Antti Mikkonen antti.mikkonen@iki.fi Tampere University of Technology

> Updated on: January 16, 2018

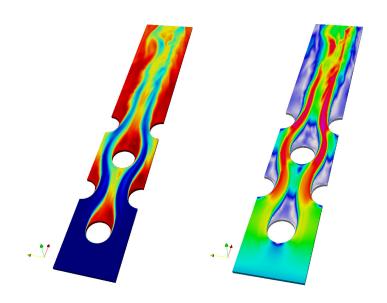

License

Some license similar to creative commons will be added ones the legal details have been studied.

Cover picture by Turo Välikangas.

Publication version history

These notes are written during the first implementation of this course. Backward compatibility in equation numbers etc. is attempted. Below you'll see the main changes between published versions. Small modifications are not noted.

Version	Date	Added	Changes	Notes
0.1	?	Chapters 1-?		

Contents

1	Inti	roduction	1							
	1.1	What is CFD?	1							
	1.2	Work flow	2							
		1.2.1 Pre-processing	3							
		1.2.2 Solver	5							
		1.2.3 Post-processing	6							
	1.3	Convergence	6							
	1.4	Mesh independency	6							
2	Fin	ite Volume Method	6							
3	Hea	Heat Conduction (diffusion) 7								
	3.1	Developing the equations for 1D problem	7							
		3.1.1 Same thing in math	10							
	3.2	Boundary conditions	10							
		3.2.1 Constant temperature boundary	11							
		3.2.2 Zero gradient (insulated) boundary	12							
	3.3	Matrix assembly	12							
	3.4	Unsteady	16							
	3.5	2D case	17							
	3.6	Notations	17							
	3.7	Extra material	17							
		3.7.1 Performance issues with example codes	17							
		3.7.2 Application to other physics	17							
4	Adv	vection-diffusion	19							
5	Nav	Navier-Stokes 19								
	5.1	The NS equation	19							
	5.2	Compressible vs. incompressible	19							
	5.3	Pressure coupling	19							
	5.4	Boundary conditions	19							
6	Mes	sh	19							
7	Tur	bulence	19							
8	Ma	th	19							
9	Ext	External Resources 2								
	9.1	Books etc	20							
	0.2	Programs programming libraries atc	20							

Preface

This lecture note is meant for students on the course Numerical Techniques for Process Modelling, arranged on Tampere University of Technology. The course consist of three parts: computational fluid dynamics, general use of numerical methods in energy related industrial problems, and reaction modeling. This booklet considers the computational fluid dynamics part.

This lecture note is a custom fitted to contain the material considered on the course. If you prefer a full text book, see the introductory level text book by Versteeg and Malalasekera, An introduction to Computational Fluid Dynamics [5]. More detailed pointers to relevant section will be given in the text as well as other outside sources.

This is the first time this lecture note is used and the lecture note will be written as the course progresses. Errors are inevitable. Feel free to email the author: antti.mikkonen@iki.fi.

Acronyms and translations

CFD	Computational fluid dynamics	Virtauslaskenta
FEM	Finite element method	Elementtimenetelmä
RANS	Reynolds-averaged Navier-Stokes (equations)	
NS	Navier-Stokes (equations)	
FVM	Finite volume method	Tilavuusmenetelmä
DNS	Direct numerical simulation	

1 Introduction

This section attempts to give on overview of the Computational Fluid Dynamics material discussed on this course. Math is avoided and all points will be returned to in greater detail.

The acronym of Computational Fluid Dynamics, CFD, has many interpretation: Colorful Fluid Dynamics, Colors For Directors, Cleverly Forged Data, etc. As usual, there is some truth in the joke. It is very easy to produce false results with CFD. Learning how to use CFD programs well enough to produce pretty videos may give false confidence. With few exceptions, CFD programs need an expert user to be reliable. Don't blame the program if you don't know what it's doing.

Computational Fluid Dynamics, CFD, has few fundamental limitations for an engineer. The underlying physics is usually well enough understood to give a near perfect representation of reality. The computational power to directly model the accurate physics are, however, not available to industry. At the moment the direct method, called Direct Numerical Simulation (DNS), is purely a research tool available only for a few turbulence researchers. In practical problems, we usually have to rely on computer resources saving models. Understanding these models is what makes a CFD expert.

This course will provide you with the basics of CFD. You will be familiar with the main ideas, able to program your own solvers for heat conduction cases, use existing CFD programs in simple cases, and learn more on your own.

1.1 What is CFD?

Probably the best place to start studying Computational Fluid Dynamics (CFD) is to go to Youtube and search with: CFD, Fluent, or OpenFOAM. There should be plenty of instructional videos.

In industry, the problem geometry is often complicated, see Fig. Fig. 1. , fluid properties chance in the domain or chemical reactions take place. Any of these is usually a big problem using analytical methods. With CFD, however, all of these problems are relatively straight forward to deal with. Fluid properties and chemical reactions can be calculated locally and complicated geometries are a matter of meshing.

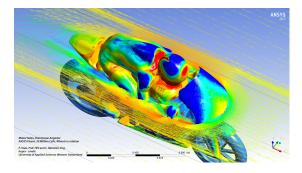


Figure 1: Aerodynamics of a motorcycle [1]

Meshing is a key concept in most CFD methods. We will only consider finite volume method here and use it near synonymous to CFD. With meshing, we divide the calculation domain in a large number of small control volumes, see Fig. 2.

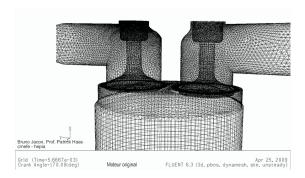


Figure 2: Engine mesh[1]

Meshing is useful because it allows us to solve many simple problems instead of one complex problem. Each cell and it's immediate neighbors form a local system for which balance equations ably, see Fig. 3. If the net mass flow $\sum \dot{m}_i$ from neighboring cells is positive, the mass inside the cell in the center must increase. We only need the information from the neighboring cells to do this. Similar balance equations are formed for momentum etc.

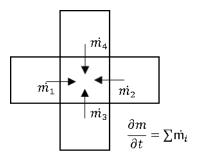


Figure 3: Cell

The ability to divide the large problem into small problems is the essence of numerical solution.

1.2 Work flow

The first thing to do with any problem is the understanding of relevant physical or chemical phenomena. It is usually beneficial to do some rough calculations using known correlations or simple energy balances to get a rough idea of what to expect. Every type of problem is different and experience plays a large part in how good the model will eventually be. If you have no previous experience it is best to try to find a published paper on the subject or ask somebody.

Once we are familiar with the problem the actual CFD work begins. The work flow is usually divided in three parts: pre-processing, solving, and post-processing.

1.2.1 Pre-processing

Pre-processing is everything that needs to be done before the actual numerical solver is used. The two main components are geometry processing (CAD) and meshing.

Geometry is the staring point of CFD simulation. There is basically two different options: you draw the geometry by yourself or you get the geometry from someone else. Either way, you must pay attention to the same things. What do you want to include to your model? See example in Fig. 4. On the left there is a photo of a real truck and on the right a simplified model for CFD.

Let us assume that the problem is to solve air resistance of the truck at a certain speed. For this calculation we need a simplified outer surface of the truck. Nothing in the inside is of interest. Small details like bolts are also meaningless for the air resistance and would make meshing much more complicated. One must usually make some educated guesses about what ti include in the model. If we are given a detailed CAD file of the truck we want to remove all the unimportant details .





Figure 4: Geometry simplification[2, 3]

Once the truck CAD model is ready, we need to model the actual calculation domain. For a air resistance calculation the domain would be something like shown in Fig. 5.

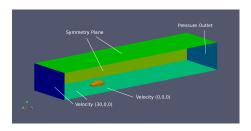


Figure 5: Calculation domain. TODO! Errors at boundary conditions.[4]

We'll want to model the air around the truck. Not the truck itself. We need to model some air in front of the truck and to its sides. Most of the domain will, however, be behind the truck where the eddies form. The volume limited by the truck surface is cut away from the domain.

Meshing is the next step after calculation domain is created. Meshing is typically the most time consuming part of setting up a CFD simulation. The

actual solution may run longer but requires no user input. The mesh must be fine enough to be apple to represent a meaningful solution of the problem. One of the main concepts behind Finite Volume Method, the numerical method used on this course, is that each cell only contain one value for a given quantity.

If we were to mesh the inside of a pipe with only one cell across the diameter we would essentially doing 1D solution with only one value for velocity etc. If we would use 10 cells there would be 10 values, etc. How many cells is needed cannot be reliably predicted. The used method is essentially to keep refining the mesh until the solution doesn't change anymore.

In our car example we need a sufficient number of cells around all the modeled geometry details. See Fig. 6. Modeling of small details quickly becomes very expensive and often doesn't provide any value to the solution. Therefore we come back to the suitably simplified geometry. As Einstein stated: "Everything should be made as simple as possible, but not simpler.".



Figure 6: Surface mesh details[4]

This far we have only paid attention to the mesh near the car surface. As we are interested in the force the air flow causes on the car, the most important phenomena happens near the surface. But we still need to pay attention to the rest of the domain as well.

Great many different meshing strategies exists. The main categories are structured and unstructured meshes. See Fig. 7 for examples.

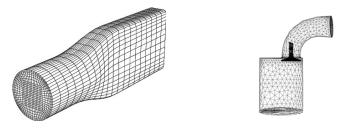


Figure 7: Structured and unstructured mesh[6]

Structural meshes form a block structure where each block is a twisted rectangular block. Unstructured meshes form a more chaotic form. The two strategies can also be combined. In general, structured meshes give better solutions with less cells than unstructured ones. Structured meshes are, however, very difficult to form for complex geometries.

The individual cells can be of any form, but hexahedron, tetrahedron, and polyhedron are the most common ones, see Fig. 8.

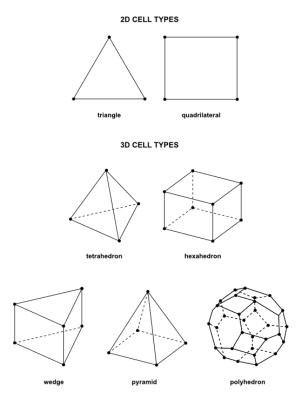


Figure 8: Cell types[6]

1.2.2 Solver

After geometry and mesh have been created it is time to start defining the solver settings. Each solver is a little different but the same basic concepts apply to all.

Governing equations are the equations that define the physics and chemistry <u>inside</u> the calculation domain. Boundary conditions define the borders. The choices for a fluid flow problem would be, for example: compressible or incompressible Navier-Stokes, steady state or unsteady simulation, etc.

Material properties define the behavior of the fluid. We need to choose between constant and varying fluid properties and define them.

Boundary condition define the behavior at the boundary. Its common to define a constant velocity or mass flow for inlet. Temperature etc. also needs boundary conditions.

Discretization method means the numerical details of the solution. Discretization is done in space and time. An example of discretization method is linear interpolation in which a unknown value between two known values is assumed to lie on a straight line between the two know values. On the other hand, if there is a strong flow from the direction of a known value to the unknown

one, we could assume that the unknown point has the same value as the upwind one. This is called first order upwind scheme.

There exists a great many discretization schemes but most common ones are similar to linear interpolation and upwind scheme.

Time stepping is needed for unsteady calculations. The basic idea is that we know the field values at one time and make some suitable simplification in order to proceed to next time.

Let us consider a rock throwing example for a while. The rock is thrown with some know velocity from some known position at a known time. To numerically solve the rock flight path we could assume for a suitably small amount of time the rock travels in a straight line with constant velocity. We could then calculate a new location for the rock and after calculating the new velocity repeat the process. This would called explicit Euler method.

If we are interested in the unsteady behavior, we need to use a small enough time step to capture all the interesting physics. A too large time step usually also cause the simulation to break.

Iteration method Even if we are solving a steady state problem we usually need to iterate the solution. Most fluid related problems are highly nonlinear and require iteration. Due to the nonlinear nature of the problem, the iteration process is quite sensitive and often breaks.

A typical trick to keep the process converging is to use under relaxation. With under relaxation we don't accept the new solution of out equations as they are, but instead use some value between the old and the new result. This limits the rate of change in the solution and often assists in convergence.

Time stepping and solving of nonlinear equations are remarkably similar and time stepping methods are sometimes used for steady state problems also.

Saving the results is necessary for post processing. It is, however, often inconvenient to save all the results as this would require huge amounts of storage and slow down the solution. One would usually save all field of the final solution and some snapshots of interesting values during the iteration.

- 1.2.3 Post-processing
- 1.3 Convergence
- 1.4 Mesh independency

2 Finite Volume Method

In this section we study the general properties of Finite Volume Method (FVM) using one-dimensional heat conduction as an example. The necessary steps are very similar in more complicated cases. For the same information in more elaborated format see the introduction level text book by Versteeg and Malalasekera, An introduction to Computational Fluid Dynamics. For this section see chapter four.

The goal of FVM, and other similar numerical methods, is to divide a continuous problem into small discrete pieces. An approximate solution of the original problem is expressed with a large number of simple arithmetic equations. This results are readily collected in to a matrix and solved with a computer.

The main advantages of numerical solution over analytical solution is the ease of solving problems in complicated geometries and boundary conditions or with varying fluid properties. For such problems analytical solutions often don't exists or are very time consuming to implement. A word of warning is, however in order: it is very easy to produce false results with numerical tools! Especially with commercial software. Therefore it is important to always verify the numerical method with a similar analytical solution if such is available.

During this cource we become familiar with Finite Volume Method (FVM). Other very similar numerical methods are Finite Element Method (FEM) and Finite Difference Method (FDM). In general, numerical solution of fluid related problems are often called Computational Fluid Dynamics (CFD). FVM method is the preferred method for fluid flow problems because of it's simplicity and conservativeness (mass balance etc.).

3 Heat Conduction (diffusion)

The material discussed in this section may be found in a more elaborated format from Versteeg and Malalasekara 2007, Chapter 5. [5]

In this section we will learn to formulate and solve linear diffusion problems. We use heat conduction as an example.

3.1 Developing the equations for 1D problem

See Versteeg and Malalasekare [5] page 114, Section 4.1-4.3.

The key concept for nearly all numerical solutions is discretization of the problem. In Finite Volume Method we divide the solution domain in small control volumes very similar to the ones used in analytical modeling, see Fig. 9. The difference is that in analytical modeling we allow to control volume to become infinitesimally small. In <u>Finite</u> Volume Method we use some suitably small size instead.

We use letter P to refer to the central point (node) of the control volume we are currently interested in and W and E to refer to neighboring nodes as shown in Fig. 9.

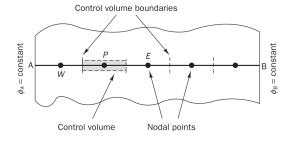


Figure 9: Control volumes and nodes [5]

In addition to control volumes and nodes we also need to refer to the faces

at control volume boundaries. We call these faces w and e, see Fig. 10. The cell size, or distance from one face to another is called Δx as shown in Fig. 10.




Figure 10: Faces and distances [5]

As a practical example, our domain could be a 100mm long metal rod and we could divide it in 100 control volumes, each 1mm long.

Let us concentrate on one control volume, the one around node P, for a while. If there is a heat flux density $q = -k \frac{\mathrm{d}T}{\mathrm{d}x}$ from neighboring cell W, across the face A_w at the boundary between nodes W and P, to cell P, the heat flux is $(qA)_w = -\left(kA\frac{\mathrm{d}T}{\mathrm{d}x}\right)_w$. We use subscripts for locations, see Fig. 11. Similarly for the east face $(qA)_e = -\left(kA\frac{\mathrm{d}T}{\mathrm{d}x}\right)_e$.

If there is a mean volumetric heat source \overline{S} inside the control volume, the total heat power is $S = \overline{S}\Delta V$. A practical example of such a source is electric heating.




Figure 11: Heat conduction

Similarly to the control volume used in analytical methods, we can now collect the terms in a balance equation as

$$(qA)_{w} - (qA)_{e} + \overline{S}\Delta V = 0$$

$$\Leftrightarrow \left(kA\frac{\mathrm{d}T}{\mathrm{d}x}\right)_{e} - \left(kA\frac{\mathrm{d}T}{\mathrm{d}x}\right)_{w} + \overline{S}\Delta V = 0 \tag{1}$$

The Eq. 1 contains the essence of Finite Volume Method. Using a familiar control volume approach we have discretized our problem for heat fluxes.

What remains is to discretize the temperature gradients $\left(\frac{dT}{dx}\right)_w$ and $\left(\frac{dT}{dx}\right)_e$ at cell faces. If thermal conductivity k and/or cross-section area A varies, they must be evaluated also.

The most common way to discretize gradient term is to use central differencing. The basic idea is to assume linear temperature profile between two nodes as shown in Fig. 12. In essence central differencing is the same thing as linear interpolation.




Figure 12: Central differencing

With uniform grid linear interpolation gives at cell faces

$$k_{w} = \frac{k_{W} + k_{P}}{2}$$

$$k_{e} = \frac{k_{E} + k_{P}}{2}$$

$$A_{w} = \frac{A_{W} + A_{P}}{2}$$

$$A_{e} = \frac{A_{E} + A_{P}}{2}$$

$$(2)$$

If we have constant thermal conductivity k and/or constant cross-section area A, we can ignore the interpolation in Eq. 2.

With uniform grid central differencing scheme gives for a temperature gradients

$$\left[\left(\frac{\mathrm{d}T}{\mathrm{d}x} \right)_{w} \approx \frac{T_{P} - T_{W}}{\Delta x} \right] \\
\left(\frac{\mathrm{d}T}{\mathrm{d}x} \right)_{e} \approx \frac{T_{E} - T_{P}}{\Delta x} \tag{3}$$

Note that for non-uniform grid where the Δx is not constant the form is slightly more complex.

Substituting Eq. 3 into Eq. 1

$$k_e A_e \frac{T_E - T_P}{\Delta x} - k_w A_w \frac{T_P - T_W}{\Delta x} + \overline{S} \Delta V = 0$$
 (4)

Now we have a fully discretized equation for heat conduction! It is often useful to rearrange Eq. 4 as

$$\frac{k_e A_e}{\Delta x} T_E - \frac{k_e A_e}{\Delta x} T_P - \frac{k_w A_w}{\Delta x} T_P + \frac{k_w A_w}{\Delta x} T_W + \overline{S} \Delta V = 0$$

$$\Leftrightarrow \underbrace{\left(\frac{k_e A_e}{\Delta x} + \frac{k_w A_w}{\Delta x}\right)}_{a_P = a_W + a_E} T_P = \underbrace{\left(\frac{k_w A_w}{\Delta x}\right)}_{a_w} T_W + \underbrace{\left(\frac{k_e A_e}{\Delta x}\right)}_{a_E} T_E + \underbrace{\overline{S} \Delta V}_{S_u} \tag{5}$$

$$\Leftrightarrow \boxed{a_P T_P = a_W T_W + a_E T_E + S_u} \tag{6}$$

At this point our equation is in a ready-for-a-computer form but lets make a sanity check first.

From experience we know that thermal conductivity k, cross-section area A and cell size Δx are positive numbers. Therefore $a = \frac{kA}{\Delta x}$ is also a positive

number. Now, lets imagine that the temperature in the neighboring cell T_W rises. What happens to the temperature in the studied cell T_P ? According to Eq. 6 it rises because a_W is positive. This agrees with our experience. And what if we increase thermal conductivity? Multiplier a_W increases and T_P reacts more to changes in T_W . Again, this agrees with our experience. Running a similar though experiment for a_E and S_u gives similar results and we can conclude that there is no obvious errors in our formulation.

3.1.1 Same thing in math

For one-dimensional steady heat conduction (diffusion) with a volumetric source term we have

$$\frac{\mathrm{d}}{\mathrm{d}x} \left(k \frac{\mathrm{dT}}{dx} \right) + S = 0 \tag{7}$$

where T is the temperature and s is the volumetric source term. Integrating over a control volume gives

$$\int_{CV} \frac{\mathrm{d}}{\mathrm{d}x} \left(k \frac{\mathrm{dT}}{dx} \right) \mathrm{d}V + \int_{CV} S \mathrm{d}V = 0 \tag{8}$$

Using the Gauss divergence theorem we get

$$\int_{A} \mathbf{n} \cdot k \frac{\mathrm{dT}}{dx} \mathrm{d}A + \int_{CV} S \mathrm{d}V = 0$$

$$\Leftrightarrow \left(kA \frac{\mathrm{dT}}{dx} \right)_{e} - \left(kA \frac{\mathrm{dT}}{dx} \right)_{w} + \overline{S} \Delta V = 0$$
(9)

With central differencing, see Eqs. 2 and 3

$$k_e A_e \frac{T_E - T_P}{\Delta x} - k_w A_w \frac{T_P - T_W}{\Delta x} + \overline{S} \Delta V = 0$$
 (10)

which is the same equations as Eq. 4. Rearranging Eq. 10 results in Eq. 5.

$$\underbrace{\left(\frac{k_e A_e}{\Delta x} + \frac{k_w A_w}{\Delta x}\right)}_{a_P = a_W + a_E} T_P = \underbrace{\left(\frac{k_w A_w}{\Delta x}\right)}_{a_w} T_W + \underbrace{\left(\frac{k_e A_e}{\Delta x}\right)}_{a_E} T_E + \underbrace{\overline{S}\Delta V}_{S_u}$$
(11)

$$\Leftrightarrow \boxed{a_P T_P = a_W T_W + a_E T_E + S_u} \tag{12}$$

3.2 Boundary conditions

In Section 3.1 we developed the discretized equations for 1D heat transfer inside the domain. In order to use the equation 5 for anything real we now need to give it boundary conditions.

The cells that touch boundaries are called boundary cells and require special attention. Let us concentrate on cell 1 in Fig. 13 for a while.




Figure 13: Boundary conditions 1D

3.2.1 Constant temperature boundary

See Versteeg and Malalasekare [5] page 118, Example 4.1.

We define a **constant temperature** T_A **for left boundary**. We note that the distance from node 1 to face A is $\Delta x/2$ (not all FVM meshes are build this way but the ones we use are). Using the same interpolation and central differencing schemes as before, Eqs. 2 and 3, we get for the west side face in Eq. 1

$$\left(kA\frac{\mathrm{d}T}{\mathrm{d}x}\right)_{w} \approx k_{A}A_{A}\frac{T_{P} - T_{A}}{\Delta x/2} \tag{13}$$

Substituting this in Eq. 1 and treating the inside face w in the same way as before results in

$$k_e A_e \frac{T_E - T_P}{\Delta x} - k_A A_A \frac{T_P - T_A}{\Delta x/2} + \overline{S} \Delta V = 0$$
 (14)

Rearranging Eq. 14 gives

$$\underbrace{\left(\frac{k_e A_e}{\Delta x} + \overbrace{\frac{k_A A_A}{\Delta x/2}}\right)}_{a_P = a_E + S_P} T_P = \underbrace{\left(\frac{k_e A_e}{\Delta x}\right)}_{a_E} T_E + \underbrace{\left(\frac{k_A A_A}{\Delta x/2}\right)}_{S_u} T_A + \overline{S} \Delta V \tag{15}$$

$$\Leftrightarrow a_P T_P = a_E T_E + S_u$$

Comparing Eqs. 5 and 15 we notice a remarkable similarity. The east side coefficient a_E is unaffected. West side face doesn't exist and is replaced with source terms S_P and $\left(\frac{k_A A_A}{\Delta x/2}\right) T_A$. The source term $\overline{S}\Delta V$ stays unchanged. This is typical to boundary conditions are simplifies matrix assembly. We can first assemble the inner face coefficients and volumetric sources and worry about boundaries later. More about matrix assembly later in Sec. 3.3.

If the constant temperature is set on the B boundary as shown in Fig. 13 we follow a similar procedure as for A boundary. Now we replace East side coefficient a_E with suitable source terms and arrive to

$$\underbrace{\left(\frac{k_w A_w}{\Delta x} + \overbrace{\frac{k_B A_B}{\Delta x/2}}\right)}_{Q_B = Q_W + S_D} T_P = \underbrace{\left(\frac{k_w A_w}{\Delta x}\right)}_{a_W} T_W + \underbrace{\left(\frac{k_B A_B}{\Delta x/2}\right)}_{S_u} T_B + \overline{S}\Delta V$$
(16)

$$\Leftrightarrow a_P T_P = a_W T_W + S_u$$

3.2.2 Zero gradient (insulated) boundary

See Versteeg and Malalasekare [5] page 125, Example 4.3.

Zero gradient boundary for temperature in heat conduction context means insulations as

$$q = -k \underbrace{\frac{\mathrm{d}T}{\mathrm{d}x}}_{0} = 0 \tag{17}$$

To apply the zero gradient boundary condition for East face in Eq. 1 we but the east side coefficient to zero as $a_E = 0$ and from Eq. 5 we get

$$\underbrace{\left(\frac{k_w A_w}{\Delta x}\right)}_{a_P = a_W} T_P = \underbrace{\left(\frac{k_w A_w}{\Delta x}\right)}_{a_w} T_W + \underbrace{\overline{S}\Delta V}_{S_u}$$
(18)

$$\Leftrightarrow a_P T_P = a_W T_W + S_u$$

No additional source terms are needed.

3.3 Matrix assembly

In previous section we have learned how to formulate the equations for our problem. Now we learn how to assemble these equations into a matrix form and feed it to a computer. We use Python for calculations. We want the problem in linear matrix equations form

$$AT = b$$

$$\Leftrightarrow T = A^{-1}b \tag{19}$$

which can be readily solved with almost any programming language. For example in Python, using scipy reads

Figure 14: Linear system solution with Scipy

We but all the constant values that do not depend on T in source vector \boldsymbol{b} and all the multiplying coefficients of temperatures in matrix \boldsymbol{A} .

Let us consider one-dimensional heat conduction where the left boundary is set at constant temperature T_B and right boundary is insulated, i.e. $\frac{dT}{dx} = 0$.

We have constant fluid properties and cross-section are A. The domain length is L and we divide it in n volumes, each $\Delta x = L/n$ long. We start the cell numbering from left and use uniform mesh. We have uniform volumetric heat generation S.

For the inside cells, dividing by the constant area A we have from Eq. 5

$$\underbrace{\left(\frac{k}{\Delta x} + \frac{k}{\Delta x}\right)}_{a_P = a_W + a_E} T_P = \underbrace{\left(\frac{k}{\Delta x}\right)}_{a_w} T_W + \underbrace{\left(\frac{k}{\Delta x}\right)}_{a_E} T_E + \underbrace{S\Delta x}_{S_u}$$

$$\Leftrightarrow a_P T_P = a_W T_W + a_E T_E + S_u$$
(20)

For left boundary, dividing by the constant area A we have from Eq. 15

$$\underbrace{\left(\frac{k}{\Delta x} + \overbrace{\frac{k}{\Delta x/2}}\right)}_{a_{B} = a_{E} + S_{B}} T_{P} = \underbrace{\left(\frac{k}{\Delta x}\right)}_{a_{E}} T_{E} + \underbrace{\left(\frac{k}{\Delta x/2}\right)}_{S_{u}} T_{A} + \overline{S}\Delta V \tag{21}$$

$$\Leftrightarrow a_P T_P = a_E T_E + S_u$$

For right boundary, dividing by the constant area A we have from Eq. 18

$$\underbrace{\left(\frac{k}{\Delta x}\right)}_{a_P = a_W} T_P = \underbrace{\left(\frac{k}{\Delta x}\right)}_{a_w} T_W + \underbrace{\overline{S}\Delta V}_{S_u} \tag{22}$$

$$\Leftrightarrow a_P T_P = a_W T_W + S$$

We may now observe from Eqs. 20-22 that the for all cells that do have a west boundary, the west face coefficient is the same $a_W = \frac{k}{\Delta x}$. The west face coefficient operates on the currently studied cell T_P and the west side neighbor T_W .

Adding the west side coefficients into matrix \boldsymbol{A} gives

$$\mathbf{A} = \begin{bmatrix} 0 & 0 & 0 & 0 & 0 \\ -a_W & a_W & 0 & 0 & 0 \\ 0 & -a_W & a_W & 0 & 0 \\ 0 & 0 & -a_W & a_W & 0 \\ 0 & 0 & 0 & -a_W & a_W \end{bmatrix}$$
 (23)

With python this can be done as

Similarly, for all east faces that exist the east face coefficient $a_E = \frac{k}{\Delta x}$ and the coefficient operates on the current cell and the east neighbor. Adding the east coefficients to already build matrix in Eq. 23 gives

$$\mathbf{A} = \begin{bmatrix} a_E & -a_E & 0 & 0 & 0\\ -a_W & a_W + a_E & -a_E & 0 & 0\\ 0 & -a_W & a_W + a_E & -a_E & 0\\ 0 & 0 & -a_W & a_W + a_E & -a_E\\ 0 & 0 & 0 & -a_W & a_W \end{bmatrix}$$
(24)

With python

Now we need to add the boundary conditions to our matrix \boldsymbol{A} and source vector \boldsymbol{b} .

As can be seen from Eq. 21 the constant temperature boundary condition on the left contributes terms $S_P = \frac{k}{\Delta x/2}$ to the matrix \boldsymbol{A} first cell diagonal. Adding that term gives

$$\mathbf{A} = \begin{bmatrix} a_E + \frac{k}{\Delta x/2} & -a_E & 0 & 0 & 0\\ -a_W & a_W + a_E & -a_E & 0 & 0\\ 0 & -a_W & a_W + a_E & -a_E & 0\\ 0 & 0 & -a_W & a_W + a_E & -a_E\\ 0 & 0 & 0 & -a_W & a_W \end{bmatrix}$$
 (25)

The constant boundary condition also contributes a source term $\left(\frac{k}{\Delta x/2}\right)T_A$ to the first cell source vector. The resulting source vector

$$\boldsymbol{b} = \left[\begin{pmatrix} \frac{k}{\Delta x/2} \end{pmatrix} T_B & 0 & 0 & 0 & 0 \right]^T \tag{26}$$

With python the constant boundary condition is added as

The insulated boundary on the right produces no coefficients as no heat is transferred through the boundary. Nothing needs to be done.

As final step we need to add the volumetric source to our source vector \boldsymbol{b} . The volumetric source is the same in all Eqs. 20-22, $S_u = S\Delta x$. By adding it to the source vector we get

$$\boldsymbol{b} = \left[\begin{pmatrix} \frac{k}{\Delta x/2} \end{pmatrix} T_B + S\Delta x \quad S\Delta x \quad S\Delta x \quad S\Delta x \quad S\Delta x \right]^T$$
 (27)

With python this can be done with vectorized statement as

Now our linear system is ready and we can solve as shown in Fig. 14. The full system reads

$$\underbrace{ \begin{bmatrix} a_E + \frac{k}{\Delta x/2} & -a_E & 0 & 0 & 0 \\ -a_W & a_W + a_E & -a_E & 0 & 0 \\ 0 & -a_W & a_W + a_E & -a_E & 0 \\ 0 & 0 & -a_W & a_W + a_E & -a_E \\ 0 & 0 & 0 & -a_W & a_W + a_E \end{bmatrix} }_{\pmb{A}} \underbrace{ \begin{bmatrix} T_1 \\ T_2 \\ T_3 \\ T_4 \\ T_5 \end{bmatrix}}_{\pmb{T}} = \underbrace{ \begin{bmatrix} \left(\frac{k}{\Delta x/2}\right) T_B + S\Delta x \\ S\Delta x \\ S\Delta x \\ S\Delta x \\ S\Delta x \end{bmatrix} }_{\pmb{b}}$$

It's a good idea to check your code in as small increments as possible. Print out your coefficients and matrices during development and compare them to known values. Debugging of small pieces is easier that large ones. Software houses have teams of designated testers working in their companies with the sole purpose of finding bugs. Do it early.

You can plot the solutions with python as

Plot numerical and exact solution
x = sp.linspace(dx/2,L-dx/2,n)
plt.plot(x, T, "k--o", label="numerical")
plt.legend()

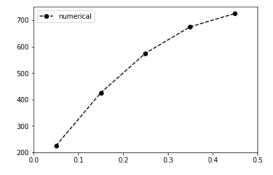


Figure 15: Plotting

Unsteady

See Versteeg and Malalasekare [5] page 243, Chapter 8.

There are many different methods to tackle the time derivative term in onedimensional heat conduction

$$\rho c \frac{\partial T}{\partial t} = \frac{\partial}{\partial x} \left(k \frac{\partial T}{\partial x} \right) + S \tag{28}$$

were ρ is density, c is specific heat capacity. The partial derivate $\frac{\partial T}{\partial t}$ mean that we now have two different derivatives, $\frac{\partial T}{\partial t}$ and $\frac{\partial T}{\partial x}$.

We will try to avoid mathematics as much as possible. For a more formal

approach see Versteeg and Malalasekare [5].

Let us first consider the left hand side of Eq. 28, $\rho c \frac{\partial T}{\partial t}$. We may discretized it as

$$\rho c \frac{\partial T}{\partial t} \approx \rho c \frac{T - T^0}{\Delta t} \tag{29}$$

where Δt is time step and T^0 is temperature from previous time step. If we now substitute Eq. 29 into Eq. 28 we get

$$\rho c \frac{T - T^0}{\Delta t} = \frac{\partial}{\partial x} \left(k \frac{\partial T}{\partial x} \right) + S \tag{30}$$

Using FVM to the left hand side of Eq. 30

$$\int_{CV} \rho c \frac{T - T^0}{\Delta t} dV \approx \rho c A \frac{T - T^0}{\Delta t} \Delta x \tag{31}$$

We may now recognize the right hand side of Eq. 31, $\frac{\partial}{\partial x} (k \frac{\partial T}{\partial x}) + S$ as the governing equation for steady state heat conduction, Eq. 7. We may use the FVM methods described before to discretize it.

The remaining choice is at what time to we evaluate the right hand side of Eq. 30. If we choose to evaluate it at the last time step corresponding to T^0 we get explicit Euler scheme. Explicit Euler requires very small time steps. We choose to use the new time. This is caller implicit Euler scheme. Implicit Euler is unconditionally stable and easy to use. For more temporal accuracy look in to Runge-Kutta or other higher order schemes.

With FVM and Implicit Euler we get from Eqs. 30, 31, 5.

$$\underbrace{\rho c A \frac{\Delta x}{\Delta t}}_{a_P} (T_P - T_P^0) + \underbrace{\left(\frac{k_e A_e}{\Delta x} + \frac{k_w A_w}{\Delta x}\right)}_{a_W + a_E} T_P = \underbrace{\left(\frac{k_w A_w}{\Delta x}\right)}_{a_w} T_W + \underbrace{\left(\frac{k_e A_e}{\Delta x}\right)}_{a_E} T_E + \underbrace{\overline{S} \Delta V}_{S_u}$$

$$\Leftrightarrow a_P^0 T_P - a_P^0 T_P^0 + a_W T_P + a_E T_P = a_w T_W + a_E T_E + S_u$$

$$\Leftrightarrow \underbrace{\left(a_P^0 + a_W + a_E\right)}_{a_P} T_P = a_w T_W + a_E T_E + a_P^0 T_P^0 + S_u$$

(32)

From Eq. 32 we see that the solution of one time step in unsteady case is very similar to the steady one. To progress the solution repeat the process in a loop. An example is given in Fig. 16.

```
# Solution
for step in range(1,steps+1):
    b = bConstant + aP0*T
    T = sp.linalg.solve(A,b)
    Ts[step] = T
    t += dt
```

Figure 16: Time stepping

It is often convenient to collect the time-independent terms into a separate source vector, see bConstant in Fig. 16. This often results in simpler and faster code.

- 3.5 2D case
- 3.6 Notations
- 3.7 Extra material

Extra material. Not needed on this course.

3.7.1 Performance issues with example codes

Extra material. Not needed on this course.

All the examples are written with clarity in mind. They usually sacrifice performance for this goal. The most important performance limiting factor is the use of dense matrices.

The multiplying matrix \boldsymbol{A} is mostly empty in most FVM problems, i.e. mostly filled with zeros. It would be a LOT faster to use sparse matrices. With large systems sparse matrices are decades faster that dense matrices. Sparseness also saves memory.

The Python syntax for sparse matrices is rather verbose, but straight forward to use. Do not be frighten by the long commands. You can usually just copypaste it from your previous codes or create a wrapper. For an example wrapper see Fig. 17. See https://docs.scipy.org/doc/scipy/reference/sparse.html for more details.

We often use unnecessary loops. Looping is slow in Python and indexing of large matrices is also unnecessary. As rule of a thumb always use vectorized commands if you can.

3.7.2 Application to other physics

Extra material. Not needed on this course.

Many problems in other fields are very similar to heat conduction. Here are some examples.

Moisture transfer

```
11 import scipy.sparse as sparse
12 from scipy.sparse import linalg as splinalg
13
14 class SparseMatrixA(object):
15
       def __init__(self):
           self.l = []
16
17
           self.m = []
           self.val = []
18
19
20
       def add(self, l, m, val):
21
           self.l.append(l)
22
           self.m.append(m)
23
           self.val.append(val)
24
25
       def finalize(self):
26
           return sparse.csr_matrix(sparse.coo_matrix(
                                  (self.val, [self.l, self.m])
27
28
29
30
       def solve(self,b, A=None):
31
           if A is None:
               A = self.finalize()
32
           return splinalg.spsolve(A, b)
33
```

Figure 17: Sparse matrix wrapper class

Electric heating Electric potential be solved from the well-known Poisson equation (same as heat conduction equation)

$$\nabla \cdot \sigma \nabla \phi = 0 \tag{33}$$

where ϕ is electric potential. Electric field \boldsymbol{E} is solved from

$$\mathbf{E} = -\nabla \phi \tag{34}$$

and electric current density J from

$$\boldsymbol{J} = \sigma \boldsymbol{E} \tag{35}$$

and finally the volumetric electric heating power p

$$p = \frac{\partial P}{\partial V} = \mathbf{J} \cdot \mathbf{E} = \mathbf{J} \cdot \mathbf{J} / \mathbf{\sigma} = \frac{|\mathbf{J}|^2}{\mathbf{\sigma}}$$
(36)

Electric conductivity can be calculated from electric resistivity ρ as

$$\sigma = \frac{1}{\rho} \tag{37}$$

Linear Mechanics For small deformations

$$-\nabla \cdot \boldsymbol{\sigma} = \boldsymbol{f} \tag{38}$$

$$\boldsymbol{\sigma} = \lambda \nabla \cdot \boldsymbol{u} \mathbf{I} + 2\mu \boldsymbol{D} \tag{39}$$

The resulting equation is similar linear system as for heat conduction and can be solved with same methods.

The stress equation is very similar as that in Navier-Stokes equations. If we remove movement related terms from Navier-Stokes equations, we end up with an equation very similar to Eq. 38.

4 Advection-diffusion

- 5 Navier-Stokes
- 5.1 The NS equation
- 5.2 Compressible vs. incompressible
- 5.3 Pressure coupling
- 5.4 Boundary conditions
- 6 Mesh
- 7 Turbulence
- 8 Math

Tähän kappaleeseen kootaan hyödyllistä matematiikkaa, joka ei olisi sopinut prujun muihin kohtiin.

Gaussin divergenssi lause

$$\int_{V} \nabla \cdot \mathbf{F} dV = \int_{S} \mathbf{n} \cdot \mathbf{F} dA \tag{40}$$

jossa $\textbf{\emph{F}}$ on vektori arvoinen function, esim. lämmönjohtumiselle $k\nabla T,\,\textbf{\emph{n}}$ on pinnan normaalivektori.

9 External Resources

9.1 Books etc.

- Recommonded for this course
 - An Introduction to Computational Fluid Dynamics: The Finite Volume Method, Versteeg, H.K. and Malalasekera, W. 2007
- FVM diffusion in Wikipedia

 - https://en.wikipedia.org/wiki/Finite_volume_method_for_three-dimensional_diffusion_problem
- For advanced studies in OpenFOAM
 - https://www.researchgate.net/profile/Tobias_Holzmann/publication/ 307546712_Mathematics_Numerics_Derivations_and_OpenFOAMR/links/ 59c7ffde0f7e9bd2c014693c/Mathematics-Numerics-Derivations-and-OpenFOAMR.pdf

9.2 Programs, programming, libraries etc.

- https://anaconda.org/
- http://www.openfoam.org/
- http://www.openfoam.com/
- http://www.ansys.com/
- https://fenicsproject.org/
- $\bullet \ \, https://www.ctcms.nist.gov/fipy/index.html$

Authors notes

- \bullet Source code 5xCtrl+, 50% scaling
- $\bullet~$ text width 11.6cm
- \bullet text height 19.5cm, big fig height 19.5cm/3 = 6.5cm

References

- [1] Dominique Aegerter. Aerodynamics of motorcycles using cfd simulations, 2016. [Online; accessed 12-Jan-2018] CC BY-SA 4.0.
- [2] fkevin. semi truck desert. [Online; accessed 15-Jan-2018] CC0.
- [3] fkevin. Simplified truck geometry for cfd analysis, 2015. [Online; accessed 15-Jan-2018].
- [4] Nicola Luminari. project-reports-2014-nicola. [Online; accessed 16-Jan-2018].
- [5] H.K. Versteeg and W. Malalasekera. An Introduction to Computational Fluid Dynamics: The Finite Volume Method. Pearson Education Limited, 2007.
- [6] www.sharcnet.ca. Examples of acceptable mesh topologies. [Online; accessed 16-Jan-2018].