VT8600 Series BACnet Integration

BACnet Integration for VT8600 Series Room Controller

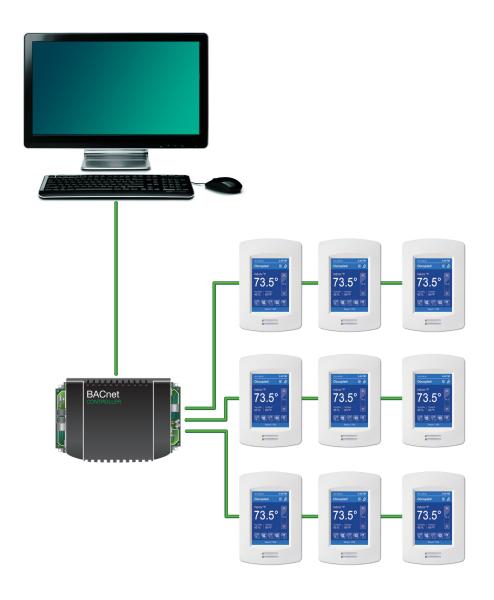




Table of Contents

INTRODUCTION

BACnet Compatibility Specifications	3
Analog Objects	4
Binary Objects	5
Multi-State Objects	6
CSV Objects	7
PG Objects	7
CAL Objects	8
SCH Objects	8

OBJECTS

Analog Objects	9
Analog Input Properties	9
Analog Output Properties	10
Analog Value Properties	10
Binary Objects	14
Binary Input Properties	14
Binary Output Properties	14
Binary Value Properties	15
CSV Properties	16
Multi State Objects	17
Multi-State Input Properties	17
Multi-Value Properties	21

BACnet Compatibility Specifications

Note: This document contains BACnet compatibility specifications of the VT8600 Series Room Controllers and follows the BACnet PICS format. Objects common to all three models appear in one table, where are objects which are model specific appear in separate tables.

Supported BACnet® Services: The BACnet® communicating controller meets all requirements for designation as an Application Specific Controller (B-ASC). The BACnet controller supports the following BACnet Interoperability Building Blocks (BIBBs).

Application Service	Designation
Data Sharing-COV-B	DS-COV-B
Data Sharing – Read Property - B	DS-RP-B
Data Sharing – Read Property Multiple - B	DS-RPM-B
Data Sharing – Write Property - B	DS-WP-B
Data Sharing - Write Property Multiple Service - B	DS-WPM-B
Device Management - Time Synchronization - B	DM-TS-B
Device Management - Device Communication Control - B	DM-DCC-B
Device Management – Dynamic Device Binding - B	DM-DDB-B
Device Management – Dynamic Object Binding - B	DM-DOB-B
Scheduling-Internal-B	SCHED-I-B

Note: The controller does not support segmented requests or responses

Object Name	Type and Instance	Object Property	Controller Parameter
		Object_Identifier Property 75 (R,W)	Unique ID number of a device on a network
		Object_Name Property 77 (R,W)	Unique name of a device on a network
		Model Name Property 70 (R)	Controller model number
		Firmware Revision Property 44 (R)	Current BACnet® firmware revision used by controller
		Protocol Version	Current BACnet® firmware protocol version
		Property 98 (R)	Default is Version 1
		Protocol Revision	Current BACnet® firmware protocol revision
		Property 139 (R)	Default is Version 2
		Max ADPU Length	Maximum ADPU Length accepted
		Property 62 (R) ADPU Timeout	Default is 480 ADPU timeout value
		Property 10 (R)	Default is 3000 ms
VT8600 (all models)	Device	Application-Software-Version	Controller base application software version
v roouu (ali muueis)	Device	Property 12 (R)	Default is based on current released version
		Max_Master (R,W)	Maximum master devices allowed to be part of network. 0 to 127, default is 127
		Description	String of printable characters
		Property 28 (R,W)	(Same as "Long Screen Message" CSV2)
		Location Property 58 (R,W)	String of printable characters (Same as "Short Screen Message" CSV1)
		Local Date Property 56 (R)	Indicates date to best of device knowledge
		Local Time Property 57 (R)	Indicated time of day best of the device knowledge

Object Properties

Analog Objects

Object Type Read/Write Settings					
Input Al	Output AO	Values AV	Object Property	Controller Parameter	
Read Only	Read Only	Read Only	Event State Property 36	Indicates if object has an active event state associated with it	
Read Only	Read Only	Read Only	Object Identifier Property 75	Unique ID number of an object on a network	
Read Only	Read Only	Read Only	Object Name Property 77	Unique name of an object on a network	
Read Only	Read Only	Read Only	Object Type Property 79	Indicates membership in a particular object type class	
Read / Write	Read / Write	Read / Write	Out of Service Property 81	(Indicates whether (TRUE/FALSE) the physical input object represents is not in service	
Read / Write*	Read / Write	Read / Write	Present Value Property 85	(Contains values of all properties specified)	
N/A	Read Only	Read Only	Priority Array Property 87	Read-only array of prioritized values	
Read Only	Read Only	Read Only	Reliability Property 103	Indicates if Present_Value is "reliable"	
N/A	Read Only	Read / Write †	Relinquish Default Property 104	Default value used for Present_Value when values in Priority_Array have a NULL value	
Read Only	Read Only	Read Only	Status Flags Property 111	Represents flags that indicate general health of life safety point object	
Read Only	Read Only	Read Only	Units Property 177	Indicates measurement units of Present_Value	
N/A	Read Only	N/A	Hight Limit Property 1101	Specifies a limit Present_Value must exceed before an event is generated	
N/A	Read Only	N/A	Low Limit Property 1100	Specifies a limit Present_Value must fall below before an event is generated	

N/A = Not Applicable, property not used for objects of that type

^{*} The Present_Value is only writeable when Out_Of_Service is TRUE.

[†] Relinquish default is Read Only for AV100+

Binary Objects

Object Type Read/Write Settings		Object Books to	Out the Bernal		
Input BI	Output BO	Values BV	Object Property	Controller Parameter	
Read Only	Read Only	Read Only	Active Text Property 4	Characterizes intended effect of the ACTIVE state of Present_Value property	
Read Only	Read Only	Read Only	Event State Property 36	Indicates if object has an active event state associated with it	
Read Only	Read Only	Read Only	Inactive Text Property 46	Characterizes intended effect of INACTIVE state of Present_Value property	
Read Only	Read Only	Read Only	Object Identifier Property 75	Unique ID number of an object on a network	
Read Only	Read Only	Read Only	Object Name Property 77	Unique name of an object on a network	
Read Only	Read Only	Read Only	Object Type Property 79	Indicates membership in a particular object type class	
Read / Write	Read / Write	Read / Write	Out of Service Property 81	(Indicates whether (TRUE/FALSE) physical input object represents is not in service	
Read Only	Read / Write	N/A	Polarity Property 84	Indicates relationship between physical state of input and Present_Value	
Read / Write	Read / Write	Read / Write	Present Value Property 85	(Contains values of all properties specified)	
Read Only	Read Only	Read Only	Priority Array Property 87	Read-only array of prioritized values	
N/A	Read Only	Read Only	Relinquish Default Property 104	Default value to be used for Present Value when values in Priority_Array have a NULL value	
Read Only	Read Only	Read Only	Status Flags Property 111	Represents flags that indicate general health of life safety point object	

N/A = Not Applicable, property not used for objects of that type

Multi-state Objects

Object Type Read/Write Settings		Object Description	Cartallas Davas star		
Input MSI	Values MV	Object Property	Controller Parameter		
Read Only	Read Only	Event State Property 36	Indicates if object has an active event state associated with it		
Read Only	Read Only	Number of States Property 74	Defines number of states Present_Value may have		
Read Only	Read Only	Object Identifier Property 75	Unique ID number of an object on a network		
Read Only	Read Only	Object Name Property 77	Unique name of an object on a network		
Read Only	Read Only	Object Type Property 79	Indicates membership in a particular object type class		
Read / Write	Read / Write	Out of Service Property 81	(Indicates whether (TRUE/FALSE) physical input object represents is not in service		
Read / Write*	Read / Write	Present Value Property 85	Contains values of all properties specified		
N/A	Read Only	Priority Array Property 87	Indicates relationship between physical state of input and Present_Value		
N/A	Read / Write	Relinquish Default Property 104	Default value used for Present_Value when values in Priority_Array have a NULL value		
Read Only	Read Only	State Text Property 110	Represents descriptions of all possible states of Present_Value		
Read Only	Read Only	Status Flags Property 111	Represents flags that indicate general health of life safety point object		

N/A = Not Applicable, property not used for objects of that type

^{*}The Present_Value is only writeable when Out_Of_Service is TRUE.

CSV Objects

Read/Write	Object Property	Controller Parameter	
Read Only	Event State Property 36	Indicates object has an active event state associated with it	
Read Only	Object Identifier Property 75	Unique ID number of an object on a network	
Read Only	Object Name Property 77	Unique name of an object on a network	
Read Only	Object Type Property 79	Indicates membership in a particular object type class	
Read / Write	Present Value Property 85	Contains values of all properties specified	
Read Only	Status Flags Property 111	Represents flags that indicate general health of life safety point object	

PG Objects

Read/Write	Object Property	Controller Parameter
Read / Write	Description Property 28	String of printable characters whose content is not restricted. Contains the LUA program script (max size = 480 bytes)
Read Only	Description Of Halt Property 29	Describes the reason why a program has been halted Text is also displayed in the HMI debug log
Read Only	Instance Of Property 48	Local name of the application program being executed by this process
Read Only	Object Identifier Property 75	Unique ID number of an object on a network
Read Only	Object Name Property 77	Unique name of an object on a network
Read Only	Object Type Property 79	Indicates membership in a particular object type class
Read Only	Out Of Service Property 81	Indicates whether (TRUE/FALSE) the process this object represents is not in service
Write Only	Program Change Property 90	Used to request changes to the operating state of the program. Writing to property affects all 10 PG objects
Read Only	Program State Property 92	Current logical state of all 10 PG objects executing application programs
Read Only	Reason For Halt Property 100	If program halts, this property reflects the reason for halt for all 10 PG objects
Read Only	Status Flags Property 111	Represents flags that indicate general health of life safety point object

CAL Object Properties

Read/Write	Object Property	Controller Parameter	
Read / Write	Date List Property 23	List of calender entries.	
Read Only	Object Identifier Property 75	Unique ID number of an object on a network	
Read Only	Object Name Property 77	Unique name of an object on a network	
Read Only	Object Type Property 79	Indicates membership in a particular object type class	
Read Only	Present Value Property 85	This property is TRUE when current date matches an entry.	

SCH Object Properties

Read/Write	Object Property	Controller Parameter	
Read Only	Effective Period Property 32	Range of dates within which the Schedule object is active. All dates are in range, so always Effective	
Read / Write	Exception Schedule Property 38	Sequence of schedule actions that takes precedence over normal behavior on a specific day or days. By default, this property refers to the calendar.	
Read Only	Object Identifier Property 75	Unique ID number of an object on a network	
Read Only	Object Name Property 77	Unique name of an object on a network	
Read Only	Object Type Property 79	Indicates membership in a particular object type class	
Read / Write	Present Value Property 85	Contains the current value of the schedule (0:unoccupied, 1:occupied) Only writeable when Out Of Service is TRUE	
Read / Write	Out Of Service Property 81	Indicates whether (TRUE/FALSE) the internal calculations of the schedule object are used to determine the value of the Present Value property	
Read Only	Reliability Property 103	Indicates if Present Value is "reliable"	
Read Only	Status Flags Property 111	Represents flags that indicate general health of life safety point object	
Read / Write	Weekly Schedule Property 123	7 elements that describe the sequence of schedule actions for each day of the week.	
Read Only	Schedule Default Property 174	Default value to be used when no other scheduled value is in effect. Always Unoccupied	

Analog Objects

Analog Input Properties

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Thermistor	1	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Light Sensor Level	2	0	0	30000	Lux
Thermistor Self Heat	3	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Relative Humidity Raw Value	4	0	20	80	%
UI20 Raw Value	5	0	0	4095	
UI23 Raw Value	7	0	0	4095	
UI22 Raw Value	8	0	0	4095	
UI24 Raw Value	9	0	0	4095	
UI19 Raw Value	31	0	0	4095	
Wireless Device 1 - Address	210	0	-32768	32767	ZigBee Pro
Wireless Device 2 - Address	220	0	-32768	32767	ZigBee Pro
Wireless Device 3 - Address	230	0	-32768	32767	ZigBee Pro
Wireless Device 4 - Address	240	0	-32768	32767	ZigBee Pro
Wireless Device 5 - Address	250	0	-32768	32767	ZigBee Pro
Wireless Device 6 - Address	260	0	-32768	32767	ZigBee Pro
Wireless Device 7 - Address	270	0	-32768	32767	ZigBee Pro
Wireless Device 8 - Address	280	0	-32768	32767	ZigBee Pro
Wireless Device 9 - Address	290	0	-32768	32767	ZigBee Pro
Wireless Device 10 - Address	300	0	-32768	32767	ZigBee Pro
Wireless Green Power - Address	314	0	-32768	32767	ZigBee Green Power
Wireless Device 1 - Temperature	315	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Wireless Device 2 - Temperature	316	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Wireless Device 3 - Temperature	317	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Wireless Device 4 - Temperature	318	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Wireless Device 5 - Temperature	319	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Wireless Device 6 - Temperature	320	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Wireless Device 7 - Temperature	321	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Wireless Device 8 - Temperature	322	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Wireless Device 9 - Temperature	323	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Wireless Device 10 - Temperature	324	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius

Analog Input Properties

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Wireless Green Power - Temperature	326	0	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Remote Relative Humidity	327	0	0	100	%
Permit Timeout	328	0	0	180	Minutes
Effective Setpoint	329	0	40°F (4.5°C)	100°F (38°C)	Fahrenheit/ Celcius
Paired ZigBee Devices	330	0	0	11	Number of paired devices

Analog Output Properties

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
PI Heat Demand	21	0	0	100	%
PI Cool Demand	22	0	0	100	%
Economizer Demand	23	0	0	100	%
AO Heat Demand	24	0	0	100	%
UO11 Analog Output	123	0	0	10	Voltage
UO12 Analog Output	124	0	0	10	Voltage
UO9 Analog Output	125	0	0	10	Voltage
UO10 Analog Output	126	0	0	10	Voltage

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
User HMI Icons	2	0	0	12	Show/Hide screen icons
Low Backlight	3	60	0	100	%
Night Backlight	4	5	0	100	%
Calibrate Temperature	7	0	-5°F (-20°C)	5°F (10°C)	Fahrenheit/ Celcius
Calibrate Humidity	8	0	-15	15	%
COM Address	10	254	0	254	COM address
PAN ID	11	0	0	32767	PAN ID
Channel	12	10	10	25	Channel

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Short Address	13	0	-32768	32767	Short address
IEEE Address	14	0	-32768	32767	IEEE address
Get from COM	15	0	0	254	
BACnet Stack Poll Rate	16	4	1	5	
Discharge Low Limit	20	45°F (7°C)	35°F (2°C)	65°F (18°C)	Fahrenheit/ Celcius
Minimum Fresh Air	21	0	0	20000	ft³/min
Maximum Fresh Air	22	0	0	20000	ft³/min
Minimum CO ₂	23	800	0	5000	ppm
Maximum CO ₂	24	1200	0	5000	ppm
Param. A (AV25)	25	0	-32768	32767	
Param. B (AV26)	26	0	-32768	32767	
Param. C (AV27)	27	0	-32768	32767	
Param. D (AV28)	28	0	-32768	32767	
Param. E (AV29)	29	0	-32768	32767	
Param. F (AV30)	30	0	-32768	32767	
Occ. Heat	39	72°F (22°C)	40°F (4.5°C)	90°F (32°C)	Fahrenheit/ Celcius
Occ. Cool	40	75°F (24°C)	54°F (12°C)	100°F (38°C)	Fahrenheit/ Celcius
Standby Heat	41	69°F (21°C)	40°F (4.5°C)	90°F (32°C)	Fahrenheit/ Celcius
Standby Cool	42	78°F (21°C)	54°F (26°C)	100°F (38°C)	Fahrenheit/ Celcius
Unocc. Heat	43	62°F (17°C)	40°F (4.5°C)	90°F (32°C)	Fahrenheit/ Celcius
Unocc. Cool	44	80°F (27°C)	54°F (26°C)	100°F (38°C)	Fahrenheit/ Celcius
Default Heat	45	72°F (22°C)	65°F (18°C)	80°F (27°C)	Fahrenheit/ Celcius
Standby Differential	46	4°F (1.5°C)	1°F (0.5°C)	5°F (2.5°C)	Fahrenheit/ Celcius
Main Password	56	0	0	9999	Installer password
User Password	57	0	0	999	User password
Maximum Heating	58	90°F (32°C)	40°F (4.5°C)	90°F (32°C)	Fahrenheit/ Celcius
Maximum Cooling	59	54°F (26°C)	54°F (26°C)	100°F (38°C)	Fahrenheit/ Celcius
Temp Occ. Time	62	2	0	24	Hours
Minimum Deadband	63	3°F (1.5°C)	2°F (1°C)	5°F (2.5°C)	Fahrenheit/ Celcius

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Proportional Band	65	3	3	10	
Standby Time	67	0.5	0.5	24	Hours
Unoccupied Time	68	0.5	0.5	24	Hours
Dehumidification Setpoint	71	50	30	95	%RH
Dehumidification Hysteresis	72	50	30	95	%RH
Calibrate Outside Temperature	74	0°F (0°C)	-5°F (-2.5°C)	5°F (2.5°C)	Fahrenheit/ Celcius
Cooling Stages	75	2	1	1	Stages
Power-up Delay	76	10	10	120	Seconds
Econo. Minimum Position	78	0	0	100	%
Econo Maximum Position	81	0	0	100	%
High Balance Point	82	90°F (32°C)	34°F (1°C)	90°F (32°C)	Fahrenheit/ Celcius
Low Balance Point	83	-12°F (-24°C)	-40°F (-40°C)	30°F (-1°C)	Fahrenheit/ Celcius
Heating CPH	84	4	3	8	Cycles/Hour
Cooling CPH	85	4	3	4	Cycles/Hour
Anti Short Cycle	86	2	0	5	Minutes
Heat Stages	87	2	0	2	Stages
Heat Dehumidification Limit	88	0	0	100	%
Cool Dehumidification Limit	89	0	0	100	%
Heat Lockout	91	120°F (49°C)	-15°F (-26°C)	120°F (49°C)	Fahrenheit/ Celcius
Keyboard Value	92	0	0	35	
Cool Lockout	93	-40°F (-40°C)	-40°F (-40°C)	95°F (35°C)	Fahrenheit/ Celcius
Supply Air Setpoint	94	55°F (13°C)	50°F (10°C)	90°F (32°C)	Fahrenheit/ Celcius
Changeover Setpoint	95	55°F (13°C)	14°F (10°C)	70°F (21°C)	Fahrenheit/ Celcius
Fresh Air Range	96	0	0	20,000	Ft ³ /Minute
Minimum Supply Heat	97	64°F (18°C)	50°F (10°C)	72°F (22°C)	Fahrenheit/ Celcius
Supply Heat Lockout	98	32°F (0°C)	-15°F (-26°C)	120°F (49°C)	Fahrenheit/ Celcius
Discharge High Limit	99	120°F (49°C)	70°F (21°C)	150°F (65.5°C)	Fahrenheit/ Celcius
Room Temperature	100	0°F (0°C)	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Outdoor Temperature	101	0°F (0°C)	-40°F (-40°C)	150°F (65.5°C)	Fahrenheit/ Celcius

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Supply Temperature	102	0°F (0°C)	-40°F (-40°C)	122°F (50°C)	Fahrenheit/ Celcius
Room Humidity	103	0	0	100	%RH
UI19 Temperature	104	0°F (0°C)	-40°F (-40°C)	150°F (65.5°C)	Fahrenheit/ Celcius
UI20 Temperature	105	0°F (0°C)	-40°F (-40°C)	150°F (65.5°C)	Fahrenheit/ Celcius
CO ₂ level	106	0	0	5000	ppm
Air Flow Level	107	0	0	20,000	ft³/min
UI19 Analog	108	0	0	100	%
UI24 Temperature	109	0°F (0°C)	-40°F (-40°C)	150°F (65.5°C)	Fahrenheit/ Celcius
UI19 Lua	202	0	-32768	32767	
UI20 Lua	203	0	-32768	32767	
UI22 Lua	204	0	-32768	32767	
UI23 Lua	205	0	-32768	32767	
Ul24 Lua	206	0	-32768	32767	
Offset Relay Closing	207	0	-20,000	20,000	
Offset Relay Opening	208	0	-20,000	20,000	
Threshold	209	40°F	32°F	45°F	Fahrenheit
Hysteresis	210	4°F	0°F	100°F	Fahrenheit
Shed Offset	211	4°F (2°C)	4°F (2°C)	10°F (5.5°C)	Fahrenheit/ Celcius

Binary Objects

Binary Input Properties

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
UI16 Binary Input	29	0	0	1	0 = Activated 1 = Not Activated
UI17 Binary Input	30	0	0	1	0 = Activated 1 = Not Activated
UI19 Binary Input	91	0	0	1	0 = Activated 1 = Not Activated
UI20 Binary Input	94	0	0	1	0 = Activated 1 = Not Activated
UI22 Binary Input	95	0	0	1	0 = Activated 1 = Not Activated
UI23 Binary Input	96	0	0	1	0 = Activated 1 = Not Activated
UI24 Binary Input	97	0	0	1	0 = Activated 1 = Not Activated

Binary Output Properties

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
G Fan Status	25	0	0	1	0 = Off 1 = On
Y1 Status	26	0	0	1	0 = Off 1 = On
UY2 Status	27	0	0	1	0 = Off 1 = On
W1 Status	28	0	0	1	0 = Off 1 = On
W2/OB Status	29	0	0	1	0 = Off 1 = On
UO10 Binary Output	94	0	0	1	0 = Off 1 = On
BO1 Aux. Out	98	0	0	1	0 = Off 1 = On
UO11 Binary Output	101	0	0	1	0 = Off 1 = On
UO12 Binary Output	102	0	0	1	0 = Off 1 = On

Binary Value Properties

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Door Status	1	0	0	1	0 = Closed 1 = Open
Door Installed	2	0	0	1	0 = No 1 = Yes
Window Status	3	0	0	1	0 = Closed 1 = Open
Window Installed	4	0	0	1	0 = No 1 = Yes
Low Battery	5	0	0	1	0 = Off 1 = On
Force High Backlight	6	0	0	1	0 = Off 1 = On
Long Message Display	7	0	0	1	0 = Off 1 = On
Clock Alarm	8	0	0	1	0 = Off 1 = On
Exception Status	10	0	0	1	0 = Off 1 = On
Local Motion	32	0	0	1	0 = No motion 1 = Motion
Window Alarm	35	0	0	1	0 = Off 1 = On
Filter Alarm	36	0	0	1	0 = Off 1 = On
Service Alarm	37	0	0	1	0 = Off 1 = On
Dehumidification Status	38	0	0	1	0 = Off 1 = On
Fan Lock Alarm	39	0	0	1	0 = Off 1 = On
Recovery Status	40	0	0	1	0 = Off 1 = On
CO ₂ Alarm	41	0	0	1	0 = Off 1 = On
Low Air Alarm	42	0	0	1	0 = Off 1 = On
Frost Alarm	43	0	0	1	0 = Off 1 = On
Water Leak	44	0	0	1	0 = Off 1 = On
Water Installed	45	0	0	1	0 = No 1 = Yes

Binary Value Properties

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Water Status	46	0	0	1	0 = Normal 1 = Leak
Low Temperature	47	0	0	1	0 = Off 1 = On
Shed Demand	48	0	0	1	0 = Closed 1 = Open
Shed Status	49	0	0	1	0 = No 1 = Yes
Shed Override	50	0	0	1	0 = Closed 1 = Open
ZigBee PIR Status	200	0	0	1	0 = No 1 = Yes
ZigBee Sensor Motion	201	0	0	1	0 = No motion 1 = Motion

CSV Properties

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Short Screen Message	1	0	0	64	
Long Screen Message	2	0	0	480	
Ext. Mem. Revision	3	0	0	9	

Multi-State Objects

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
BACnet Status	1	1	1	2	1 = Offline 2 = Online
Network Status	2	1	1	5	1 = Not det. 2 = Pwr on 3 = No NWK 4 = Joined 5 = Online
Effective Occupancy	33	1	1	4	1 = Occupied 2 = Unoccupied 3 = Override 4 = Standby
Wireless Device 1 - Status	210	1	1	7	1 = None 2 = Closed 3 = Opened 4 = No motion 5 = Motion 6 = Normal 7 = Leak
Wireless Device 1 - Battery	211	1	1	3	1 = None 2 = Normal 3 = Low
Wireless Device 1 - Communication Status	212	1	1	4	1 = Not paired 2 = Online 3 = Invalid 4 = Offline
Wireless Device 2 - Status	220	1	1	7	1 = None 2 = Closed 3 = Opened 4 = No motion 5 = Motion 6 = Normal 7 = Leak
Wireless Device 2 - Battery	221	1	1	3	1 = None 2 = Normal 3 = Low
Wireless Device 2 - Communication Status	222	1	1	4	1 = Not paired 2 = Online 3 = Invalid 4 = Offline

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Wireless Device 3 - Status	230	1	1	7	1 = None 2 = Closed 3 = Opened 4 = No motion 5 = Motion 6 = Normal 7 = Leak
Wireless Device 3 - Battery	231	1	1	3	1 = None 2 = Normal 3 = Low
Wireless Device 3 - Communication Status	232	1	1	4	1 = Not paired 2 = Online 3 = Invalid 4 = Offline
Wireless Device 4 - Status	240	1	1	7	1 = None 2 = Closed 3 = Opened 4 = No motion 5 = Motion 6 = Normal 7 = Leak
Wireless Device 4 - Battery	241	1	1	3	1 = None 2 = Normal 3 = Low
Wireless Device 4 - Communication Status	242	1	1	4	1 = Not paired 2 = Online 3 = Invalid 4 = Offline
Wireless Device 5 - Status	250	1	1	7	1 = None 2 = Closed 3 = Opened 4 = No motion 5 = Motion 6 = Normal 7 = Leak
Wireless Device 5 - Battery	251	1	1	3	1 = None 2 = Normal 3 = Low
Wireless Device 5 - Communication Status	252	1	1	4	1 = Not paired 2 = Online 3 = Invalid 4 = Offline
Wireless Device 6 - Status	260	1	1	7	1 = None 2 = Closed 3 = Opened 4 = No motion 5 = Motion 6 = Normal 7 = Leak
Wireless Device 6 - Battery	261	1	1	3	1 = None 2 = Normal 3 = Low
Wireless Device 6 - Communication Status	262	1	1	4	1 = Not paired 2 = Online 3 = Invalid 4 = Offline

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Wireless Device 7 - Status	270	1	1	7	1 = None 2 = Closed 3 = Opened 4 = No motion 5 = Motion 6 = Normal 7 = Leak
Wireless Device 7 - Battery	271	1	1	3	1 = None 2 = Normal 3 = Low
Wireless Device 7 - Communication Status	272	1	1	4	1 = Not paired 2 = Online 3 = Invalid 4 = Offline
Wireless Device 8 - Status	280	1	1	7	1 = None 2 = Closed 3 = Opened 4 = No motion 5 = Motion 6 = Normal 7 = Leak
Wireless Device 8 - Battery	281	1	1	3	1 = None 2 = Normal 3 = Low
Wireless Device 8 - Communication Status	282	1	1	4	1 = Not paired 2 = Online 3 = Invalid 4 = Offline
Wireless Device 9 - Status	290	1	1	7	1 = None 2 = Closed 3 = Opened 4 = No motion 5 = Motion 6 = Normal 7 = Leak
Wireless Device 9 - Battery	291	1	1	3	1 = None 2 = Normal 3 = Low
Wireless Device 9 - Communication Status	292	1	1	4	1 = Not paired 2 = Online 3 = Invalid 4 = Offline
Wireless Device 10 - Status	300	1	1	7	1 = None 2 = Closed 3 = Opened 4 = No motion 5 = Motion 6 = Normal 7 = Leak
Wireless Device 10 - Battery	301	1	1	3	1 = None 2 = Normal 3 = Low
Wireless Device 10 - Communication Status	302	1	1	4	1 = Not paired 2 = Online 3 = Invalid 4 = Offline

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Wireless Green Power - Communication Status	309	1	1	5	1 = Not paired 2 = Online 3 = Invalid 4 = Offline 5 = Paired
Wireless Green Power - Battery	310	1	1	3	1 = None 2 = Normal 3 = Low
Wireless Green Power - Remove	311	1	1	2	1 = No 2 = Yes
Effective Temperature Sensor	312	1	1	14	1 = Wired, 2 = Internal, 3 = WL IO, 4 = WL 1, 5 = WL 2, 6 = WL 3, 7 = WL 4, 8 = WL 5, 9 = WL 6, 10 = WL 7, 11 = WL 8, 12 = WL 9, 13 = WL 10, 4 = WL GP
Effective Relative Humidity Sensor	313	1	1	13	1 = None, 2 = Internal, 3 = WL 1, 4 = WL 2, 5 = WL 3, 6= WL 4, 7 = WL 5, 8 = WL 6, 9 = WL 7, 10 = WL 8, 11 = WL 9, 12 = WL 10, 13 = WL GP
Effective System Mode	314	1	1	2	1 = Cool 2 = Heat

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Long Message Background Color	1	1	1	7	1 = White 2 = Green 3 = Blue 4 = Grey 5 = Dark grey 6 = Default 7 = Red
HMI Color	2	1	1	5	1 = White 2 = Green 3 = Blue 4 = Grey 5 = Dark grey
Main Display	3	1	1	2	1 = Temperature 2 = Setpoint
Language	4	1	1	21	1 = English, 2 = French, 3 = Spanish, 4 = Chinese, 5 = Russian, 6 = Arabic, 7 = Bulgarian, 8 = Czech, 9 = Danish, 10 = Dutch, 11 = Finnish, 12 = German, 13 = Hungarian, 14 = Indonesian, 15 = Italian, 16 = Norwegian, 17 = Polish, 18 = Portuguese, 18 = Slovak, 20 = Swedish, 21 = Turkish
Time Format	5	1	1	2	1 = AM-PM 2 = 24 Hours
Network Units	6	1	1	2	1 = SI 2 = Imperial
Network Language	7	1	1	3	1 = English 2 = French 3 = Spanish
Baud Rate	8	7	1	7	1 = 9600 2 = 19200 3 = 38400 4 = 57600 5 = 76800 6 = 115200 7 = Auto

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Occupancy Command	10	2	1	3	1 = Loc. occ 2 = Occupied 3 = Unocc.
Standby Mode	11	1	1	2	1 = Absolute 2 = Offset
Fan Delay	12	2	1	1	1 = Off 2 = On
Dehumidification Lockout	13	2	1	2	1 = Disabled 2 = Enabled
System Mode	16	4	1	4	1 = Off 2 = Auto 3 = Cool 4 = Heat
Fan Mode	17	2	1	3	1 = On 2 = Auto 3 = Smart
Standby Screen	32	1	1	4	1 = No 2 = Yes 3 = Occ. only 4 = Screen sav
UI16 Configuration	46	1	1	6	1 = None 2 = Rem NSB 3 = Motion NO 4 = Motion NC 5 = Window 6 = Fan lock
UI17 Configuration	47	1	1	5	1 = None 2 = Door dry 3 = Override 4 = Filter 5 = Service
UI19 Configuration	49	1	1	2	1 = None 2 = CO ₂
Temperature Units	51	1	1	2	1 = °C 2 = °F
Frost Protection	55	1	1	2	1 = Off 2 = On

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Setpoint Function	58	2	1	2	1 = Dual SP 2 = Attach SP
Relative Humidity Display	70	1	1	2	1 = Disabled 2 = Enabled
Smart Recovery	71	1	1	2	1 = Off 2 = On
Economizer Configuration	72	1	1	2	1 = Off 2 = On
Schedule Menu	73	2	1	4	1 = Disabled 2 = Enabled 3 = Dis. no. clk. 4 = En. no. clk.
Mechanical Cooling	79	1	1	2	1 = Off 2 = On
BO1 Auxiliary Configuration	92	1	1	2	1 = NO 2 = NC
Fan Control Heat	95	2	1	2	1 = Off 2 = On
UO9 Configuration	96	4	1	4	1 = Analog 2 = Binary 3 = Relay RC 4 = Relay RH
UO10 Configuration	97	1	1	3	1 = Analog 2 = Binary 3 = Relay RC
UO11 Configuration	98	1	1	2	1 = Analog 2 = Binary
UO12 Configuration	99	2	1	2	1 = Analog 2 = Binary

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
English	100	1	1	1	1 = Enabled
French	101	2	1	2	1 = Disabled 2 = Enabled
Spanish	102	2	1	2	1 = Disabled 2 = Enabled
Chinese	103	2	1	2	1 = Disabled 2 = Enabled
Russian	104	2	1	2	1 = Disabled 2 = Enabled
Occupancy Screen	110	1	1	2	1 = Motion 2 = Schedule
Mode Button	111	1	1	2	1 = Normal 2 = Off-Auto
Control Status	112	1	1	3	1 = Off 2 = Cool 3 = Heat
Node Type	113	1	1	2	1 = Router 2 = Coordinator
Custom Icon Buttons	114	1	1	17	1= Default 2 = None, 3 = System mode Heat/ Cool, 4 = System mode On/Off, 5 = Fan mode, 6 = Override, 7 = Units, 8 = Help, 9 = Language, 10 = Schedule, 11 = Lighting, 12 = Blind, 13 = Lamp, 14 = Energy, 15 = Make up room, 16 = Setting, 17 = Timer
Custom Behavior	115	1	1	12	1 = Default, 2 = No function, 3 = System mode function, 4 = Fan function, 5 = Override, 6 = Schedule, 7 = Units, 8 = Help, 9 = Language, 10 = Configuration, 11 = Custom, 12 = Standby
Comfort or Economy	116	1	1	2	1 = Comfort 2 = Economy
Reversing Valve	117	1	1	2	1 = O 2 = B
Comp. Interlock	118	1	1	2	1 = Off 2 = On

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Application	119	1	1	2	1 = Rooftop 2 = Heatpump
Arabic	120	1	1	2	1 = Disabled 2 = Enabled
Bulgarian	121	1	1	1	1 = Disabled
Czech	122	1	1	2	1 = Disabled 2 = Enabled
Danish	123	1	1	2	1 = Disabled 2 = Enabled
Dutch	124	1	1	2	1 = Disabled 2 = Enabled
Finnish	125	1	1	2	1 = Disabled 2 = Enabled
German	126	1	1	2	1 = Disabled 2 = Enabled
Hungarian	127	1	1	2	1 = Disabled 2 = Enabled
Indonesian	128	1	1	2	1 = Disabled 2 = Enabled
Italian	129	1	1	2	1 = Disabled 2 = Enabled
Norwegian	130	1	1	2	1 = Disabled 2 = Enabled
Polish	131	1	1	2	1 = Disabled 2 = Enabled
Portuguese	132	1	1	2	1 = Disabled 2 = Enabled
Slovak	133	1	1	2	1 = Disabled 2 = Enabled
Swedish	134	1	1	2	1 = Disabled 2 = Enabled
Turkish	135	1	1	2	1 = Disabled 2 = Enabled
Schedule Type	136	1	1	2	1 = 7 days 2 = 5 + 2 days 3 = 5 + 1 + 1 days
Schedule Events	137	3	1	3	1 = 2/day 2 = 4/day 3 = 6/day
UI19 Input Type	140	3	1	3	1 = Thermistor 2 = Binary 3 = Voltage
UI20 Input Type	141	1	1	2	1 = Thermistor 2 = Binary 3 = Voltage
UI22 Input Type	142	1	1	2	1 = Thermistor 2 = Binary 3 = Voltage
UI23 Input Type	143	1	1	2	1 = Thermistor 2 = Binary 3 = Voltage

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
UI224 Input Type	144	3	1	4	1 = Thermistor 2 = Binary 3 = Voltage 4 = Reserved
Temperature Sensor	145	3	1	14	1 = Wired, 2 = Internal, 3 = WL IO, 4 = WL 1, 5 = WL 2, 6 = WL 3, 7 = WL 4, 8 = WL 5, 9 = WL 6, 10 = WL 7, 11 = WL 8, 12 = WL 9, 13 = WL 10, 14 = WL GP
CO ₂ Sensor	146	2	1	2	1 = Disabled 2 = Enabled
CO ₂ Auto Calibration	147	2	1	2	1 = Disabled 2 = Enabled
Lock Screen	148	1	1	2	1 = No 2 = Yes
RH Sensor	149	2	1	13	1 = None, 2 = Internal, 3 = WL 1, 4 = WL 2, 5 = WL 3, 6 = WL 4, 7 = WL 5, 8 = WL 6, 9 = WL 7, 10 = WL 8, 11 = WL 9, 12 = WL 10, 13 = WL GP
Auto Mode Enable	150	1	1	2	1 = None 2 = T-rH CO ₂ 3 = T-rH
ADR Permission	151	1	1	2	1 = Off 2 = On
Wireless Device GP - Function	152	1	1	2	1 = Off 2 = On
Function	153	2	1	3	1 = Remove 2 = None 3 = T
Wireless Device 1 - Function	210	6	1	7	1 = None, 2 = Window, 3 = Door, 4 = Motion, 5 = Status, 6 = Remove, 7 = Water
Wireless Device 2 - Function	220	6	1	7	1 = None, 2 = Window, 3 = Door, 4 = Motion, 5 = Status, 6 = Remove, 7 = Water

Object name	Instance	Default Value	Minimum Range Value	Maximum Range Value	Description
Wireless Device 3 - Function	230	6	1	7	1 = None, 2 = Window, 3 = Door, 4 = Motion, 5 = Status, 6 = Remove, 7 = Water
Wireless Device 4 - Function	240	6	1	7	1 = None, 2 = Window, 3 = Door, 4 = Motion, 5 = Status, 6 = Remove, 7 = Water
Wireless Device 5 - Function	250	6	1	7	1 = None, 2 = Window, 3 = Door, 4 = Motion, 5 = Status, 6 = Remove, 7 = Water
Wireless Device 6 - Function	260	6	1	7	1 = None, 2 = Window, 3 = Door, 4 = Motion, 5 = Status, 6 = Remove, 7 = Water
Wireless Device 7 - Function	270	6	1	7	1 = None, 2 = Window, 3 = Door, 4 = Motion, 5 = Status, 6 = Remove, 7 = Water
Wireless Device 8 - Function	280	6	1	7	1 = None, 2 = Window, 3 = Door, 4 = Motion, 5 = Status, 6 = Remove, 7 = Water
Wireless Device 9 - Function	290	6	1	7	1 = None, 2 = Window, 3 = Door, 4 = Motion, 5 = Status, 6 = Remove, 7 = Water
Wireless Device 10 - Function	300	6	1	7	1 = None, 2 = Window, 3 = Door, 4 = Motion, 5 = Status, 6 = Remove, 7 = Water