Name your project lab5SoC to be different

from this workbook, which assumes this

project name to be lab5.

Software Writing for Timer and Debugging

Introduction

This lab guides you through the process of writing a software application that utilizes the private timer of the CPU. You will refer to the timer's API in the SDK to create and debug the software application. The application you will develop will monitor the dip switch values and increment a count on the LEDs. The application will exit when the center push button is pressed.

Objectives

After completing this lab, you will be able to:

- Utilize the CPU's private timer in polled mode
- Use SDK Debugger to set break points and view the content of variables and memory

Procedure

This lab is separated into steps that consist of general overview statements that provide information on the detailed instructions that follow. Follow these detailed instructions to progress through the lab.

This lab comprises 4 primary steps: Open the project in Vivado, create a SDK software project, verify operation in hardware, and launch the debugger and debug the design.

Design Description

You will use the hardware design created in lab5SoC to use CPU's private timer (see **Figure 1**). You will develop the code to use it.


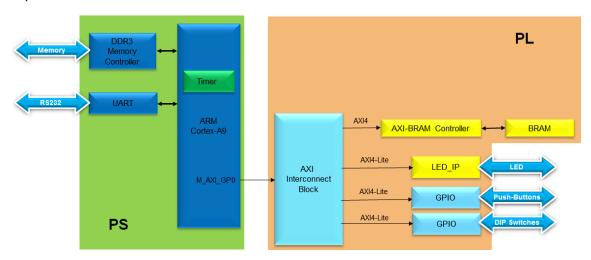


Figure 1. Design updated from Previous Lab

General Flow for this Lab





In the instructions below;

{ sources} refers to: C:\xup\embedded\2015_2_zynq_sources

{ labs} refers to : C:\xup\embedded\2015_2_zynq_labs

{ labsolutions} for the ZedBoard refers to: C:\xup\embedded\2015_2_zedboard_labsolution

or for the Zybo refers to: C:\xup\embedded\2015_2_zybo_labsolution

Open the Project in Vivado

Step 1

- 1-1. Use the lab4part2SoC project from the last lab or, use the *lab4* from the labsolutions directory, and save it as *lab5SoC*. Open the project in Vivado and then export to SDK.
- **1-1-1.** If you wish to continue using the design that you created in the previous lab, open the lab4part2SoC project from the previous lab, or open the lab4 project in the {labsolutions} directory, and Save it as lab5SoC to the labs/ directory

Since we will be using the private timer of the CPU, which is always present, we don't need to modify the hardware design.


- **1-1-2.** Open the Block Design. You may notice that the status changes to synthesis and implementation out-of-date as the project was *saved as*. Since the bitstream is already generated and will be in the exported directory, we can safely ignore any warning about this. If you want to start with a new hardware platform, you can delete *.sdk folder in this project. When you export hardware again, you wil have a new SDK folder with a new system hardware platform.
- 1-1-3. In Vivado, select File > Export > Export Hardware (include the bitstream) and then File > Launch SDK

Create an SDK Software Project

Step 2

- 2-1. Create a new empty application project called lab5SoC utilizing already existing standalone_bsp_0 software platform. Import the lab5.c source file from C: \xup\embedded\2015_2_zynq_sources\lab5. Change lab5.c to lab5SoC.c.
- **2-1-1.** In the *Project Explorer* in SDK, close all previous project files. right click on *lab4part2*, *lab4part2*_bsp and system_wrapper_hw_platfrom_2, and select **Close Project**.
- 2-1-2. Select File > New > Application Project.
- **2-1-3.** Name the project **lab5SoC**, and for the board Support Package, (Leave *Create New* for the *Board Support Package*) and click **Next**.
- 2-1-4. Select Empty Application and click Finish. Browse to {sources}\lab5 folder, select lab5.c. Copy lab5.c to lab5SoC project folder. Rename lab5.c to lab5SoC.c.
- **2-1-5.** Select *lab5* > *src* in the project explorer, right-click, and select *lmport*.
- **2-1-6.** Expand **General** category and double-click on **File System.**
- **2-1-7.** Browse to lab6SoC project folder, select **lab5SoC.c** and click **OK**, and then click **Finish**.

You will notice that there are multiple compilation errors. This is expected as the code is incomplete. You will complete the code in this lab.

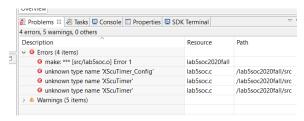

< Back Next > Finish Cancel



2-2. Refer to the Scutimer API documentation.

- **2-2-1**. Open the **system.mss** from lab5soc_bsp
- **2-2-2.** Click on **Documentation** link corresponding to **scutimer** (*ps7_scutimer*) peripheral under the *Peripheral Drivers* section to open the documentation in a default browser window.
- 2-2-3. Click on the Files link to see available files related to the private timer API.
- **2-2-4.** Browse to the source directory, {Xilinx installation}\SDK\2015.2\data\embeddedsw\XilinxProcessorIPLib\drivers\scutimer_v2_0\src and open **xscutimer.h** link to see various functions available.

Look at the XScuTimer_LookupConfig() and XScuTimer_CfgInitialize() API functions which must be called before the timer functionality can be accessed.

Look at various functions available to interact with the timer hardware, including:

#define	XScuTimer_IsExpired(InstancePtr)
#define	XScuTimer_RestartTimer(InstancePtr)
#define	XScuTimer_LoadTimer(InstancePtr, Value)
#define	XScuTimer_GetCounterValue(InstancePtr)
#define	XScuTimer_EnableAutoReload(InstancePtr)
#define	XScuTimer_DisableAutoReload(InstancePtr)
#define	XScuTimer_EnableInterrupt(InstancePtr)
#define	XScuTimer_DisableInterrupt(InstancePtr)
#define	XScuTimer_GetInterruptStatus(InstancePtr)
#define	XScuTimer_ClearInterruptStatus(InstancePtr)
XScuTimer_Config *	XScuTimer_LookupConfig (u16 DeviceId)
int	XScuTimer_SelfTest (XScuTimer *InstancePtr)
int	XScuTimer_CfgInitialize (XScuTimer *InstancePtr,
	XScuTimer_Config *ConfigPtr, u32 EffectiveAddress)
void	XScuTimer_Start (XScuTimer *InstancePtr)
void	XScuTimer_Stop (XScuTimer *InstancePtr)
void	XScuTimer_SetPrescaler (XScuTimer *InstancePtr,
	u8 PrescalerValue)
u8	XScuTimer_GetPrescaler (XScuTimer *InstancePtr)

Figure 2. Useful Functions

2-3. Correct the errors

2-3-1. In SDK, in the **Problems** tab, double-click on the *unknown type name* **x** for the parse error. This will open the source file and bring you around to the error place.

To add number lines to your source code, right click on the source code area to choose Preferences and Editor. Click on Text Editors and then enable "Show line numbers".



```
7 //-----
8 XScuTimer Timer: /* Cortex A9 SCU Private Timer Instance */
 9
 10 #define ONE_TENTH 32500000 // half of the CPU clock speed/10
 11
 12⊖ int main (void)
 13 {
 14
 15
       XGpio dip, push;
16
       int psb check, dip check, dip check prev, count, Status;
 17
       // PS Timer related definitions
 18
       XScuTimer_Config *ConfigPtr;
©19
20
      XScuTimer *TimerInstancePtr = &Timer;
```

Figure 3. First error

2-3-2. Add the include statement at the top of the file for the *XScuTimer.h.* Save the file and the errors should disappear.

```
#include "xscutimer.h"
```

2-3-3. Scroll down the file and notice that there are few lines intentionally left blank with some guiding comments.

```
31
          // Initialize the timer
32
33
          // Read dip switch values
          dip_check_prev = XGpio_DiscreteRead(&dip, 1);
34
35
          // Load timer with delay in multiple of ONE TENTH
36
37
          // Set AutoLoad mode
38
39
          // Start the timer
40
```

Figure 4. Fill in Missing Code

The timer needs to be initialized, the timer needs to be loaded with the value ONE_TENTH*dip_check_prev, AutoLoad needs to be enabled, and the timer needs to be started.

2-3-4. Using the API functions list, fill those lines. Save the file and correct errors if any. (Use the completed code further on in this workbook as a guide if necessary.)

2-3-5. Scroll down the file further and notice that there are few more lines intentionally left blank with some guiding comments.



```
if (dip_check != dip_check_prev) {
    xil_printf("DIP Switch Status %x, %x\r\n", dip_check_prev, dip_check);
    dip_check_prev = dip_check;
    // load timer with the new switch settings

    count = 0;
}
if(XScuTimer_IsExpired(TimerInstancePtr)) {
        // clear status bit
        // output the count to LED and increment the count
```

Figure 5. More Code to be completed

The value of ONE_TENTH*dip_check_prev needs to be written to the timer again to update the timer, the InterruptStatus needs to be cleared, and the LED needs to be written to, and the count variable incremented.

2-3-6. Using the API functions list, complete those lines. Save the file and correct errors if necessary.



```
6 #include "XScuTimer.h"
8 //-----
 9 XScuTimer Timer;
                           /* Cortex A9 SCU Private Timer Instance */
10
11 #define ONE TENTH 32500000 // half of the CPU clock speed/10
13⊖ int main (void)
14 {
33
      // Initialize the timer
34
      ConfigPtr = XScuTimer_LookupConfig (XPAR_PS7_SCUTIMER_0_DEVICE_ID);
35
      Status = XScuTimer CfgInitialize (TimerInstancePtr, ConfigPtr, ConfigPtr->BaseAddr);
      if(Status != XST SUCCESS){
36
37
         xil_printf("Timer init() failed\r\n");
38
         return XST_FAILURE;
39
      // Read dip switch values
40
41
      dip_check_prev = XGpio_DiscreteRead(&dip, 1);
42
      // Load timer with delay in multiple of ONE SECOND
43
      XScuTimer_LoadTimer(TimerInstancePtr, ONE_TENTH*dip_check_prev);
44
      // Set AutoLoad mode
45
      XScuTimer_EnableAutoReload(TimerInstancePtr);
46
      // Start the timer
47
      XScuTimer_Start (TimerInstancePtr);
49
      while (1)
50
60
         if (dip_check != dip_check_prev) {
             xil_printf("DIP Switch Status %x, %x\r\n", dip_check_prev, dip_check);
61
             dip_check_prev = dip_check;
62
63
             // load timer with the new switch settings
64
             XScuTimer LoadTimer(TimerInstancePtr, ONE TENTH*dip check);
65
66
         if(XScuTimer IsExpired(TimerInstancePtr)) {
67
68
             // clear status bit
             XScuTimer_ClearInterruptStatus(TimerInstancePtr);
69
70
              // output the count to LED and increment the count
71
             LED_IP_mWriteReg(XPAR_LED_IP_S_AXI_BASEADDR, 0, count);
72
             count++;
73
         }
74
75
      return 0;
76 }
```

Figure 6. Portions of the completed Code

Verify Operation in Hardware

Step 3

3-1. Make sure that the JP7 is set to select USB power. Connect the board with a micro-usb cable and power it ON. Establish the serial communication using SDK's Terminal tab.



- 3-1-1. Select the **Terminal* tab. If it is not visible then select Window > Show view > Terminal.
- **3-1-2.** Click on and if required, select appropriate COM port (depends on your computer), and configure it with the parameters as shown. (These settings may have been saved from previous lab).
- 3-2. Program the FPGA by selecting Xilinx Tools > Program FPGA and assigning system_wrapper.bit file. Run the TestApp application and verify the functionality.
- 3-2-1. Select Xilinx Tools > Program FPGA.
- 3-2-2. Click the Program button to program the FPGA.
- **3-2-3.** Select **lab6SoC** in *Project Explorer*, right-click and select **Run As > Launch on Hardware (GDB)** to download the application, execute ps7_init, and execute lab5.elf

Depending on the switch settings you will see LEDs implementing a binary counter with corresponding delay.

Flip the DIP switches and verify that the LEDs light with corresponding delay according to the switch settings. Also notice in the Terminal window, the previous and current switch settings are displayed whenever you flip switches.






Figure 7. Terminal window output

Launch Debugger

Step 4

4-1. Launch Debugger and debug

4-1-1. Right-click on the **Lab5SoC** project in the Project Explorer view and select **Debug As > Launch on Hardware (GDB)**.

The lab5.elf file will be downloaded and if prompted, click **Yes** to stop the current execution of the program.

4-1-2. Click **Yes** if prompted to change to the *Debug perspective*.

At this point you could have added global variables by right clicking in the **Variables** tab and selecting **Add Global Variables** ... All global variables would have been displayed and you could have selected desired variables. Since we do not have any global variables, we won't do it.

4-1-3. Open the source code. Double-click in the left margin to set a breakpoint on various lines in your source code such as **lab5SoC.c** as shown below.

breakpoint has been set when a "tick" and blue circle appear in the left margin beside the line when the breakpoint was set. (The line numbers may be slightly different in your file.)

The first breakpoint is where count is initialized to 0. The second breakpoint is to catch if the timer initialization fails. The third breakpoint is when the program is about to read the dip switch



settings. The fourth breakpoint is when the program is about to terminate due to pressing of center push button. The fifth breakpoint is when the timer has expired and about to write to LED.

```
XGpio Initialize(&push, XPAR BTNS 4BIT DEVICE ID);
 29
        XGpio SetDataDirection(&push, 1, 0xffffffff);
 30
        count = 0;
631
 32
 33
        // Initialize the timer
       ConfigPtr = XScuTimer LookupConfig (XPAR PS7 SCUTIMER 0 DEVICE ID);
 34
 35
        Status = XScuTimer CfgInitialize (TimerInstancePtr, ConfigPtr, ConfigPtr->BaseAddr);
 36
        if(Status != XST SUCCESS){
 37
           xil_printf("Timer init() failed\r\n");
           return XST_FAILURE;
638
 39
        // Read dip switch values
 40
        dip_check_prev = XGpio_DiscreteRead(&dip, 1);
e41
        // Load timer with delay in multiple of ONE_SECOND
 43
       XScuTimer_LoadTimer(TimerInstancePtr, ONE_TENTH*dip_check_prev);
 44
        // Set AutoLoad mode
 45
       XScuTimer_EnableAutoReload(TimerInstancePtr);
 46
        // Start the timer
 47
       XScuTimer_Start (TimerInstancePtr);
49
       while (1)
 50
       {
 51
           // Read push buttons and break the loop if Center button pressed
 52
           psb check = XGpio DiscreteRead(&push, 1);
 53
           if(psb check > 0)
 54
 55
               xil printf("Push button pressed: Exiting\r\n");
 56
               XScuTimer Stop(TimerInstancePtr);
657
               break;
 58
 59
           dip_check = XGpio_DiscreteRead(&dip, 1);
           if (dip check != dip check prev) {
60
               xil_printf("DIP Switch Status %x, %x\r\n", dip_check_prev, dip_check);
61
62
               dip_check_prev = dip_check;
63
              // load timer with the new switch settings
 64
               XScuTimer_LoadTimer(TimerInstancePtr, ONE_TENTH*dip_check);
 65
               count = 0;
 66
           if(XScuTimer IsExpired(TimerInstancePtr)) {
 67
 68
               // clear status bit
 69
               XScuTimer_ClearInterruptStatus(TimerInstancePtr);
 70
              // output the count to LED and increment the count
671
               LED_IP_mWriteReg(XPAR_LED_IP_S_AXI_BASEADDR, 0, count);
 72
               count++;
 73
           }
74
        }
```

Figure 8. Setting breakpoints

4-1-4. Click on the **Resume** () button to continue executing the program up until the first breakpoint is reached.

In the Variables tab you will notice that the *count* variable may have value other than 0.

4-1-5. Click on the **Step Over** () button or press F6 to execute one statement. As you do step over, you will notice that the **count** variable value changed to 0.



- **4-1-6.** Click on the **Resume** button again and you will see that several lines of the code are executed and the execution is suspended at the third breakpoint. The second breakpoint is skipped. This is due to successful timer initialization.
- **4-1-7.** Click on the **Step Over** (F6) button to execute one statement. As you do step over, you will notice that the **dip_check_prev** variable value changed to a value depending on the switch settings on your board.
- 4-1-8. Click on the memory tab. If you do not see it, go to Window > Show View > Memory.
- 4-1-9. Click the 📌 sign to add a Memory Monitor



Figure 9. Monitor memory location

4-1-10. Enter the address for the private counter load register (0xF8F00600), and click OK.

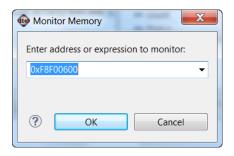


Figure 10. Monitoring a Memory Address

You can find the address by looking at the xparameters.h file entry to get the base address (** XPAR_PS7_SCUTIMER_0_BASEADDR), and find the load offset double-clicking on the xscutimer.h in the outline window followed by double-clicking on the xscutimer_hw.h and then selecting XSCUTIMER LOAD OFFSET.

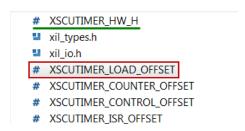


Figure 71. Memory Offset

4-1-11. Make sure the DIP Switches are not set to "0000" and click on the **Step Over** button to execute one statement which will load the timer register.

Notice that the address 0xF8F00604 has become red colored as the content has changed. Verify that the content is same as the value: dip_check_prev*32500000. You will see hexadecimal equivalent (displaying bytes in the order 0 -> 3).

E.g. for dip_check_prev = 1; the value is 0x01EFE920; (reversed: 0x20E9EF01 at F8F00600-0603)

This is the Little-Endian word storage format.



4-1-12. Click on the **Resume** button to continue execution of the program. The program will stop at the writing to the LED port (skipping fourth breakpoint as center push button as has not occurred).

Notice that the value of the counter register is changed from the previous one as the timer was started and the countdown had begun.

- **4-1-13.** Click on the **Step Over** button to execute one statement which will write to the LED port and which should turn OFF the LEDs as the count=0.
- **4-1-14.** Double-click on the fifth breakpoint, the one that writes to the LED port, so the program can execute freely.
- **4-1-15.** Click on the **Resume** button to continue execution of the program. This time it will continuously run the program changing LED lit pattern at the switch setting rate.
- **4-1-16.** Flip the switches to change the delay and observe the effect.
- **4-1-17.** Press a push button and observe that the program suspends at the fourth breakpoint. The timer register content as well as the control register (offset 0x08) is red as the counter value had changed and the control register value changed due to timer stop function call. (In the Memory monitor, you may need to right click on the address that is being monitored and click *Reset* to refresh the memory view.)
- **4-1-18.** Terminate the session by clicking on the **Terminate** (**)** button.
- 4-1-19. Exit the SDK and Vivado.

4-1-20. Power OFF the board.

To toggle between Debug and Project Manager Views, click on C/C++ on the upper right corner of the SDK.




Conclusion

This lab led you through developing software that utilized CPU's private timer. You studied the API documentation, used the appropriate function calls and achieved the desired functionality. You verified the functionality in hardware. Additionally, you used the SDK debugger to view the content of variables and memory, and stepped through various part of the code.

Launch Failed: Binary not found. Recompile the code because it was compiled incorrectly.


Error: no bit file found: open Vivado to regenerate bit



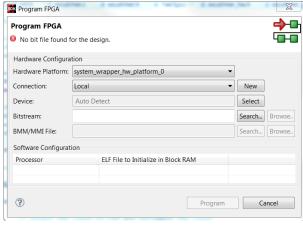




The easiest way is to terminate SDK and restart. Reload FPGA would also fix it.

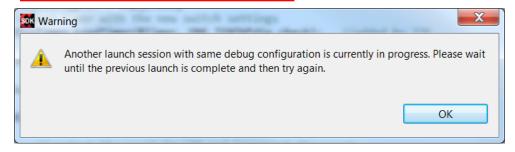

Do not click on bsd

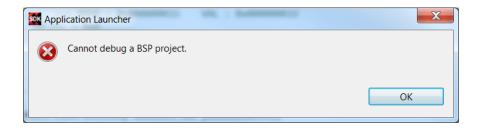

Please submit a one-page memo on Lab #6SoC Software Writing for Timer and Debugging to explain what you have done, how you have calculated the timer settings. You also need to capture or record the load register values for at least three slide different switch settings and explain the elapse times for them.