12 Application Program Samples

In this chapter, we make some samples about pulse output instruction, Modbus communication instructions and free format communication instructions etc.

12-1 . Pulse Output Sample	
12-2 . Modbus Communication Sample	
12-3 . Free Format Communication Sample	

12-1 . Pulse Output Application


Example: below is the example program to send high/low pulse in turn

Each Parameter:

Stepping motor parameters: step angle= 1.8 degrees/step, scale=40, pulse number per rotate is 8000

High frequency pulse: maximum frequency is 100KHz, total pulse number is 24000 (3 rotates) Low frequency pulse: maximum frequency is 10KHz, total pulse number is 8000 (1 rotates)

Ladder Program:

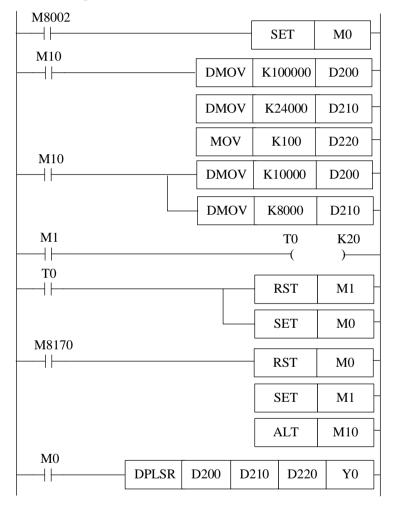

Instruction List:

LD	M8002		//initial positive pulse coil
SET	M0		//set M0 ON
LDF	M10		//M10 falling edge activate condition
OR	M8002		//Initial data
DMOV	K100000	D200	//move decimal data 100000 into DWORD D200
DMOV	K24000	D210	// move decimal data 24000 into DWORD D210
MOV	K100	D220	// move decimal data 100 into DWORD D220
LDP	M10		//M10 rising edge activate condition
DMOV	K10000	D200	// move decimal data 10000 into DWORD D200

```
// move decimal data 8000 into DWORD D210
DMOV
          K8000
                    D210
LD
          M1
                                          //M1 status activate condition
OUT
          T0
              K20
                                          //100ms timer T0, time 2 seconds
LD
          T0
                                          //T0 status activate condition
RST
          M1
                                          //reset M1
SET
          M0
                                          //set M0
LDF
          M8170
                                          //M8170 falling edge activate condition
RST
          M0
                                          //reset M0
SET
          M1
                                          //set M1
ALT
          M10
                                          //M10 status NOT
LD
          M0
                                          //M0 status activate condition
DPLSR
          D200
                 D210 D220 Y0
                                          //value in D200 is frequency, value in D210 is pulse
        number, value is D220 is acceleration/deceleration time, send pulse via Y0;
```

Explanation:

When PLC changes from STOP to be RUN, M8002 gets a scan cycle; set the high frequency pulse parameters into D200, D210, set the acceleration/deceleration speed to D220, set M0, the motor starts to run 3 rounds with high frequency. Meantime M8170 sets; the motor runs 3 rounds and decelerate, stop, coil M8170 reset; then reset M0, set M1, NOT M10; set the low frequency pulse parameters into D200, D210; the timer time lags 2sec, when time reaches, reset M1; set M0, the motors starts to run 1 round with low frequency; after this starts to run with high frequency. Repeat this alternation time by time;

12-2. MODBUS COMMUNICATION SAMPLES

E.g.1: realize Modbus read/write among one master and three slaves

Operation: (1) write content in D10~D14 to D10~D14 of 2# slave;

(2) read D15~D19 of the slaves to D15~D19 of the mater; anyhow, write the first five registers' content to the slaves, the left five registers are used to store the content from the slaves;

(3) 3#, 4# slaves are similar;

Soft component's comments:

D0: communication station number

D1: offset

M2: 2# communication errorM3: 3# communication errorM4: 4# communication error


M8137: COM2 communication error end signal M8138: COM2 communication correct end signal

S0: write the target station S1: read the target station

S2: judge the communication status S3: offset the communication ID T200: communication interval 1 T201: communication interval 2

T202: self reset 1 of communication error T203: self reset 2 of communication error

Ladder

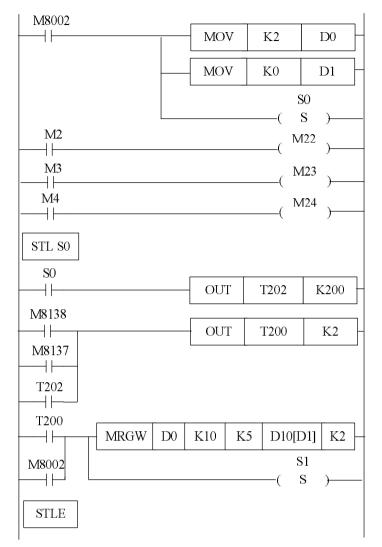

In PLC's first scan cycle, evaluate the "communication station" to be 2;

Evaluate the "offset" to be 0

2# communication error reset

3# communication error reset


4# communication error reset

S0 starts, T202 counts 2S, which is the communication wait time

When the communication wait time reaches, no matter the communication succeeds or not, T200 time 20ms, this time is used start the next communication

T200 time reaches, or on the power up, execute the RUN operation to the target station

Open the flow S1

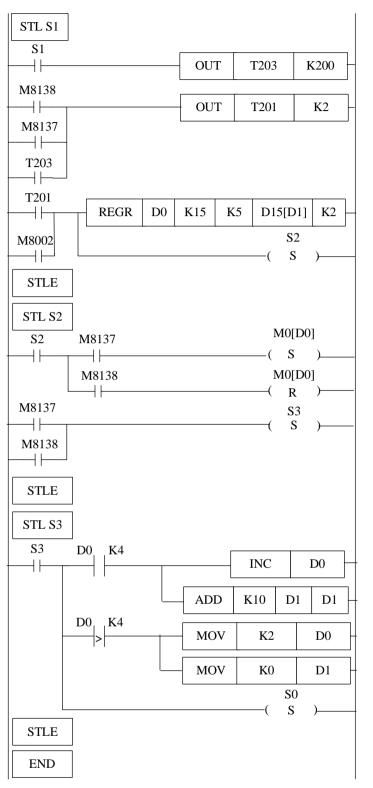

S0 starts, T203 time 2s, which is the communication waiting time

When communication waiting time reaches, no matter the communication succeeded or not, T201 counts 20ms, this time is used to start the next communication.

T201 times reach, or on the power up, execute the read operation with the target stations

Open flow S2

Flow S2 is used to judge the communication status. Failure will set the correspond coil; success will reset the correspond coil;

If the station number is not larger than 4, the station register add 1, the offset add 10

If the station number is larger than 4, evaluate the station register 1; clear the offset register

Open flow S0


Program Explanation:

When PLC turns from STOP to RUN, M8002 gets a scan cycle. S0 flow open, write the master's D10—D14 to slave 2# D10—D14. no matter the communication is success or not, turn to S1 flow; check the previous communication written condition. After certain time delay, continue to read D15~D19 data from 2#. After this reading entr S2 flow, check if the communication is success. If failed, set M23, enter alarming. After finishing the communication with 2#, enter S3,

then flow S3 will judge with the station number. If the station number is less than 1, the offset add 10; or else start from 2# again.

e.g. 2: Below is the sample of XINJE XC series PLC with two of XINJE inverters, they communicate via Modbus communication, XC series PLC write the frequency to the two inverters;

set the first inverter's station to be 1; set the second inverter's station to be 2; store the frequency's set value in D1000 and D2000. execute the frequency setting order via COM ports;

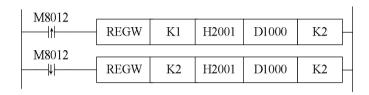

Program Description:

On the rising edge of M8012, write frequency to the first inverter; on the falling edge of M8012, write frequency to the second inverter;

12-3 . Free Format Communication Example

In this example, we use DH107/DH108 series instruments;

1, Interface Specifications

DH107/DH108 series instruments use asynchronous serial communication interface, the interface level fits RS232C or RS485 standard. The data format is: 1 start bit, 8 data bits, no parity, one/two stop bit. The baud rate can be $1200\sim19200$ bit/s.

2, Communication Instruction Format

DH107/108 instruments use Hex data form to represent each instruction code and data; Read/write instructions:

Read: address code +52H (82) +the para.(to read) code +0+0+CRC parity code

Write: address code +43H(67)+ the para.(to write) code +low bytes of the wrote data + high bytes of the wrote data +CRC parity code

The read instruction's CRC parity code is: the para. (to read) code *256+82+ADDR

ADDR is instrument's address para., the range is 0~100 (pay attention not to add 80H). CRC is the remainder from the addition of the above data (binary 16bits integral). The reminder is 2 bytes, the high byte is behind the low byte;

The write instruction's CRC parity code is: the para. (to write) code *256+67+ the para. value (to write) +ADDR

The para. to write represents with 16 bits binary integral;

No matter to write or read, the instrument should return data as shown below:

The test value PV+ given value SV+ output value MV and alarm status +read/write parameters value +CRC parity code

Among in, PV, SV and the read parameters are all in integral form, each occupies two bytes, MV occupies one byte, the value range is 0~220, alarm status occupies one byte, CRC parity code occupies two bytes, totally 10 byes.

CRC parity code is the reminder from the result of PV+SV+ (alarm status *256+MV)+ para. value +ADDR;

(for details, please refer to AIBUS communication description)

3. Write the program

After power on the PLC, the PLC read the current temperature every 40ms. During this period, the user can write the set temperature.

Data zone definition: buffer area of sending data D10~D19

buffer area of accepting data D20~D29 instruction's station number: D30 read command's value: D31=52 H write command's value: D32=43 H

parameter's code: D33 temperature setting: D34 CRC parity code: D36


Temperature display: D200,D201

The send data form: 81H 81H 43H 00H c8H 00H 0cH 01H (current temperature display) Communication parameters setting: baud rate: 9600, 8 data bits, 2 stop bits, no parity

Set FD8220=255; FD8221=5

(the hardware and software must be V2.4 or above)

Ladder:

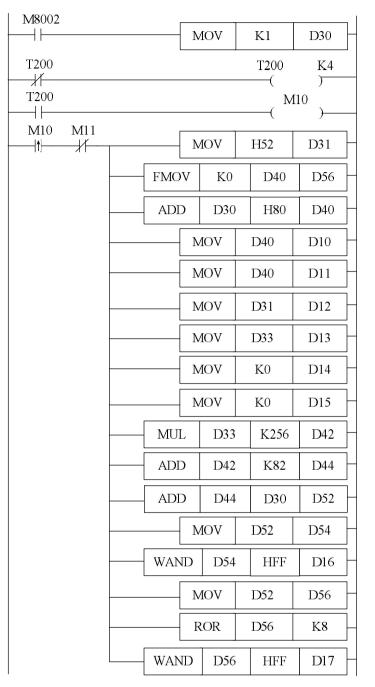

Write instrument's station Nr. K1 in to D30

Time 40ms

Output M10

Write the read code 52H into D31

Clear registers D40-D56

D30 add H80 to get value 81H

move D40 (81H) to D10

move D40 (81H) to D11

move D31 (read code 52H) to D12

move D33 (para. code) to D13

write zero to D14

write zero to D15

below is to calculate CRC parity;

D33 multiply K256, the result is saved in D42

D42 add K82, the result is stored in D44

D44 add D30 (instrument's station), the result is saved in D52


Move D52 into D54

Logic AND D54 with HFF, save the result in D16

Move D52 into D56

Right shift 8 bits with D56 (convert the high 8bits to the low 8 bits)

Logic AND D56 with HFF, save the result in D17

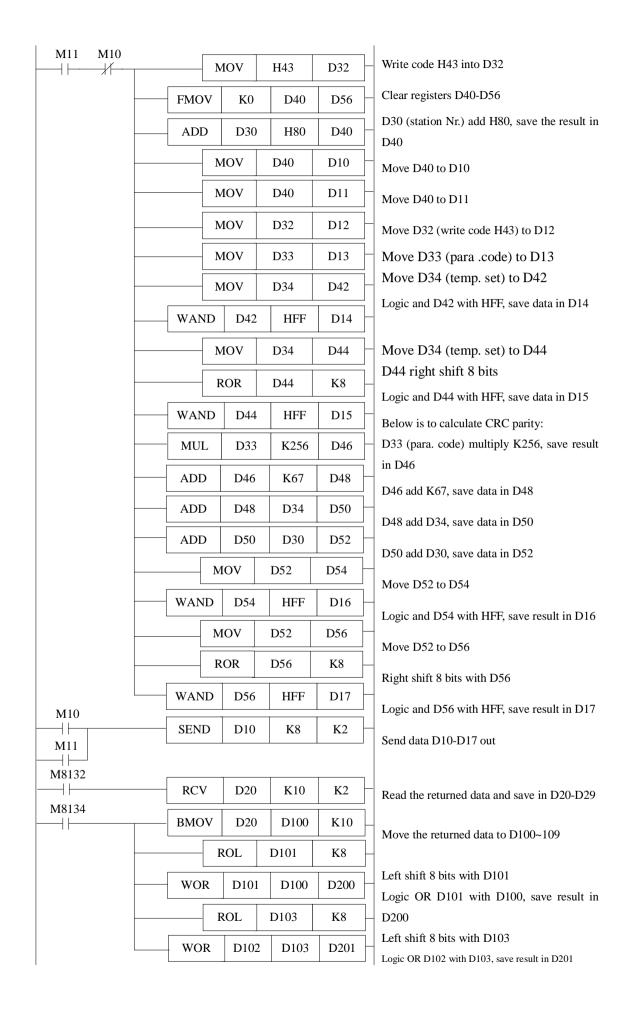

Program Description:

The above program is written according to DH instrument's communication protocol, the soft component's functions are listed below:

Relationship of sent (SEND) data string and registers:

	D10	D11	D12	D13	D14	D15	D16	D17
Read	Address	Address	Read	Parameters	0	0	CRC	CRC
	code	code	code	code			low	high
			52H				bytes	bytes
Write	Address	Address	Write	Parameters	low	high	CRC	CRC
	code	code	code	code	bytes of	bytes of	low	high
			42H		the	the	bytes	bytes
					written	written		
					data	data		

Relationship of received (RCV) data (data returned by the instrument) and the registers:

D20	D21	D22	D23	D24	D25	D26	D27	D28	D29
PV	PV	SV	SV	Output	Alarm	Read/write	Read/write	CRC	CRC
low	high	low	high	value	status	low bytes	high bytes	low	high
bytes	bytes	bytes	bytes					bytes	bytes

So, if write data string according to the communication objects' protocol, use SEND and RCV commands from free format communication, user will get the communication with the objects.