

- With this assembly instruction 1-function auxiliary hydraulic outlet can be assembled on a Avant R35 series loader
- This is a retrofit instruction




- Before assembling make sure that you find all of the components listed below in your retrofit kit
  - 64190 Quick attachment coupling
  - 73754 Cover
  - A47918 Hydraulic hose
  - 74769 x2 Seeger ring
  - 64041 Basic fitting
  - 64134 Elbow fitting 90°
  - A48828 Lever assy
  - 74761 Lever knop
  - 73100 Screw M8x30
  - A48498 Locking plate
  - A48360 Locking piece
  - 72110 x2 Hexagonal screw M5x16
  - 74448 x2 Washer M5



- Remove loaders right side cover and the rear covers
- When the covers are removed wash the control valve to avoid hydraulic system contamination
- Route the hoses inside the rear frame



- The quick couplings are attached to loader
- Attach one locking ring to quick coupling
- Second ring will be attached when the quick coupling is on it's place
- Secure the quick attachment coupling to it's place with the second locking ring

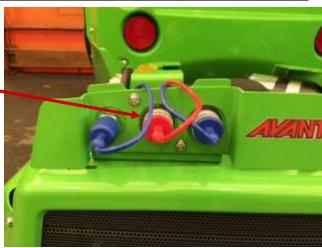






- The hose is attached to cooler with hose clamp
- The clamp comes with retrofit kit and attach it to secure the hoses
- Now the hoses are secured and they won't go to fan





- 600 series control valve
- Remove plug from control valve and replace it with basic fitting

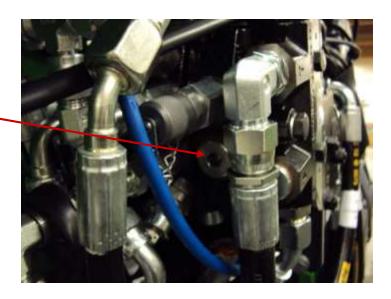




 The hose for the 1-function hydraulic outlet is the lower one in this picture





- The lever assy is attached to control valve
- Locking plate is attached to control panel and with this you can lock the pressure on
- Adjust the plate when the lever is pushed as forward as it goes, the tighten the other screw and the locking plate stays on it's place



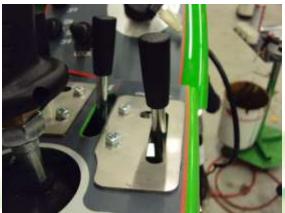



- When everything is attached and all hoses are tightened test it
- It's important to make the test now so you can see if there is any oil leaks and tighten the couplings if they are loose
- When everything is ok attach removed covers on their places