

- With this instruction Reverse beeper can be assembled on a Avant 600 series loader
- This is a retrofit instruction



- Before assembly you need to make sure that you have all of the components listed below in your retrofit kit
 - 64367 Reverse beeper
 - 64852 Pressure switch
 - A410539 Wire harness, reverse beeper
 - 73757 Usit-sealing
 - 65240 Test fitting
 - 65241 L-fitting frame



- Remove loaders rear covers
- When the covers are removed wash the pump so you don't contaminate the hydraulic system



 Reverse beeber will be attached to cooler frame





- The fittings for reverse beeper
- Reverse beeper is attached to variable pump on top of the test fitting
- If loader has anti slip valve reverse beeper pressure switch goes to lower fitting in variable pump










 Wire harness for reverse beeper

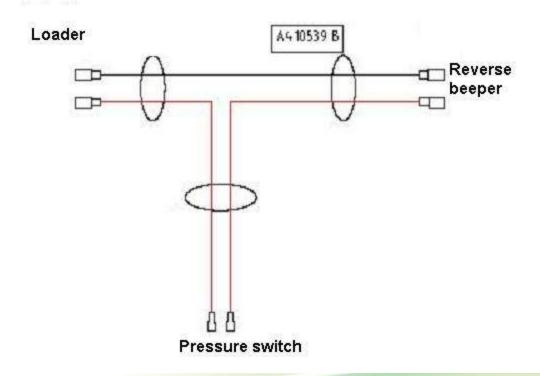



- When everything is attached and fittings are tightened test the beeper, drive backwards and if it
 makes beeping noise it's ok
- Same time check the system from oil leaks
- When everything works as it should and there are no oil leaks attach removed covers back