

Assembly manual for trailer A21110 & A21111

1. Drawbar

Install the towing coupling in the drawbar's rotating end, as shown in picture below. The coupling fits tight, so a hammer might be necessary.



Turn the trailer upside down and install the drawbar to the chassis:



When installing the drawbar, note that the drawbar support should be facing the ground when the trailer is upright:



Drawbar support


2. Install wheels while the trailer is upside down:



3. Turn the trailer upright, remove the bolts that hold the side plywood to the chassis and place side supports as shown in the picture:



Note that the outer side supports have to have bracket answers riveted to them.

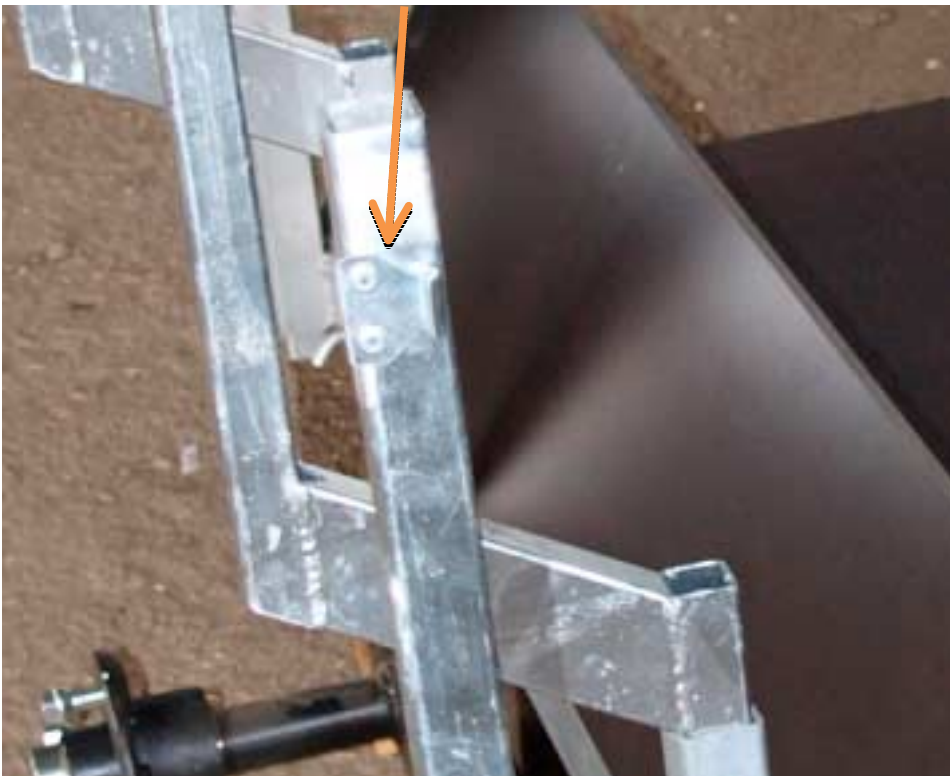

4. Place the side profile plates as shown on the picture and fix the side plates to the chassis, on the points marked with arrows:



5. Install the 2-part end plates:



1)



2)

