



Servo Mechanical Control "A"

The variation in pump displacement is obtained by rotating the drive lever situated on the servo control. An internal channel, linked to the charge pump, feeds a hydraulic servo valve which supplies oil into the cylinder which is in turn linked to the pump swashplate.


The maximum rotation of the lever, with respect to 0 is 36° for both rotation directions; thus permitting the optimum control of the displacement.

At every lever angle there is a corresponding pump displacement. On the (T) return "arm" of the rotating distributor a "K" restrictor is mounted which regulates the servo control shifting speed, thus avoiding sudden accelerations and stoppages.


The effort of moving the lever is independent of the pressure and RPM.

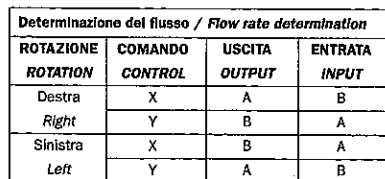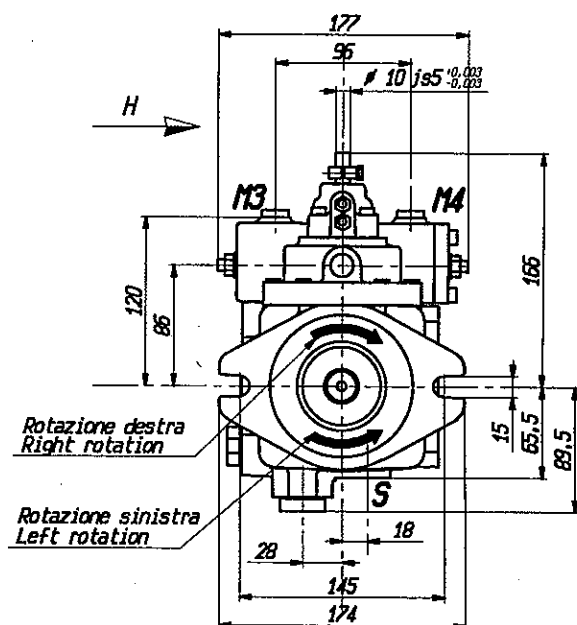

Per attacchi tubazioni vedere tabella pag. 13
For pipes connections see table on page 13

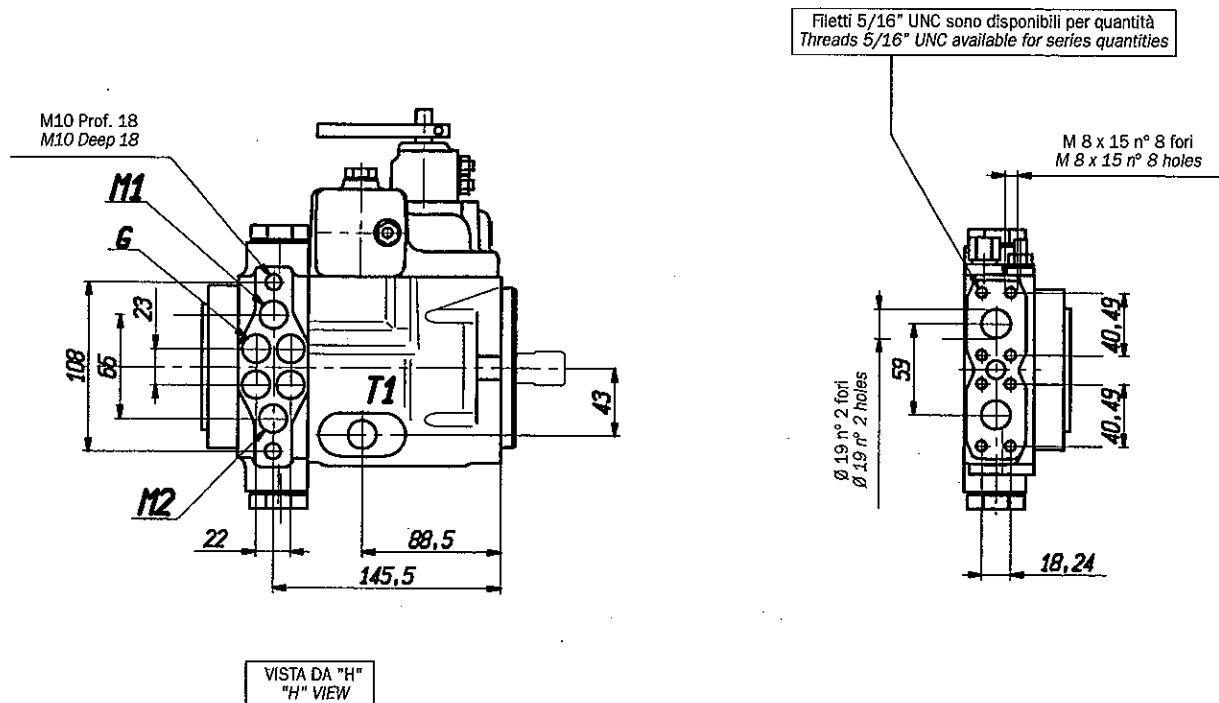

Mt perno comando (Nm)
Control shaft torque (Nm)

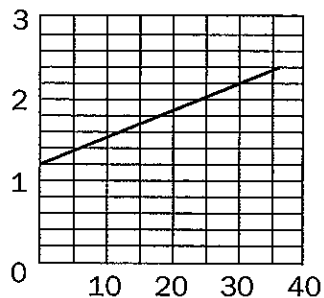

Rotazione perno comando (gradi)
Control shaft rotation (degrees)

