


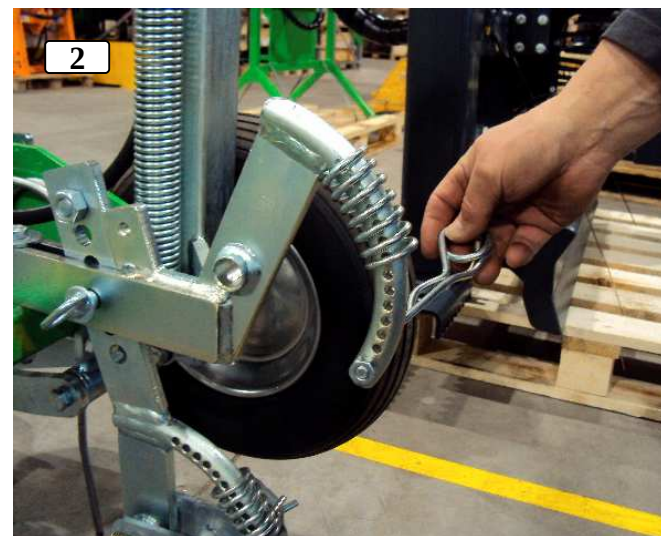

1. Starting point
2. Remove the pins (2 pcs)
3. Remove the bolts and pins (2 pcs)

AVANT
AVANT TECNO OY

Revisio

1

Pvm.

7.2.2013

Hyväksynyt


JL

Sivu


1

Platz-Max assembly instructions

A21302

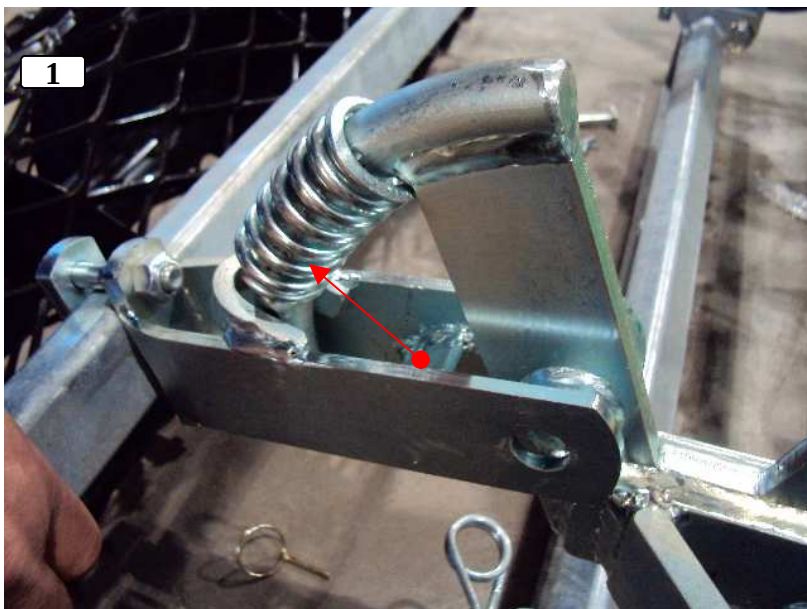

1. Install the roller to the main frame.
Secure that the springs is between roller and frame.
2. Place the bolts against plane
3. Install the pins (2 pcs)

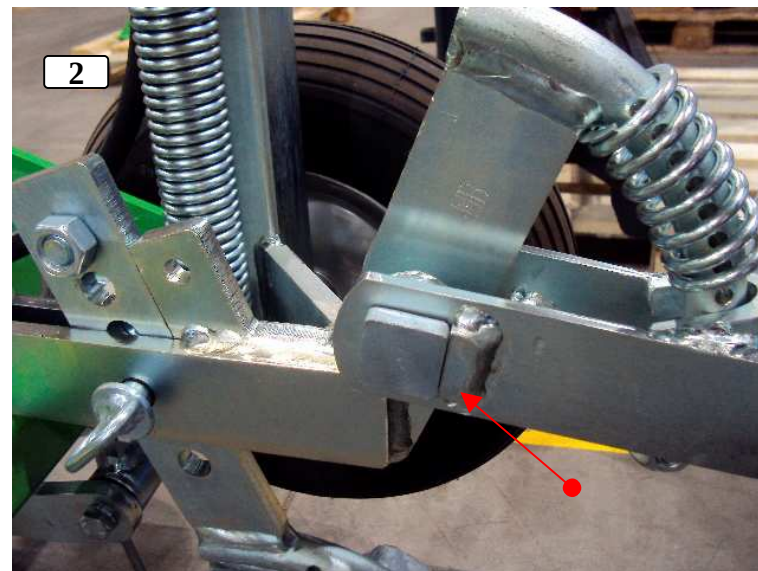

	Revisio	1	Pvm.	7.2.2013	A21302
	Hyväksynyt	JL	Sivu	2..	
	Platz-Max assembly instructions				



1. Attach the draw to bar
2. Install tyre to draw bar
3. Notice the mechanical adjustments! After adjust the product is ready to use



AVANT
AVANT TECNO OY

Revisio

1

Pvm.

7.2.2013

Hyväksynyt

JL

Sivu

3..

Platz-Max assembly instructions

A21302