
STANDARD DEPARTURE CHART -INSTRUMENT

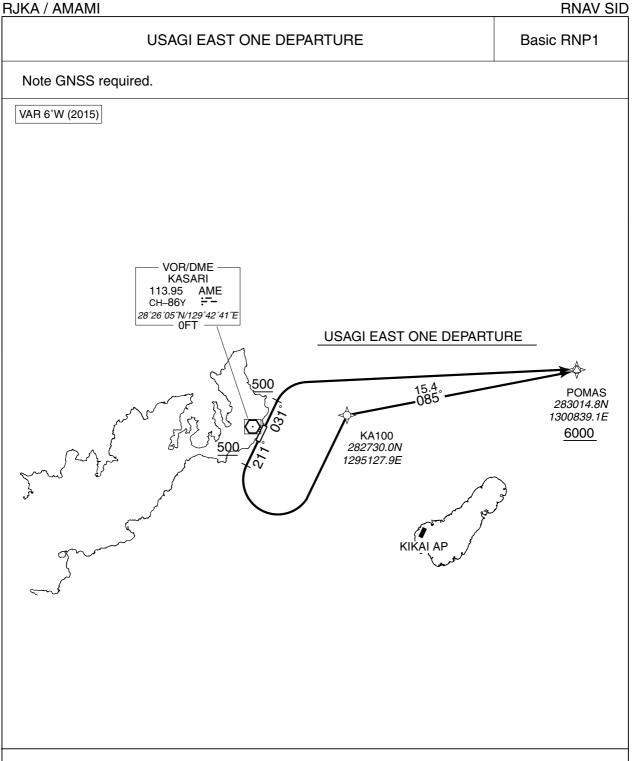

USAGI EAST ONE DEPARTURE

RWY03: Climb on HDG031° at or above 500FT, turn right to POMAS at or above 6000FT.

RWY21 : Climb on HDG211° at or above 500FT, turn left direct to KA100, to POMAS at or above 6000FT.

STANDARD DEPARTURE CHART -INSTRUMENT

RJKA / AMAMI RNAV SID

USAGI EAST ONE DEPARTURE

RWY 03

erial ımber	Path Descriptor	Waypoint Identifier	Fly Over		Magnetic Variation		Turn Direction				Navigation Specification
001	VA	_	_	031 (025.8)	-5.7	_	_	+500	_	_	Basic RNP1
002	DF	POMAS	_	_	-5.7	_	R	+6000	_	_	Basic RNP1

RWY 21

Serial Number	Path Descriptor	Waypoint Identifier	Fly Over	Course °M(°T)	Magnetic Variation	l	Turn Direction	Altitude (FT)	Speed (KIAS)		
001	VA	_	_	211 (205.8)	-5.7	_	_	+500	-	_	Basic RNP1
002	DF	KA100	_	_	-5.7	_	L	_		_	Basic RNP1
003	TF	POMAS	_	085 (079.6)	-5.7	15.4	_	+6000	_	_	Basic RNP1