

## STANDARD DEPARTURE CHART -INSTRUMENT

SID **ROMD / MINAMIDAITO** TOPAT THREE DEPARTURE RWY02: Climb RWY HDG to 600FT, turn left HDG234°... RWY20: Climb RWY HDG to 600FT, turn right HDG324°... ... to intercept and proceed via MDE R279 to TOPAT. Cross TOPAT at or above 8000FT. **185(27)** (27) 185 (57 KITADAITO AP RWY02 : See TAKE OFF MINIMA TOPAT THREE DEPARTURE 600 8000 -279° **TOPAT** R279 -R279/D97.8 MDE VOR/DME -R103/D98.8 NHC MINAMIDAITO 117.8 MDE CH-125X 25°51′16″N/131°15′50″E 200FT 600

## STANDARD DEPARTURE CHART -INSTRUMENT



#### STANDARD DEPARTURE CHART - INSTRUMENT

# **ROMD / MINAMIDAITO RNAV SID** Basic RNP1 CORCO SOUTH ONE DEPARTURE Note GNSS required. VAR 5°W (2015) KITADAITO AP CORCO SOUTH ONE DEPARTURE 600 VOR/DME -MINAMIDAITO 117.8 MDE **CORCO** CH-125X = 7. 25°51′16″W/131°15′50″E 200FT 255226.5N 1305915.1E 5000 201(43) <u>600</u> **№**185(27) (27) 185 (50

## CORCO SOUTH ONE DEPARTURE

RWY02 : See TAKE OFF MINIMA


RWY02: Climb on HDG021° at or above 600FT, turn left direct to CORCO at or above 5000FT. RWY20: Climb on HDG201° at or above 600FT, turn right direct to CORCO at or above 5000FT.


#### RWY02


1100102											
Serial	Path	Waypoint	Fly	Course	Magnetic	Distance	Turn	Altitude	Speed	Vertical	Navigation
Number	Descriptor	Identifier	Over	°M(°T)	Variation	(NM)	Direction	(FT)	(KIAS)	Angle	Specification
001	VA	_	_	021 (015.6)	-4.9	_	_	+600	_	_	Basic RNP1
002	DF	CORCO	_	_	-4.9	_	L	+5000	_	_	Basic RNP1


# RWY20


Serial	Path	Waypoint	Fly	Course	Magnetic	Distance	Turn	Altitude	Speed	Vertical	Navigation
Number	Descriptor	Identifier	Over	°M(°T)	Variation	(NM)	Direction	(FT)	(KIAS)	Angle	Specification
001	VA	_	_	201 (195.6)	-4.9	_	_	+600	_	_	Basic RNP1
002	DF	CORCO	_	_	-4.9	_	R	+5000	_	_	Basic RNP1

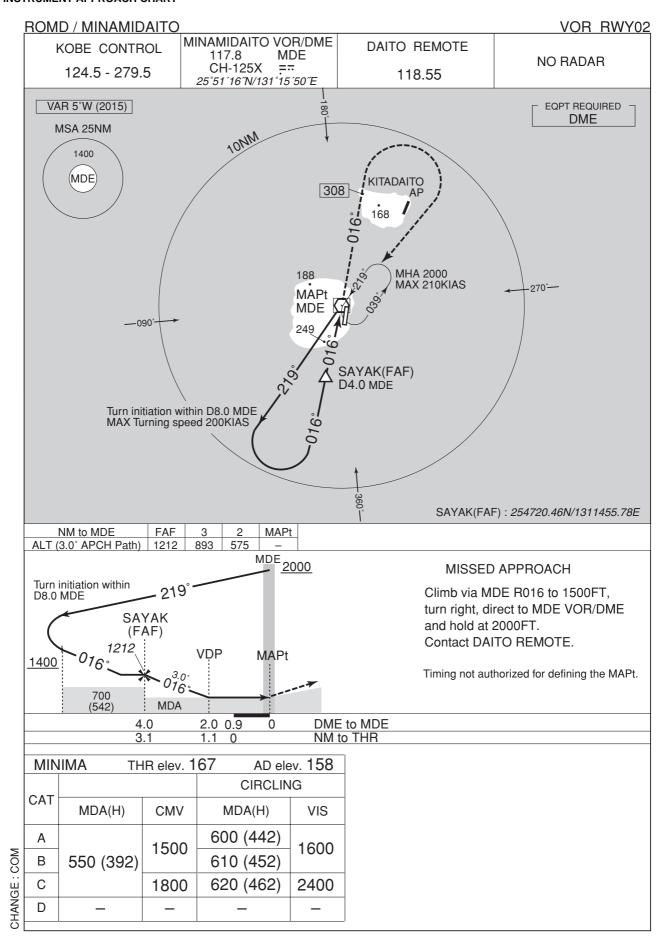

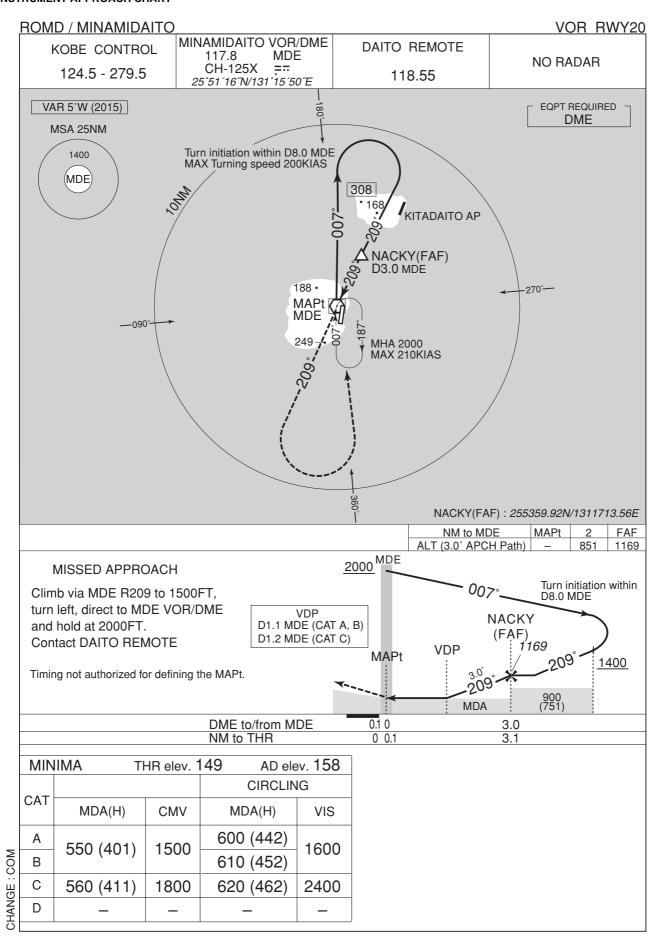

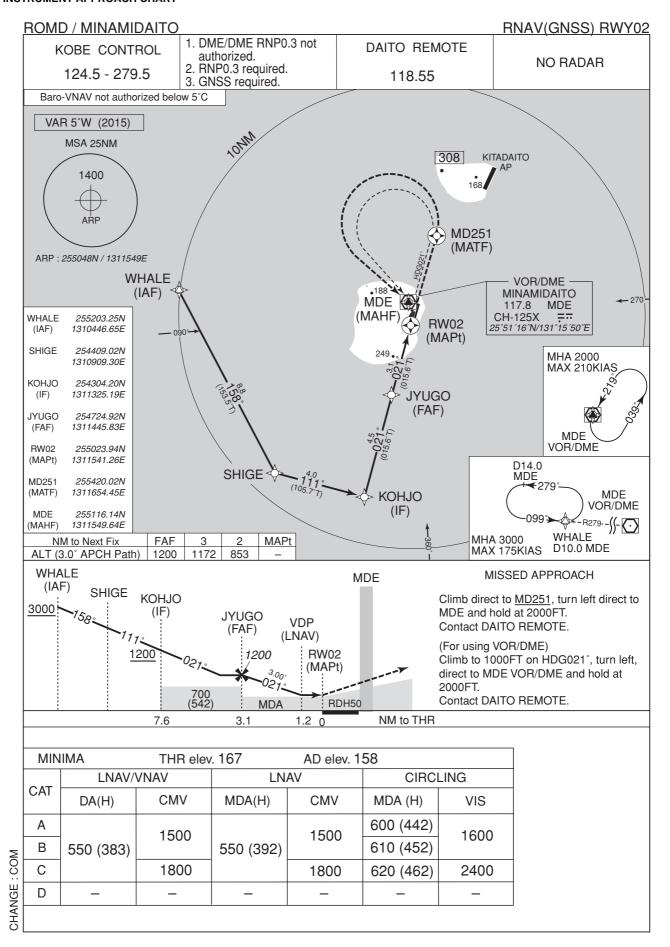

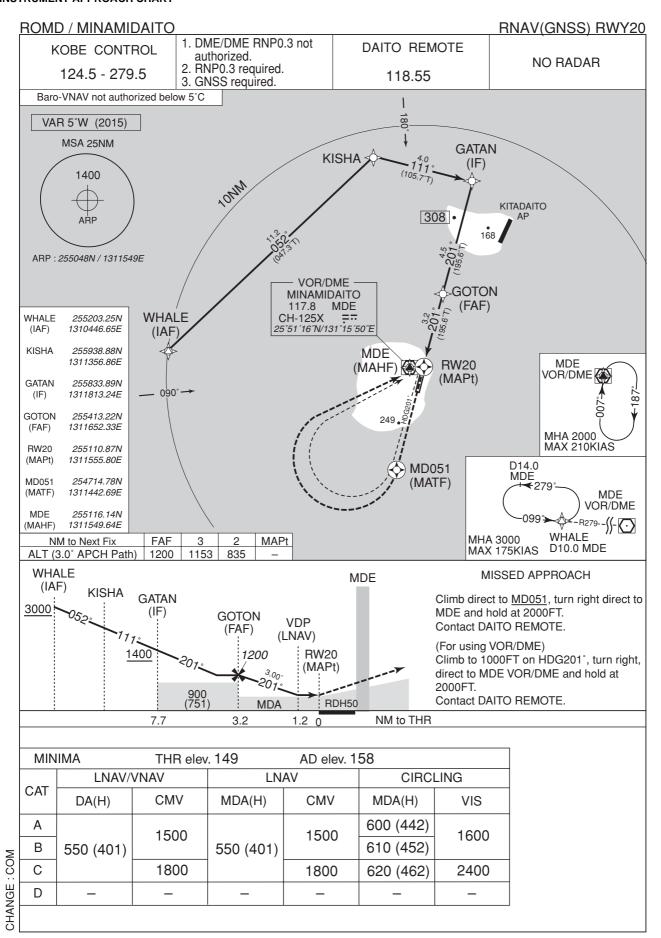

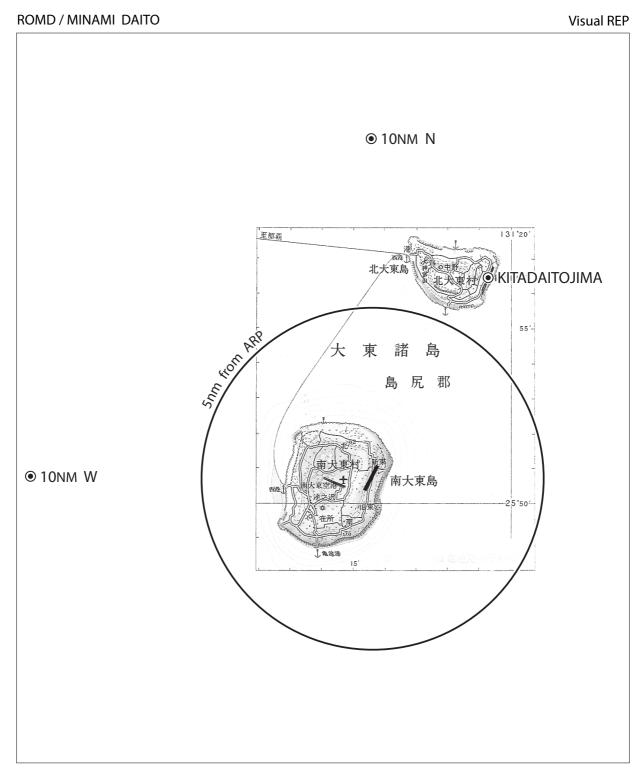

Call sign	BRG / DIST from ARP	Remarks				
10NM N	000°/10NM	海上 Over the sea				
10NM W	270°/10NM	海上 Over the sea				
北大東島 Kitadaitojima	035°/6.7NM	北大東空港 Kitadaito Airport				

