STANDARD DEPARTURE CHART-INSTRUMENT

RJCC / NEW CHITOSE

SID

SAVIT ONE DEPARTURE

RWY01L/01R: Climb via RWY HDG until 1NM FM RWY end/CHE 6.3DME,


turn right, direct to CHE VOR/DME within CHE 10DME (5NM

FM RWY end), via CHE R224 to SAVIT.

Cross 4DME prior to CHE VOR/DME (MKE R330) at or above

3000FT.

RWY19R/19L: Climb direct to CHE VOR/DME, via CHE R224 to SAVIT.

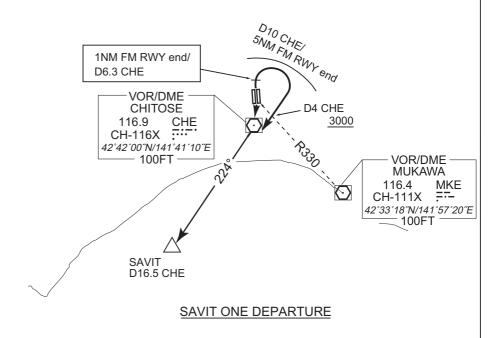

CHANGE: New PROC