STANDARD DEPARTURE CHART - INSTRUMENT

RJDU / OMURA TRANSITION


FUKUOKA TRANSITION

From over PEARL, via DGC R244 to DGC VORTAC.

Note: Not applicable for aircraft equipped with TACAN only.

IKI TRANSITION

From over PEARL, via IKE R202 to IKE VOR/DME.

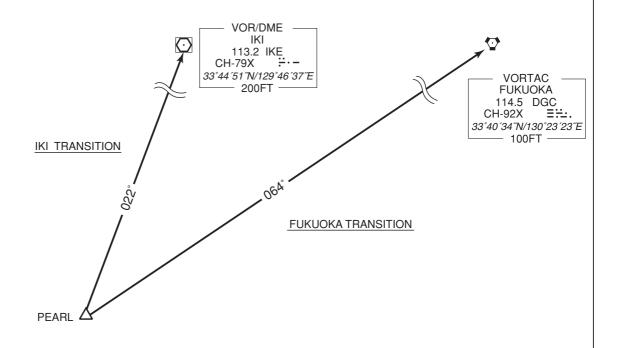

STANDARD DEPARTURE CHART - INSTRUMENT

RJDU / OMURA TRANSITION

FUKUE TRANSITION

From over SUMOU, turn right HDG307° to intercept and proceed via OLE R262 to FUE VOR/DME.

Maintain 12000FT or below until intercepting OLE R262.


OMURA TRANSITION

From over SUMOU, turn right to intercept and proceed via OLE R278 to OLE VOR/DME.

Maintain 12000FT or below until intercepting OLE R278.

Cross OLE R278/13.0DME at or above 9000FT.

OMURA TRANSITON

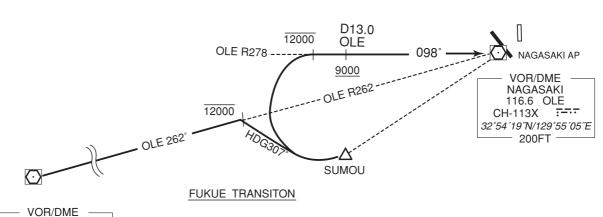

FUKUE 115.8 FUE CH-105X ::= 32°40'07'7\/128°49'36'E 300FT

CHANGE: Minor change

STANDARD DEPARTURE CHART - INSTRUMENT

