

ı

ı

STANDARD DEPARTURE CHART - INSTRUMENT

RJCO / SAPPORO SID

KURIS THREE DEPARTURE

RWY 14: Turn left,....

RWY 32: Turn right,....

....Climb via HDG 057 $^{\circ}$ to intercept and proceed via SPE R103 to KURIS.

Cross KURIS at or above 5000FT.

SAPPORO REVERSAL FOUR DEPARTURE

RWY 14: Turn left,....

RWY 32:

....Climb to SPE VOR/DME, via SPE R335, turn left to intercept and proceed via SPE R310 to SPE VOR/DME within SPE 15.0DME.

Cross SPE R335/6.0DME at or below 6000FT,

cross SPE R310/6.0DME at or above 10000FT.

SAPPORO THREE DEPARTURE

RWY 14: Turn left,....

RWY 32:

....Climb to SPE VOR/DME.

RUMOI TRANSITION

From over SPE VOR/DME, climb via SPE R040 to RUMOI.

Cross SPE R040/8.0DME at or above 4000FT, cross RUMOI at assigned altitude.

BEEBA TRANSITION

From over SPE VOR/DME, climb via SPE R069 to BEEBA. Cross BEEBA at assigned altitude.


MOIWA TRANSITION

From over SPE VOR/DME, climb via SPE R325 to 3000FT or above, turn left to intercept and proceed via SPE R203 to MOIWA.

Cross MOIWA at or above 7000FT.

Note: Do not start left turn to MOIWA before SPE VOR/DME.

STANDARD DEPARTURE CHART - INSTRUMENT

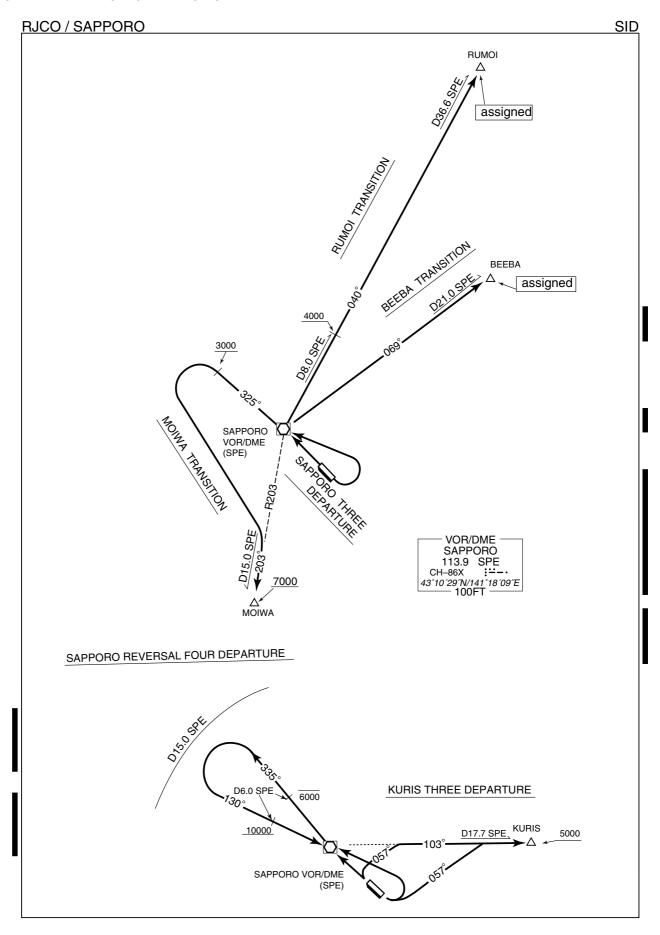

STANDARD DEPARTURE CHART - INSTRUMENT

RJCO / SAPPORO SID

KURIS REVERSAL FOUR DEPARTURE


RWY 14: Turn left,....

RWY 32:


....climb direct to SPE VOR/DME, via SPE R325 until passing 3000 FT, turn left to intercept and proceed via SPE R305 to SPE VOR/DME within SPE 10.0DME, via SPE R103 to KURIS.

Cross SPE R103/10.0DME at or above 6000FT,

cross KURIS at or above 7000FT.

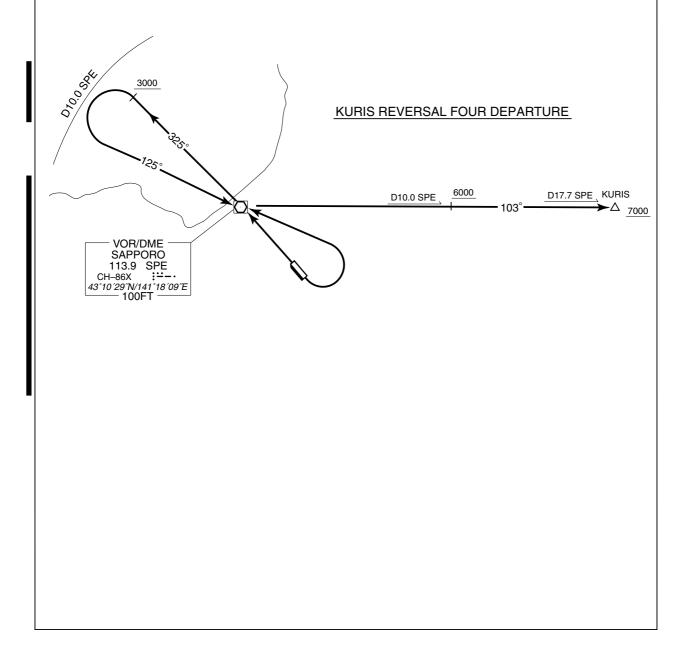

INSTRUMENT APPROACH CHART

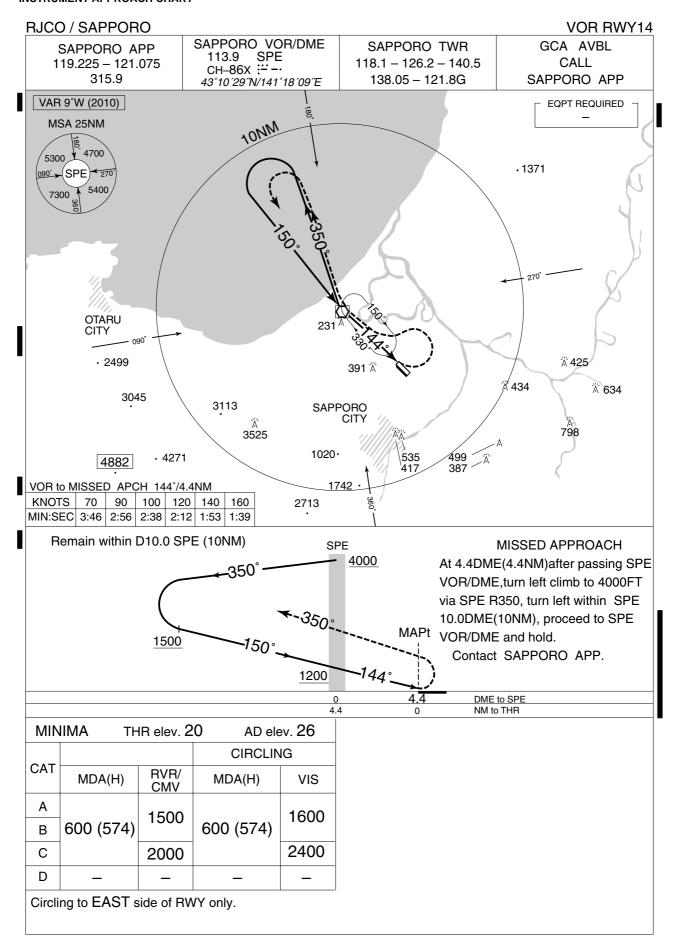

INSTRUMENT APPROACH CHART

