

STANDARD DEPARTURE CHART -INSTRUMENT

SID **ROMD / MINAMIDAITO** TOPAT THREE DEPARTURE RWY02: Climb RWY HDG to 600FT, turn left HDG234°... RWY20: Climb RWY HDG to 600FT, turn right HDG324°... ... to intercept and proceed via MDE R279 to TOPAT. Cross TOPAT at or above 8000FT. **185(27)** (27) 185 (57 KITADAITO AP RWY02 : See TAKE OFF MINIMA TOPAT THREE DEPARTURE 600 8000 -279° **TOPAT** R279 -R279/D97.8 MDE VOR/DME -R103/D98.8 NHC MINAMIDAITO 117.8 MDE CH-125X 25°51′16″N/131°15′50″E 200FT 600


STANDARD DEPARTURE CHART -INSTRUMENT



STANDARD DEPARTURE CHART - INSTRUMENT

ROMD / MINAMIDAITO

RNAV SID

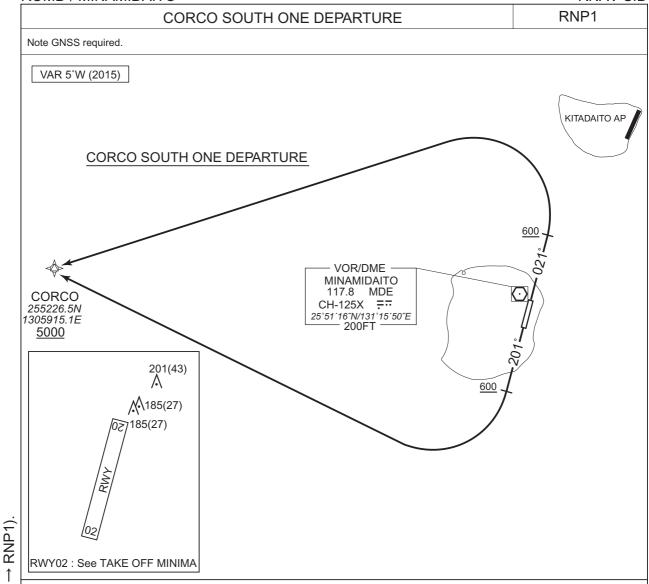

CORCO SOUTH ONE DEPARTURE


RWY02 : Climb on HDG021° at or above 600FT, turn left direct to CORCO at or above 5000FT. RWY20 : Climb on HDG201° at or above 600FT, turn right direct to CORCO at or above 5000FT.


RWY02


Serial	Path	Waypoint	Fly	Course	Magnetic	Distance	Turn	Altitude	Speed	Vertical	Navigation
Number	Descriptor	Identifier	Over	°M(°T)	Variation	(NM)	Direction	(FT)	(KIAS)	Angle	Specification
001	VA	_	_	021 (015.6)	-4.9	_	_	+600	_	_	RNP1
002	DF	CORCO	_	_	-4.9	_	L	+5000	_	_	RNP1


RWY20


Serial	Path	Waypoint	Fly	Course	Magnetic	Distance	Turn	Altitude	Speed	Vertical	Navigation
Number	Descriptor	Identifier	Over	°M(°T)	Variation	(NM)	Direction	(FT)	(KIAS)	Angle	Specification
001	VA	_	_	201 (195.6)	-4.9	_	_	+600	_	_	RNP1
002	DF	CORCO	_	_	-4.9	_	R	+5000	_	_	RNP1

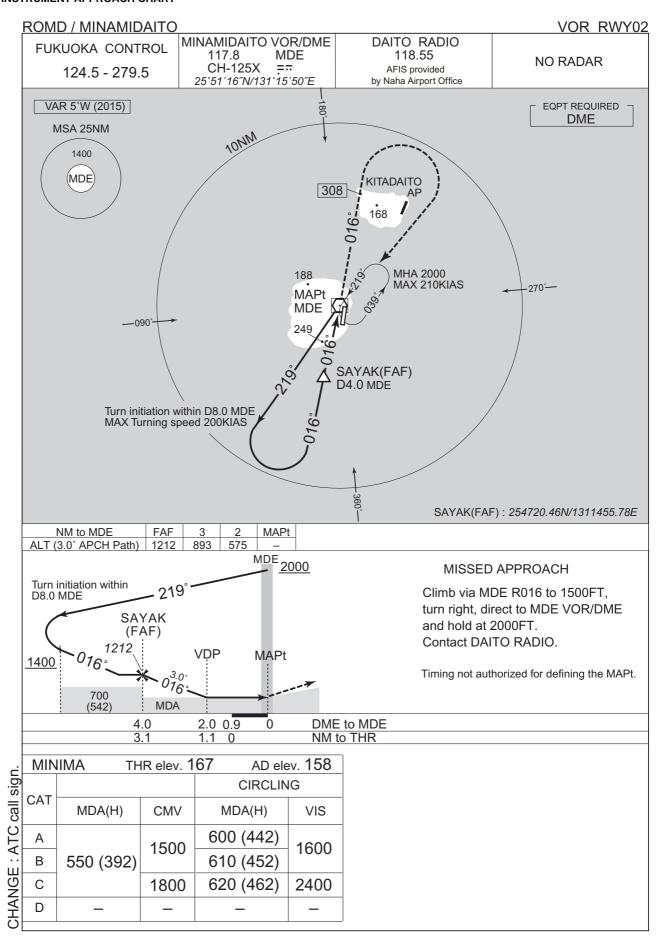

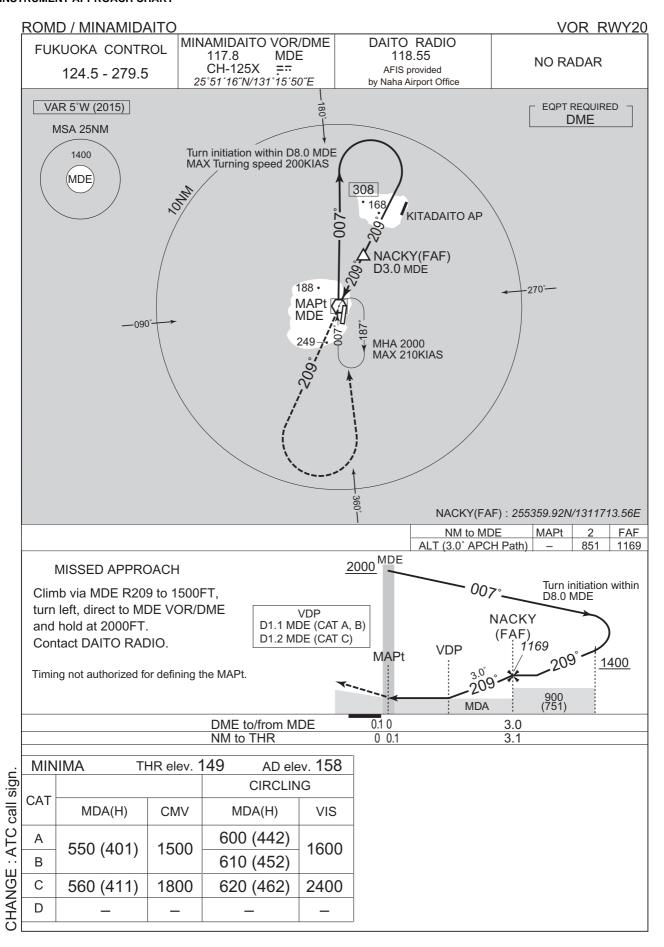

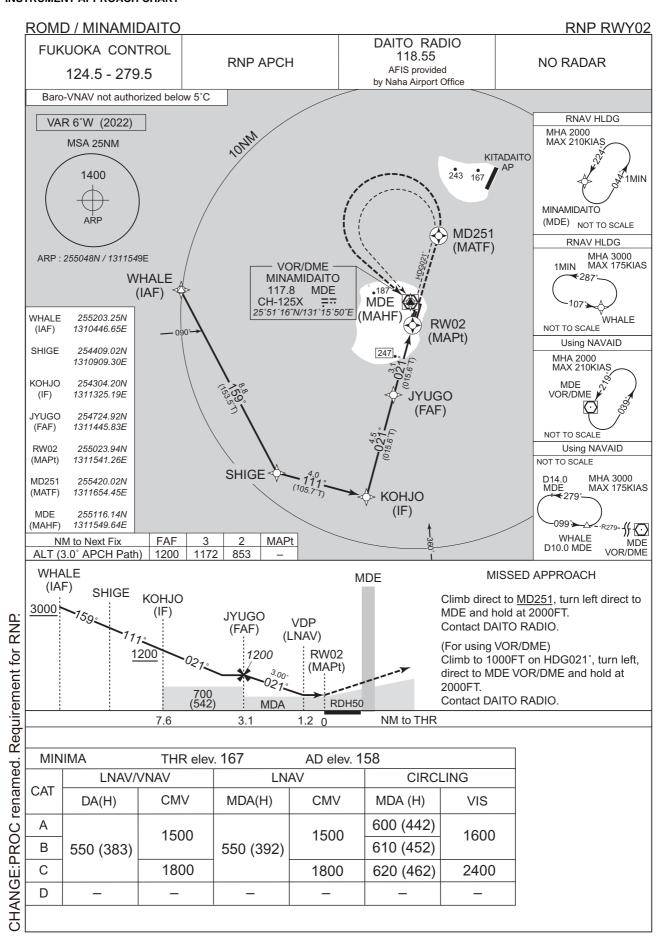

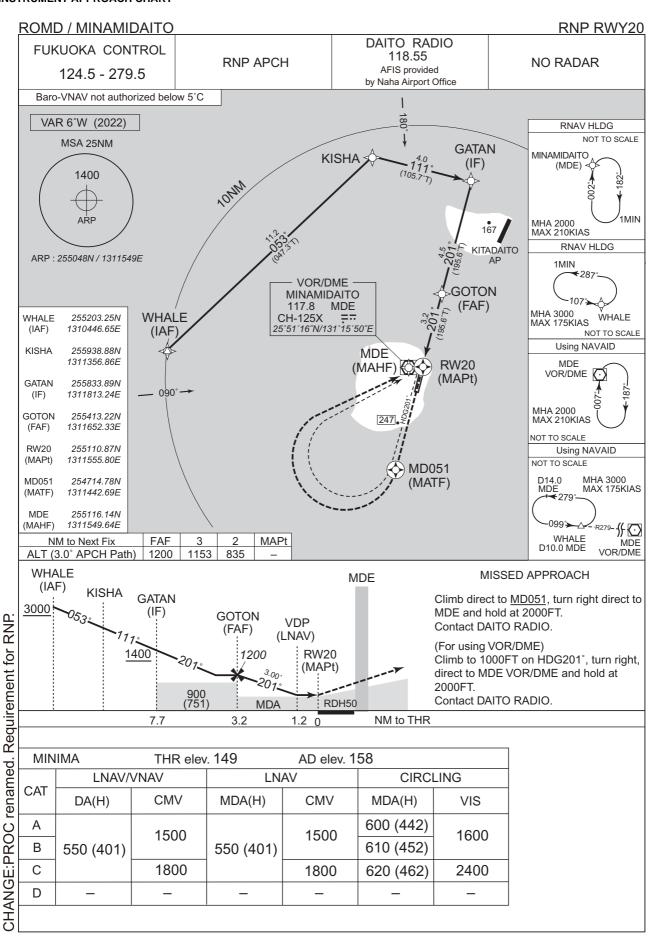

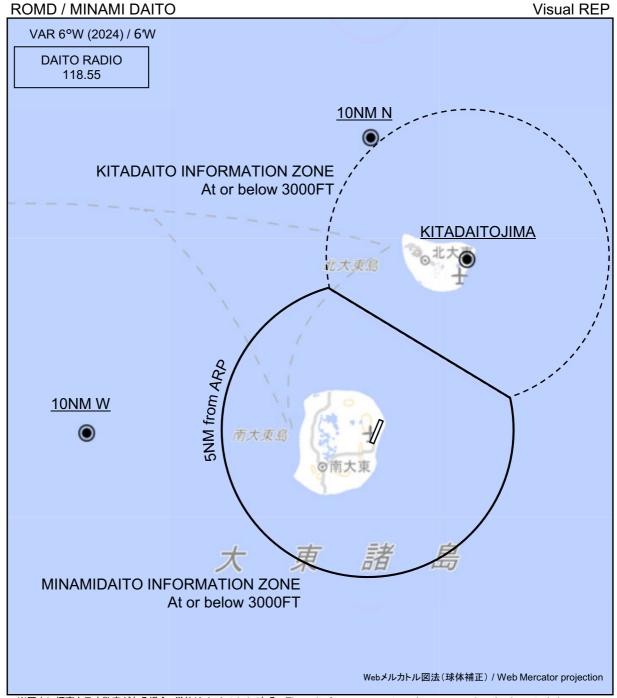

※図中に標高を示す数字がある場合、単位はメートル(m)である。The unit of measurement used to express elevation is meter(m).

Call sign	BRG / DIST from ARP	Remarks				
10NM N	360°T / 10.0NM	海上 Over the sea				
北大東島 Kitadaitojima	030°T / 6.8NM	北大東空港 Kitadaito Airport				
10NM W	270°T / 10.0NM	海上 Over the sea				

