STANDARD DEPARTURE CHART -INSTRUMENT

RJOE / AKENO SID


KOWA SEVEN DEPARTURE

RWY13: Turn left,... RWY31: Turn right,...

> ...to intercept and proceed via AKT R061 to XMT TACAN. Cross AKT R061/14.0DME at or above 3500FT, cross XMT TACAN at

assigned altitude.

Note RWY13/31: No turn before DER.

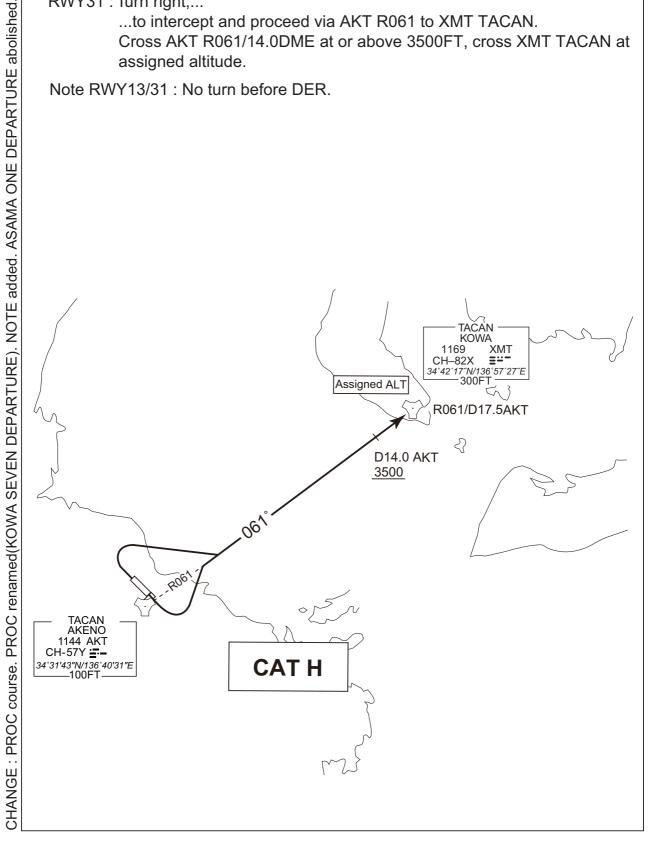

STANDARD DEPARTURE CHART -INSTRUMENT

RJOE / AKENO SID

HISAI TWO DEPARTURE

RWY13 : Turn left,... RWY31 : Turn right,...

...to intercept and proceed via AKT R321 to HISAI.


Cross HISAI at or above 2500FT.

Note RWY13: No turn before DER.

5.4% climb gradient required up to 400FT.

OBST ALT 159 FT located at 0.4NM 173° FM end of RWY13.

Note RWY31: No turn before DER.

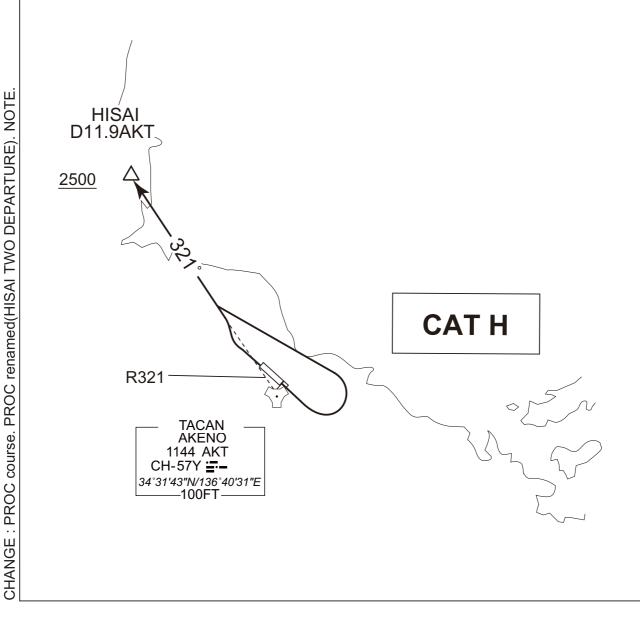

STANDARD DEPARTURE CHART -INSTRUMENT

RJOE / AKENO

SID and TRANSITION

AKENO REVERSAL FIVE DEPARTURE

RWY13: Turn left, to intercept and proceed via AKT R106 to 2500FT, turn left,...

RWY31: Turn right, to intercept and proceed via AKT R321 to 2500FT, turn right,...


...direct to AKT TACAN.

Note RWY13/31: No turn before DER.

TRIKE TRANSITION

From over AKT TACAN, via AKT R070 to TRIKE.

Cross AKT R070/14.0DME at or above 4000FT, cross TRIKE at assigned altitude.

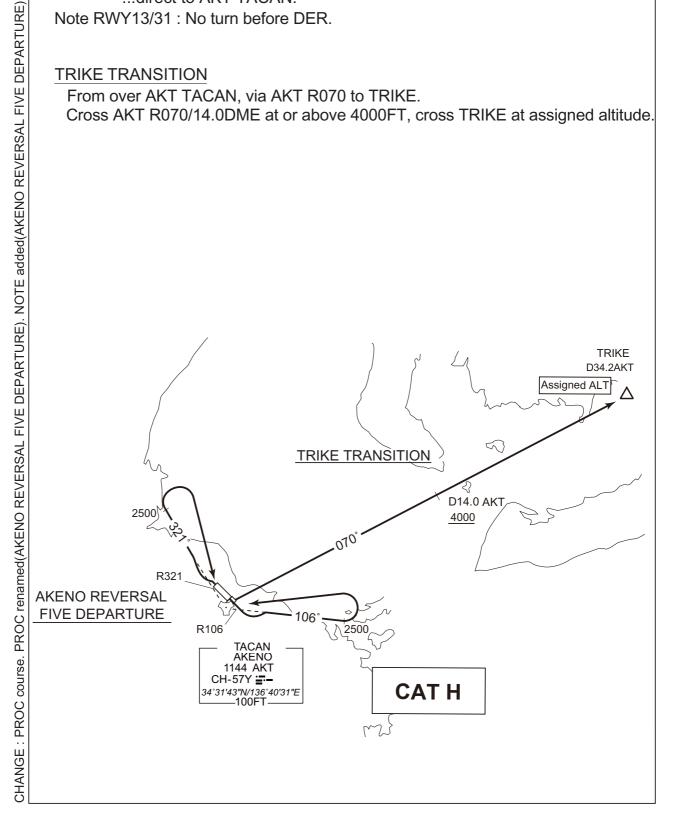



STANDARD ARRIVAL CHART-INSTRUMENT

RJOE / AKENO STAR


ASAMA ARRIVAL

From over TRIKE, via AKT R070 to ANROX, via AKT 16.0DME clockwise ARC to intercept and proceed via AKT R106 to ASAMA.

Cross AKT R070/20.5DME at or above 4000FT, cross AKT R093/16.0DME at or above 3500FT, cross ASAMA at or above 2500FT.


HISAI ARRIVAL

From over TRIKE, via AKT R070 to ANROX, via AKT 16.0DME clockwise ARC to intercept and proceed via AKT R106 to AKT TACAN, via AKT R321 to HISAI. Cross AKT R070/20.5DME at or above 4000FT, cross AKT R093/16.0DME at or above 3500FT, cross AKT TACAN at or above 2800FT, cross HISAI at or above 2500FT.

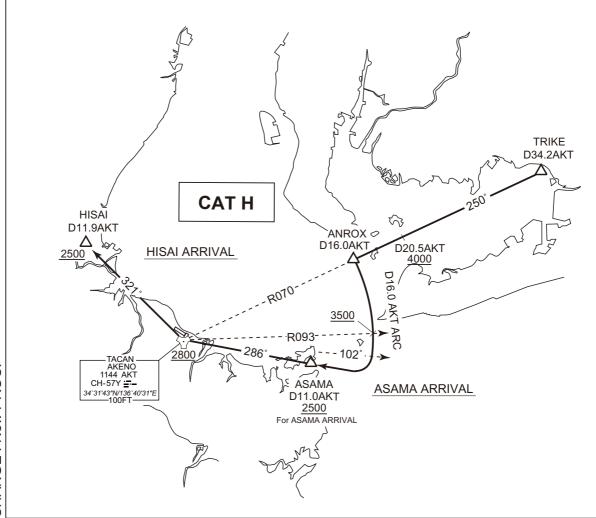




INSTRUMENT APPROACH CHART

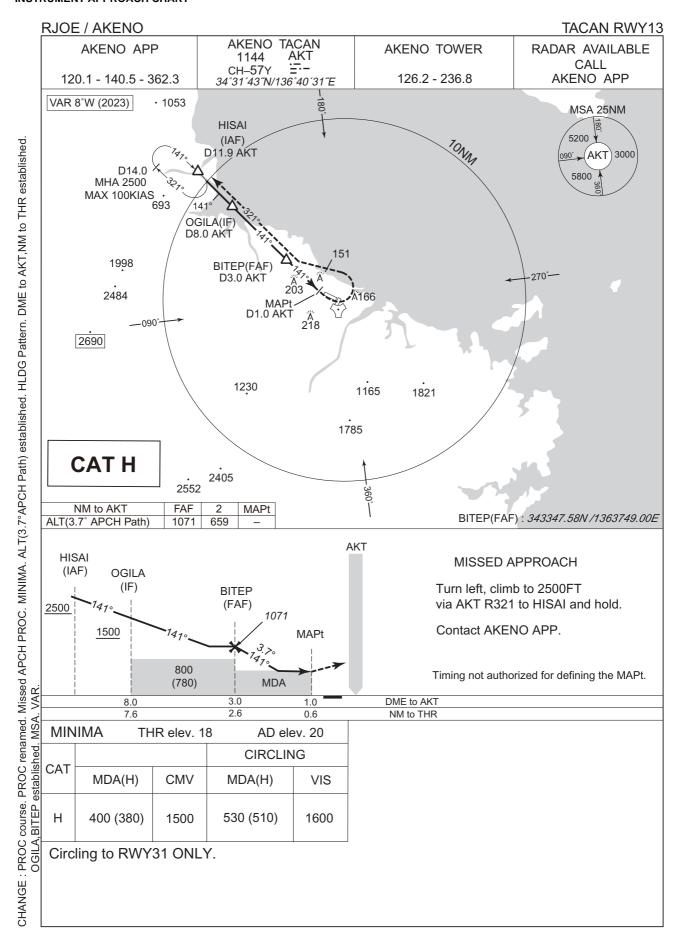

INSTRUMENT APPROACH CHART

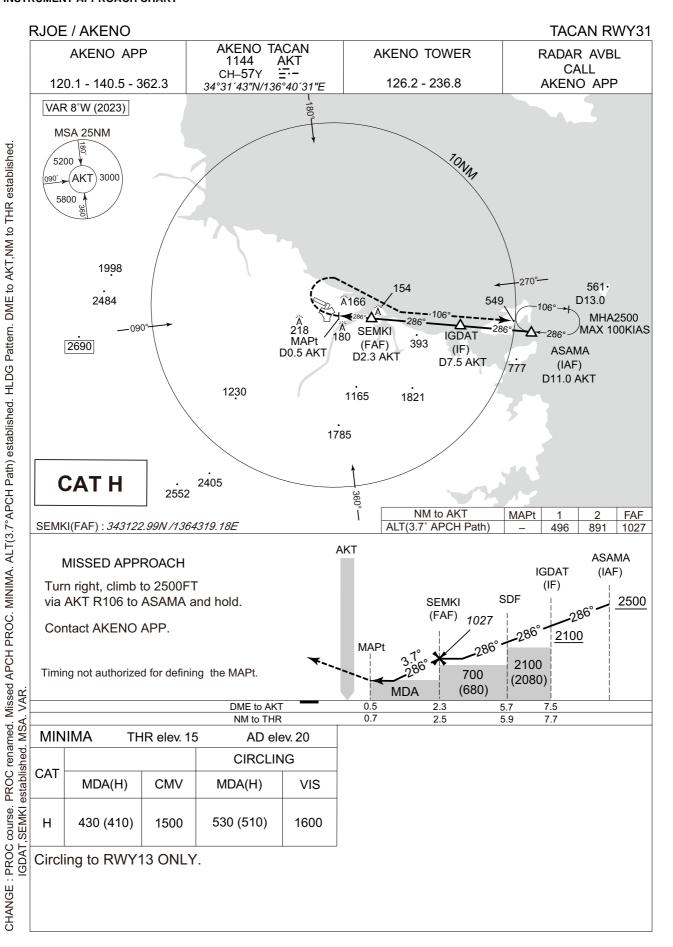

INSTRUMENT APPROACH CHART

