

### STANDARD DEPARTURE CHART -INSTRUMENT

RORK / KITADAITO SID


# SOUTH SIX DEPARTURE


RWY03: Climb RWY HDG to 500FT, turn right, direct to MDE VOR/DME.

RWY21: Climb to MDE VOR/DME.


Cross MDE VOR/DME at or above 2400FT.

## **SOUTH SIX DEPARTURE**

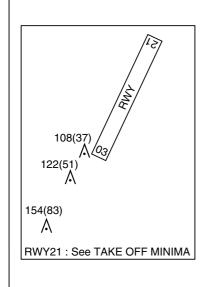

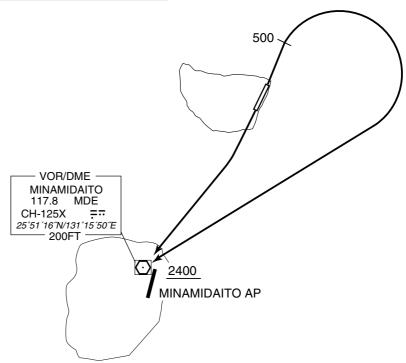

#### STANDARD DEPARTURE CHART -INSTRUMENT

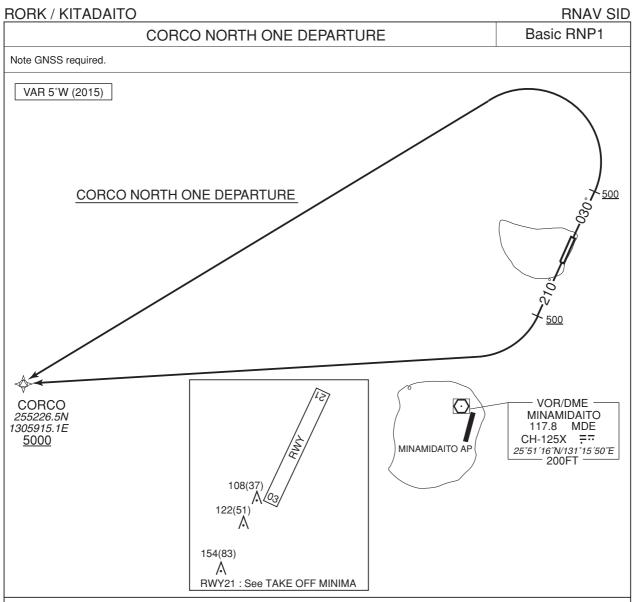

### CORCO NORTH ONE DEPARTURE

RWY03: Climb on HDG030° at or above 500FT, turn left direct to CORCO at or above 5000FT. RWY21: Climb on HDG210° at or above 500FT, turn right direct to CORCO at or above 5000FT.

NOTE RWY03: 4.0% climb gradient required up to 500FT due to airspace restrictions only.


#### RWY03

Serial	Path	Waypoint	Fly	Course	Magnetic	Distance	Turn	Altitude	Speed	Vertical	Navigation	
Number	Descriptor	Identifier	Over	$^{\circ}M(^{\circ}T)$	Variation	(NM)	Direction	(FT)	(KIAS)	Angle	Specification	
001	VA	_	_	030 (025.4)	-4.9	_	ı	+500	_	_	Basic RNP1	
002	DF	CORCO	_	_	-4.9	_	L	+5000	_	_	Basic RNP1	


## RWY21

Serial	Path	Waypoint	Fly	Course	Magnetic	Distance	Turn	Altitude	Speed	Vertical	Navigation
Number	Descriptor	Identifier	Over	°M(°T)	Variation	(NM)	Direction	(FT)	(KIAS)	Angle	Specification
001	VA	_	_	210 (205.4)	-4.9	_	_	+500	_	_	Basic RNP1
002	DF	CORCO	_	_	-4.9	_	R	+5000	_	_	Basic RNP1


#### **INSTRUMENT APPROACH CHART**

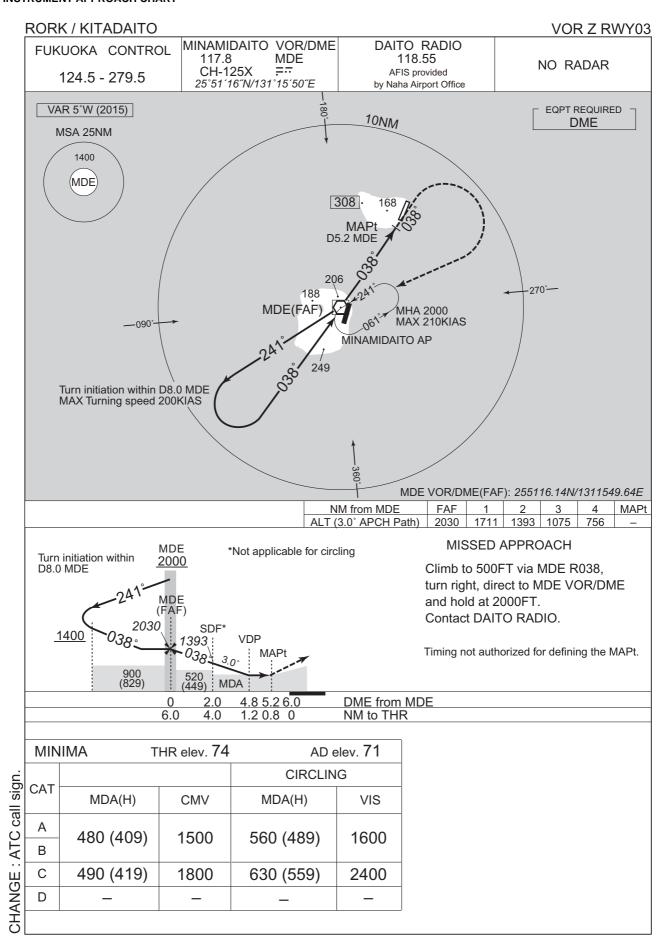


#### **INSTRUMENT APPROACH CHART**

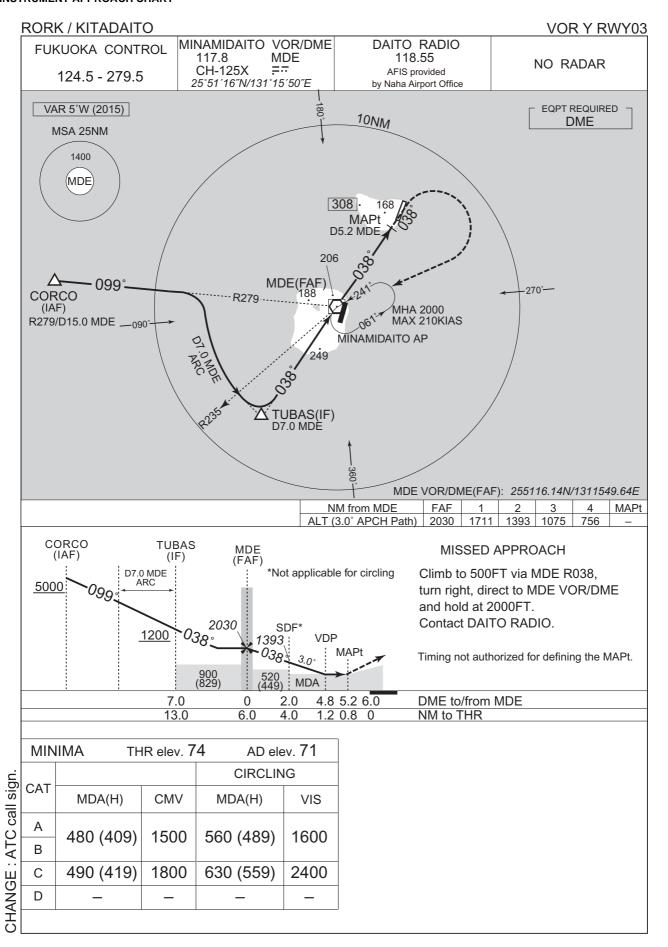

#### **INSTRUMENT APPROACH CHART**

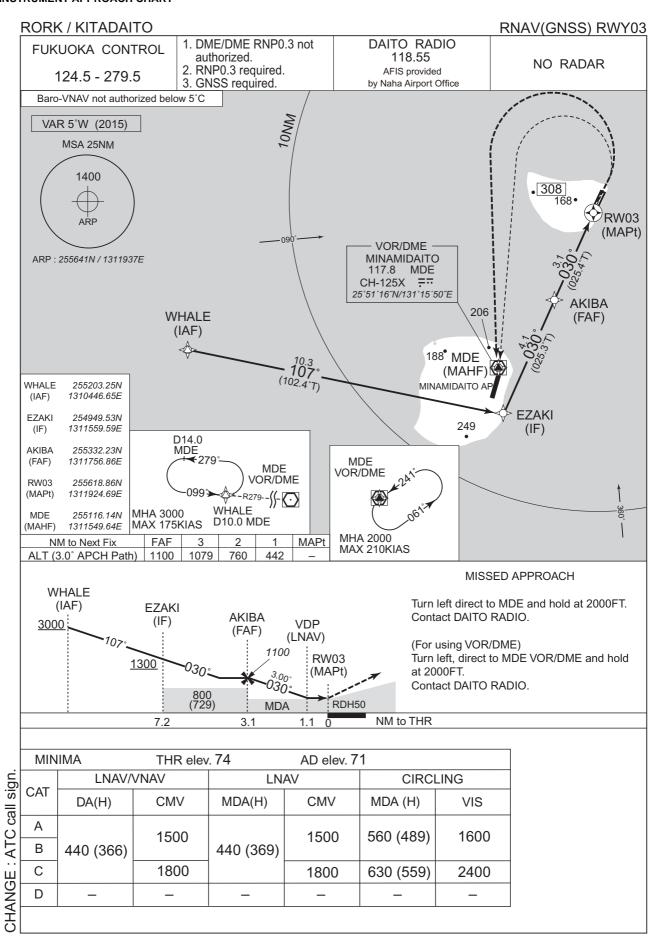

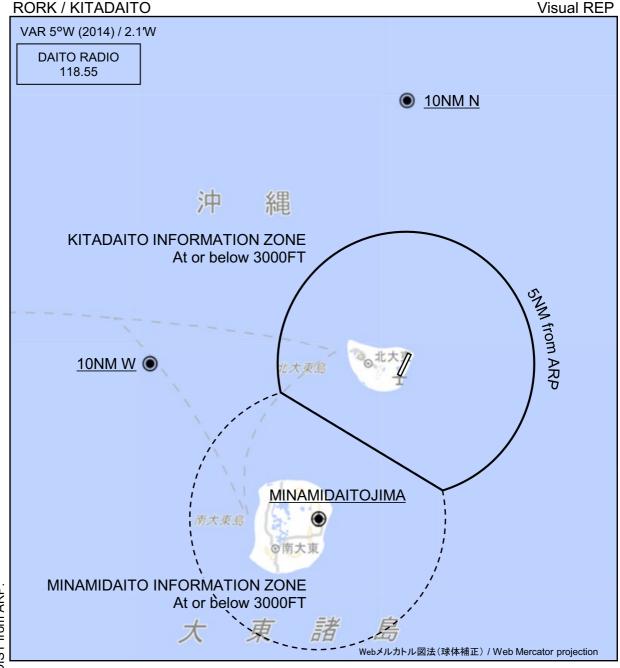

※図中に標高を示す数字がある場合、単位はメートル(m)である。The unit of measurement used to express elevation is meter(m).

Call sign	BRG / DIST from ARP	Remarks
10NM N	360°T / 10.0NM	海上 Over the sea
10NM W	270°T / 10.0NM	海上 Over the sea
南大東島 Minamidaitojima	210°T / 6.8NM	南大東空港 Minamidaito Airport

