




STANDARD DEPARTURE CHART-INSTRUMENT

RJAZ / KOZUSHIMA RNAV SID

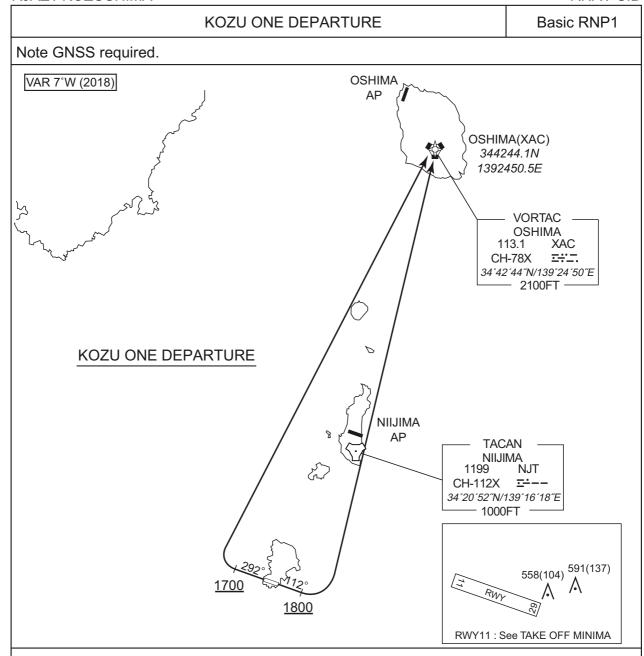

KOZU ONE DEPARTURE

RWY11 : Climb on HDG112° at or above 1800FT, turn left direct to XAC. RWY29 : Climb on HDG292° at or above 1700FT, turn right direct to XAC.

NOTE RWY11: 5.0% climb gradient required up to 2100FT.

OBST ALT 1903FT located 1.9NM 042° FM end of RWY11.

NOTE RWY29: 5.0% climb gradient required up to 2200FT.

OBST ALT 1969FT located 2.1NM 041° FM end of RWY29.

STANDARD DEPARTURE CHART-INSTRUMENT

RJAZ / KOZUSHIMA RNAV SID

KOZU ONE DEPARTURE


RWY11

Serial Number	Path Descriptor	Waypoint Identifier	Fly Over	Course °M(°T)	Magnetic Variation	Distance(NM)		Altitude (FT)	Speed (KIAS)	Vertical Angle	Navigation Specification
001	VA	_	_	112 (105.2)	-7.1	_	_	+1800	_	_	Basic RNP1
002	DF	XAC	_	_	-7.1	_	L	_	_	_	Basic RNP1


RWY29


Serial Number	Path Descriptor	Waypoint Identifier	Fly Over	Course °M(°T)	Magnetic Variation	Distance(NM)		Altitude (FT)	Speed (KIAS)	Vertical Angle	Navigation Specification
001	VA	_	_	292 (285.2)	-7.1	_	_	+1700	_	_	Basic RNP1
002	DF	XAC	_	_	-7.1	_	R	_	_	_	Basic RNP1

INSTRUMENT APPROACH CHART

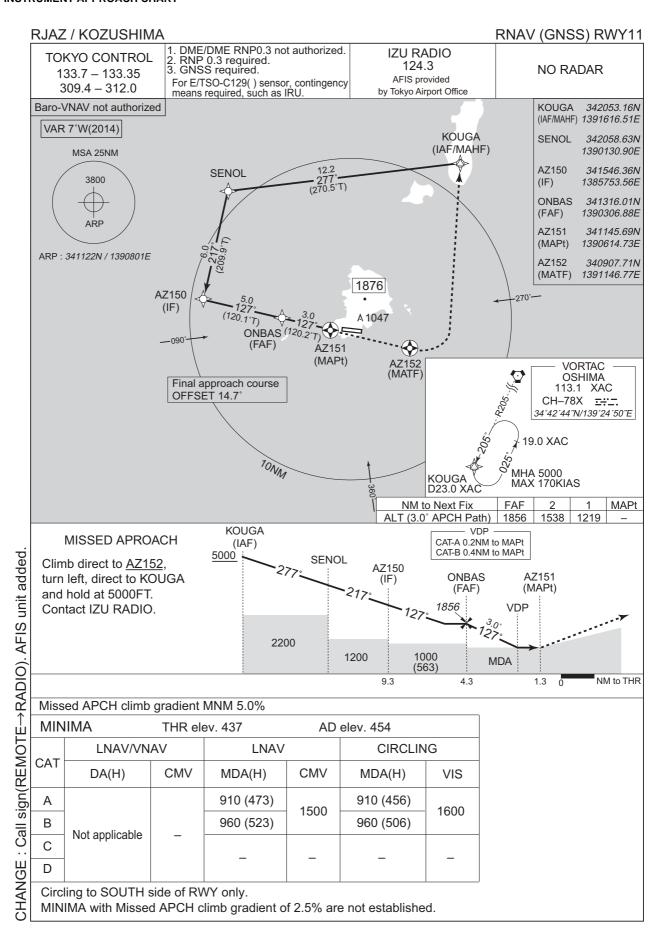

INSTRUMENT APPROACH CHART

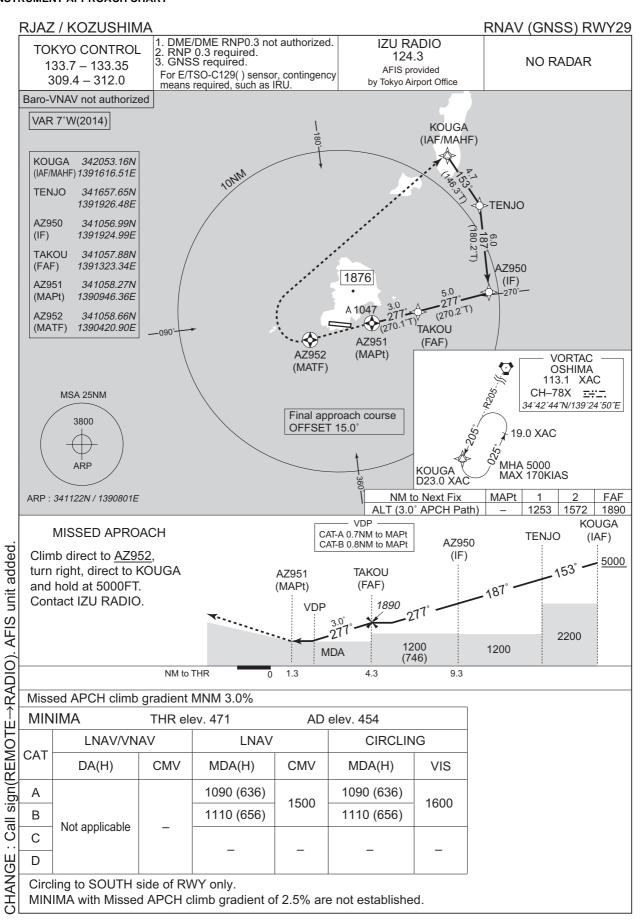

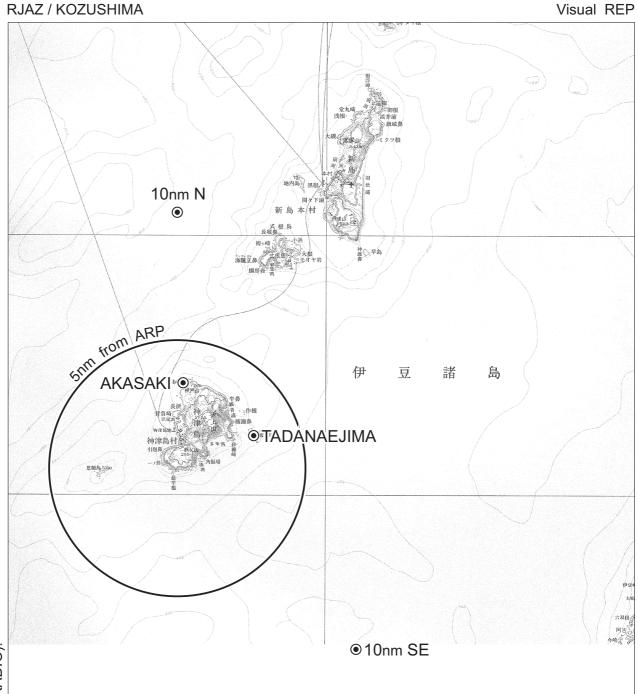

Call sign	BRG / DIST from ARP	Remarks				
10NM N	360°/10.0NM	海上 Over the sea				
赤 崎 Akasaki	009°/ 3.1NM	岬 Cape				
祇 苗 島 Tadanaejima	076°/ 3.1NM	島 Island				
10NM SE	135°/10.0NM	海上 Over the sea				

Call IZU RADIO on 124.3MHz

