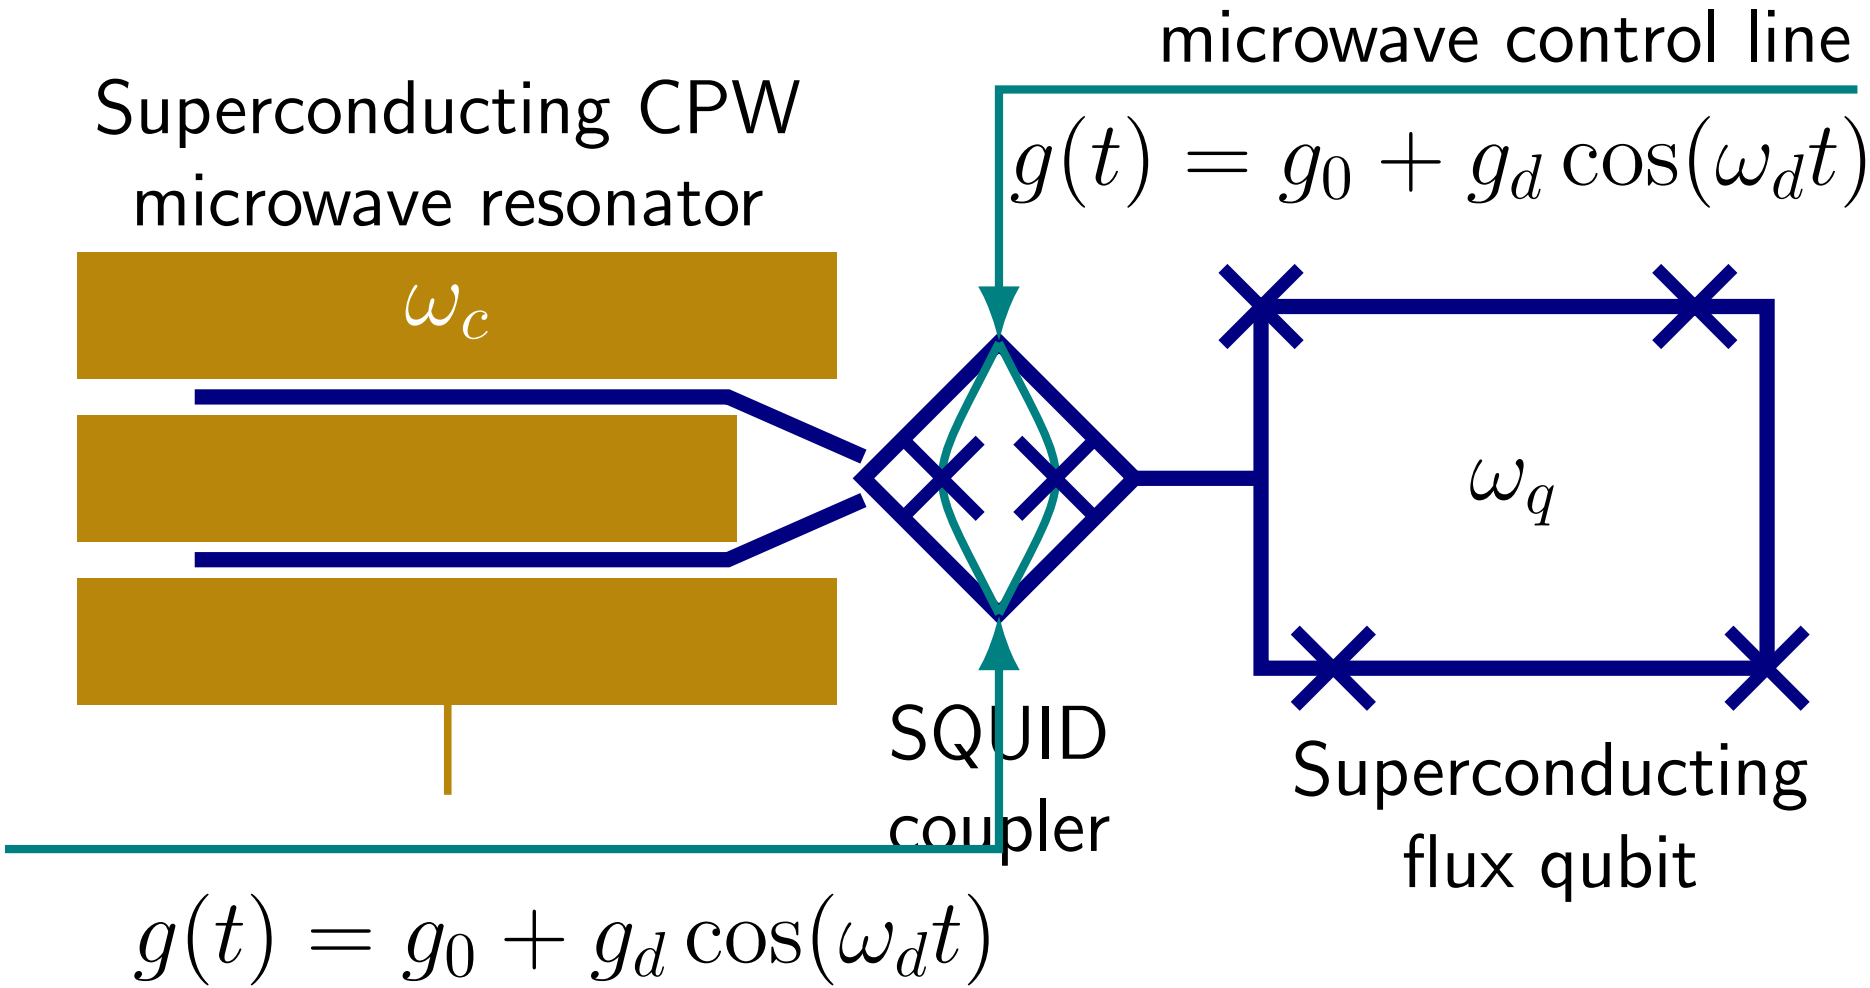
microwave control line
$g(t) = g_0 + g_d \cos(\omega_d t)$
Superconducting CPW
microwave resonator
ω_c
ω_q
SQUID
coupler
Superconducting
flux qubit
$g(t) = g_0 + g_d \cos(\omega_d t)$