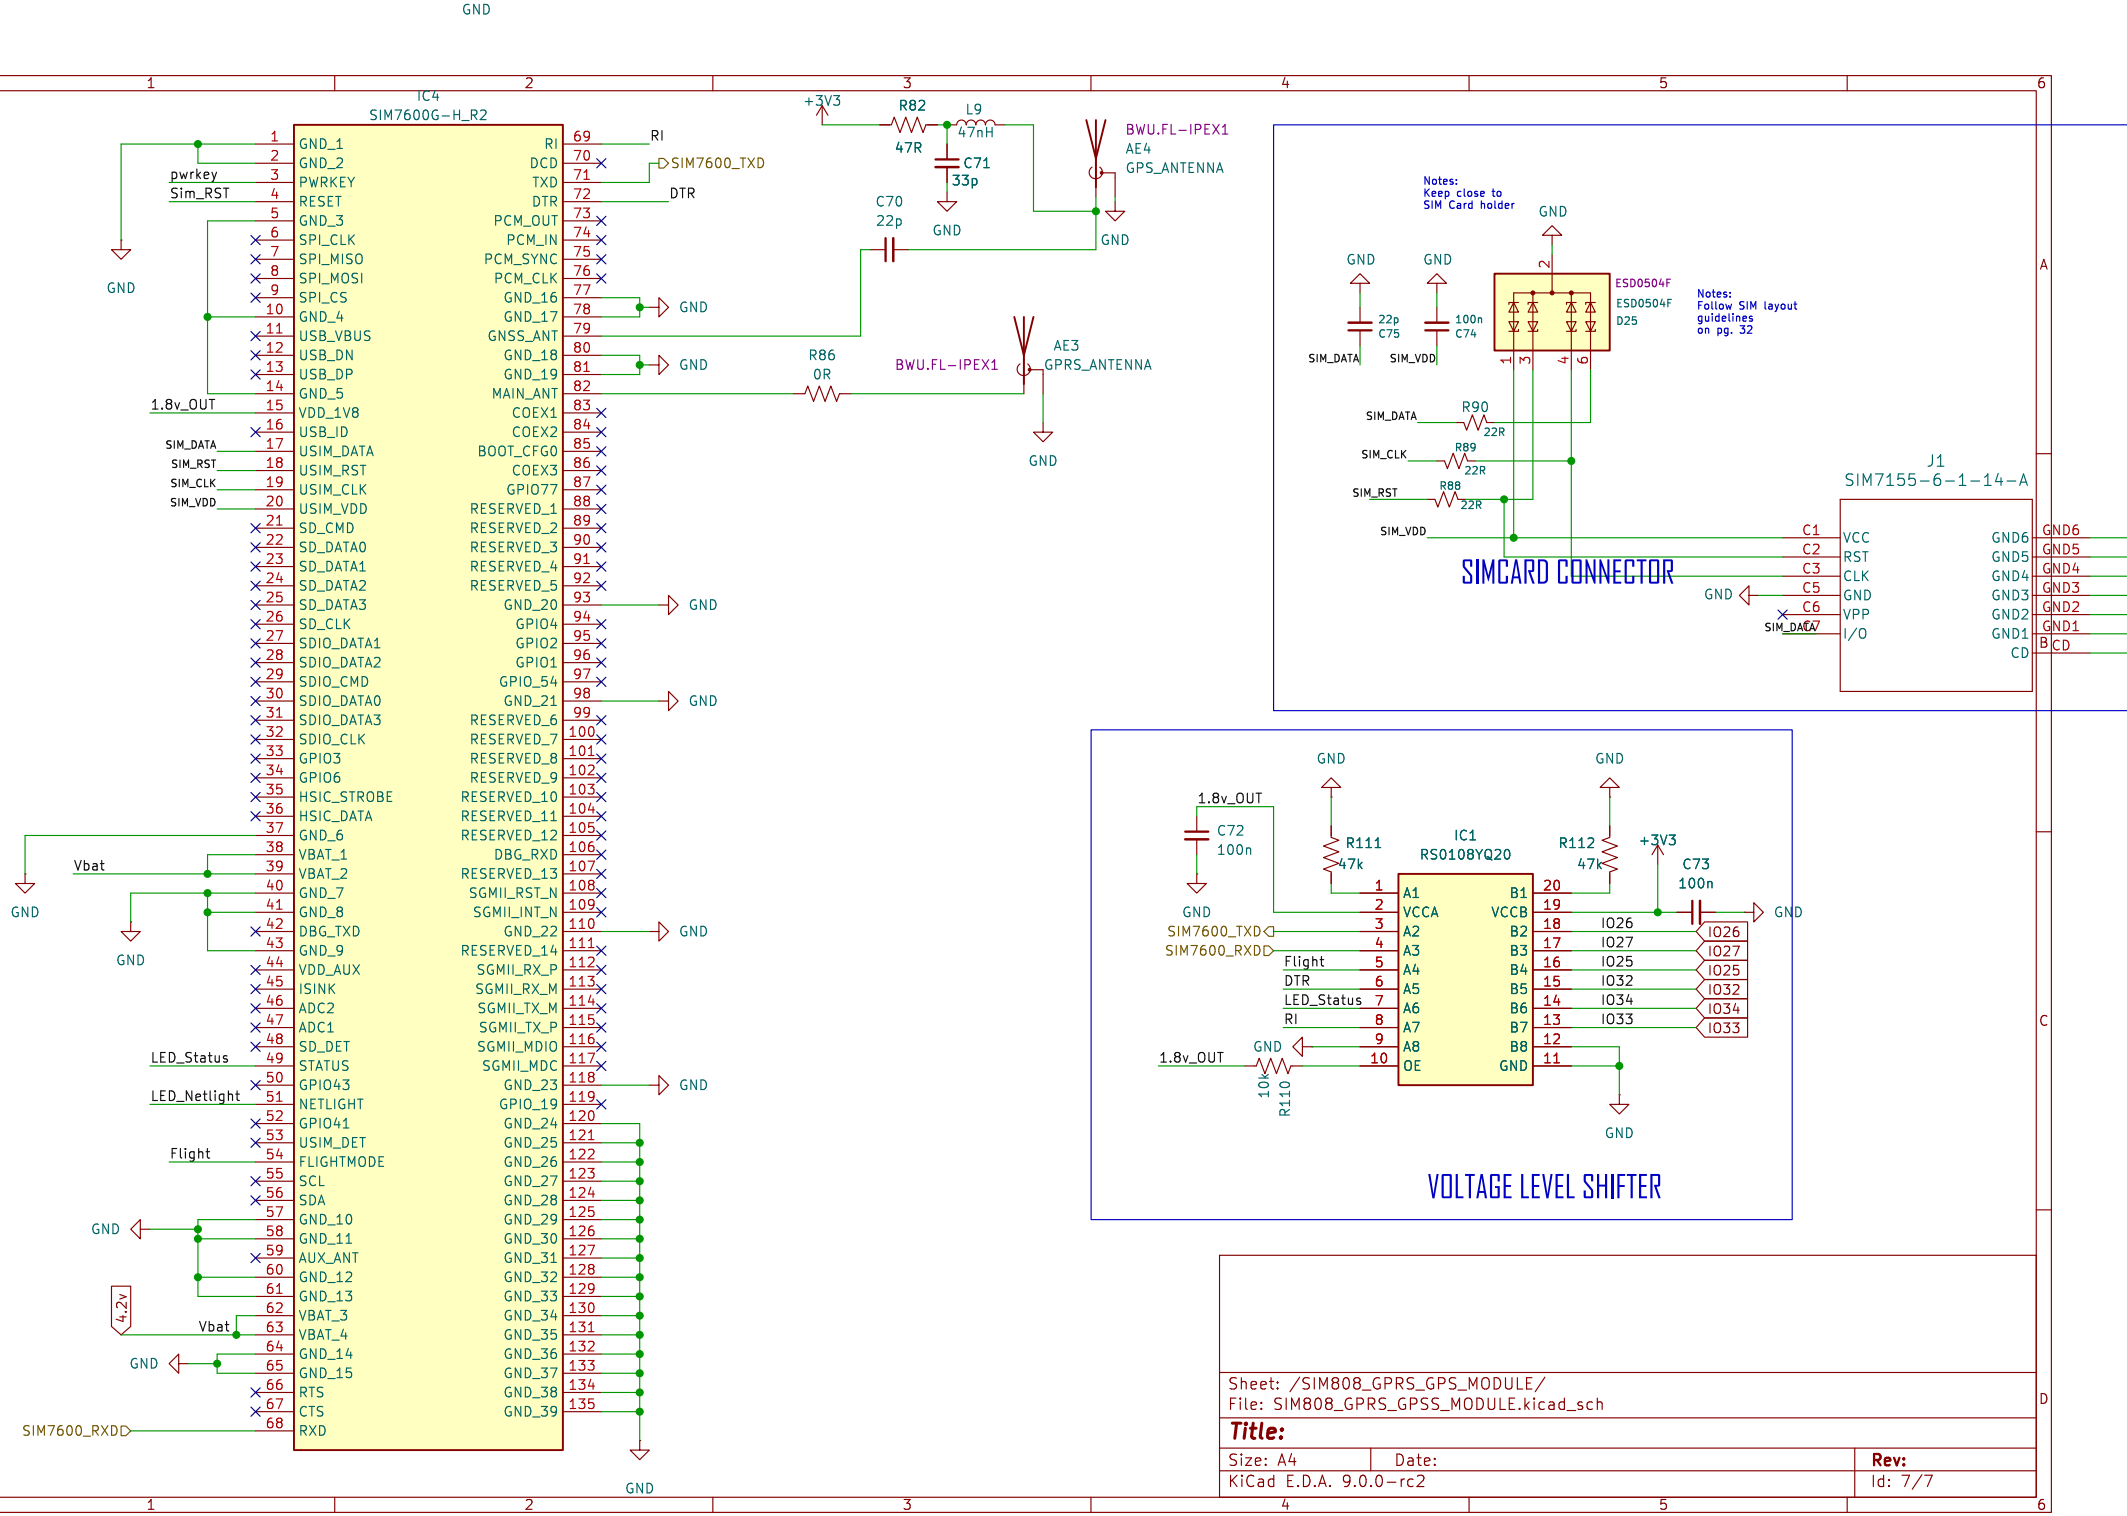

IC4
SIM7600G-H_R2
GND_1
GND_2
PWRKEY
RESET
GND_3
SPI_CLK
SPI_MISO
SPI_MOSI
SPI_CS
GND_4
USB_VBUS
USB_DN
USB_DP
GND_5
VDD_1V8
USB_ID
USIM_DATA
USIM_RST
USIM_CLK
USIM_VDD
SD_CMD
SD_DATA0
SD_DATA1
SD_DATA2
SD_DATA3
SD_CLK
SDIO_DATA1
SDIO_DATA2
SDIO_CMD
SDIO_DATA0
SDIO_DATA3
SDIO_CLK
GPIO3
GPIO6
HSIC_STROBE
HSIC_DATA
GND_6
VBAT_1
VBAT_2
GND_7
GND_8
DBG_TXD
GND_9
VDD_AUX
ISINK
ADC2
ADC1
SD_DET
STATUS
GPIO43
NETLIGHT
GPIO41
USIM_DET
FLIGHTMODE
SCL
SDA
GND_10
GND_11
AUX_ANT
GND_12
GND_13
VBAT_3
VBAT_4
GND_14
GND_15
RTS
CTS
RXD
RI
DCD
TXD
DTR
PCM_OUT
PCM_IN
PCM_SYNC
PCM_CLK
GND_16
GND_17
GNSS_ANT
GND_18
GND_19
MAIN_ANT
COEX1
COEX2
BOOT_CFG0
COEX3
GPIO77
RESERVED_1
RESERVED_2
RESERVED_3
RESERVED_4
RESERVED_5
GND_20
GPIO4
GPIO2
GPIO1
GPIO_54
GND_21
RESERVED_6
RESERVED_7
RESERVED_8
RESERVED_9
RESERVED_10
RESERVED_11
RESERVED_12
DBG_RXD
RESERVED_13
SGMII_RST_N
SGMII_INT_N
GND_22
RESERVED_14
SGMII_RX_P
SGMII_RX_M
SGMII_TX_M
SGMII_TX_P
SGMII_MDIO
SGMII_MDC
GND_23
GPIO_19
GND_24
GND_25
GND_26
GND_27
GND_28
GND_29
GND_30
GND_31
GND_32
GND_33
GND_34
GND_35
GND_36
GND_37
GND_38
GND_39
pwrkey
Sim_RST
1.8v_OUT
SIM_DATA
SIM_RST
SIM_CLK
SIM_VDD
Vbat
LED_Status
LED_Netlight
Flight
4.2v
SIM7600_RXDD
SIM7600_TXD
+3V3
R82
47R
L9
47nH
C71
33p
C70
22p
BWU.FL-IPEX1
AE4
GPS_ANTENNA
R86
0R
AE3
GPRS_ANTENNA
Notes:
Keep close to
SIM Card holder
ESD0504F
D25
C75
22p
C74
100n
Notes:
Follow SIM layout
guidelines
on pg. 32
R90
22R
R89
22R
R88
22R
SIMCARD CONNECTOR
J1
SIM7155-6-1-14-A
VCC
RST
CLK
VPP
I/O
CD
C1
C2
C3
C5
C6
C7
GND6
GND5
GND4
GND3
GND2
GND1
C72
100n
R111
47k
IC1
RS0108YQ20
R112
47k
C73
100n
A1
VCCA
A2
A3
A4
A5
A6
A7
A8
OE
B1
VCCB
B2
B3
B4
B5
B6
B7
B8
IO26
IO27
IO25
IO32
IO34
IO33
R110
10k
VOLTAGE LEVEL SHIFTER
Sheet: /SIM808_GPRS_GPS_MODULE/
File: SIM808_GPRS_GPSS_MODULE.kicad_sch
Title:
Size: A4
Date:
Rev:
KiCad E.D.A. 9.0.0-rc2
Id: 7/7